


OUTER REAR VIEW MIRROR

COMPONENTS

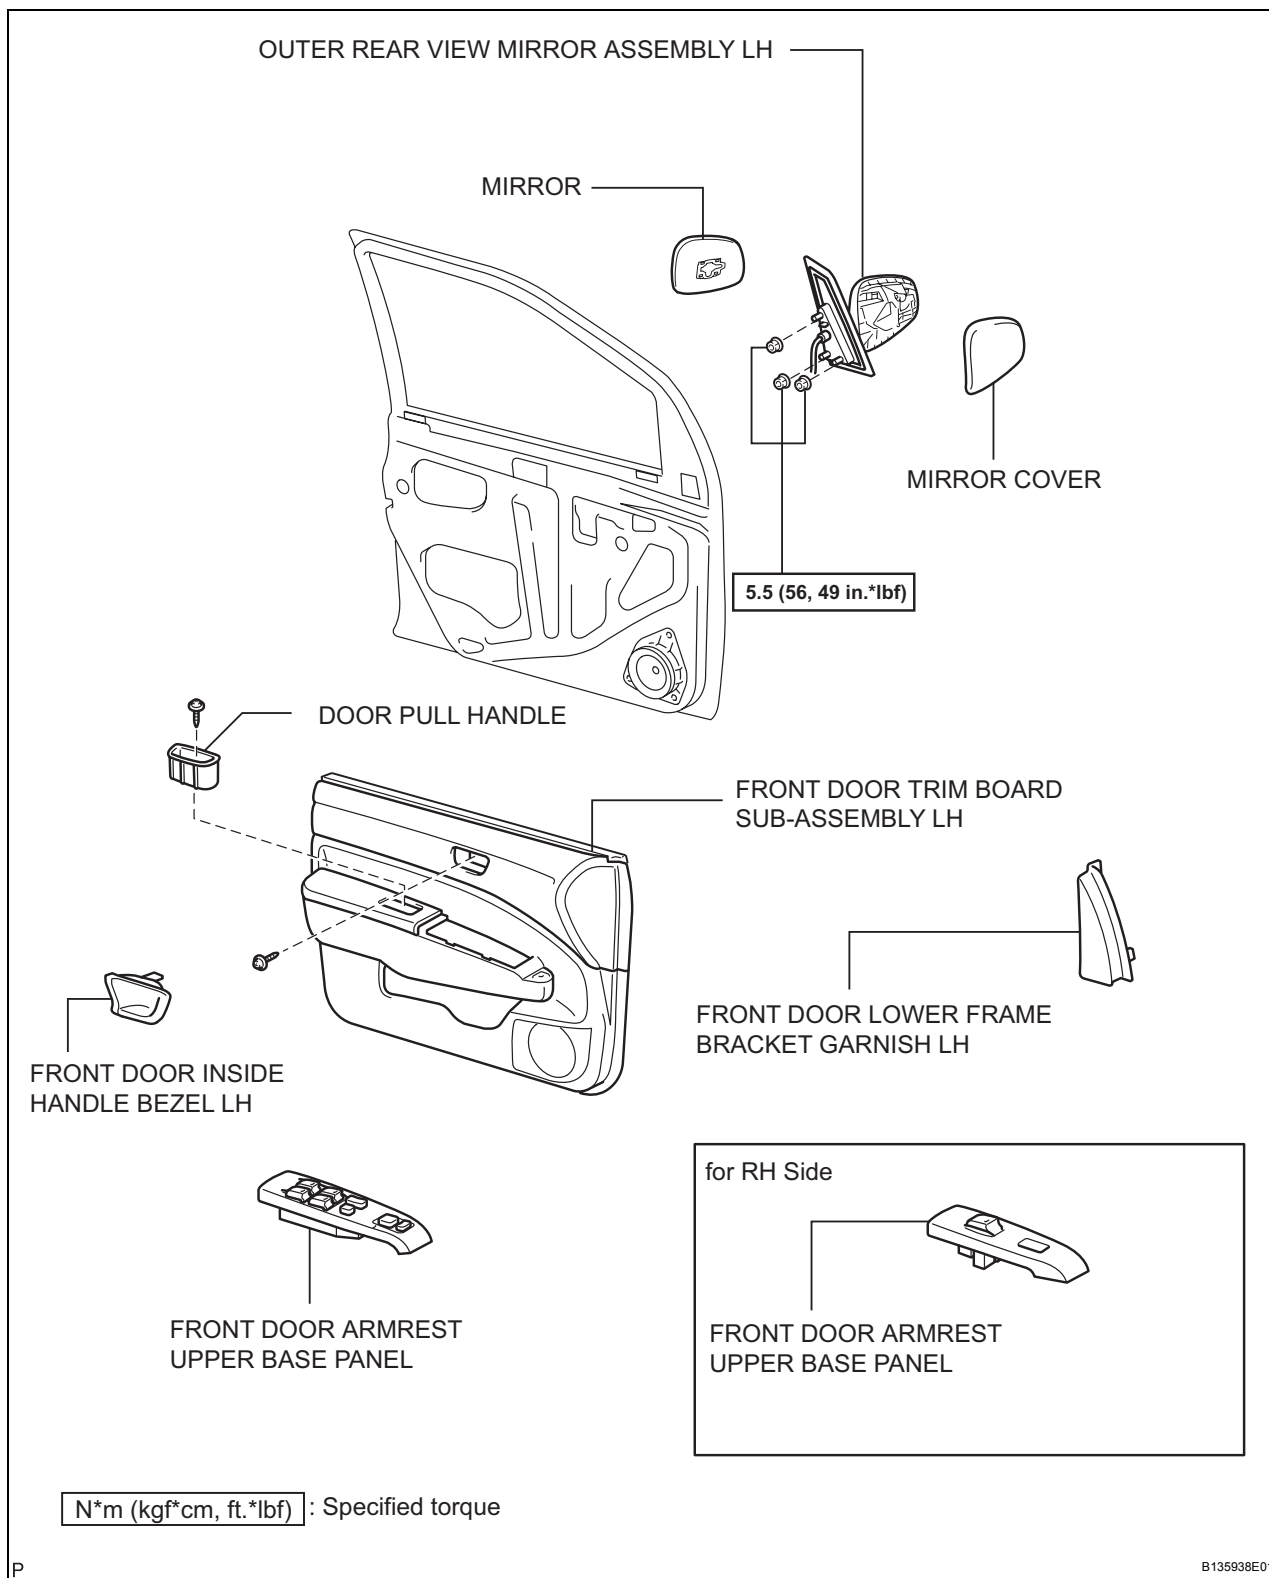

REMOVAL

HINT:

- Use the same procedures for the LH side and RH side.
- The procedures listed below are for the LH side.

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. REMOVE FRONT DOOR INSIDE HANDLE BEZEL LH (See page ED-11)

3. REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH LH (See page ED-11)


4. REMOVE DOOR PULL HANDLE (See page ED-11)

5. REMOVE FRONT DOOR ARMREST BASE PANEL UPPER (See page ED-11)

6. REMOVE FRONT DOOR TRIM BOARD SUB-ASSEMBLY LH (See page ED-12)

7. REMOVE OUTER REAR VIEW MIRROR ASSEMBLY LH

- (a) Disconnect the mirror connector.
- (b) Remove the 3 nuts and mirror.

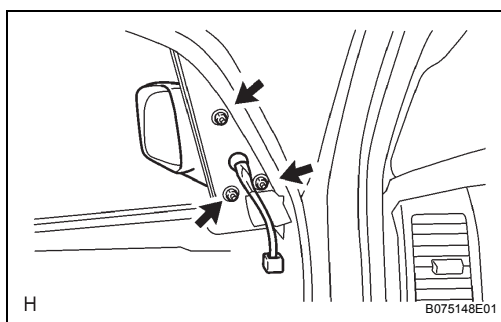



8. REMOVE OUTER REAR VIEW MIRROR ASSEMBLY LH

- (a) Using a moulding remover, detach the 4 claws and outer rear view mirror.


HINT:

Apply protective tape to the mirror body.

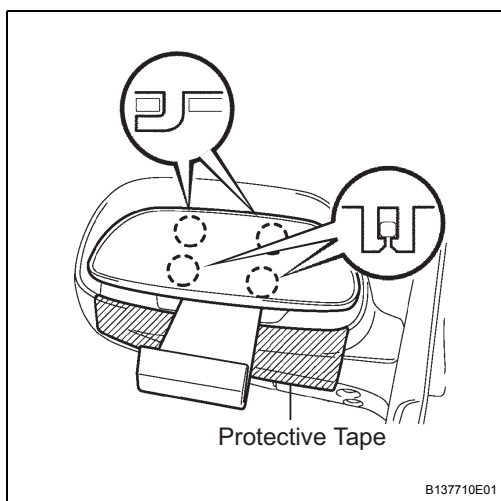

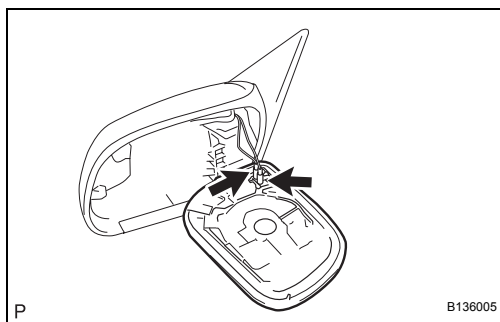


- (b) Disconnect the 2 connectors and remove the mirror.

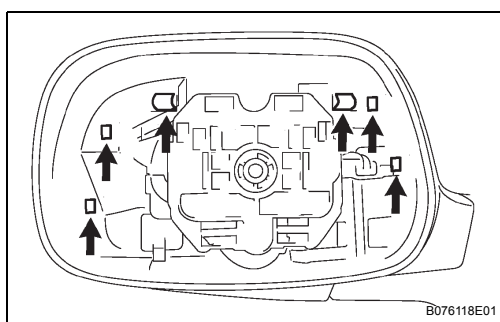

- (c) Using a screwdriver, detach the 6 claws and remove the mirror cover.

HINT:

Tape the screwdriver tip before use.

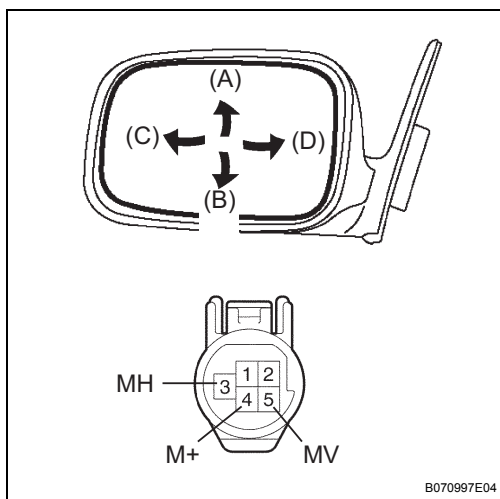

INSPECTION


1. INSPECT OUTER REAR VIEW MIRROR ASSEMBLY LH

- (a) Disconnect the mirror connector.
(b) Apply battery voltage and check the operation of the mirror.

OK

Measurement Condition	Specified Condition
Battery positive (+) → Terminal 5 (MV) Battery negative (-) → Terminal 4 (M+)	Turns upward (A)
Battery positive (+) → Terminal 4 (M+) Battery negative (-) → Terminal 5 (MV)	Turns downward (B)
Battery positive (+) → Terminal 3 (MH) Battery negative (-) → Terminal 4 (M+)	Turns left (C)
Battery positive (+) → Terminal 4 (M+) Battery negative (-) → Terminal 3 (MH)	Turns right (D)

If the result is not as specified, replace the mirror assembly.

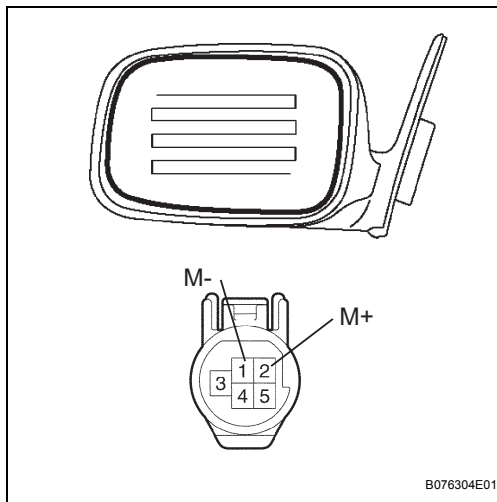


- (c) Apply battery voltage to the mirror terminals and check the operation of the mirror heater.

OK

Measurement Condition	Specified Condition
Battery positive (+) → Terminal 2 (M+) Battery negative (-) → Terminal 1 (M-)	Mirror becomes warm

If the result is not as specified, replace the mirror assembly.

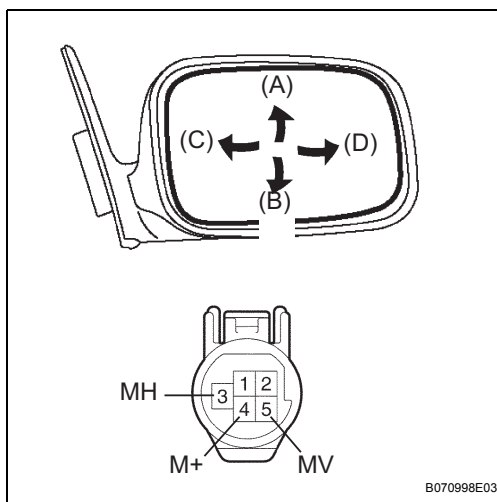

2. INSPECT OUTER REAR VIEW MIRROR ASSEMBLY RH

- (a) Disconnect the mirror connector.
(b) Apply battery voltage and check the operation of the mirror.

OK

Measurement Condition	Specified Condition
Battery positive (+) → Terminal 5 (MV) Battery negative (-) → Terminal 4 (M+)	Turns upward (A)
Battery positive (+) → Terminal 4 (M+) Battery negative (-) → Terminal 5 (MV)	Turns downward (B)
Battery positive (+) → Terminal 3 (MH) Battery negative (-) → Terminal 4 (M+)	Turns left (C)
Battery positive (+) → Terminal 4 (M+) Battery negative (-) → Terminal 3 (MH)	Turns right (D)


If the result is not as specified, replace the mirror assembly.

- (c) Apply battery voltage to the mirror terminals and check the operation of the mirror heater.

OK


Measurement Condition	Specified Condition
Battery positive (+) → Terminal 2 (M+) Battery negative (-) → Terminal 1 (M-)	Mirror becomes warm

If the result is not as specified, replace the mirror assembly.

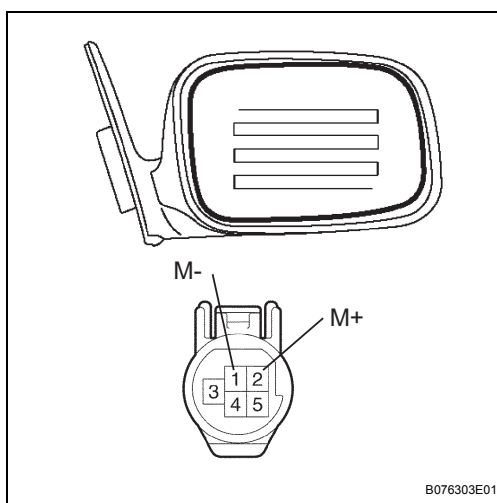

INSTALLATION**1. INSTALL OUTER MIRROR COVER LH**


(a) Install the mirror cover as shown in the illustration.

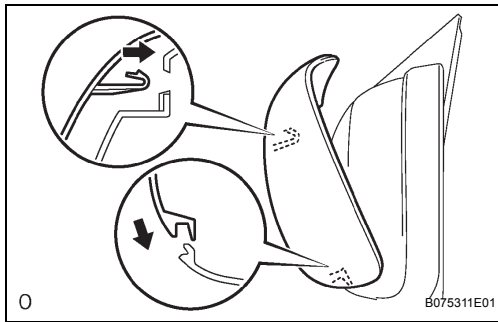


(b) Check that there is no gap between the cover and mirror body.

HINT:


If there is a gap between the cover and body, noise will occur during driving.

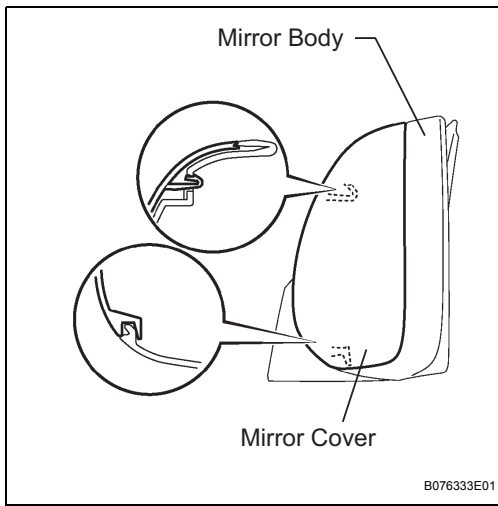


(c) Connect the 2 connectors.

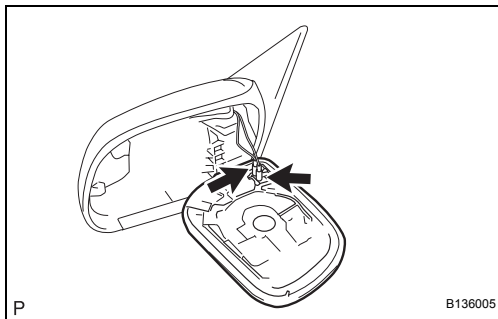

(d) Attach the 4 claws to install the mirror.

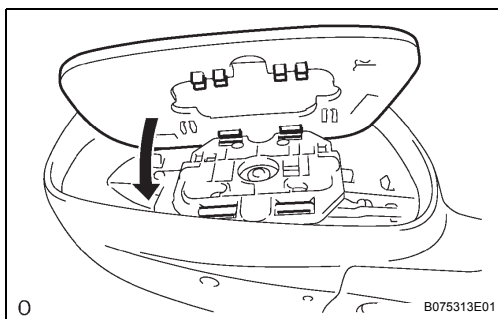

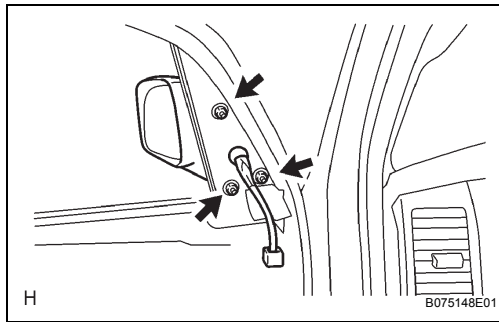**2. INSTALL OUTER REAR VIEW MIRROR ASSEMBLY LH**

- (a) Install the mirror with the 3 nuts.
Torque: 5.5 N*m (56 kgf*cm, 49 in.*lbf)
- (b) Connect the connector.

3. INSTALL FRONT DOOR TRIM BOARD SUB-ASSEMBLY LH (See page ED-21)**4. INSTALL FRONT DOOR ARMREST BASE PANEL UPPER LH (See page ED-21)****5. INSTALL DOOR PULL HANDLE (See page ED-22)****6. INSTALL FRONT DOOR LOWER FRAME BRACKET GARNISH LH (See page ED-22)****7. INSTALL FRONT DOOR INSIDE HANDLE BEZEL LH (See page ED-22)****8. PERFORM INITIALIZATION**

- (a) Perform initialization (see page SS-2).

NOTICE:

Certain systems need to be initialized after disconnecting and reconnecting the cable from the negative (-) battery terminal.