


for Preparation [Click here](#)

1. REMOVE RADIATOR ASSEMBLY

([Click here](#))


2. REMOVE NO. 2 FAN

- a. Remove the nut and No. 2 fan.

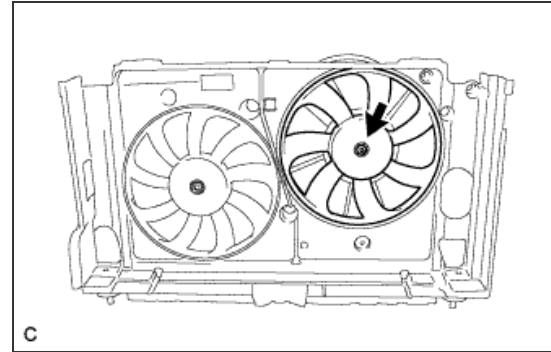


3. REMOVE FAN

- a. Remove the nut and fan.

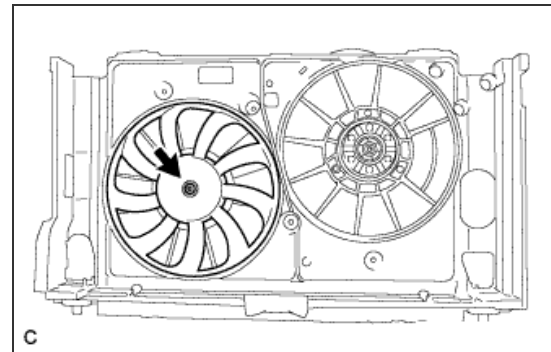

4. REMOVE NO. 2 COOLING FAN MOTOR

- a. Remove the 3 screws and No. 2 cooling fan motor.

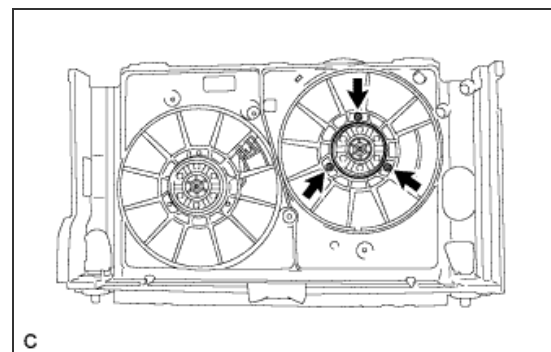


5. REMOVE COOLING FAN MOTOR

- a. Disconnect the 5 clamps.

NOTICE:

Be careful not to damage the connector.

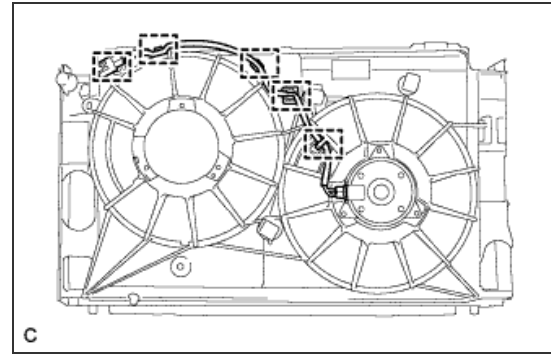

- b. Remove the 3 screws and cooling fan motor.

