


for Preparation [Click here](#)


## 1. REMOVE FRONT SPOILER COVER (w/ Front Spoiler)

- a. Remove the 8 screws and front spoiler cover.

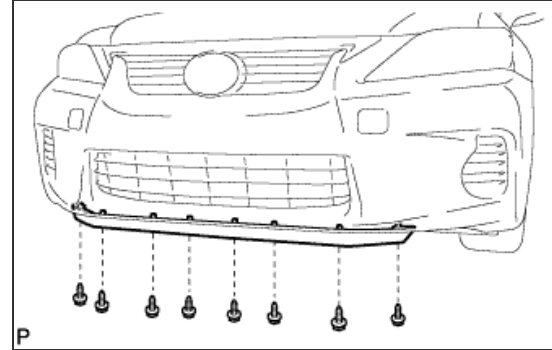


## 2. REMOVE RADIATOR SUPPORT OPENING COVER

- a. Remove the 9 clips and radiator support opening cover.

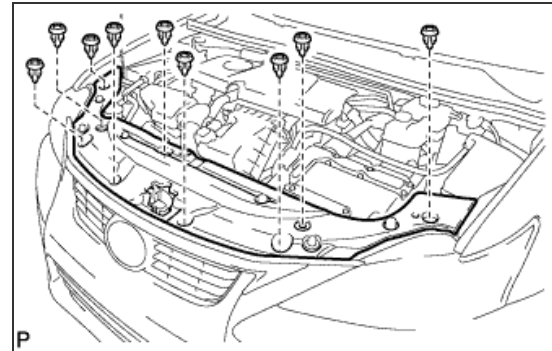

## 3. REMOVE HOOD CENTER CUSHION

- a. Remove the 2 hood center cushions.

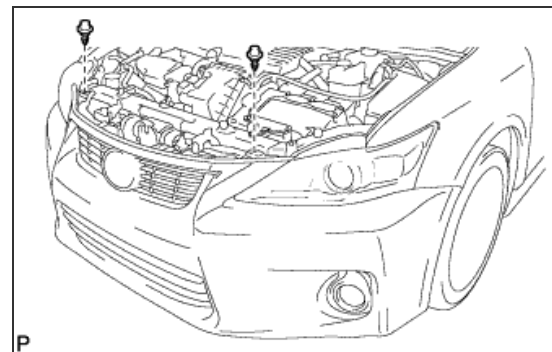

## 4. REMOVE FRONT BUMPER ASSEMBLY


- a. Put protective tape around the front bumper assembly.

**Text in Illustration**

*1	Protective Tape
----	-----------------

**HINT:**


Use the same procedure for the RH side and LH side.

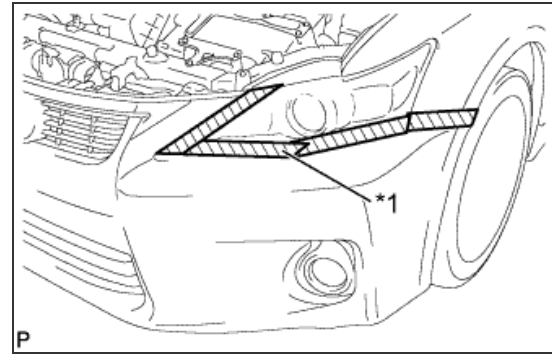

- b. Using a screwdriver, turn the pins 90 degrees and remove the 2 pin hold clips.

**HINT:**

Use the same procedure for the RH side and LH side.

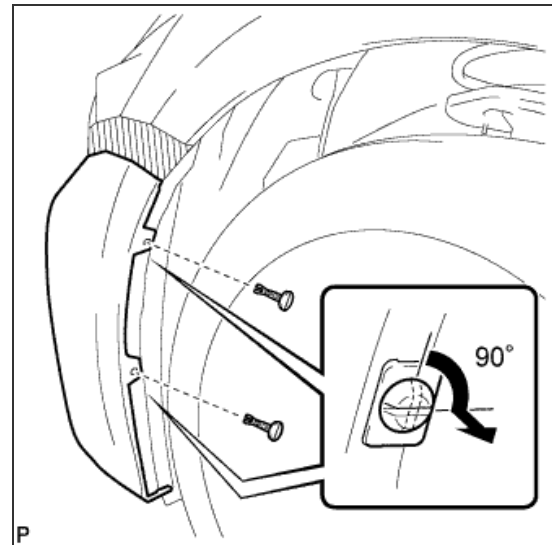

- c. Remove the screw and front bumper seal bracket.

**Text in Illustration**


*1	Front Bumper Seal Bracket
----	---------------------------

**NOTICE:**


Do not pull the front bumper assembly until the front bumper seal bracket is removed, or the front bumper assembly may be damaged.

**HINT:**

Use the same procedure for the RH side and LH side.

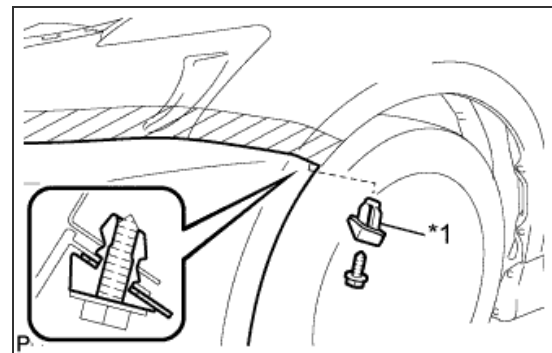


- d. Remove the 6 screws.

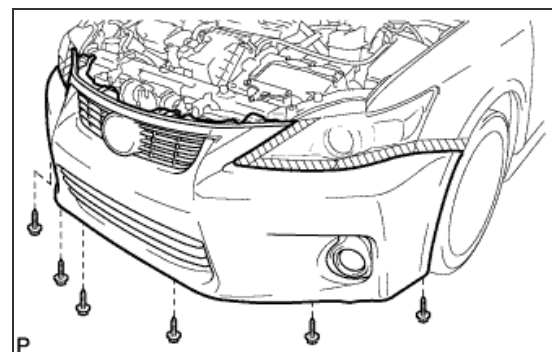

e. Remove the 2 bolts.

f. Using a clip remover, remove the 2 clips.

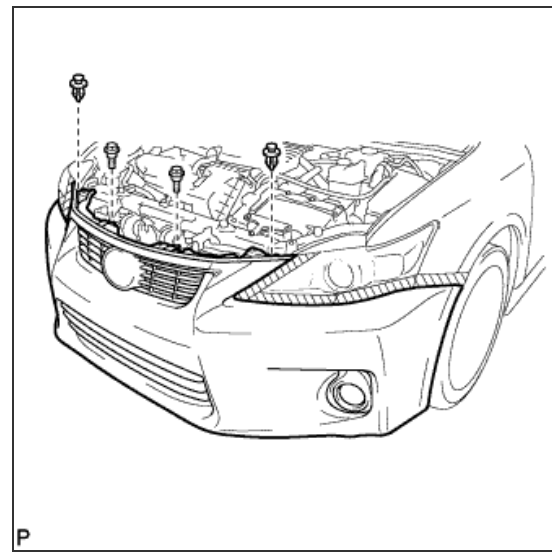


g. Disengage the 2 claws.

**NOTICE:**

Make sure that the front bumper seal bracket is removed, or the front bumper assembly may be damaged.

**HINT:**


Use the same procedure for the RH side and LH side.

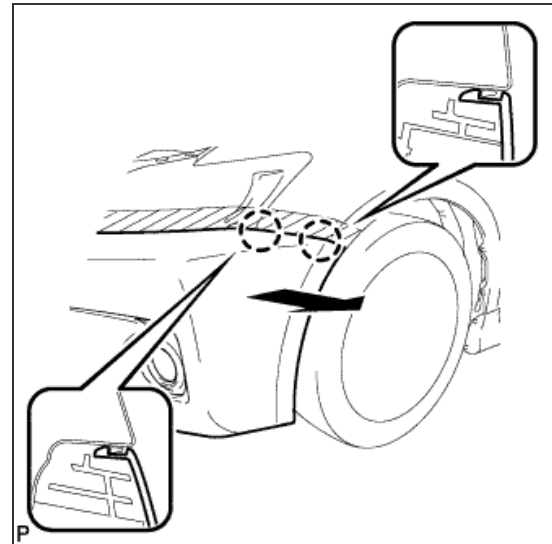

h. Disengage the 2 claws and disconnect the front bumper assembly as shown in the illustration.

i. w/ Wire Harness:

i. Disconnect the connector.

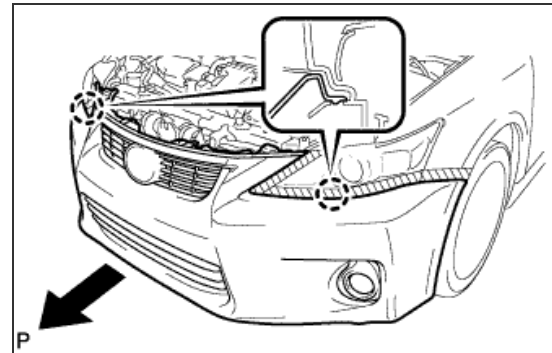

j. w/ Headlight Cleaner System:

i. Disconnect the headlight cleaner hose and drain the washer fluid.

**HINT:**

Use a container to collect the washer fluid.

k. Remove the front bumper assembly.

