


# COMPONENTS ILLUSTRATION

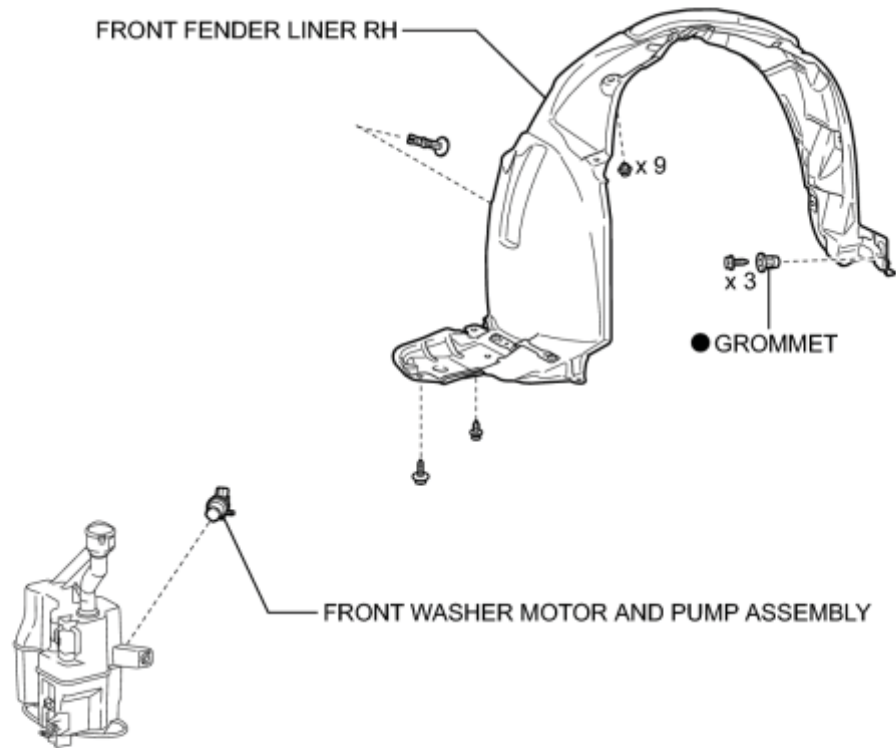


● Non-reusable part  
P


# REMOVAL

## 1. REMOVE FRONT WHEEL RH

## 2. REMOVE FRONT FENDER LINER RH

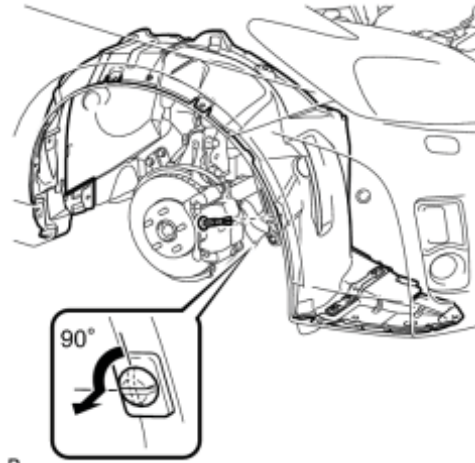

(a) Using a screwdriver, turn the pin 90 degrees and remove the pin hold clip.

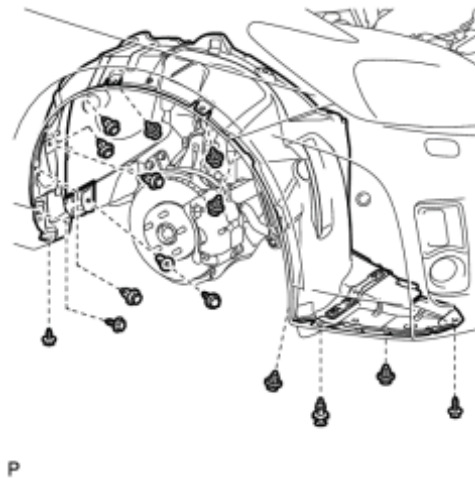

(b) Remove the 10 clips and 4 screws.


(c) Using a clip remover, remove the grommet and the front fender liner RH.

### HINT:

The grommet needs to be replaced with new one because it will break when it is removed.

## 3. DRAIN WASHER FLUID

(a) Disconnect the washer hose from the windshield washer motor and pump assembly, and drain the washer fluid.

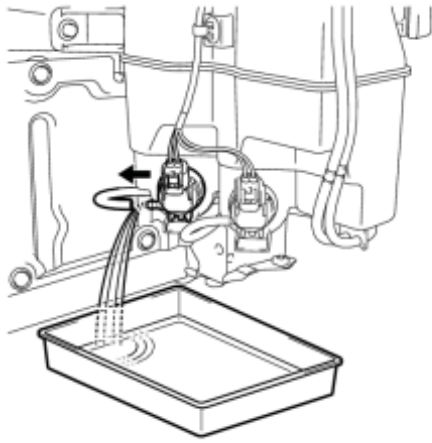


HINT:

Use a container to collect the washer fluid.

P

#### 4. REMOVE FRONT WASHER MOTOR AND PUMP ASSEMBLY

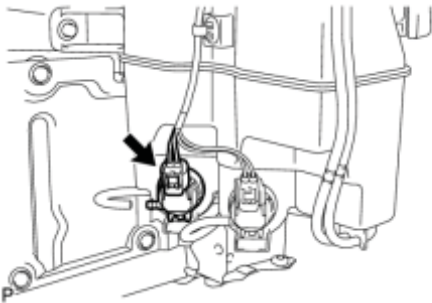

(a) Disconnect the connector.

(b) Remove the windshield washer motor and pump assembly.

# INSPECTION

## 1. INSPECT WINDSHIELD WASHER MOTOR AND PUMP ASSEMBLY

- (a) Remove the washer jar.
- (b) Disconnect the windshield washer motor and pump connector.

### HINT:

The check should be performed with the windshield washer motor and pump installed on the washer jar.

- (c) Fill the washer jar with washer fluid.

\*1



- (d) Connect a battery positive (+) lead to terminal 1 of the windshield washer motor and pump, and a negative (-) lead to terminal 2.

- (e) Check that washer fluid flows from the washer jar.

OK:

Washer fluid flows from the washer jar.


### *Text in Illustration*

*1	Component without harness connected (Windshield Washer Motor and Pump Assembly)
----	--

If the result is not as specified, replace the windshield washer motor and pump assembly.

# INSTALLATION

## 1. INSTALL FRONT WASHER MOTOR AND PUMP ASSEMBLY

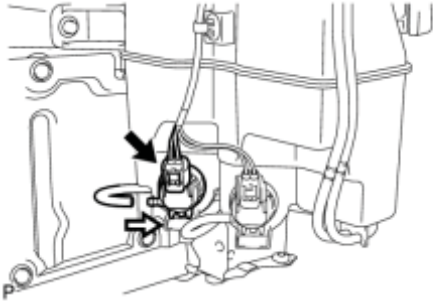

(a) Install the windshield washer motor and pump assembly.


(b) Connect the connector.

(c) Connect the washer hose.

## 2. ADD WASHER FLUID

(a) Add washer fluid to the washer jar.

## 3. INSTALL FRONT FENDER LINER RH

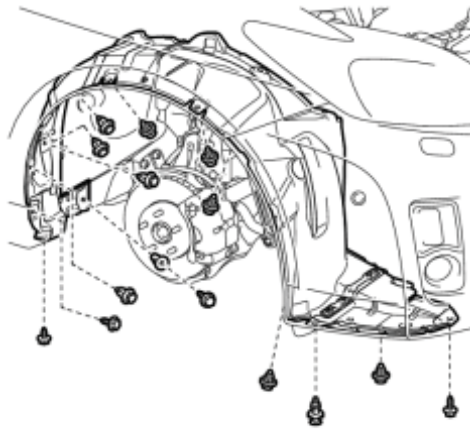

(a) Install a new grommet and the 4 screws.

P

(b) Install the 10 clips.

(c) Install the pin hold clip as shown in the illustration.


## Text in Illustration

\*1

Correct

\*2

Incorrect

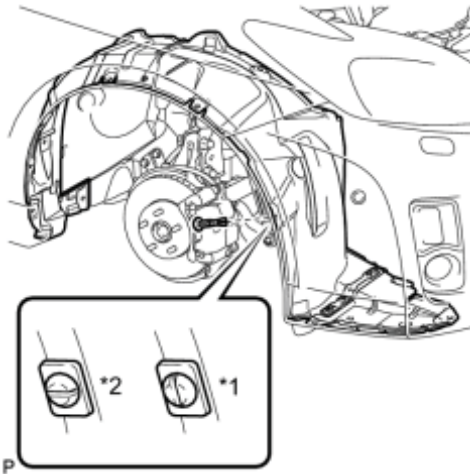


**NOTICE:**

Insert the pin hold clip with the slot aligned vertically. Do not rotate the clip after inserting it. After installation, confirm that the slot is vertical.

**4. INSTALL FRONT WHEEL RH**

**Torque: 103 N·m (1050 kgf·cm, 76ft·lbf)**

# COMPONENTS ILLUSTRATION

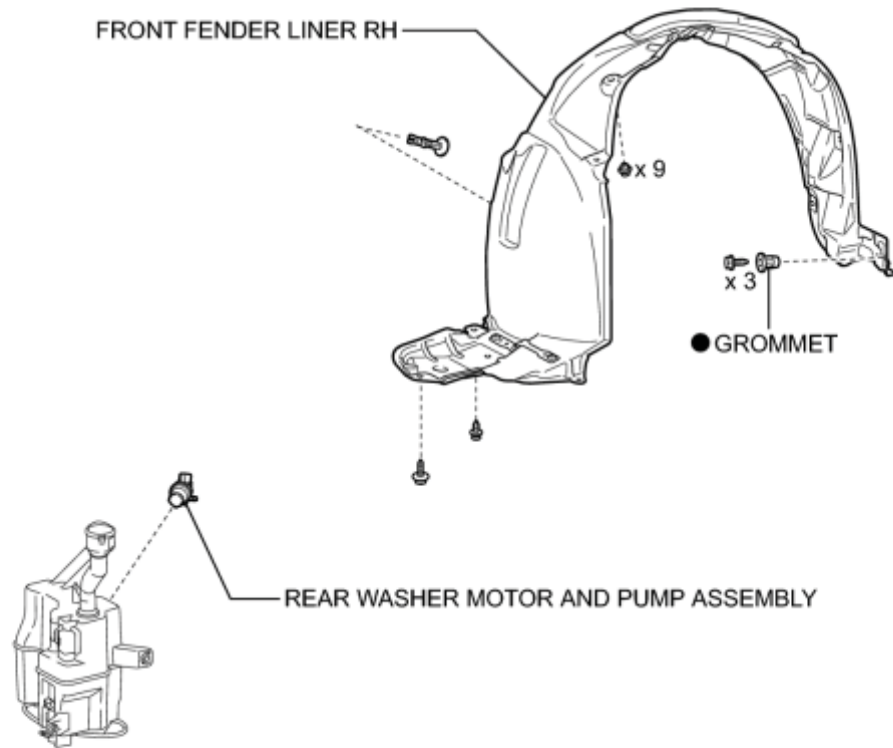


● Non-reusable part  
P

# REMOVAL

1. REMOVE FRONT WHEEL RH

2. REMOVE FRONT FENDER LINER RH\_ INFO

3. DRAIN WASHER FLUID

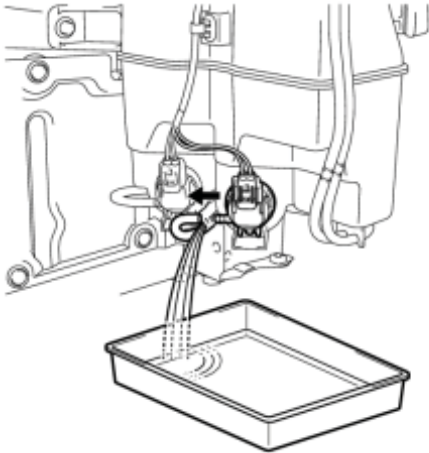


(a) Disconnect the washer hose from the rear washer motor and pump assembly, and drain the washer fluid.

HINT:

Use a container to collect the washer fluid.

P

4. REMOVE REAR WASHER MOTOR AND PUMP ASSEMBLY

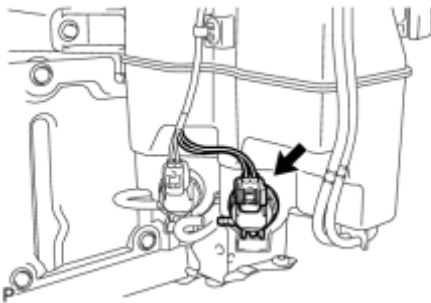

(a) Disconnect the connector.

(b) Remove the rear washer motor and pump assembly.