



NOTICE

■ During customization

To prevent 12-volt battery discharge, ensure that the hybrid system is operating while customizing features.

Customizable features

Some function settings are changed simultaneously with other functions being customized. Contact your Toyota dealer for further details.

- A** Settings that can be changed using the Multimedia Display
- B** Settings that can be changed using the multi-information display
- C** Settings that can be changed by your Toyota dealer

Definition of symbols: O = Available, — = Not available

■ Gauges, meters and multi-information display (→P.87, 92)

Function ^{*1}	Default setting	Customized setting	A	B	C
Language ^{*2}	English	Canadian French	O ^{*3}	O	—
		Mexican Spanish			
Units ^{*4}	miles (MPG US)	km (km/L)	O ^{*3}	O	—
		km (L/100 km)			
Hybrid System Indicator	On	Off	—	O	—
EV indicator ^{*2}	On	Off	—	O	—
Eco Guidance (ECO Accelerator Guidance) ^{*2}	On	Off	—	O	—
Fuel Economy	Total Average	Trip Average	—	O	—
		Tank Average			
Audio system linked display ^{*2}	On	Off	—	O	—
AWD system display ^{*2, 5}	On	Off	—	O	—

Function ^{*1}	Default setting	Customized setting	A	B	C
Drive information type ^{*2}	Trip	Total	—	O	—
Drive information items (first item) ^{*2}	Distance	Average Speed	—	O	—
		Total Time			
Drive information items (second item) ^{*2}	Total Time	Average Speed	—	O	—
		Distance			
Pop-up display ^{*2}	On	Off	—	O	—
Default settings	—	—	—	O	—
Convenience Services (Suggestion function) ^{*2}	On	On (when the vehicle is stopped)	O ^{*6}	—	O
		Off			

^{*1}: For details about each function: →P.96

^{*2}: The default setting is changed in conjunction with the settings of My Settings.

^{*3}: The setting can be changed on “General” of .

^{*4}: The default setting varies according to country.

^{*5}: AWD models

^{*6}: The setting can be changed on “Notifications” of .

■ Door lock (→P.113, 505)

Function	Default setting	Customized setting	A	B	C
Unlocking using a mechanical key	Driver’s door unlocked in one step, all doors unlocked in two step	All doors unlocked in one step	—	—	O
Automatic door locking function [*]	Shift position linked door locking operation	Off	O	—	O
		Speed linked door locking operation			

Function	Default setting	Customized setting	A	B	C
Automatic door unlocking function*	Shift position linked door unlocking operation	Off	O	—	O
		Driver's door linked door unlocking operation			

*: The default setting is changed in conjunction with the settings of My Settings.

■ Rear seat reminder (→P.116)

Function	Default setting	Customized setting	A	B	C
Rear seat reminder function*	On	Off	—	O	O

*: The default setting is changed in conjunction with the settings of My Settings.

■ Smart key system and wireless remote control (→P.113, 119, 131)

Function	Default setting	Customized setting	A	B	C
Operating signal (Buzzers)*	Standard	Desired volume	O	—	O
Operation signal (Emergency flashers)*	On	Off	O	—	O
Time elapsed before automatic door lock function is activated if door is not opened after being unlocked*	60 seconds	Off	O	—	O
		30 seconds			
		120 seconds			
Open door warning buzzer (When locking the vehicle)	On	Off	—	—	O

*: The default setting is changed in conjunction with the settings of My Settings.

■ Smart key system (→P.113, 119, 131)

Function	Default setting	Customized setting	A	B	C
Smart door unlocking ^{*1}	Driver's door	All the doors	O	—	O
Smart key system	On	Off	—	—	O
Time elapsed before unlocking all the door when gripping and holding the driver's door handle ^{*2}	2 seconds	Off	—	—	O
		1.5 seconds			
		2.5 seconds			
Number of consecutive door lock operations	2 times	As many as desired	—	—	O
Power switch illumination	On	Off	—	—	O

^{*1}: The default setting is changed in conjunction with the settings of My Settings.

^{*2}: This setting can be changed when the smart door unlocking setting is set to Driver's door.

■ Wireless remote control (→P.108, 113, 119)

Function	Default setting	Customized setting	A	B	C
Unlocking operation [*]	Driver's door unlocked in one step, all doors unlocked in two step	All doors unlocked in one step	O	—	O
Locking operation when door opened [*]	On	Off	O	—	O
The function that activates the  switch of the wireless remote control when locking the door (→P.122)	On (Unlocking all the door)	Off	—	—	O
		On (Unlocking back door only)			
Theft deterrent panic mode	On	Off	—	—	O

^{*}: The default setting is changed in conjunction with the settings of My Settings.

■ Power back door*¹ (→P.122)

Function	Default setting	Customized setting	A	B	C
Power back door operations	On	Off	—	O	—
Operation buzzer volume	Loud	Soft	—	O	—
		Normal			
Opening angle	5	1 to 4	—	O	—
		User setting* ²			
 switch of the wireless remote control operation	Press and hold	One short press	—	—	O
		Push twice			
		Off			
Power back door open operation when the back door opener switch is pressed	On	Off	—	—	O
Back door closing assist	On	Off	—	—	O
Close & lock (walk away) function	On	Off	—	—	O

*¹: if equipped

*²: The open position is set by the power back door switch. (→P.130)

■ Enabling easier driver entry and exit (power easy access system)*¹ (→P.158)

Function	Default setting	Customized setting	A	B	C
Driver's seat slide movement when exiting the vehicle* ²	Full	Off	O	—	O
		Partial			

*¹: If equipped

*²: The default setting is changed in conjunction with the settings of My Settings.

■ Power windows (→P.155)

Function	Default setting	Customized setting	A	B	C
Mechanical key linked operation (open)	Off	On	—	—	O
Mechanical key linked operation (close)	Off	On	—	—	O
Wireless remote control linked operation (open)	Off	On	—	—	O
Wireless remote control linked operation signal (buzzer)	On	Off	—	—	O

■ Power switch (→P.183)

Function	Customized setting	A	B	C
ACC customization Enabling/Disabling ACC mode	On/Off	O	—	O

■ Reverse warning buzzer (→P.187)

Function	Default setting	Customized setting	A	B	C
Signal (buzzer) when the shift position is in R	Off	On	—	—	O

■ Automatic light control system (→P.199)

Function	Default setting	Customized setting	A	B	C
Daytime running lights ^{*1, 2}	On	Off	O	—	O
Light sensor sensitivity ^{*1}	Normal	Brighter	O	—	O
		Bright			
		Dark			
		Darker			

Function	Default setting	Customized setting	A	B	C
Time elapsed before headlights automatically turn off after doors are closed ^{*1}	30 seconds	Off	O	—	O
		60 seconds			
		90 seconds			
Windshield wiper linked headlight illumination	On	Off	—	—	O

^{*1}: The default setting is changed in conjunction with the settings of My Settings.

^{*2}: Except for Canada

■ PCS (Pre-Collision System) (→P.222)

Function	Customized setting	A	B	C
Pre-Collision System ^{*1}	On/Off	—	O	—
Warning timing ^{*2}	Later/Default/Earlier	—	O	—

^{*1}: The system is automatically enabled each time the power switch is turned to ON.

^{*2}: The default setting is changed in conjunction with the settings of My Settings.

■ LCA (Lane Change Assist)^{*1} (→P.239)

Function	Customized setting	A	B	C
Lane Change Assist ^{*2}	On/Off	—	O	—

^{*1}: If equipped

^{*2}: The default setting is changed in conjunction with the settings of My Settings.

■ LDA (Lane Departure Alert) system (→P.242)

Function	Customized setting	A	B	C
Lane Departure Alert system [*]	On/Off	—	O	—
Alert timing [*]	Default/Earlier	—	O	—
Alert options [*]	Vibration/Beep	—	O	—

*: The default setting is changed in conjunction with the settings of My Settings.

■ **Driver break suggestion (→P.242)**

Function	Customized setting	A	B	C
Driver break suggestion	On/Off	—	O	—

■ **Proactive Driving Assist (→P.248)**

Function	Customized setting	A	B	C
Proactive Driving Assist (PDA)*	On/Off	—	O	—
Support sensitivity*	Low/Mid/High	—	O	—
Steering Assist (SA)*	On/Off	—	O	—
Deceleration Assist (DA)*	On/Off	—	O	—
Obstacle Anticipation Assist (OAA)*	On/Off	—	O	—

*: The default setting is changed in conjunction with the settings of My Settings.

■ **FCTA (Front Cross Traffic Alert)*¹ (→P.254)**

Function	Customized setting	A	B	C
Front Cross Traffic Alert	On/Off	—	O	—
Alert timing* ²	Later/Default/Earlier	—	O	—

*¹: If equipped

*²: The default setting is changed in conjunction with the settings of My Settings.

■ **RSA (Road Sign Assist)*¹ (→P.257)**

Function	Customized setting	A	B	C
Road Sign Assist* ²	On/Off	—	O	—
Excess speed notification method* ²	None/Visual/Visual & Audible	—	O	—

Function	Customized setting	A	B	C
Other notifications method* ²	None/Visual/Visual & Audible	—	O	—
Excess speed notification level* ²	5 mph (10 km/h) / 3 mph (5 km/h) / 1 mph (2 km/h)	—	O	—

*¹: If equipped

*²: The default setting is changed in conjunction with the settings of My Settings.

■ Dynamic Radar Cruise Control (→P.259)

Function	Customized setting	A	B	C
Acceleration setting*	Low/Mid/High	—	O	—
Guide message*	On/Off	—	O	—
Curve speed reduction*	Off/Low/Mid/High	—	O	—

*: The default setting is changed in conjunction with the settings of My Settings.

■ BSM (Blind Spot Monitor)* (→P.275)

Function	Default setting	Customized setting	A	B	C
BSM (Blind Spot Monitor)	On	Off	—	O	—
Outside rear view mirror indicator brightness	Bright	Dim	—	O	—
Alert timing for presence of approaching vehicle (sensitivity)	Intermediate	Early	—	O	—
		Late			

*: If equipped

■ Safe Exit Assist* (→P.280)

Function	Default setting	Customized setting	A	B	C
Safe Exit Assist	On	Off	—	O	—
Outside rear view mirrors display	On	Off	—	O	—

Function	Default setting	Customized setting	A	B	C
Detection sensitivity	Middle	High	—	O	—
		Low			

*: If equipped

■ Intuitive parking assist (→P.284)

Function	Default setting	Customized setting	A	B	C
Intuitive parking assist	On	Off	—	O	—
Buzzer volume of Intuitive parking assist when operating ^{*1}	Level2	Level1	—	O	O
		Level3			
Distance from which the front center sensor starts detection	Standard	Near	O ^{*2}	—	O
Distance from which the rear center sensor starts detection	Standard	Near	O ^{*2}	—	O
Distance from which the corner sensors start detection	Standard	Near	—	—	O

^{*1}: The sound volume is linked among the intuitive parking assist, RCTA^{*3}, and RCD^{*3}.

^{*2}: For vehicles with panoramic view monitor, the setting can be changed on the panoramic view monitor settings screen. For details, refer to “MULTI-MEDIA OWNER’S MANUAL”. A setting changed at a Toyota dealer cannot be further changed on the panoramic view monitor settings screen.

^{*3}: If equipped

■ RCTA (Rear Cross Traffic Alert) function^{*3} (→P.294)

Function	Default setting	Customized setting	A	B	C
RCTA (Rear Cross Traffic Alert)	On	Off	—	O	—

Function	Default setting	Customized setting	A	B	C
Buzzer volume of RCTA when operating ^{*1, 2}	Level2	Level1	—	O	—
		Level3			

^{*1}: This setting changes in accordance with My Settings

^{*2}: The sound volume is linked among the intuitive parking assist, RCTA^{*3}, and RCD^{*3}.

^{*3}: If equipped

■ RCD (Rear Camera Detection) function* (→P.299)

Function	Default setting	Customized setting	A	B	C
RCD (Rear Camera Detection) function	On	Off	—	O	—

*: If equipped

■ PKSB (Parking Support Brake)* (→P.303)

Function	Default setting	Customized setting	A	B	C
PKSB (Parking Support Brake) function	On	Off	—	O	O

*: If equipped

■ Toyota Teammate Advanced Park* (→P.316)

Function	Default setting	Customized setting	A	B	C
Remote Park	On	Off	O	—	—
Vehicle speed during operation	Normal	Slow	O	—	—
		Fast			
Distance to objects	Normal	Far	O	—	—
Preferred parking method	Parallel	Perpendicular	O	—	—
Preferred parking direction	Forward	Reverse	O	—	—

Function	Default setting	Customized setting	A	B	C
Preferred exit direction (perpendicular)	Right	Left	O	—	—
Preferred exit direction (parallel)	Left	Right	O	—	—
Camera view when parking	Normal	Wide	O	—	—
Camera view when exiting	Wide	Normal	O	—	—
Parking path adjustment	0 (Centered)	-3 (Inward) to 3 (Outward)	O	—	—
Road width adjustment	Normal	Slightly narrow	O	—	—
		Narrow			
Park position adjustment (forward)	0 (Centered)	-3 (Rearward) to +3 (Frontward)	O	—	—
Park position adjustment (reverse)	0 (Centered)	-3 (Rearward) to +3 (Frontward)	O	—	—
Rear accessory setting	Off	3.9 in. (10 cm)	O	—	—
		7.9 in. (20 cm)			
		11.8 in. (30 cm)			
		15.7 in. (40 cm)			
Clear registered parking space	-	-	O	—	—

* : If equipped

■ Driving mode select switch (→P.343)

Function	Default setting	Customized setting	A	B	C
Powertrain control in custom mode	Normal	Sport	O	—	—
		Eco			

Function	Default setting	Customized setting	A	B	C
Steering wheel control in custom mode	Normal	Sport	O	—	—
Air conditioning operation in custom mode	Normal	Eco	O	—	—

■ Automatic air conditioning system (→P.358)

Function	Default setting	Customized setting	A	B	C
A/C auto switch operation *	On	Off	O	—	O

*: The default setting is changed in conjunction with the settings of My Settings.

■ Illumination (→P.368)

Function	Default setting	Customized setting	A	B	C
Time elapsed before the interior lights turn off* ¹	15 seconds	Off	O	—	O
		7.5 seconds			
		30 seconds			
Operation after the power switch is turned off	On	Off	—	—	O
Operation when the doors are unlocked	On	Off	—	—	O
Operation when you approach the vehicle with the electronic key on your person	On	Off	—	—	O
Footwell lights* ²	On	Off	—	—	O
Instrument panel ornament lights* ²	On	Off	—	—	O
Illumination notification* ^{2, 3}	On	Off	—	—	O

*¹: The default setting is changed in conjunction with the settings of My Settings.

*2: If equipped

*3: If the instrument panel ornament lights is set to Off, this setting will also be set to Off.

■ Vehicle customization

- When the smart key system is off, the entry unlock function cannot be customized.
- When the doors remain closed after unlocking the doors and the timer activated automatic door lock function activates, signals will be generated in accordance with the operation buzzer volume and operational signal (Emergency flashers) function settings.
- Some settings can be changed using a switch or the Multimedia Display. If a setting is changed using a switch, the changed setting will not be reflected on the Multimedia Display until the power switch is turned off and then turned back to ON.

Items to initialize

The following items must be initialized for normal system operation after such cases as the battery being reconnected, or maintenance being performed on the vehicle:

List of the items to initialize

Item	When to initialize	Reference
Power back door [*]	• After reconnecting or changing the battery • After changing a fuse	P.127
Power windows	When functioning abnormally	P.155
Maintenance required reminder message	• After the maintenance is performed	P.406
Oil maintenance	After the maintenance is performed	P.417

^{*}: If equipped