


Position of Parts in Engine Compartment

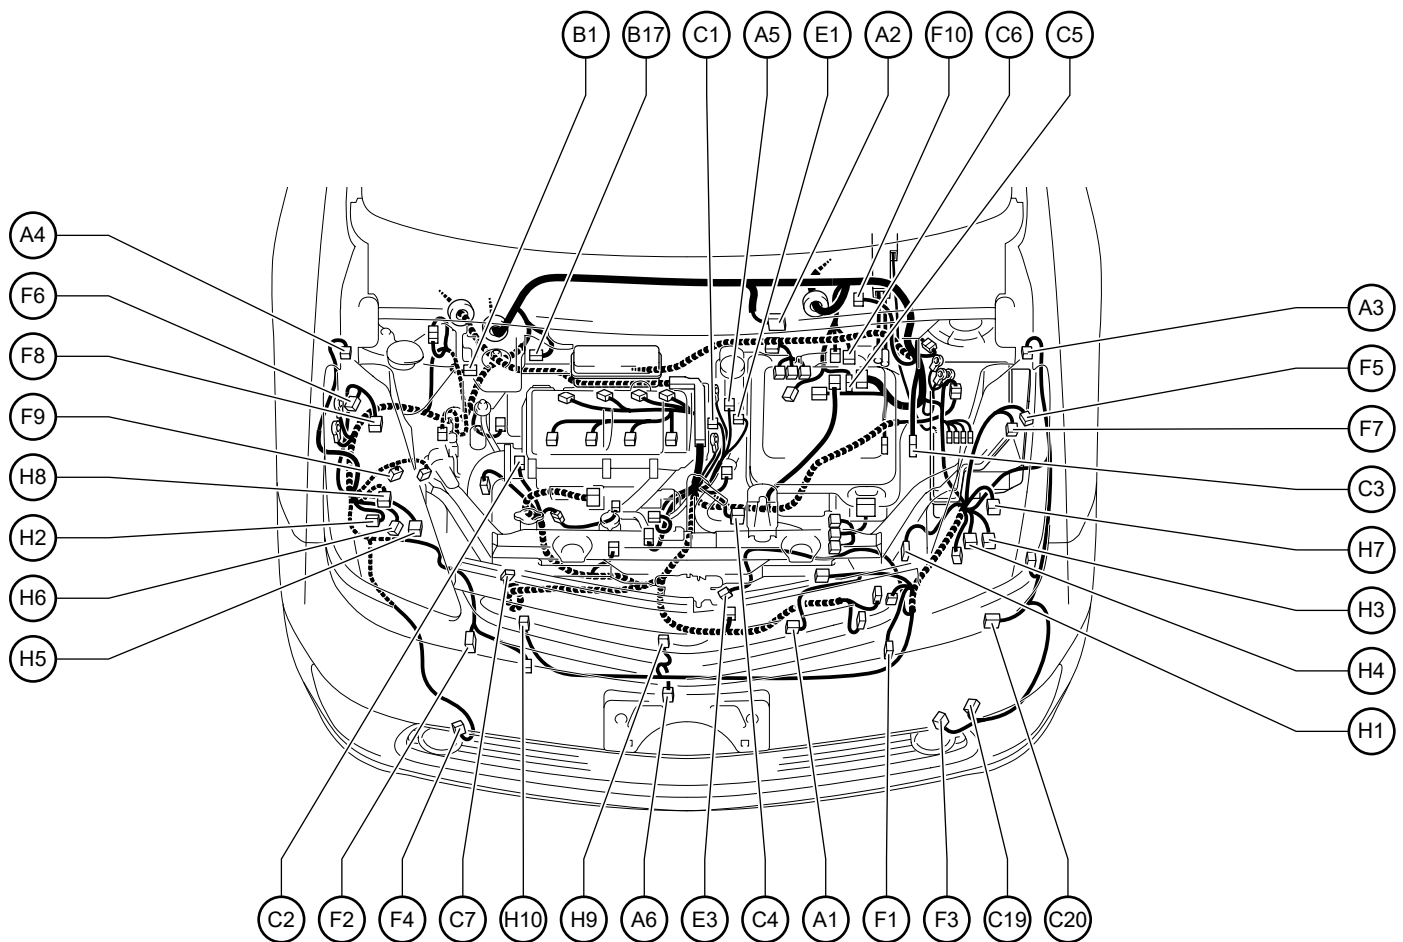

- A 1 A/C Condenser Fan Motor
- A 2 ABS & BA & TRAC & VSC Actuator
- A 3 ABS Speed Sensor Front LH
- A 4 ABS Speed Sensor Front RH
- A 5 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- A 6 Ambient Temp. Sensor
- B 1 Brake Fluid Level Warning SW
- B17 Brake Master Stroke Simulator Cylinder Assembly
- C 1 Camshaft Position Sensor
- C 2 Camshaft Timing Oil Control Valve
- C 3 Circuit Breaker Sensor
- C 4 Compressor Assembly (Motor)
Inverter
- C 5 Converter
- C 6 Converter
- C 7 Crankshaft Position Sensor
- C19 Coolant Heat Storage Tank Outlet Temp. Sensor
- C20 Coolant Heat Storage Water Pump
- E 1 Engine Coolant Temp. Sensor
- E 3 Engine Hood Courtesy SW

- F 1 Front Airbag Sensor LH
- F 2 Front Airbag Sensor RH
- F 3 Front Fog Light LH
- F 4 Front Fog Light RH
- F 5 Front Side Marker Light LH
- F 6 Front Side Marker Light RH
- F 7 Front Turn Signal Light LH
- F 8 Front Turn Signal Light RH
- F 9 Front Washer Motor
- F 10 Front Wiper Motor
- H 1 Headlight Beam Level Control Actuator LH
- H 2 Headlight Beam Level Control Actuator RH
- H 3 Headlight Assembly LH
- H 4 Headlight Assembly LH
- H 5 Headlight Assembly RH
- H 6 Headlight Assembly RH
- H 7 Headlight LH
- H 8 Headlight RH
- H 9 Horn (High)
- H10 Horn (Low)