

	miles:	5,000	10,000	15,000	20,000	25,000
	months:	6 mo	12 mo	18 mo	24 mo	30 mo
Check installation of driver's floor mat		X	X	X	X	X
Check wiper blades, all fluid levels		X	X	X	X	X
Rotate tires		X	X	X	X	X
Replace engine oil and oil filter			X		X	
Inspect cabin air filter				X		
Replace engine and cabin air filters						
Visually inspect brakes		X	X	X	X	X
Inspect brakes (full)						
Inspect transaxle for leakage						
Ball joints and dust covers				X		
Inspect fuel/vapor lines, fuel tank/cap						
Inspection drive shaft boots				X		
Inspection Engine/Inverter coolant				X		
Replace Engine/Inverter Coolant (1)						
Exhaust pipes and mountings				X		
Inspect radiator and (AC) condensor				X		
Inspect steering gear, linkage and boots				X		
Replace spark plugs						

(1) Engine coolant only. Subsequently replace Engine and Inverter coolant at 150,000 miles or 180 months (15 years), whichever comes first, and thereafter: both circuits, every 50,000 miles or 60 months (5 years).

75,000	80,000	85,000	90,000	95,000	100,000	105,000	110,000	115,000
90 mo	96 mo	102 mo	108 mo	114 mo	120 mo	126 mo	132 mo	138 mo
X	X	X	X	X	X	X	X	X
X	X	X	X	X	X	X	X	X
X	X	X	X	X	X	X	X	X
	X		X		X		X	
X						X		
X	X	X		X	X	X	X	X
			X					
			X					
X			X			X		
			X					
X			X			X		
X			X			X		
					X			
X			X			X		
X			X			X		
X			X			X		

120,000

144 mo

X

X

X

X

X

X

X

X

X

X

X

X

X

X

X