

YOUR CURRENT VEHICLE
2019 Toyota Prius

Removal

PROCEDURE

1. REMOVE DOOR PULL HANDLE

Click here

[2019 - 2022 MY Prius \[12/2018 - \]; DOOR / HATCH: BACK DOOR: DISASSEMBLY+](#)


2. REMOVE BACK DOOR TRIM BOARD ASSEMBLY

Click here


[2019 - 2022 MY Prius \[12/2018 - \]; DOOR / HATCH: BACK DOOR: DISASSEMBLY+](#)

3. REMOVE BACK DOOR OUTSIDE GARNISH SUB-ASSEMBLY WITH LIGHT



- a. Disconnect the connector.

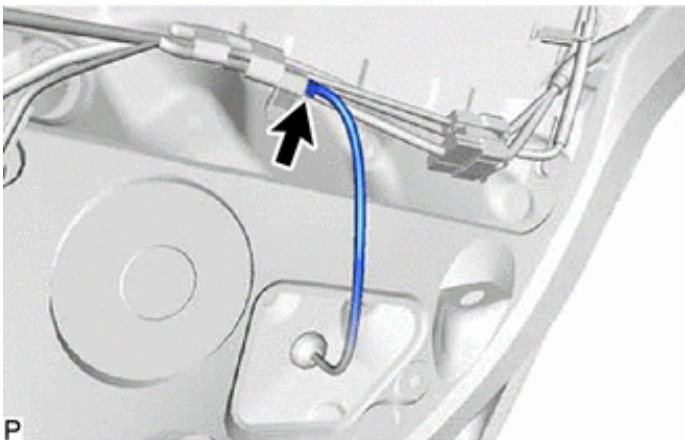



b. Remove the 10 bolts.

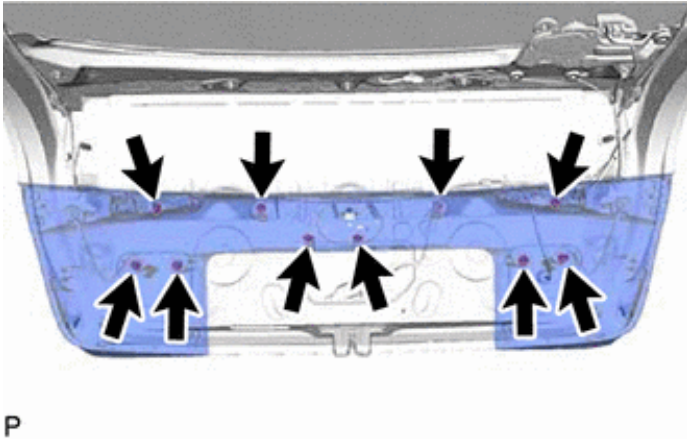

c. Disengage the 11 clips as shown in the illustration.

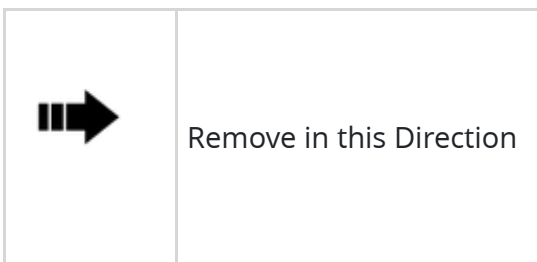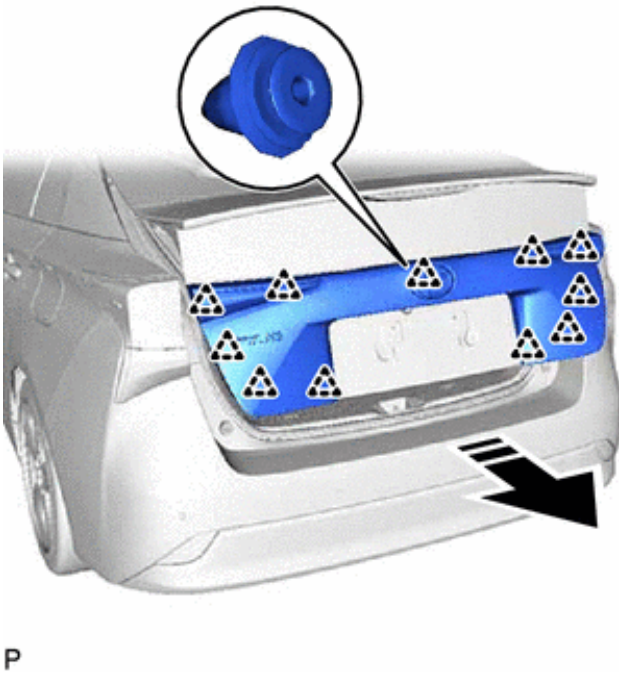

- d. Disengage the grommet as shown in the illustration to remove the back door outside garnish sub-assembly with light.

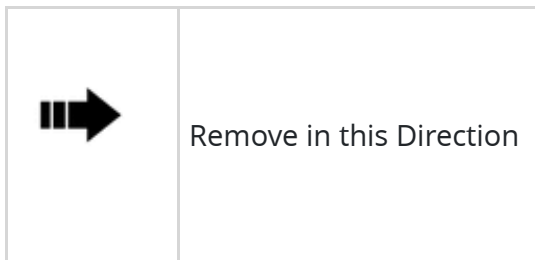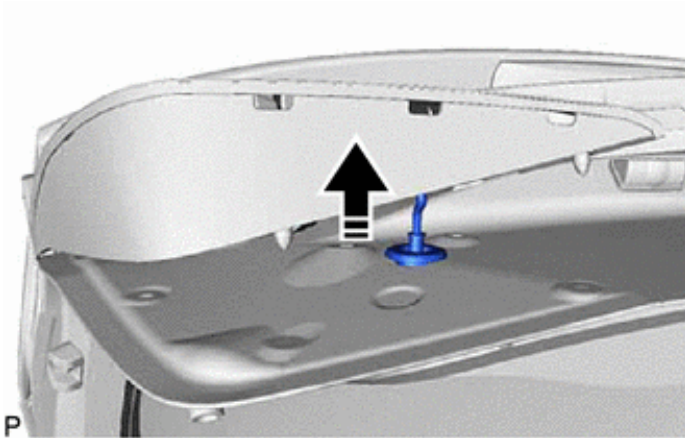

- e. Remove the 2 gaskets.

[Portions of materials contained herein have been reprinted under license from Toyota Motor Sales, U.S.A., Inc., License Agreement TMS1005.](#)