

REPLACEMENT

1. REMOVE FRONT WIPER BLADE



(a) Remove the holder of the front wiper blade as shown in the illustration.

Text in Illustration


*1	Holder
----	--------

(b) Remove the front wiper blade from the front wiper arm as shown in the illustration.


NOTICE:

Do not lower the front wiper arm with the front wiper blade removed. The arm tip may damage the windshield surface.

2. REMOVE WIPER RUBBER

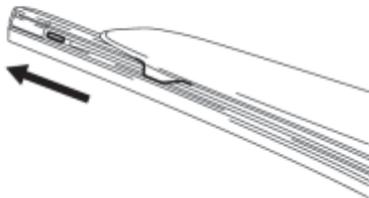

(a) Remove the wiper rubber with the wiper rubber backing plates from the front wiper blade.

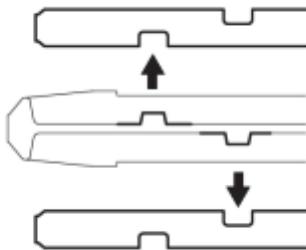


(b) Remove the 2 wiper rubber backing plates from the wiper rubber.

3. INSTALL WIPER RUBBER


(a) Install the 2 wiper rubber backing plates to the wiper rubber.

Text in Illustration

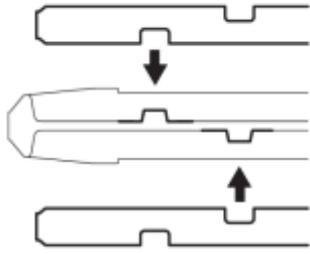


*1	Wiper rubber Backing plate
----	----------------------------

- Align the protrusions on the wiper rubber and the notches of the backing plates.
- Align the curved lines of the backing plates and the glass.



P

(b) Install the wiper rubber to the front wiper blade with the top of the rubber (curved end) facing the axis of the wiper arm.

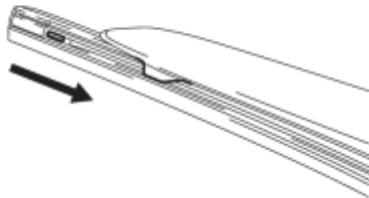


NOTICE:

Push the wiper rubber into the wiper blade strongly to engage them securely.

P

4. INSTALL FRONT WIPER BLADE

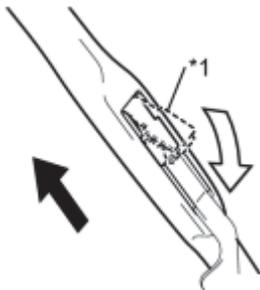

P

(a) Install the front wiper blade as shown in the illustration.


Text in Illustration

*1	Holder
----	--------

(b) Install the holder of the front wiper blade as shown in the illustration.

REPLACEMENT

1. REMOVE REAR WIPER BLADE

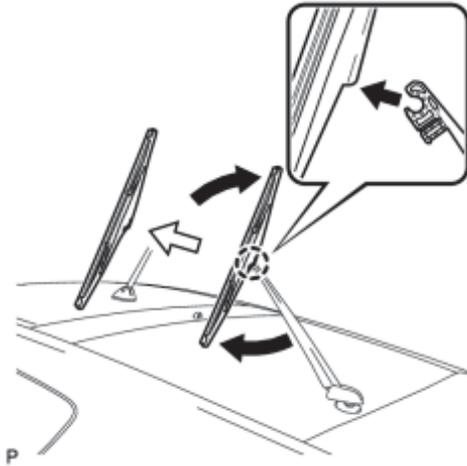

(a) Raise the wiper blade to the position where the claw detaches with a click sound as shown in the illustration.

NOTICE:


Be careful not to damage the claw.

(b) Pull the wiper blade straight toward to remove it from the wiper arm.

NOTICE:

Do not lower the wiper arm with the wiper blade removed. The arm tip may damage the back door glass surface.

2. REMOVE REAR WIPER RUBBER

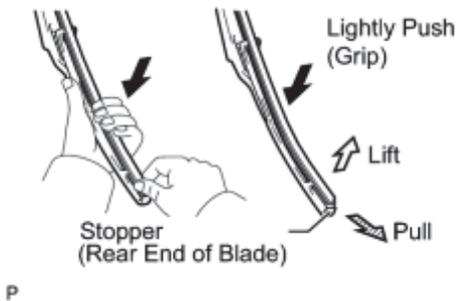

(a) Lift and pull the end of the wiper rubber protrusion from the blade stopper as shown in the illustration.

NOTICE:

Do not forcibly pull out the wiper rubber. The backing plates will be deformed or the blade claws will be damaged.


HINT:

Lightly pushing the rubber in the middle will allow it to be removed more easily.

(b) Remove the rear wiper rubber backing plates.

3. INSTALL REAR WIPER RUBBER

(a) Install the rear wiper rubber backing plates as shown in the illustration.

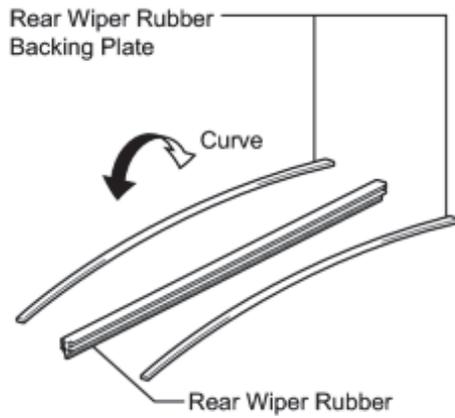


NOTICE:

Install the backing plates facing the correct direction.


P

(b) Insert the wiper rubber from the front end of the wiper blade to the rear end through the second claw.

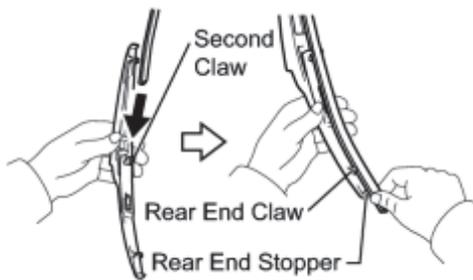

P

(c) After pushing the wiper rubber through the rear end claw, allow it to stick out from the rear end stopper.

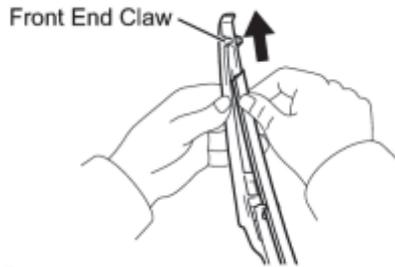


P

(d) Slide the wiper rubber through the front end claw.

4. INSTALL REAR WIPER BLADE

(a) Push the wiper blade straight toward to install it to the wiper arm.

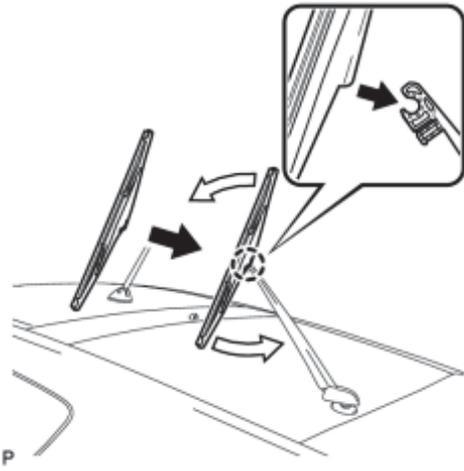

(b) Engage the claw to install the rear wiper blade as shown in the illustration.

NOTICE:

Be careful not to damage the claw.