



(c) Select "Touch Switch" from the "Function Check/Setting I" screen.

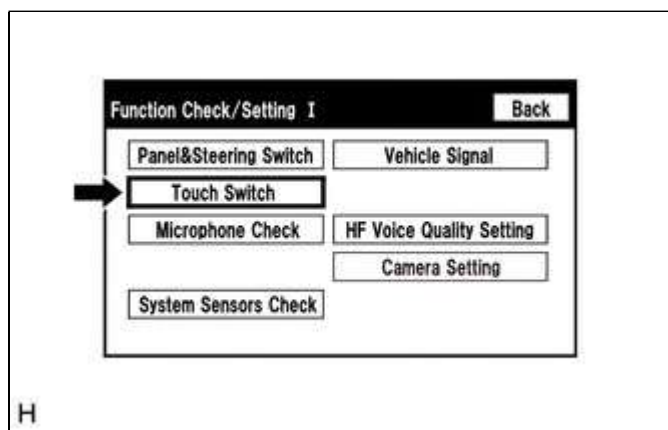

(d) Touch Switch Check

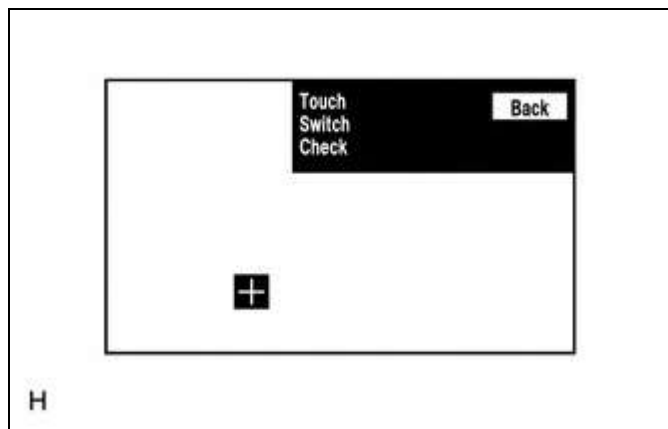

(1) Touch the display anywhere in the open area to perform the check when the "Touch Switch Check" screen is displayed.

HINT:

- A "+" mark is displayed where the display is touched.
- The "+" mark remains on the display even after your finger is removed.

CHECK MICROPHONE


HINT:

- The microphone and microphone input level are checked in the following procedure.
- Illustrations may differ from the actual vehicle screen depending on the device settings and options. Therefore, some detailed areas may not be shown exactly the same as on the actual vehicle screen.

(a) Enter diagnostic mode.


Click here 

(b) Select "Function Check/Setting" from the "Service Menu" screen.

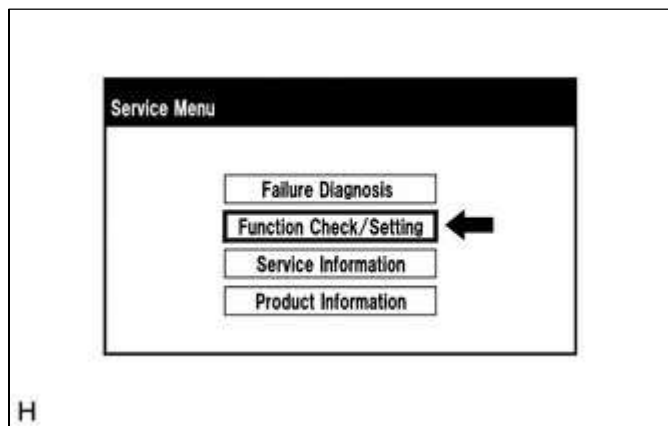


H

(c) Select "Microphone Check" from the "Function Check/Setting I" screen.

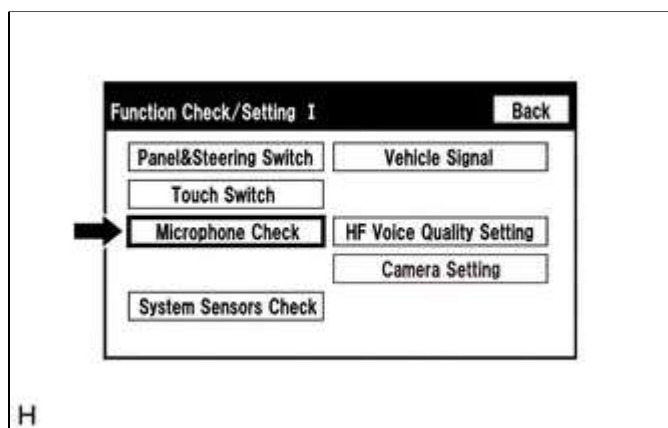

H

(d) Microphone Check

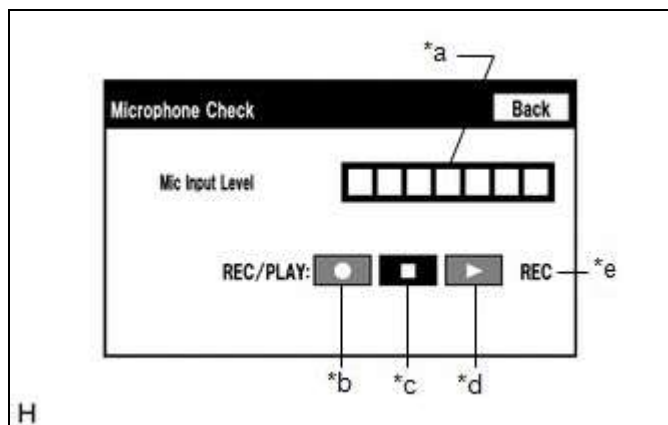

H

Screen Description

DISPLAY	CONTENT
*a: Microphone input level meter	Monitors the microphone input level every 0.1 seconds and displays the results in 8 different levels.
*: w/ Voice Recognition Function	

DISPLAY	CONTENT
b: Recording switch	Starts recording.
c: Stop switch	Stops recording and playing.
d: Play switch	Plays the recorded voice.
e: Recording indicator	Comes on while recording.
*: w/ Voice Recognition Function	

(1) When speaking into the microphone, check that the microphone input level meter changes according to the input level.

HINT:

The microphone is active at all times when this screen is displayed.

(2) Push the recording switch and perform voice recording.

HINT:

- Select the recording switch with the blower motor of the air conditioning system stopped. If an outlet of the air conditioning system is facing the microphone, noise may be recorded.
- While recording or playing, switches other than the stop switch cannot be pushed.
- When no recording is present, the play switch cannot be pushed.
- Recording will stop after 5 seconds or when the stop switch is pushed.

(3) Check that the recording indicator remains on while recording and that the recording can be played normally.

CHECK SYSTEM SENSORS


HINT:

- GPS information, vehicle signals and sensor signals are checked in the following procedure.
- Illustrations may differ from the actual vehicle screen depending on the device settings and options. Therefore, some detailed areas may not be shown exactly the same as on the actual vehicle screen.

(a) Enter diagnostic mode.

Click here 

(b) Select "Function Check/Setting" from the "Service Menu" screen.

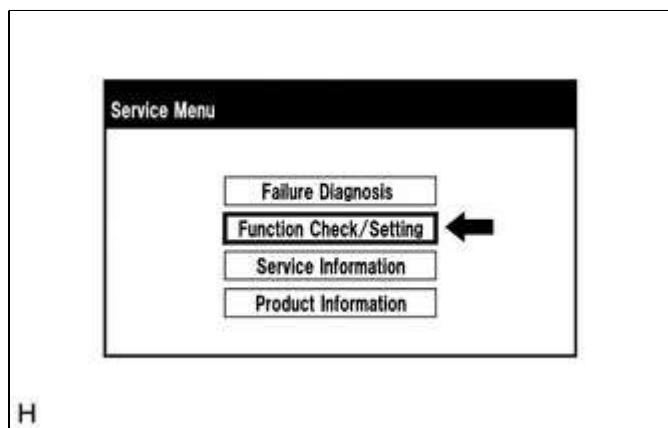

(c) Select "System Sensors Check" from the "Function Check/Setting I" screen.