

Last Modified: 03-26-2024	6.11:8.1.0	Doc ID: RM100000028WJT
Model Year Start: 2023	Model: Prius Prime	Prod Date Range: [12/2022 -]
Title: MIRROR (EXT): OUTER REAR VIEW MIRROR GLASS: REMOVAL; 2023 - 2024 MY Prius Prius Prime [12/2022 -]		

REMOVAL


CAUTION / NOTICE / HINT

HINT:

- Use the same procedure for the RH side and LH side.
- The following procedure is for the LH side.

CAUTION / NOTICE / HINT


COMPONENTS (REMOVAL)

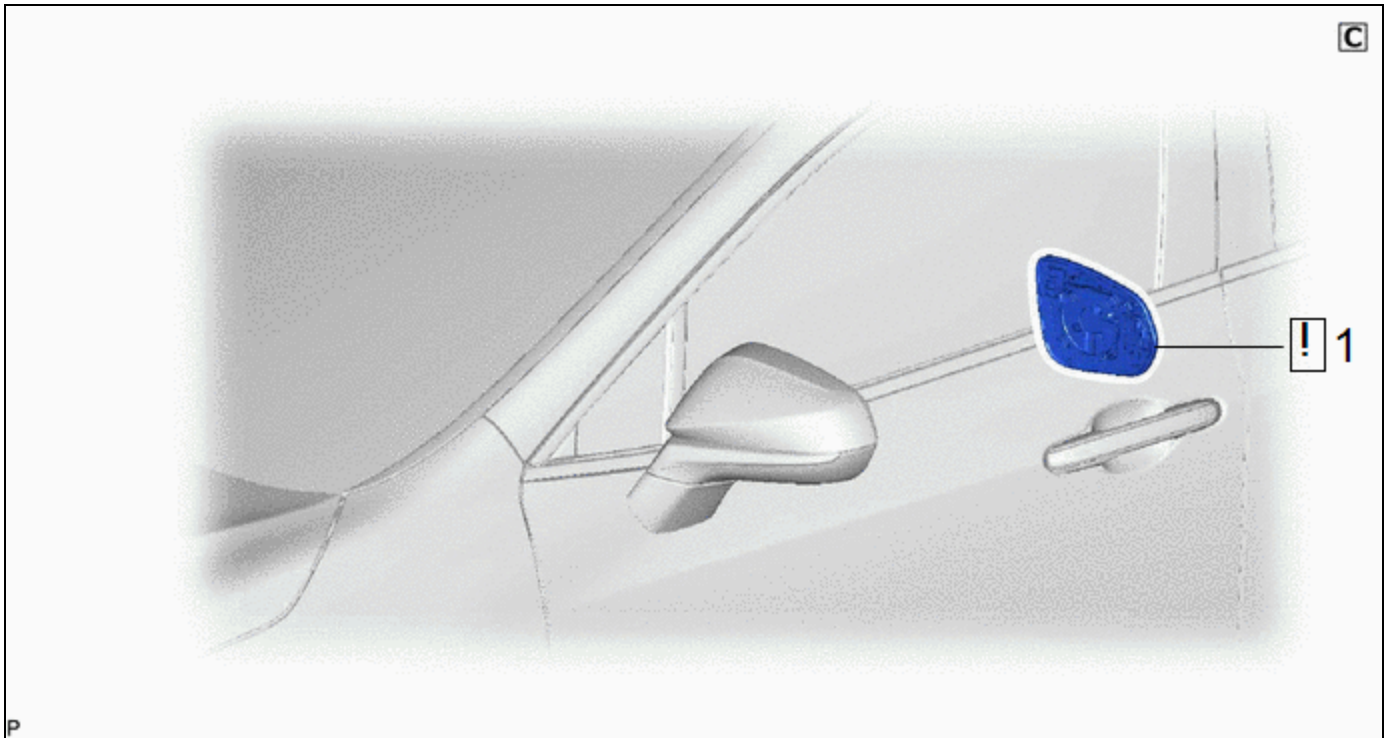



PROCEDURE		PART NAME CODE			
1	OUTER MIRROR	87961		-	-

PROCEDURE

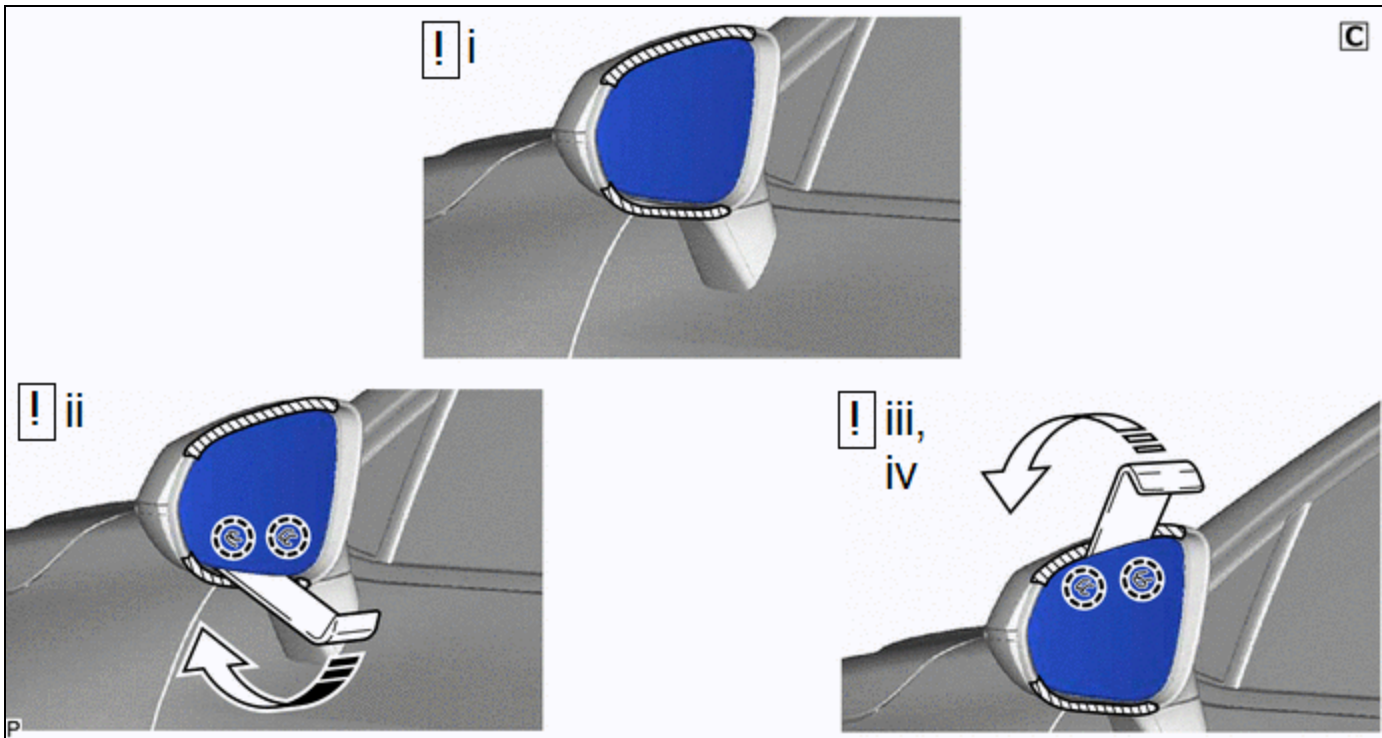1. REMOVE OUTER MIRROR



	Move in this Direction (1)		Move in this Direction (2)
---	----------------------------	---	----------------------------

(1) Apply protective tape to the areas shown in the illustration.

(2) Using a moulding remover, disengage the 2 claws on the lower part of the outer mirror as shown in the illustration.

(3) w/o Mirror Heater:

- Using a moulding remover, disengage the 2 claws on the upper part of the outer mirror as shown in the illustration to remove the outer mirror.

NOTICE:

Do not push the outer mirror with excessive force. Doing so may cause the actuator to come off or break the mirror surface.


(4) w/ Mirror Heater:

- Using a moulding remover, disengage the 2 claws on the upper part of the outer mirror as shown in the illustration.

NOTICE:

Do not push the outer mirror with excessive force. Doing so may cause the actuator to come off or break the mirror surface.

(b) w/ Mirror Heater:

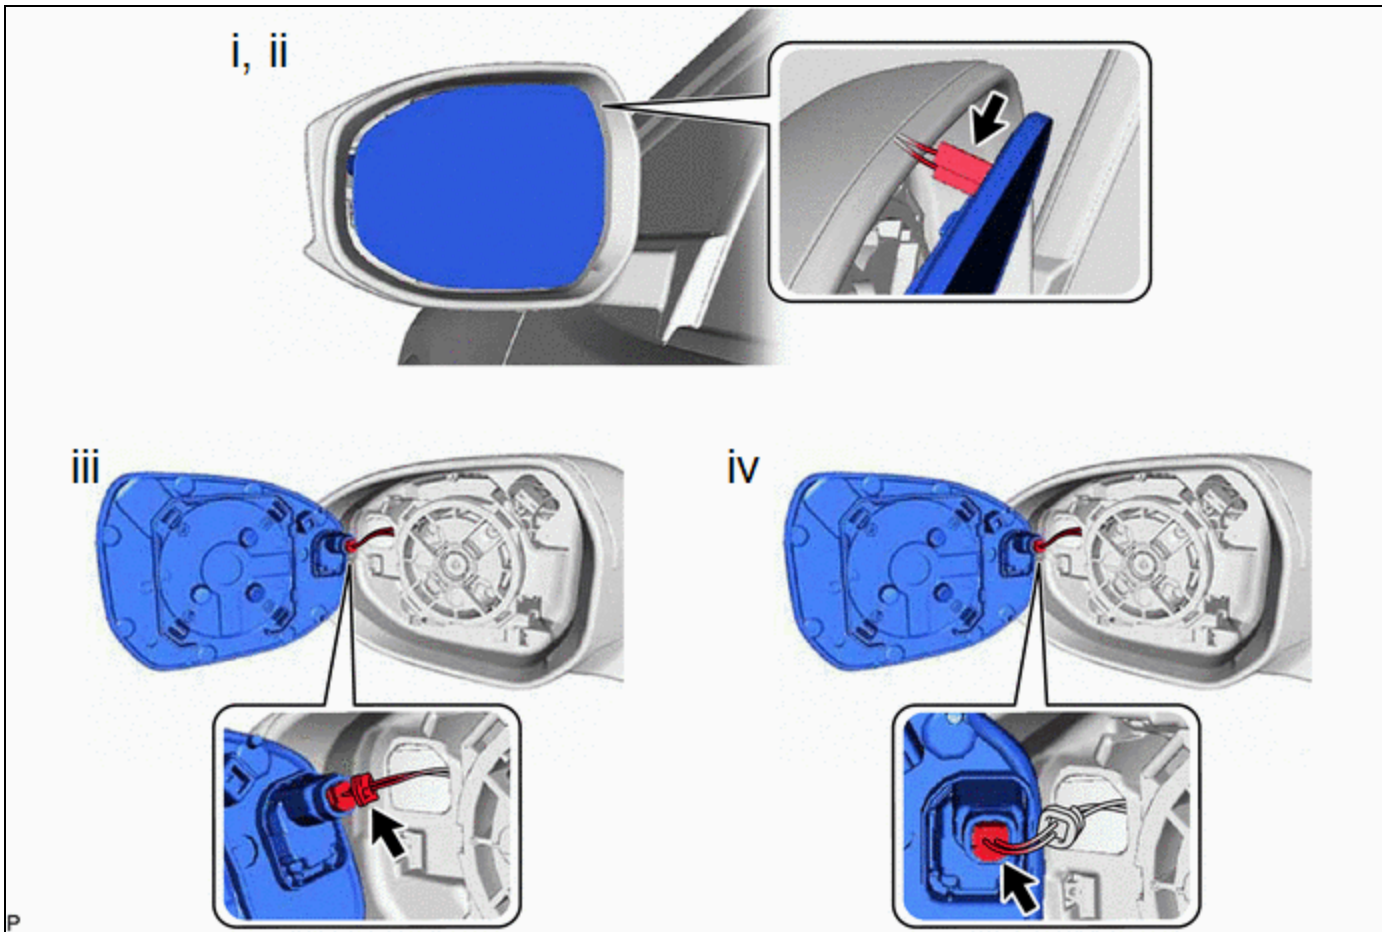

(1) w/o Blind Spot Monitor System:

1. Disconnect the connector to remove the outer mirror.

(2) w/ Blind Spot Monitor System:

1. Disconnect the connector.

(3) w/ Blind Spot Monitor System:

1. Move the grommet.

(4) w/ Blind Spot Monitor System:

1. Disconnect the connector to remove the outer mirror.

