


REMOVAL

1. REMOVE UPPER CONSOLE PANEL SUB-ASSEMBLY


- Pull the console panel sub-assembly upper upwards and disengage the 2 claws.
- Detach the 4 clips and remove the console panel.

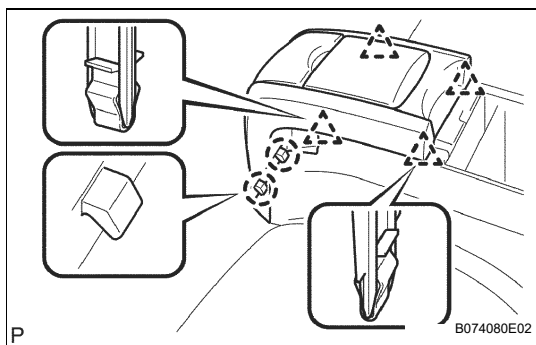

- Remove the 4 screws and instrument panel cup holder.


2. REMOVE CONSOLE BOX POCKET

3. REMOVE CONSOLE BOX CARPET

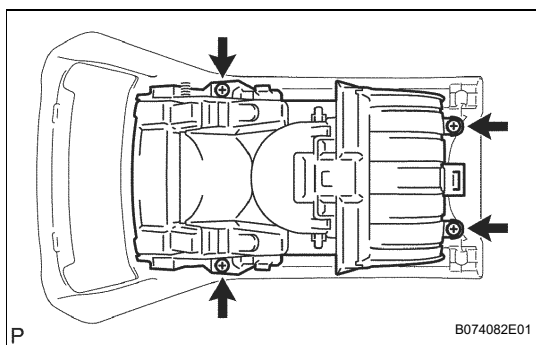


4. REMOVE CONSOLE REAR END PANEL SUB-ASSEMBLY

- Pull up the console rear end panel sub-assembly in the direction indicated by the arrow to detach the 6 clips, and remove the console rear end panel.

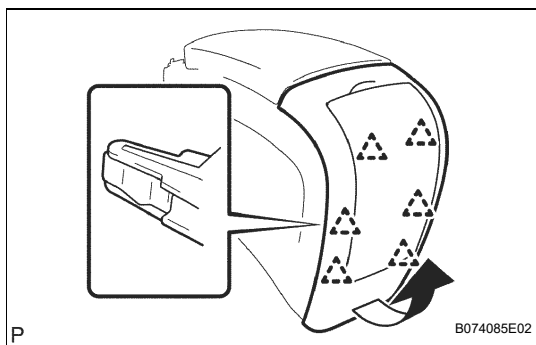

- Remove the 4 screws and rear console box cup holder.

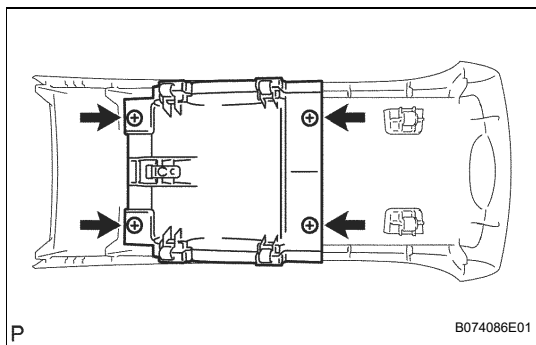

5. REMOVE REAR CONSOLE BOX SUB-ASSEMBLY

- Remove the 2 screws, 2 bolts and console box.

