

REMOVAL

NOTICE:

When the brake pedal is first depressed after replacing the brake pads or pushing back the disc brake piston, DTC C1214 may be output. As there is no malfunction, delete the DTC.

HINT:

- Use the same procedure for the RH side and LH side.
- The procedure listed below is for the LH side.

1. REMOVE REAR WHEEL

2. REMOVE FRONT DOOR SCUFF PLATE LH INFO

3. REMOVE COWL SIDE TRIM SUB-ASSEMBLY LH INFO

4. REMOVE LOWER INSTRUMENT PANEL FINISH PANEL ASSEMBLY INFO

5. LOOSEN PARKING BRAKE CABLE INFO


6. DISCONNECT REAR SPEED SENSOR WIRE INFO

7. DISCONNECT NO. 3 PARKING BRAKE CABLE ASSEMBLY INFO

8. SEPARATE REAR DISC BRAKE CALIPER ASSEMBLY INFO

9. REMOVE REAR DISC INFO

10. REMOVE REAR AXLE HUB AND BEARING ASSEMBLY

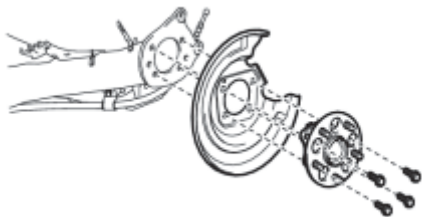

(a) Remove the 4 bolts, rear axle hub and bearing assembly and rear disc brake dust cover from the rear axle beam assembly.


c

INSTALLATION

HINT:

- Use the same procedure for the RH side and LH side.
- The procedure listed below is for the LH side.

1. INSTALL REAR AXLE HUB AND BEARING ASSEMBLY

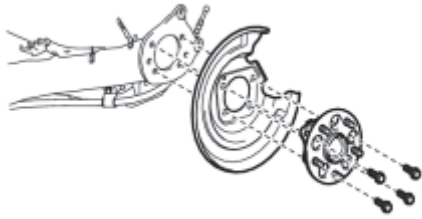

(a) Install the rear axle hub and bearing assembly and rear disc brake dust cover to the rear axle beam assembly with the 4 bolts.

Torque: **90 N·m (918 kgf·cm, 66ft·lbf)**

c

2. INSPECT REAR AXLE HUB BEARING LOOSENESS INFO

3. INSPECT REAR AXLE HUB RUNOUT INFO

4. INSTALL REAR DISC INFO

5. INSTALL REAR DISC BRAKE CALIPER ASSEMBLY INFO

6. CONNECT NO. 3 PARKING BRAKE CABLE ASSEMBLY INFO

7. CONNECT REAR SPEED SENSOR WIRE INFO

8. ADJUST PARKING BRAKE

HINT: INFO

9. INSTALL LOWER INSTRUMENT PANEL FINISH PANEL ASSEMBLY INFO

10. INSTALL COWL SIDE TRIM SUB-ASSEMBLY LH INFO

11. INSTALL FRONT DOOR SCUFF PLATE LH INFO

12. INSTALL REAR WHEEL

Torque: **103 N·m (1050 kgf·cm, 76ft·lbf)**

13. CHECK FOR SPEED SENSOR SIGNAL

HINT: INFO