

## FOREWORD

This wiring diagram manual has been prepared to provide information on the electrical system of the 2004 PRIUS.

Applicable models: NHW20 Series

For service specifications and repair procedures of the above models other than those listed in this manual, refer to the following manuals;

Manual Name	Pub. No.
▲ 2004 PRIUS Repair Manual	
Volume 1	RM1075U1
Volume 2	RM1075U2
Volume 3	RM1075U3
▲ 2004 PRIUS New Car Features	NCF255U

All information in this manual is based on the latest product information at the time of publication. However, specifications and procedures are subject to change without notice.

## TOYOTA MOTOR CORPORATION

### CAUTION

When repairing the hybrid vehicle (HV), always follow the direction given in the repair manual listed above to prevent electrical shock, leakage or explosion.

### NOTICE

When handling supplemental restraint system components (removal, installation or inspection, etc.), always follow the direction given in the repair manuals listed above to prevent accidents and supplemental restraint system malfunction.

# 2004 PRIUS ELECTRICAL WIRING DIAGRAM

	Section Code	Page
INTRODUCTION .....	A .....	2
HOW TO USE THIS MANUAL .....	B .....	3
TROUBLESHOOTING .....	C .....	12
ABBREVIATIONS .....	D .....	17
GLOSSARY OF TERMS AND SYMBOLS .....	E .....	18
RELAY LOCATIONS .....	F .....	20
ELECTRICAL WIRING ROUTING .....	G .....	44
SYSTEM CIRCUITS .....	H .....	65
GROUND POINT .....	I .....	364
POWER SOURCE (Current Flow Chart) .....	J .....	370
CONNECTOR LIST .....	K .....	378
PART NUMBER OF CONNECTORS .....	L .....	390
OVERALL ELECTRICAL WIRING DIAGRAM .	M .....	394

**▲2003 TOYOTA MOTOR CORPORATION**

All rights reserved. This book may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.

# A INTRODUCTION

This manual consists of the following 13 sections:

No.	Section	Description
A	INDEX	Index of the contents of this manual.
	INTRODUCTION	Brief explanation of each section.
B	HOW TO USE THIS MANUAL	Instructions on how to use this manual.
C	TROUBLE-SHOOTING	Describes the basic inspection procedures for electrical circuits.
D	ABBREVIATIONS	Defines the abbreviations used in this manual.
E	GLOSSARY OF TERMS AND SYMBOLS	Defines the symbols and functions of major parts.
F	RELAY LOCATIONS	Shows position of the Electronic Control Unit, Relays, Relay Block, etc. This section is closely related to the system circuit.
G	ELECTRICAL WIRING ROUTING	Describes position of Parts Connectors, Splice points, Ground points, etc. This section is closely related to the system circuit.
H	INDEX	Index of the system circuits.
	SYSTEM CIRCUITS	Electrical circuits of each system are shown from the power supply through ground points. Wiring connections and their positions are shown and classified by code according to the connection method. (Refer to the section, "How to use this manual"). The "System Outline" and "Service Hints" useful for troubleshooting are also contained in this section.
I	GROUND POINT	Shows ground positions of all parts described in this manual.
J	POWER SOURCE (Current Flow Chart)	Describes power distribution from the power supply to various electrical loads.
K	CONNECTOR LIST	Describes the form of the connectors for the parts appeared in this book. This section is closely related to the system circuit.
L	PART NUMBER OF CONNECTORS	Indicates the part number of the connectors used in this manual.
M	OVERALL ELECTRICAL WIRING DIAGRAM	Provides circuit diagrams showing the circuit connections.

This manual provides information on the electrical circuits installed on vehicles by dividing them into a circuit for each system.

The actual wiring of each system circuit is shown from the point where the power source is received from the battery as far as each ground point. (All circuit diagrams are shown with the switches in the OFF position.)

When troubleshooting any problem, first understand the operation of the circuit where the problem was detected (see System Circuit section), the power source supplying power to that circuit (see Power Source section), and the ground points (see Ground Point section). See the System Outline to understand the circuit operation.


When the circuit operation is understood, begin troubleshooting of the problem circuit to isolate the cause. Use Relay Location and Electrical Wiring Routing sections to find each part, junction block and wiring harness connectors, wiring harness and wiring harness connectors, splice points, and ground points of each system circuit. Internal wiring for each junction block is also provided for better understanding of connection within a junction block.

Wiring related to each system is indicated in each system circuit by arrows (from\_\_, to\_\_). When overall connections are required, see the Overall Electrical Wiring Diagram at the end of this manual.

# B HOW TO USE THIS MANUAL

\* The system shown here is an EXAMPLE ONLY. It is different to the actual circuit shown in the SYSTEM CIRCUITS SECTION.

## [A] Stop Light

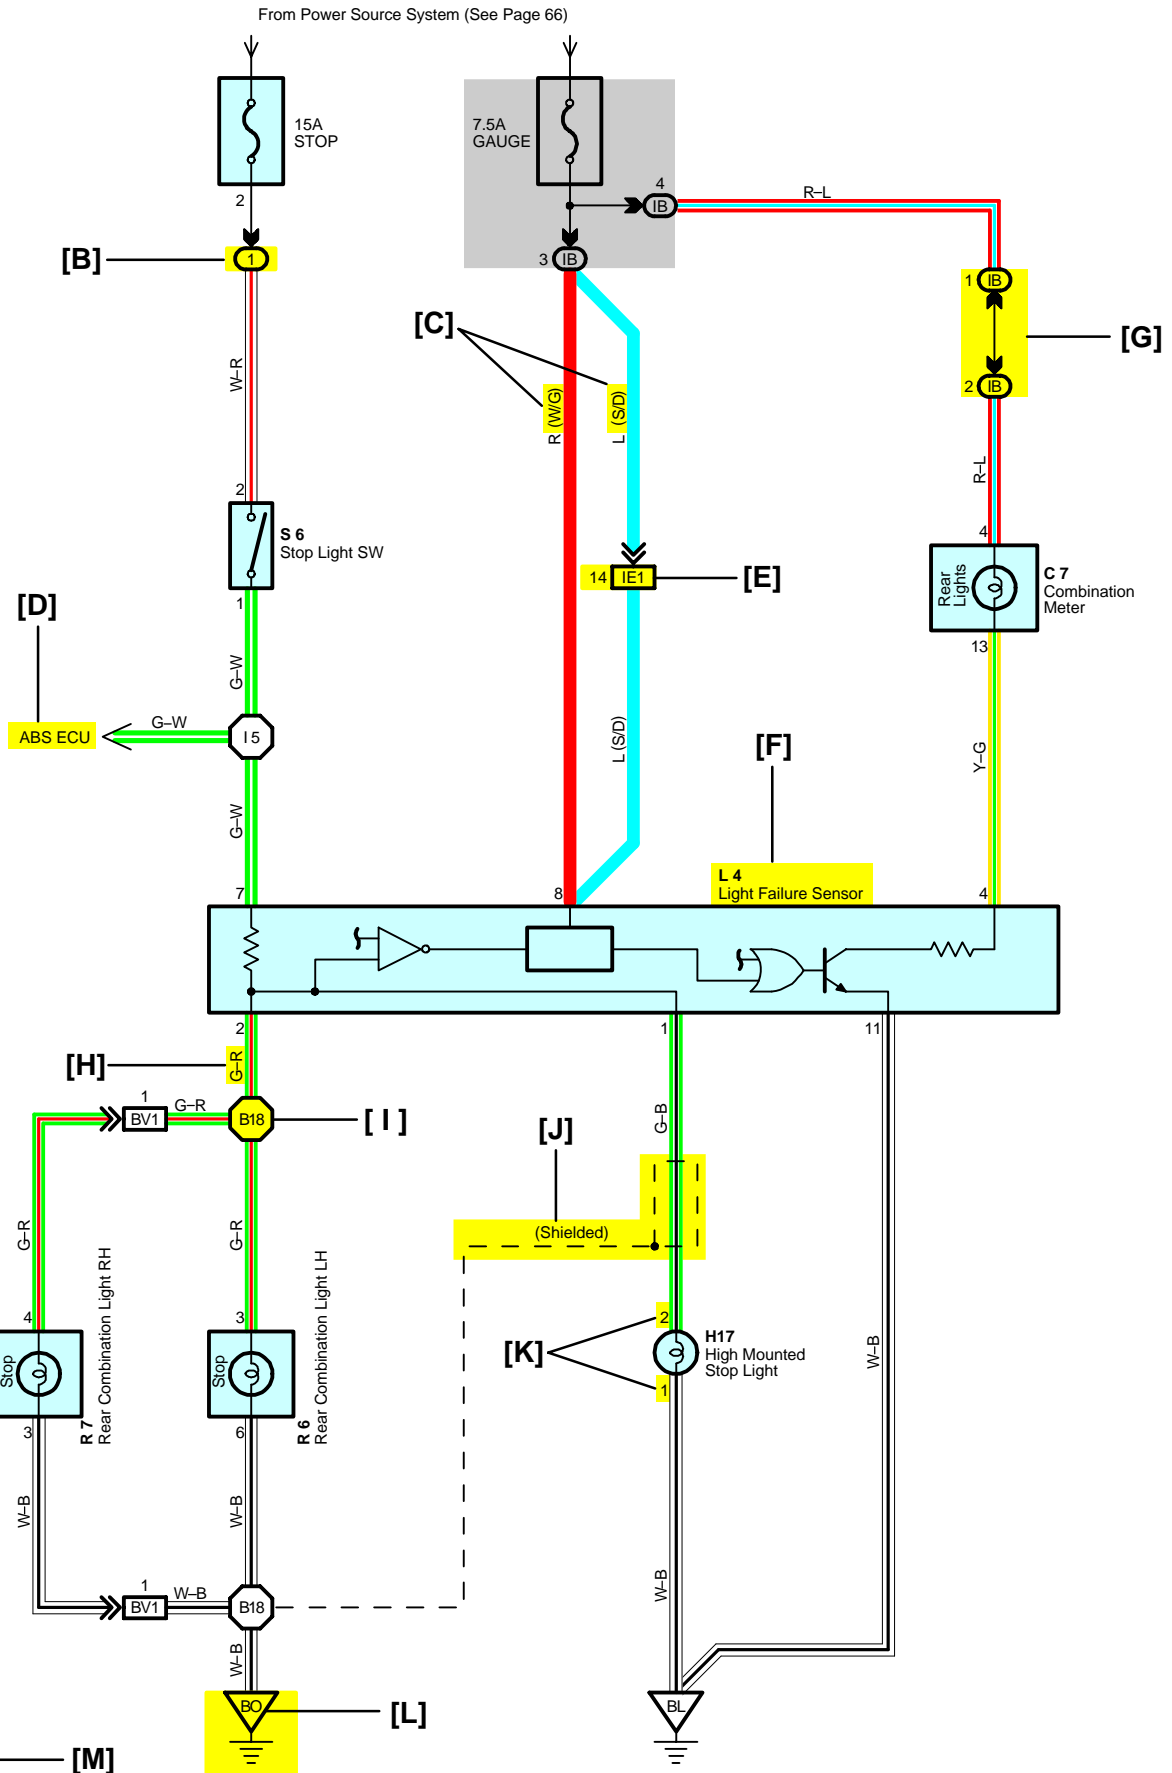

**[A]** : System Title


**[B]** : Indicates a Relay Block. No shading is used and only the Relay Block No. is shown to distinguish it from the J/B

Example: ① Indicates Relay Block No.1

**[C]** : ( ) is used to indicate different wiring and connector, etc. when the vehicle model, engine type, or specification is different.

**[D]** : Indicates related system.

**[E]** : Indicates the wiring harness and wiring harness connector. The wiring harness with male terminal is shown with arrows (↘). Outside numerals are pin numbers.

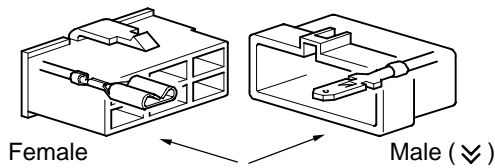


The first letter of the code for each wiring harness and wiring harness connector(s) indicates the component's location, e.g, "E" for the Engine Compartment, "I" for the Instrument Panel and Surrounding area, and "B" for the Body and Surrounding area.

When more than one code has the first and second letters in common, followed by numbers (e.g, IH1, IH2), this indicates the same type of wiring harness and wiring harness connector.

**[F]** : Represents a part (all parts are shown in sky blue). The code is the same as the code used in parts position.

**[G]** : Junction Block (The number in the circle is the J/B No. and the connector code is shown beside it). Junction Blocks are shaded to clearly separate them from other parts.

Example:

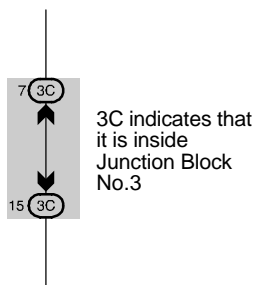


**[H]** : Indicates the wiring color.

Wire colors are indicated by an alphabetical code.

- B = Black    W = White    BR = Brown
- L = Blue    V = Violet    SB = Sky Blue
- R = Red    G = Green    LG = Light Green
- P = Pink    Y = Yellow    GR = Gray
- O = Orange


The first letter indicates the basic wire color and the second letter indicates the color of the stripe.

Example: L - Y

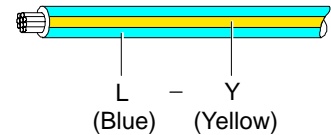

**[I]** : Indicates a wiring Splice Point (Codes are "E" for the Engine Room, "I" for the Instrument Panel, and "B" for the Body).

Example:

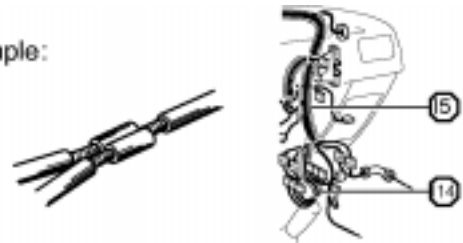

The Location of splice Point I 5 is indicated by the shaded section.



**[J]** : Indicates a shielded cable.



**[K]** : Indicates the pin number of the connector. The numbering system is different for female and male connectors.

Example: Numbered in order from upper left to lower right

Numbered in order from upper right to lower left



Female

Male

**[L]** : Indicates a ground point.

The first letter of the code for each ground point(s) indicates the component's location, e.g, "E" for the Engine Compartment, "I" for the Instrument Panel and Surrounding area, and "B" for the Body and Surrounding area.

**[M]** : Page No.

## B HOW TO USE THIS MANUAL

### [N] System Outline

Current is applied at all times through the STOP fuse to TERMINAL 2 of the stop light SW.  
When the ignition SW is turned on, current flows from the GAUGE fuse to TERMINAL 8 of the light failure sensor, and also flows through the rear lights warning light to TERMINAL 4 of the light failure sensor.

#### Stop Light Disconnection Warning

When the ignition SW is turned on and the brake pedal is pressed (Stop light SW on), if the stop light circuit is open, the current flowing from TERMINAL 7 of the light failure sensor to TERMINALS 1, 2 changes, so the light failure sensor detects the disconnection and the warning circuit of the light failure sensor is activated.

As a result, the current flows from TERMINAL 4 of the light failure sensor to TERMINAL 11 to GROUND and turns the rear lights warning light on. By pressing the brake pedal, the current flowing to TERMINAL 8 of the light failure sensor keeps the warning circuit on and holds the warning light on until the ignition SW is turned off.

### [O] Service Hints

#### S6 Stop Light SW

2-1 : Closed with the brake pedal depressed

#### L4 Light Failure Sensor

1, 2, 7-Ground : Approx. 12 volts with the stop light SW on

4, 8-Ground : Approx. 12 volts with the ignition SW at ON position

11-Ground : Always continuity

### [P] : Parts Location

Code	See Page	Code	See Page	Code	See Page
C7	34	L4	36	R7	37
H17	36	R6	37	S6	35

### [Q] : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	18	R/B No.1 (Instrument Panel Brace LH)

### [R] : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IB	20	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
3C	22	Instrument Panel Wire and J/B No.3 (Instrument Panel Brace LH)

### [S] : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE1	42	Floor Wire and Instrument Panel Wire (Left Kick Panel)
BV1	50	Luggage Room Wire and Floor Wire (Luggage Room Left)

### [T] : Ground Points

Code	See Page	Ground Points Location
BL	50	Under the Left Center Pillar
BO	50	Back Panel Center

### [U] : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I5	44	Cowl Wire	B18	50	Luggage Room Wire

**[N]** : Explains the system outline.

**[O]** : Indicates values or explains the function for reference during troubleshooting.

**[P]** : Indicates the reference page showing the position on the vehicle of the parts in the system circuit.

Example : Part "L4" (Light Failure Sensor) is on page 36 of the manual.

\* The letter in the code is from the first letter of the part, and the number indicates its order in parts starting with that letter.

Example : L 4  
└───┬───┘ Parts is 4th in order  
└───┘ Light Failure Sensor

**[Q]** : Indicates the reference page showing the position on the vehicle of Relay Block Connectors in the system circuit.

Example : Connector "1" is described on page 18 of this manual and is installed on the left side of the instrument panel.

**[R]** : Indicates the reference page showing the position on the vehicle of J/B and Wire Harness in the system circuit.

Example : Connector "3C" connects the Instrument Panel Wire and J/B No.3. It is described on page 22 of this manual, and is installed on the instrument panel left side.

**[S]** : Indicates the reference page describing the wiring harness and wiring harness connector (the female wiring harness is shown first, followed by the male wiring harness).

Example : Connector "IE1" connects the floor wire (female) and Instrument panel wire (male). It is described on page 42 of this manual, and is installed on the left side kick panel.

**[T]** : Indicates the reference page showing the position of the ground points on the vehicle.

Example : Ground point "BO" is described on page 50 of this manual and is installed on the back panel center.

**[U]** : Indicates the reference page showing the position of the splice points on the vehicle.

Example : Splice point "I5" is on the Cowl Wire Harness and is described on page 44 of this manual.






The "Current Flow Chart" section, describes which parts each power source (fuses, fusible links, and circuit breakers) transmits current to. In the Power Source circuit diagram, the conditions when battery power is supplied to each system are explained. Since all System Circuit diagrams start from the power source, the power source system must be fully understood.

### J POWER SOURCE (Current Flow Chart)


The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other parts.

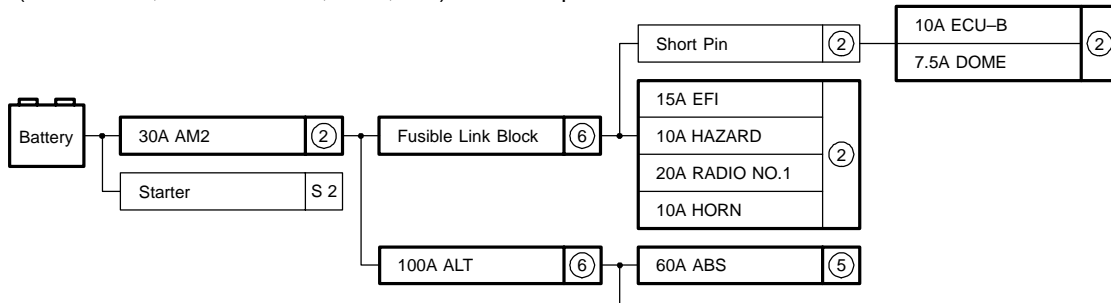

### Engine Room R/B (See Page 20)

Fuse	System	Page
20A STOP	ABS	194
	ABS and Traction Control	187
	Cruise Control	180
	Electronically Controlled Transmission	166
	Multiplex Communication System	210
10A DOME	Cigarette Lighter	214
	Combination Meter	230
	Headlight	112
	Interior Light	122
	Key Reminder and Seat Belt Warning	
	Light Auto Turn Off	


### Power Source

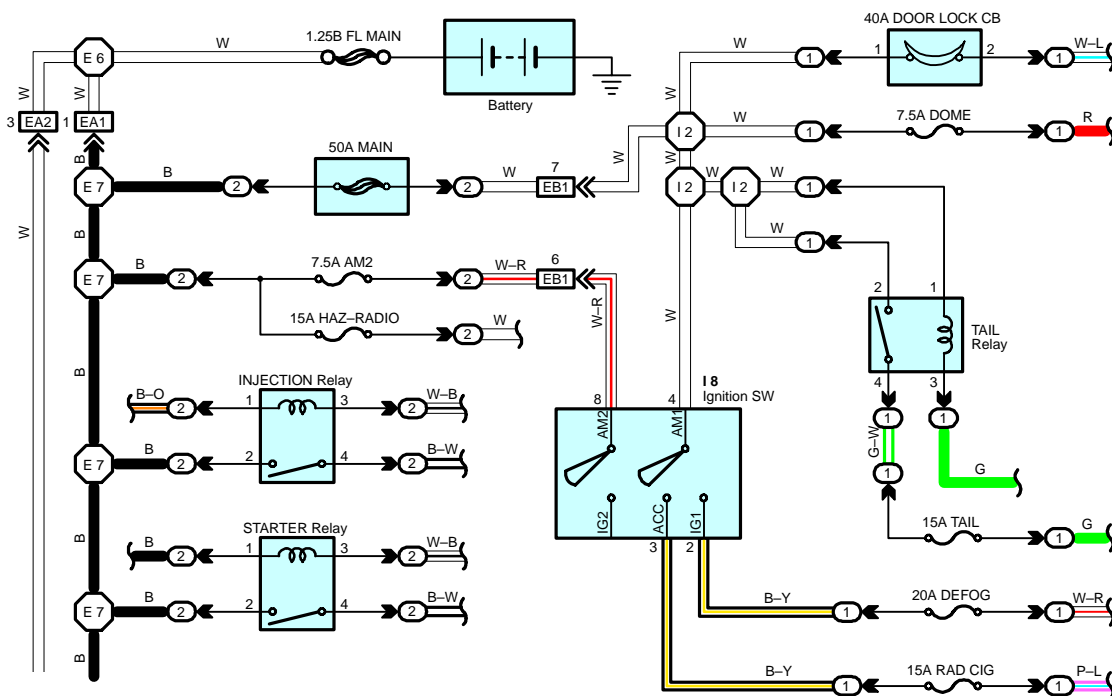

\* The system shown here is an EXAMPLE ONLY. It is different to the actual circuit shown in the SYSTEM CIRCUITS SECTION.


# B HOW TO USE THIS MANUAL

## K CONNECTOR LIST

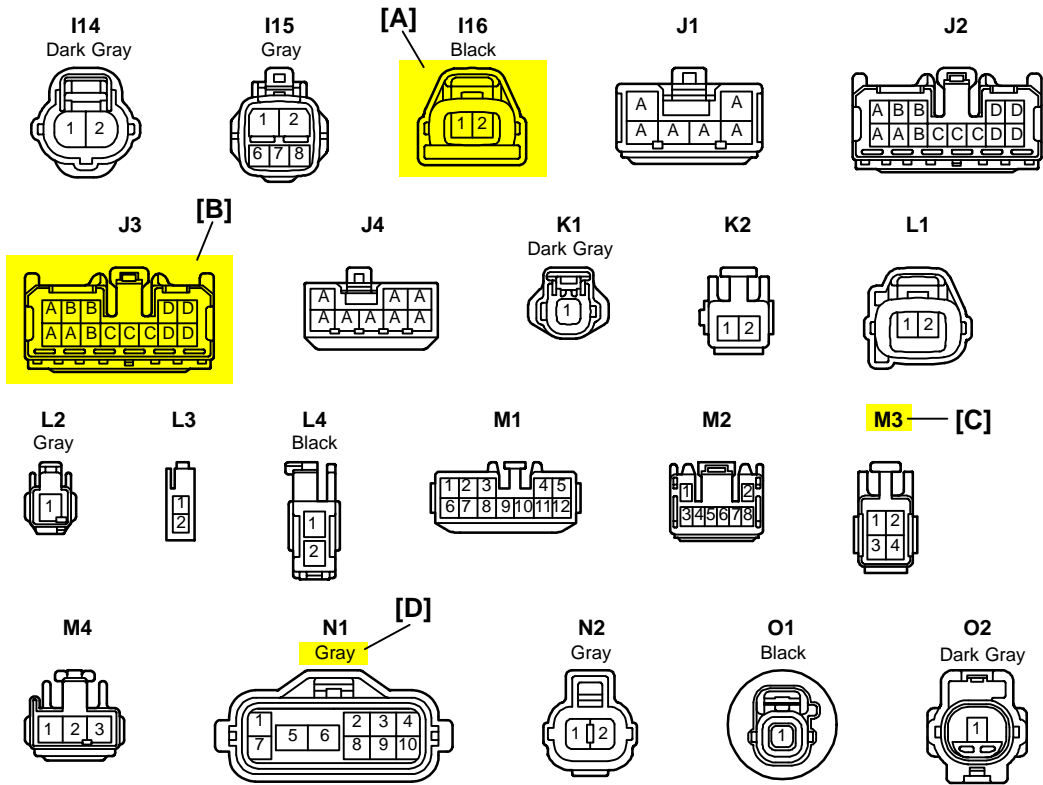

**[A]** : Indicates connector to be connected to a part. (The numeral indicates the pin No.)

**[B]** : Junction Connector  
Indicates a connector which is connected to a short terminal.

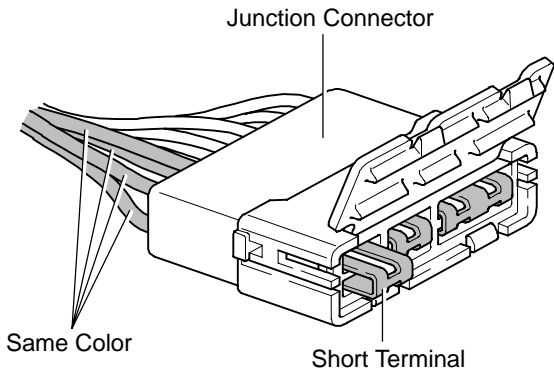

Junction connector in this manual include a short terminal which is connected to a number of wire harnesses. Always perform inspection with the short terminal installed. (When installing the wire harnesses, the harnesses can be connected to any position within the short terminal grouping. Accordingly, in other vehicles, the same position in the short terminal may be connected to a wire harness from a different part.)  
Wire harness sharing the same short terminal grouping have the same color.

**[C]** : Parts Code  
The first letter of the code is taken from the first letter of part, and the numbers indicates its order in parts which start with the same letter.

**[D]** : Connector Color  
Connectors not indicated are milky white in color.

## L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
A 1	A/C Ambient Temp. Sensor	90980-11070	D 4	Diode (Courtesy)	90980-11608
A 2	A/C Condenser Fan Motor	90980-11237	D 5	Diode (Interior Light)	90980-10962
A 3	A/C Condenser Fan Relay	90980-10940	D 6	Diode (Moon Roof)	90980-11608
A 4	A/C Condenser Fan Resistor	90980-10928	D 7	Door Lock Control Relay	90980-10848
A 5	A/C Magnetic Clutch	90980-11271	D 8	Door Lock Control SW LH	90980-11148
A 6	A/T Oil Temp. Sensor	90980-11413	D 9	Door Lock Control SW RH	
[A]	ABS Actuator [B]	90980-151	D10	Door Courtesy SW LH	90980-11097
A 8	ABS Actuator	90980-11009	D11	Door Courtesy SW RH	
A 9	ABS Speed Sensor Front LH	90980-10941	D12	Door Courtesy SW Front LH	90980-11156
A10	ABS Speed Sensor Front RH	90980-11002	D13	Door Courtesy SW Front RH	
A11	Airbag Sensor Front LH	90980-11856	D14	Door Courtesy SW Rear LH	
A12	Airbag Sensor Front RH		D15	Door Courtesy SW Rear RH	
A13	Airbag Sensor Front LH	90980-11194	D16	Door Lock and Unlock SW LH	90980-11170
		90980-11194		Door Lock and Unlock SW RH	

**[A]** : Part Code


**[B]** : Part Name

**[C]** : Part Number  
Toyota Part Number are indicated.

Not all of the above part numbers of the connector are established for the supply.

# C TROUBLESHOOTING

## VOLTAGE CHECK

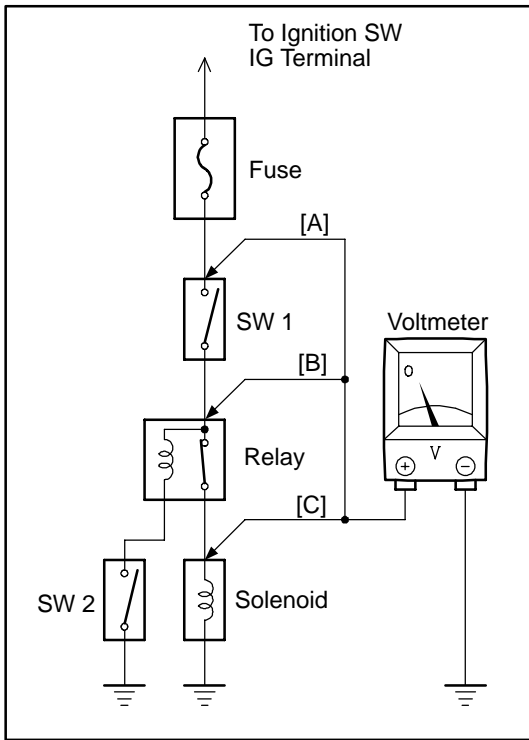

- (a) Establish conditions in which voltage is present at the check point.


Example:

- [A] – Ignition SW on
- [B] – Ignition SW and SW 1 on
- [C] – Ignition SW, SW 1 and Relay on (SW 2 off)

- (b) Using a voltmeter, connect the negative lead to a good ground point or negative battery terminal, and the positive lead to the connector or component terminal.


This check can be done with a test light instead of a voltmeter.

## CONTINUITY AND RESISTANCE CHECK

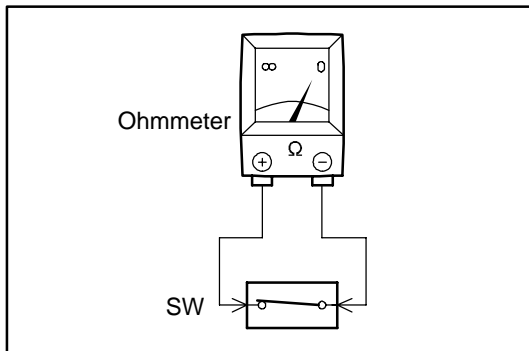

- (a) Disconnect the battery terminal or wire so there is no voltage between the check points.


- (b) Contact the two leads of an ohmmeter to each of the check points.

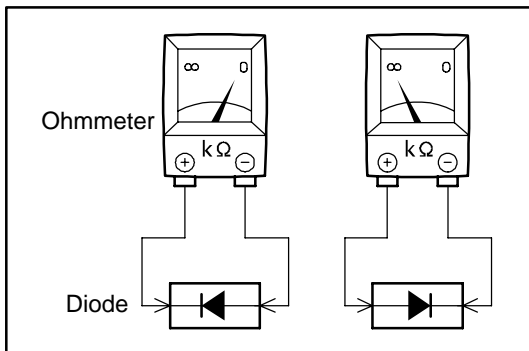


If the circuit has diodes, reverse the two leads and check again.

When contacting the negative lead to the diode positive side and the positive lead to the negative side, there should be continuity.

When contacting the two leads in reverse, there should be no continuity.

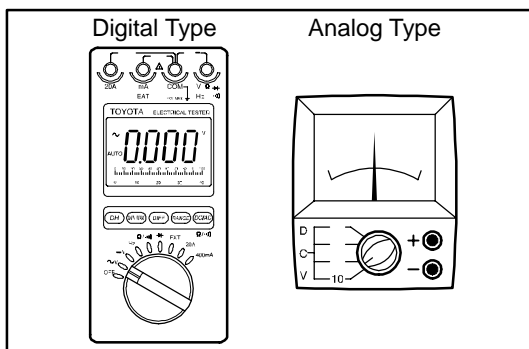

- (c) Use a volt/ohmmeter with high impedance (10 k $\Omega$ /V minimum) for troubleshooting of the electrical circuit.

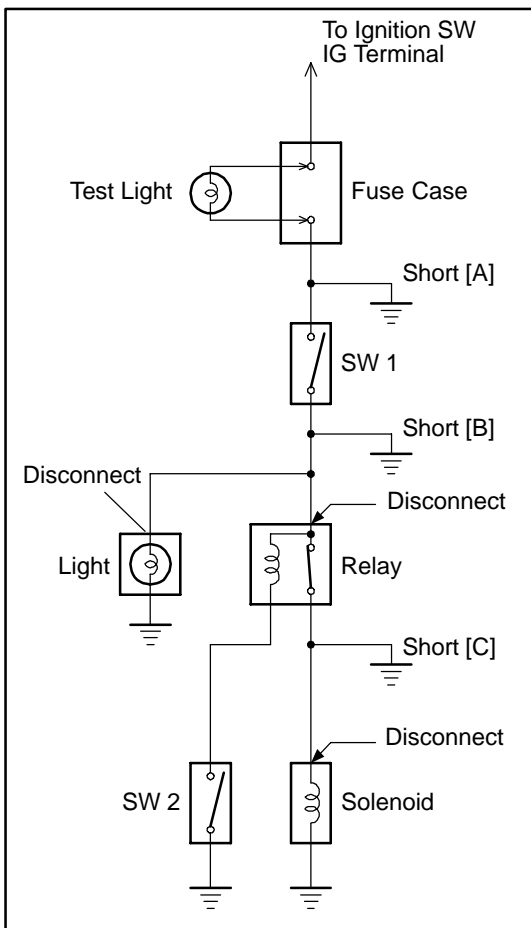

## FINDING A SHORT CIRCUIT

- Remove the blown fuse and disconnect all loads of the fuse.
- Connect a test light in place of the fuse.
- Establish conditions in which the test light comes on.

Example:

- [A] – Ignition SW on
  - [B] – Ignition SW and SW 1 on
  - [C] – Ignition SW, SW 1 and Relay on (Connect the Relay) and SW 2 off (or Disconnect SW 2)
- Disconnect and reconnect the connectors while watching the test light. The short lies between the connector where the test light stays lit and the connector where the light goes out.
  - Find the exact location of the short by lightly shaking the problem wire along the body.


## CAUTION:

- Do not open the cover or the case of the ECU unless absolutely necessary. (If the IC terminals are touched, the IC may be destroyed by static electricity.)
- When replacing the internal mechanism (ECU part) of the digital meter, be careful that no part of your body or clothing comes in contact with the terminals of leads from the IC, etc. of the replacement part (spare part).


## DISCONNECTION OF MALE AND FEMALE CONNECTORS

To pull apart the connectors, pull on the connector itself, not the wire harness.

HINT: Check to see what kind of connector you are disconnecting before pulling apart.

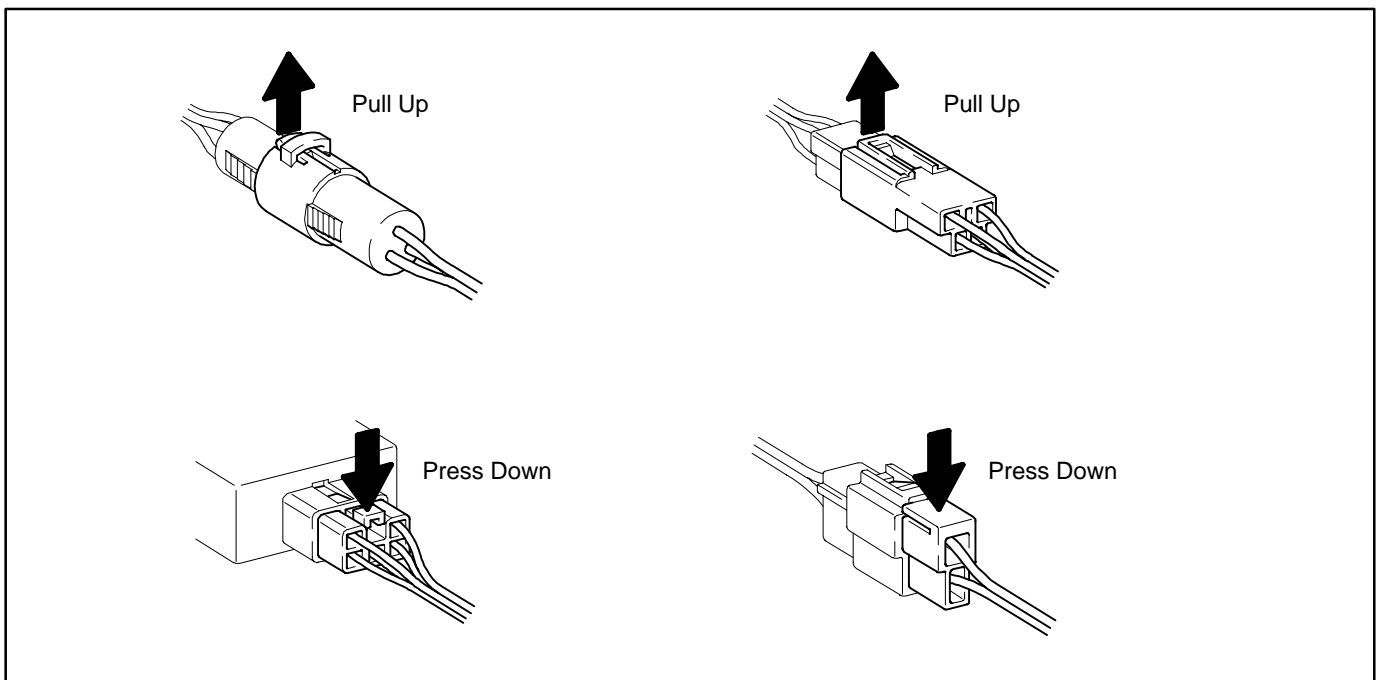

## C TROUBLESHOOTING

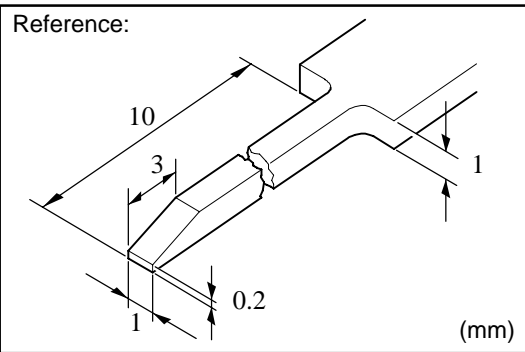

### HOW TO REPLACE TERMINAL (with terminal retainer or secondary locking device)

#### 1. PREPARE THE SPECIAL TOOL

HINT : To remove the terminal from the connector, please construct and use the special tool or like object shown on the left.

#### 2. DISCONNECT CONNECTOR


#### 3. DISENGAGE THE SECONDARY LOCKING DEVICE OR TERMINAL RETAINER.

(a) Locking device must be disengaged before the terminal locking clip can be released and the terminal removed from the connector.

(b) Use a special tool or the terminal pick to unlock the secondary locking device or terminal retainer.

#### NOTICE:

**Do not remove the terminal retainer from connector body.**

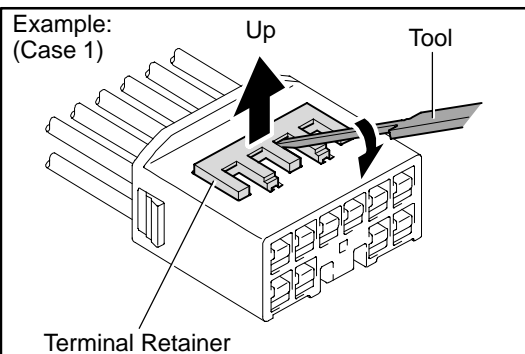


[A] For Non-Waterproof Type Connector

HINT : The needle insertion position varies according to the connector's shape (number of terminals etc.), so check the position before inserting it.


"Case 1"





Raise the terminal retainer up to the temporary lock position.

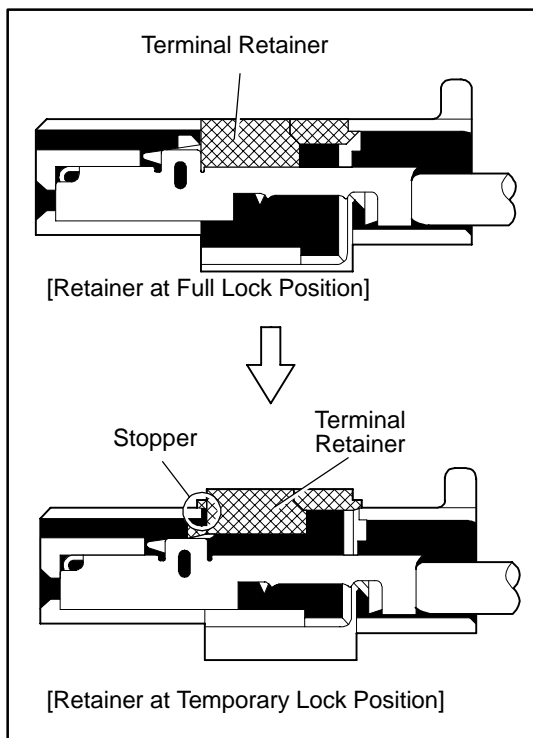

"Case 2"

Open the secondary locking device.

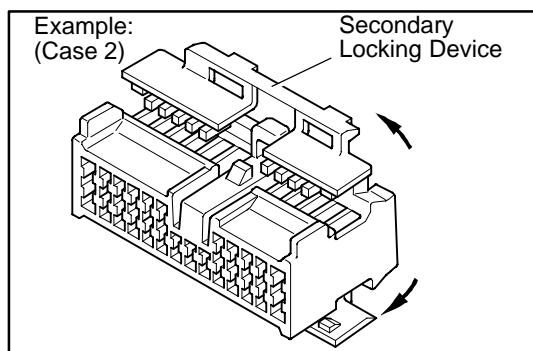

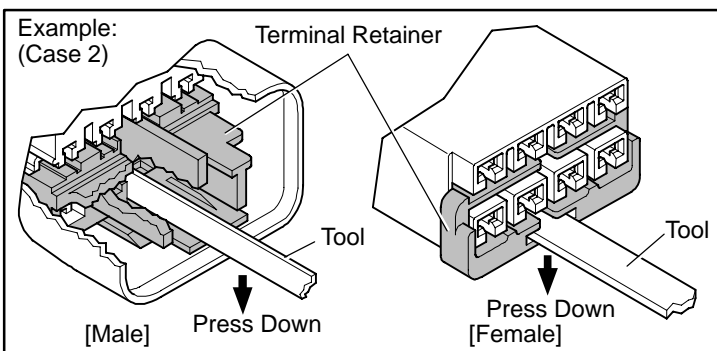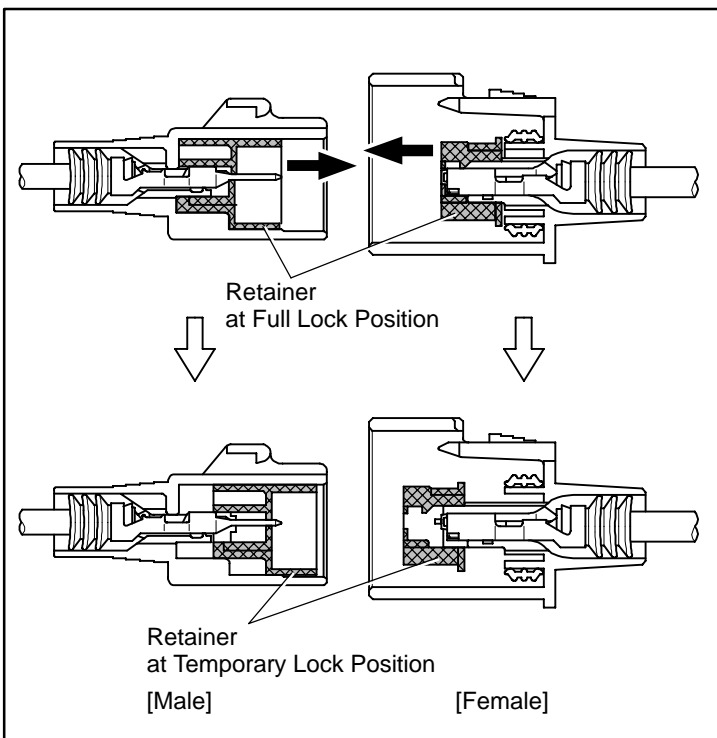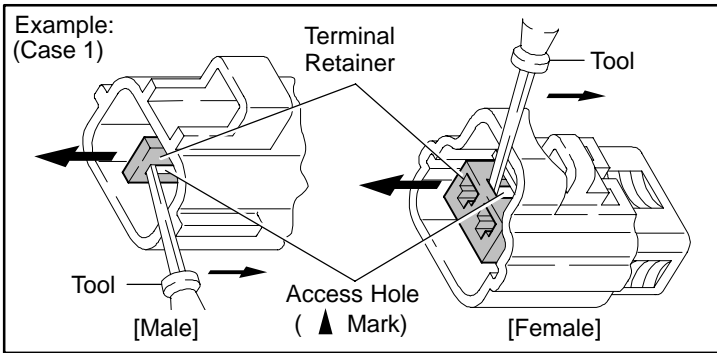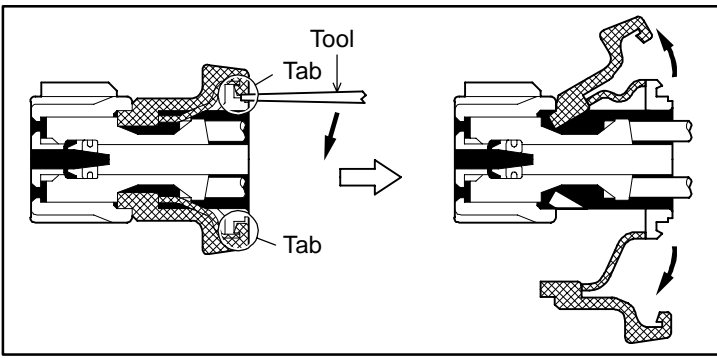

[B] For Waterproof Type Connector

HINT : Terminal retainer color is different according to connector body.

Example:

Terminal Retainer : Connector Body

Black or White : Gray

Black or White : Dark Gray

Gray or White : Black

"Case 1"

Type where terminal retainer is pulled up to the temporary lock position (Pull Type).

Insert the special tool into the terminal retainer access hole (▲Mark) and pull the terminal retainer up to the temporary lock position.


HINT : The needle insertion position varies according to the connector's shape (Number of terminals etc.), so check the position before inserting it.

"Case 2"


Type which cannot be pulled as far as Power Lock insert the tool straight into the access hole of terminal retainer as shown.




## C TROUBLESHOOTING

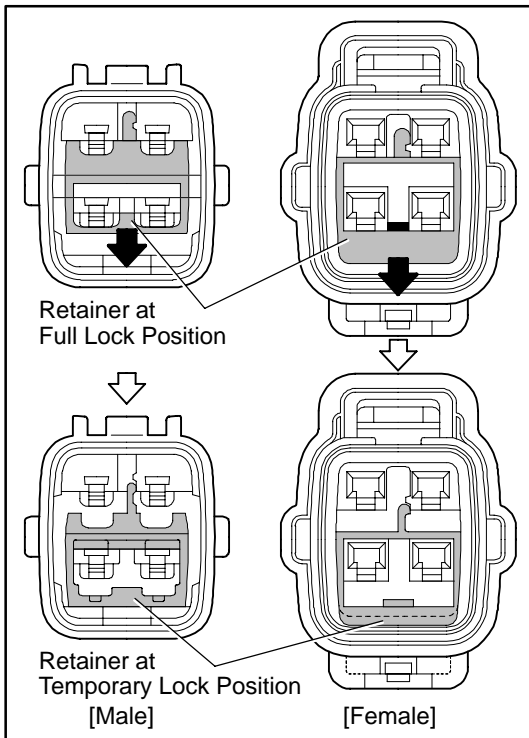

Push the terminal retainer down to the temporary lock position.

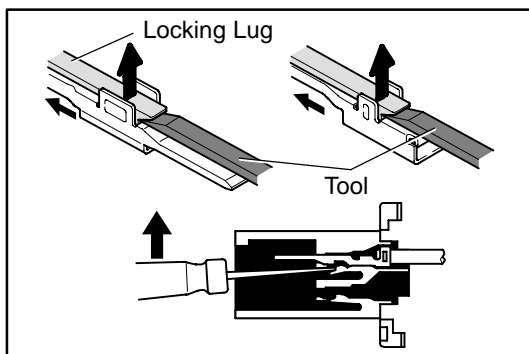

(c) Release the locking lug from terminal and pull the terminal out from rear.

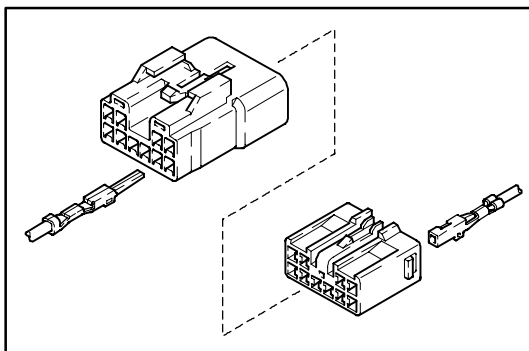


### 4. INSTALL TERMINAL TO CONNECTOR

(a) Insert the terminal.

HINT:

1. Make sure the terminal is positioned correctly.
2. Insert the terminal until the locking lug locks firmly.
3. Insert the terminal with terminal retainer in the temporary lock position.

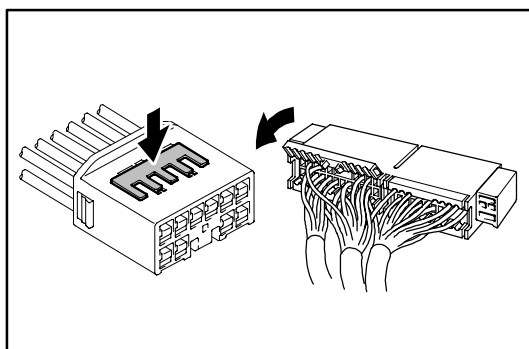

(b) Push the secondary locking device or terminal retainer in to the full lock position.

### 5. CONNECT CONNECTOR










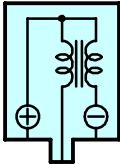











**ABBREVIATIONS**




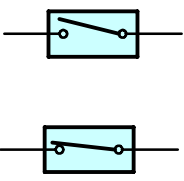



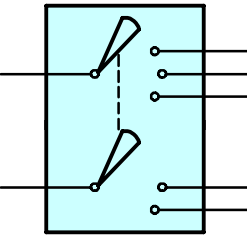



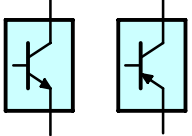

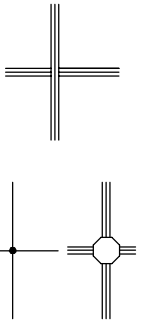


The following abbreviations are used in this manual.

A/C	=	Air Conditioning
ABS	=	Anti-Lock Brake System
ACIS	=	Acoustic Control Induction System
BA	=	Brake Assist
BEAN	=	Body Electronics Area Network
CAN	=	Controller Area Network
CHS	=	Coolant Heat Storage System
DC	=	Direct Current
EB	=	Electrical Brake
ECU	=	Electronic Control Unit
EPS	=	Electric Motor Power Steering
ESA	=	Electronic Spark Advance
EVAP	=	Evaporative Emission
HID	=	High Intensity Discharge
HV	=	Hybrid Vehicle
IC	=	Integrated Circuit
J/B	=	Junction Block
LH	=	Left-Hand
MPX	=	Multiplex
PTC	=	Positive Temperature Coefficient
R/B	=	Relay Block
RH	=	Right-Hand
SFI	=	Sequential Multiport Fuel Injection
SOC	=	State of Charge
SRS	=	Supplemental Restraint System
SW	=	Switch
TEMP.	=	Temperature
TRAC	=	Traction Control
VSC	=	Vehicle Stability Control
VSV	=	Vacuum Switching Valve
VVT-i	=	Variable Valve Timing-intelligent
w/	=	With
w/o	=	Without

\* The titles given inside the components are the names of the terminals (terminal codes) and are not treated as being abbreviations.


# E GLOSSARY OF TERMS AND SYMBOLS

 <p><b>BATTERY</b> Stores chemical energy and converts it into electrical energy. Provides DC current for the auto's various electrical circuits.</p>	 <p><b>GROUND</b> The point at which wiring attaches to the Body, thereby providing a return path for an electrical circuit; without a ground, current cannot flow.</p>
 <p><b>CAPACITOR (Condenser)</b> A small holding unit for temporary storage of electrical voltage.</p>	<p><b>HEADLIGHTS</b> Current flow causes a headlight filament to heat up and emit light. A headlight may have either a single (1) filament or a double (2) filament</p> <p>1. <b>SINGLE FILAMENT</b></p>  <p>2. <b>DOUBLE FILAMENT</b></p> 
 <p><b>CIGARETTE LIGHTER</b> An electric resistance heating element.</p>	
 <p><b>CIRCUIT BREAKER</b> Basically a reusable fuse, a circuit breaker will heat and open if too much current flows through it. Some units automatically reset when cool, others must be manually reset.</p>	 <p><b>HORN</b> An electric device which sounds a loud audible signal.</p>
 <p><b>DIODE</b> A semiconductor which allows current flow in only one direction.</p>	 <p><b>IGNITION COIL</b> Converts low-voltage DC current into high-voltage ignition current for firing the spark plugs.</p>
 <p><b>DIODE, ZENER</b> A diode which allows current flow in one direction but blocks reverse flow only up to a specific voltage. Above that potential, it passes the excess voltage. This acts as a simple voltage regulator.</p>	 <p><b>LIGHT</b> Current flow through a filament causes the filament to heat up and emit light.</p>
 <p><b>PHOTODIODE</b> The photodiode is a semiconductor which controls the current flow according to the amount of light.</p>	 <p><b>LED (LIGHT EMITTING DIODE)</b> Upon current flow, these diodes emit light without producing the heat of a comparable light.</p>
 <p><b>DISTRIBUTOR, IIA</b> Channels high-voltage current from the ignition coil to the individual spark plugs.</p>	 <p><b>METER, ANALOG</b> Current flow activates a magnetic coil which causes a needle to move, thereby providing a relative display against a background calibration.</p>
 <p><b>FUSE</b> A thin metal strip which burns through when too much current flows through it, thereby stopping current flow and protecting a circuit from damage.</p>  <p><b>FUSIBLE LINK</b> A heavy-gauge wire placed in high amperage circuits which burns through on overloads, thereby protecting the circuit. The numbers indicate the cross-section surface area of the wires.</p> <p>(for Medium Current Fuse)</p>  <p>(for High Current Fuse or Fusible Link)</p>	 <p><b>METER, DIGITAL</b> Current flow activates one or many LED's, LCD's, or fluorescent displays, which provide a relative or digital display.</p>
	 <p><b>MOTOR</b> A power unit which converts electrical energy into mechanical energy, especially rotary motion.</p>


 <p><b>RELAY</b> Basically, an electrically operated switch which may be normally closed (1) or open (2). Current flow through a small coil creates a magnetic field which either opens or closes an attached switch.</p> <p><b>1. NORMALLY CLOSED</b></p> <p><b>2. NORMALLY OPEN</b></p>	 <p><b>SPEAKER</b> An electromechanical device which creates sound waves from current flow.</p>
 <p><b>RELAY, DOUBLE THROW</b> A relay which passes current through one set of contacts or the other.</p>	<p><b>SWITCH, MANUAL</b> Opens and closes circuits, thereby stopping (1) or allowing (2) current flow.</p>  <p><b>1. NORMALLY OPEN</b></p> <p><b>2. NORMALLY CLOSED</b></p>
 <p><b>RESISTOR</b> An electrical component with a fixed resistance, placed in a circuit to reduce voltage to a specific value.</p>	<p><b>SWITCH, DOUBLE THROW</b> A switch which continuously passes current through one set of contacts or the other.</p> 
 <p><b>RESISTOR, TAPPED</b> A resistor which supplies two or more different non adjustable resistance values.</p>	<p><b>SWITCH, IGNITION</b> A key operated switch with several positions which allows various circuits, particularly the primary ignition circuit, to become operational.</p> 
 <p><b>RESISTOR, VARIABLE or RHEOSTAT</b> A controllable resistor with a variable rate of resistance. Also called a potentiometer or rheostat.</p>	<p><b>SWITCH, WIPER PARK</b> Automatically returns wipers to the stop position when the wiper switch is turned off.</p> 
 <p><b>SENSOR (Thermistor)</b> A resistor which varies its resistance with temperature.</p>	<p><b>TRANSISTOR</b> A solidstate device typically used as an electronic relay; stops or passes current depending on the voltage applied at "base".</p> 
 <p><b>SENSOR, SPEED</b> Uses magnetic impulses to open and close a switch to create a signal for activation of other components. (Reed Switch Type)</p>	<p><b>WIRES</b> Wires are always drawn as straight lines on wiring diagrams. Crossed wires (1) without a black dot at the junction are not joined; crossed wires (2) with a black dot or octagonal mark at the junction are spliced (joined) connections.</p>  <p><b>(1) NOT CONNECTED</b></p> <p><b>(2) SPLICED</b></p>
 <p><b>SHORT PIN</b> Used to provide an unbroken connection within a junction block.</p>	
 <p><b>SOLENOID</b> An electromagnetic coil which forms a magnetic field when current flows, to move a plunger, etc.</p>	

# F RELAY LOCATIONS


## [Engine Compartment]

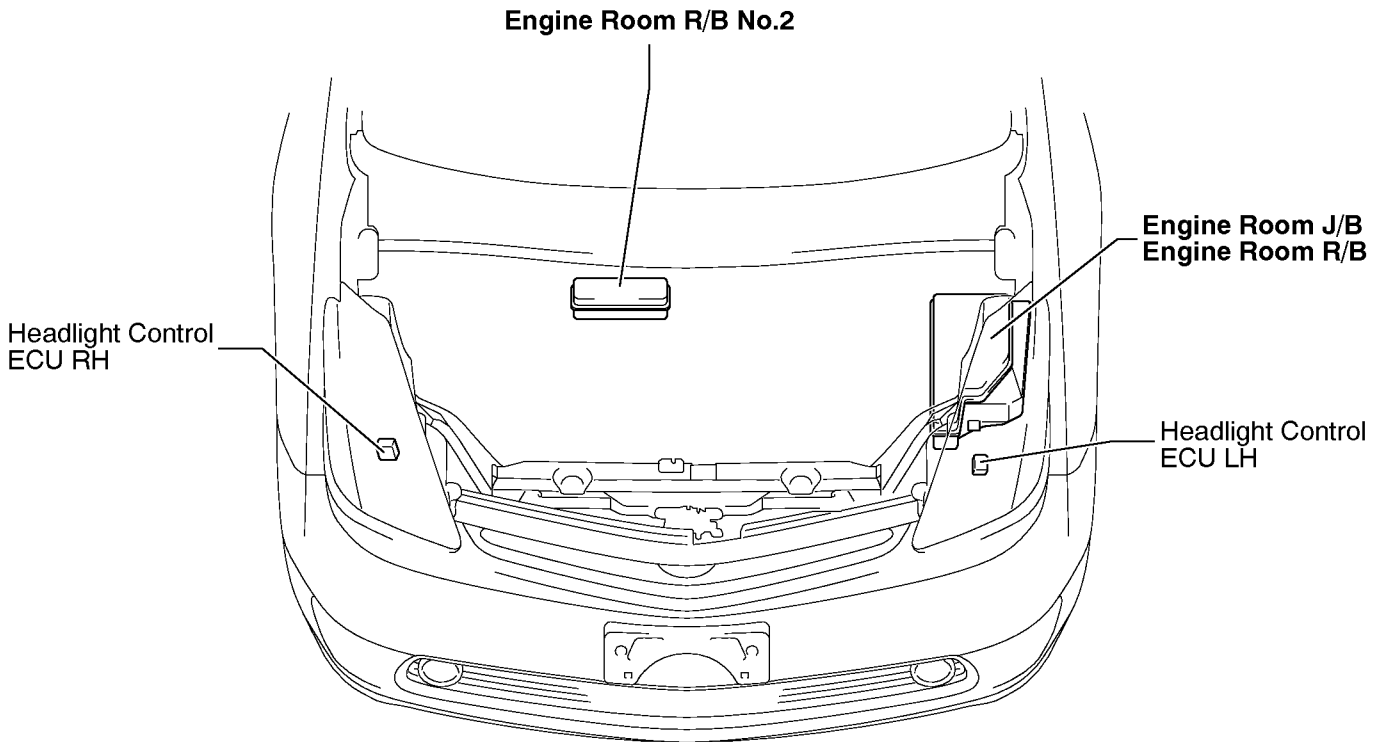

## [Instrument Panel]

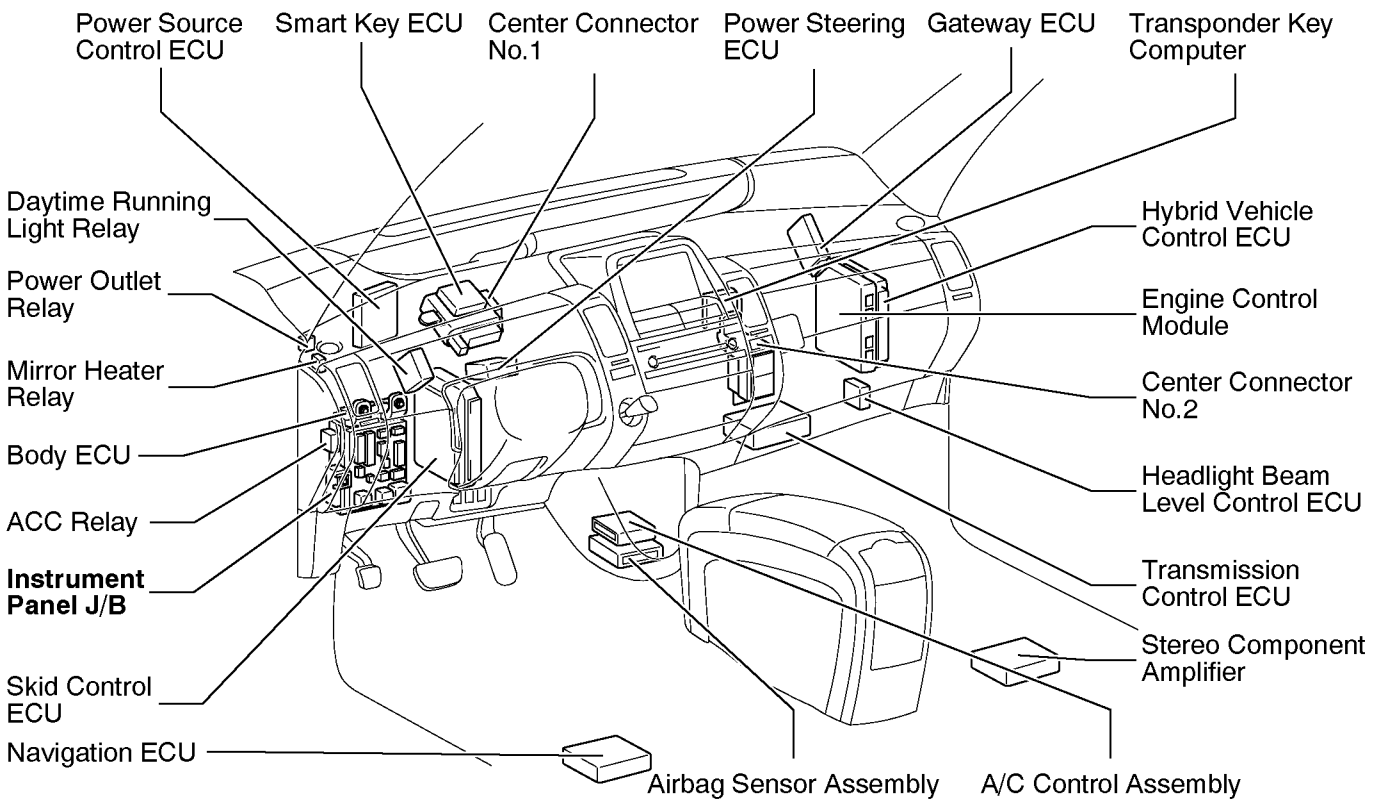

[Body]

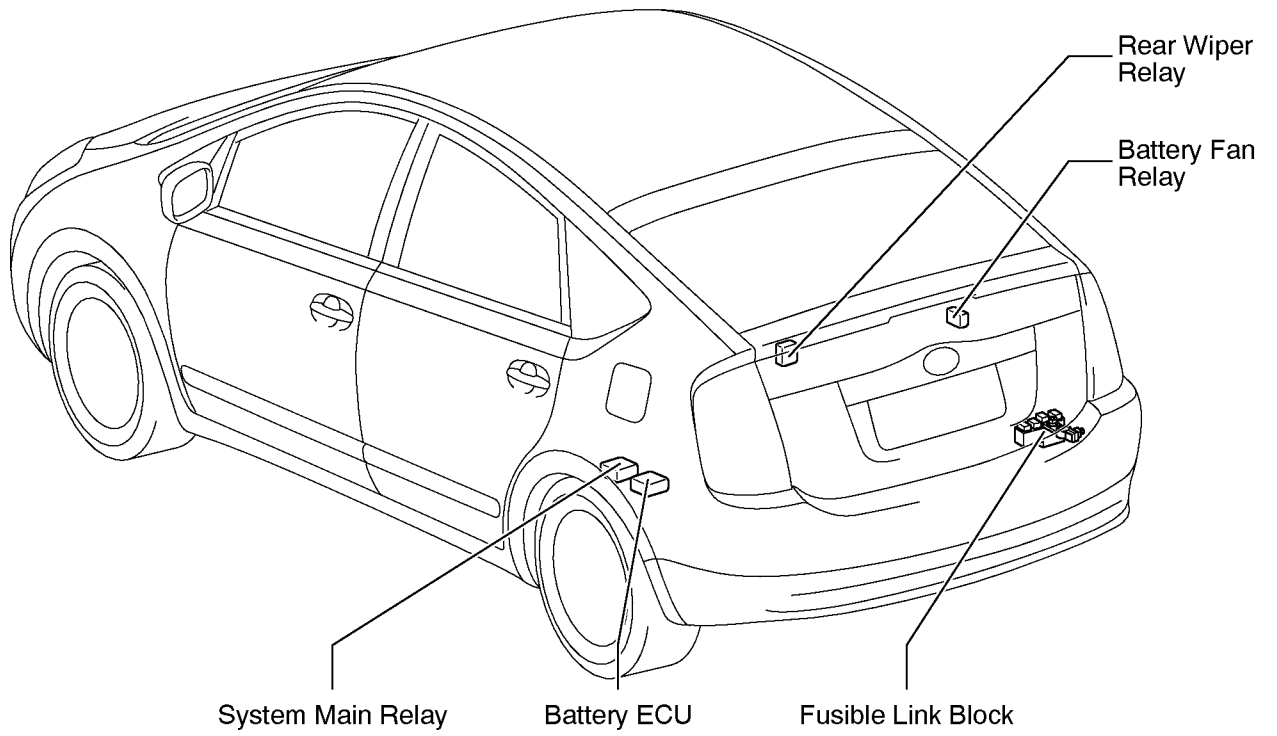


# F RELAY LOCATIONS

③ : Engine Room R/B

○ : Engine Room J/B

Engine Compartment Left (See Page 20)

- \* 1:15A (HID Tpe)  
10A (Except HID Type)
- \* 2:DIM Relay
- \* 3:H-LP Relay
- \* 4:ABS MTR 2 Relay
- \* 5:ABS NO.2 Relay
- \* 6:50A EPS (for High Current)
- \* 7:40A HTR (for High Current)
- \* 8:30A RDI (for High Current)
- \* 9:50A PS HTR (for High Current)
- \* 10:100A DC/DC (for High Current)
- \* 11:30A ABS-2 (for High Current)
- \* 12:30A ABS-1 (for High Current)
- \* 13:40A HEAD MAIN (for High Current)
- \* 14:60A P/I (for High Current)

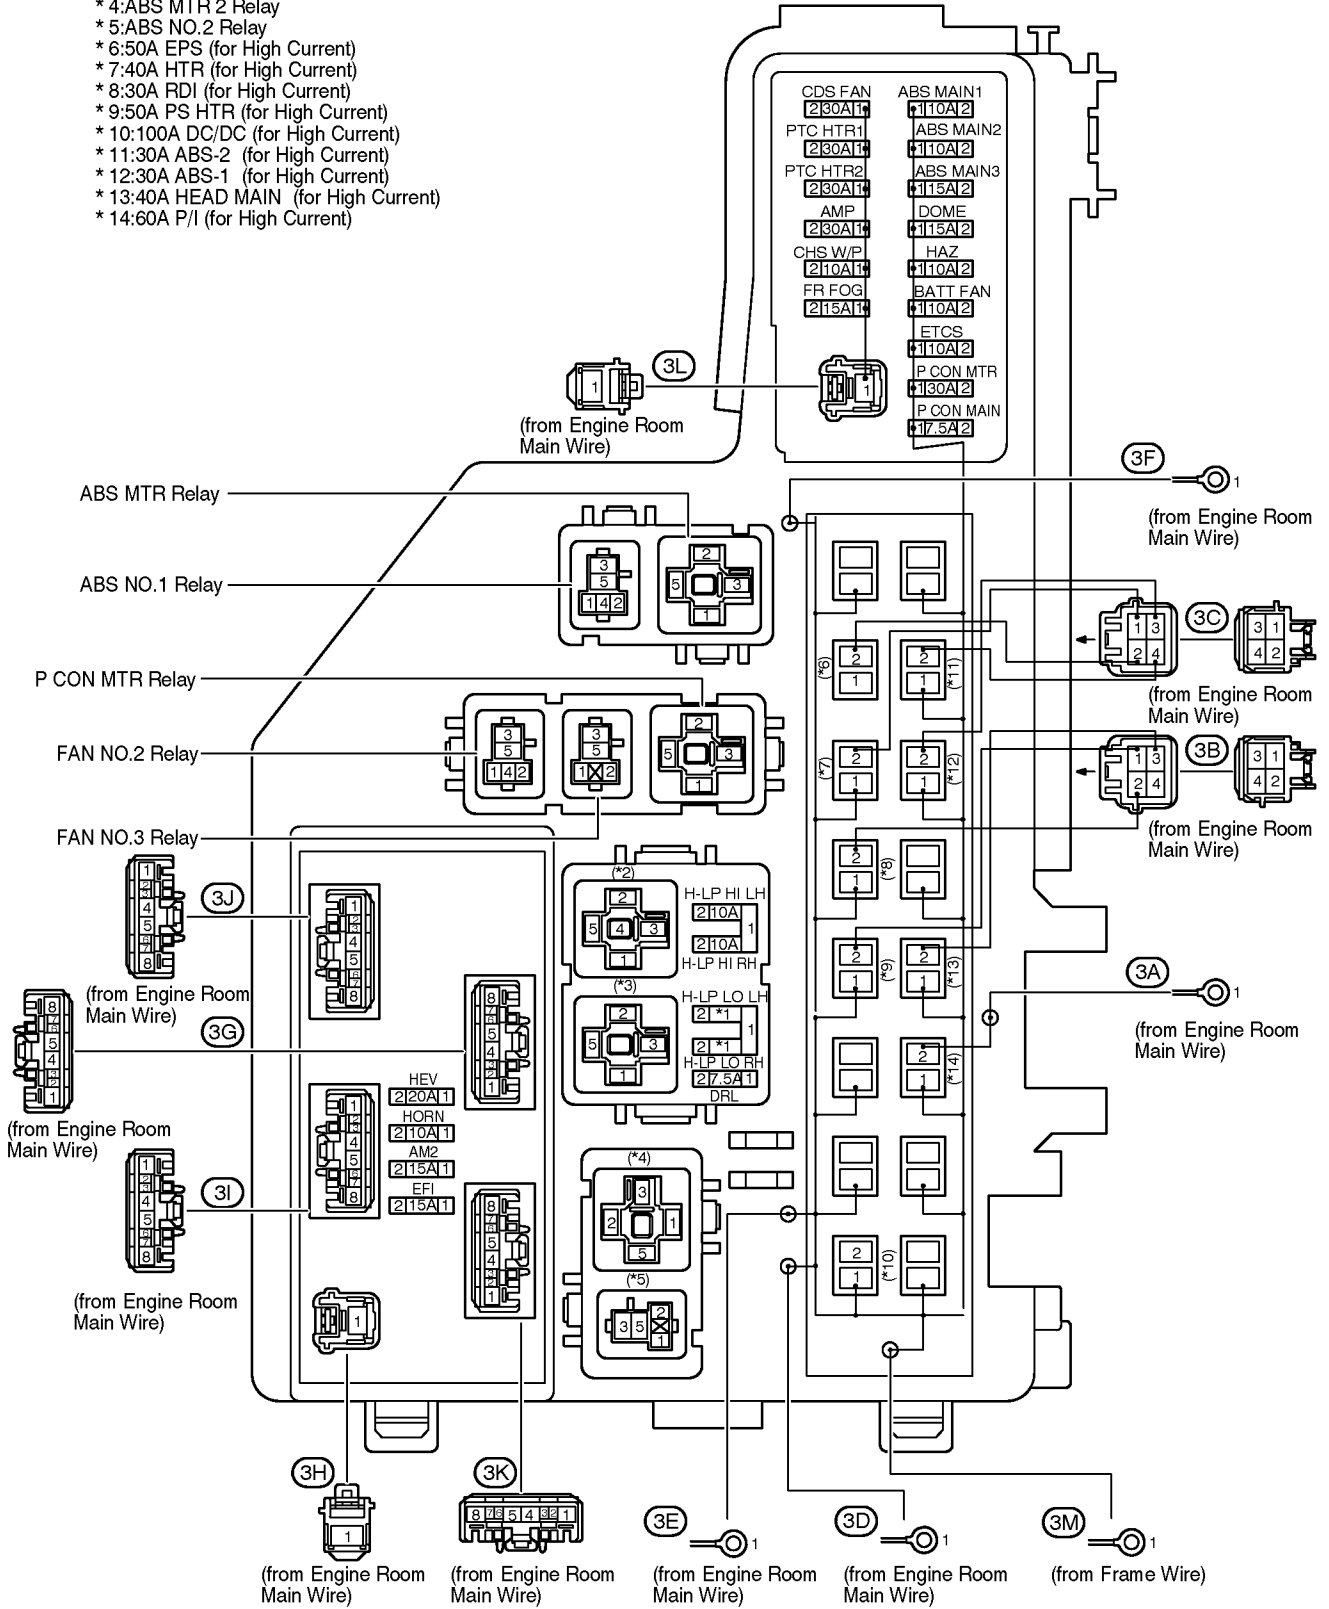







# F RELAY LOCATIONS

## [Engine Room J/B Inner Circuit]

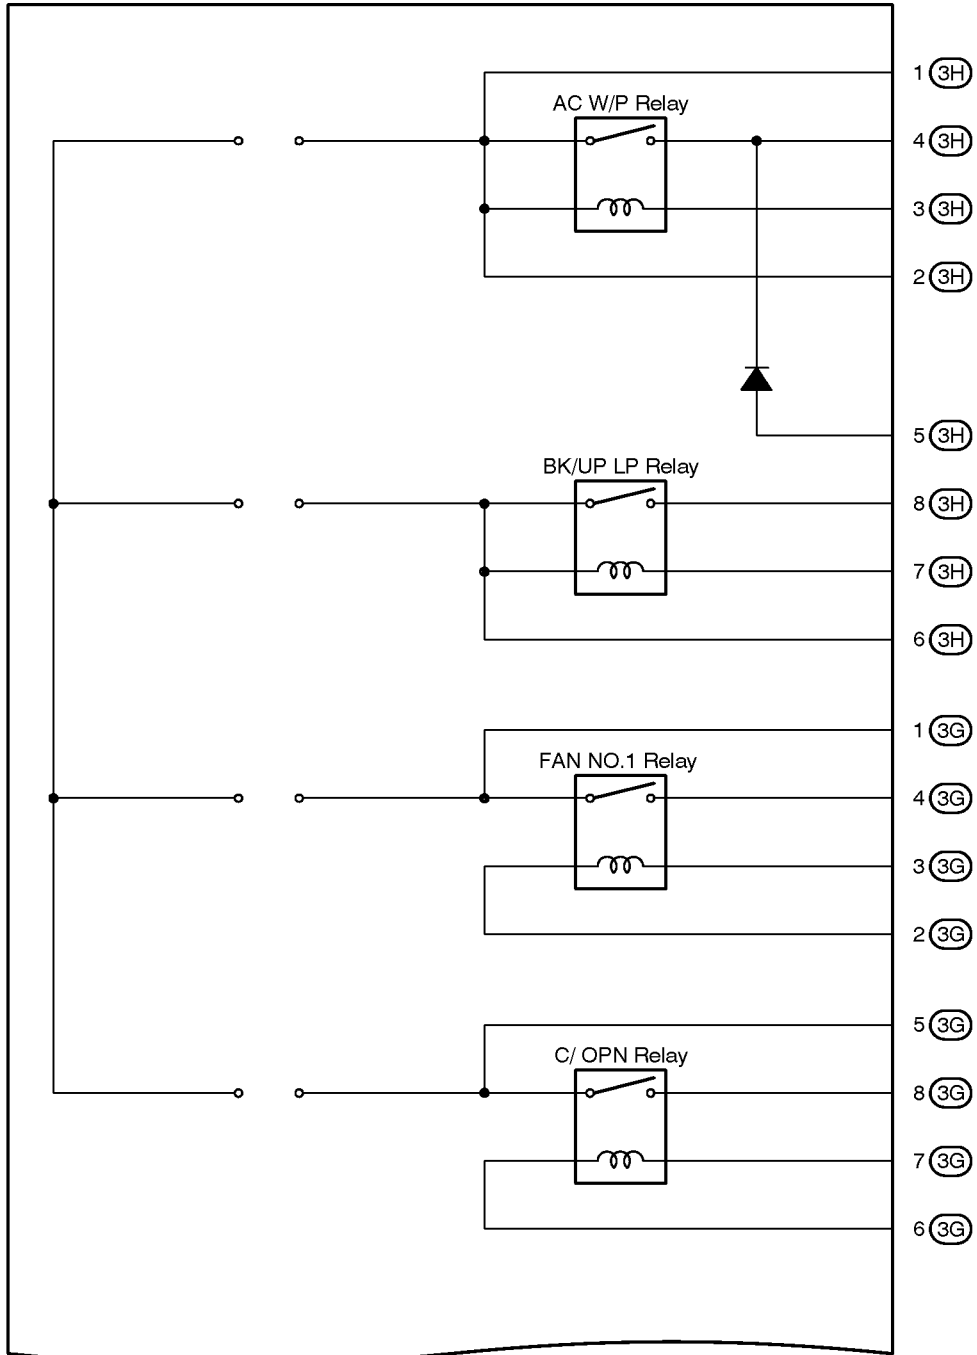


(Cont. Next Page)

(Cont'd)

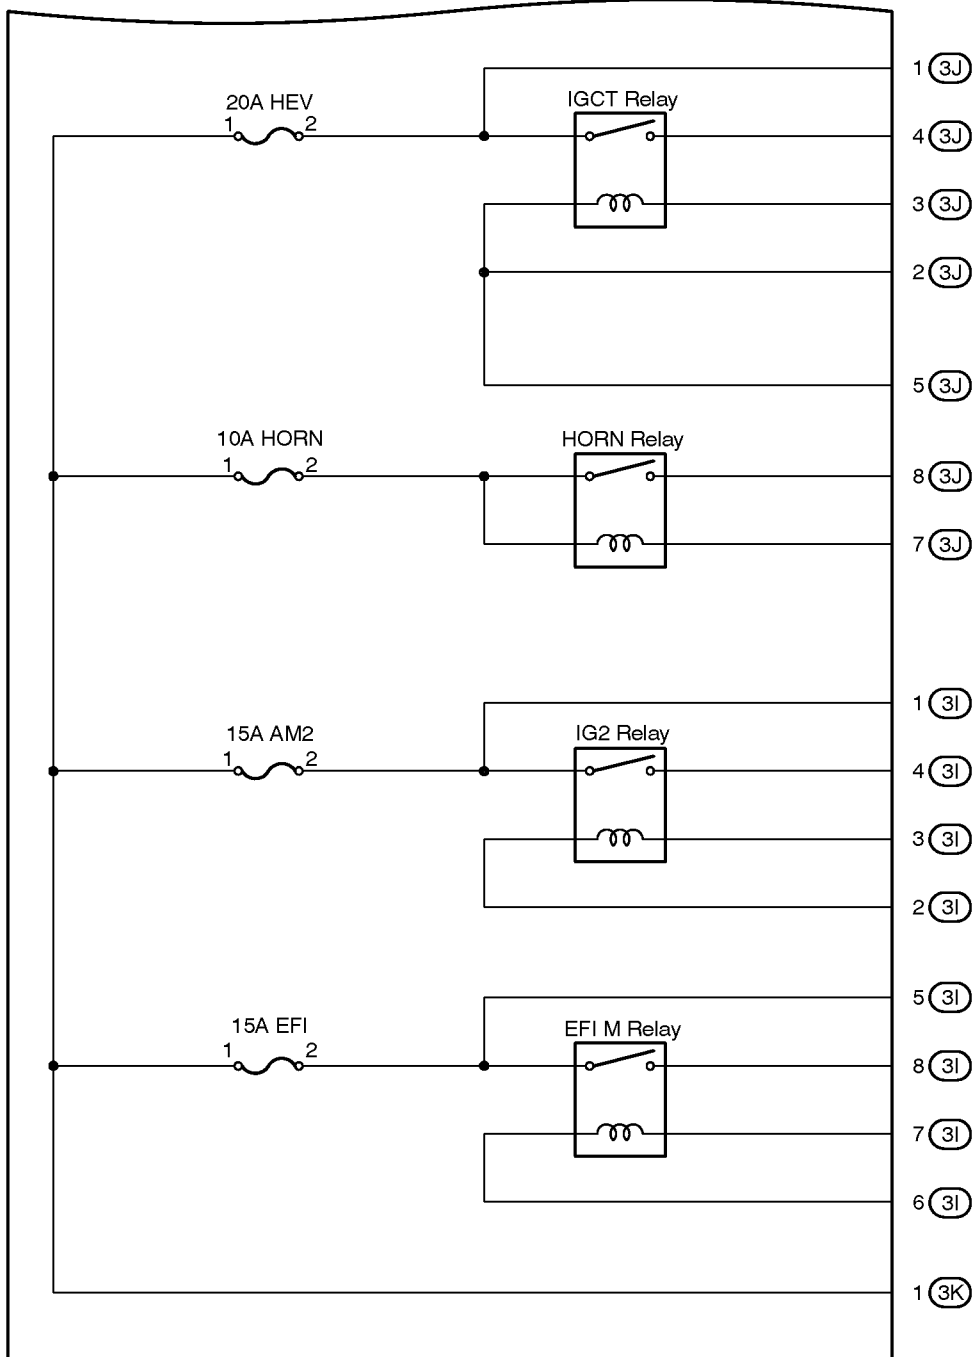


# F RELAY LOCATIONS

② : Engine Room R/B No.2 [Right Side of Reserve Tank \(See Page 20\)](#)

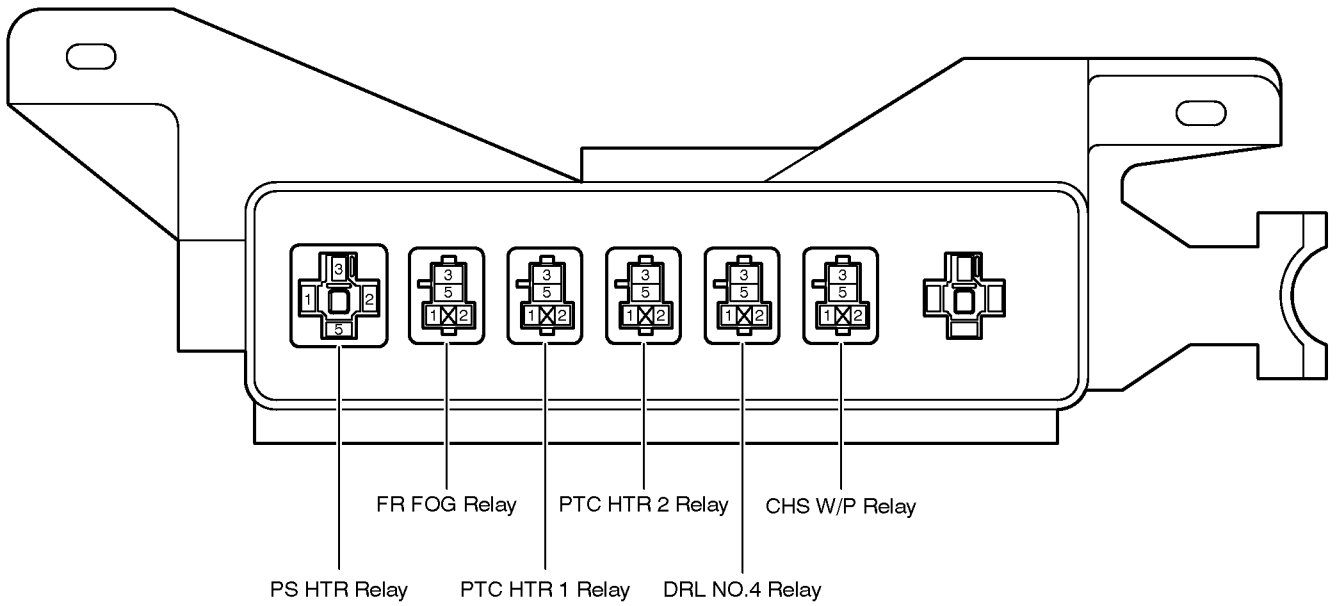


Fusible Link Block


Luggage Room Right (See Page 21)

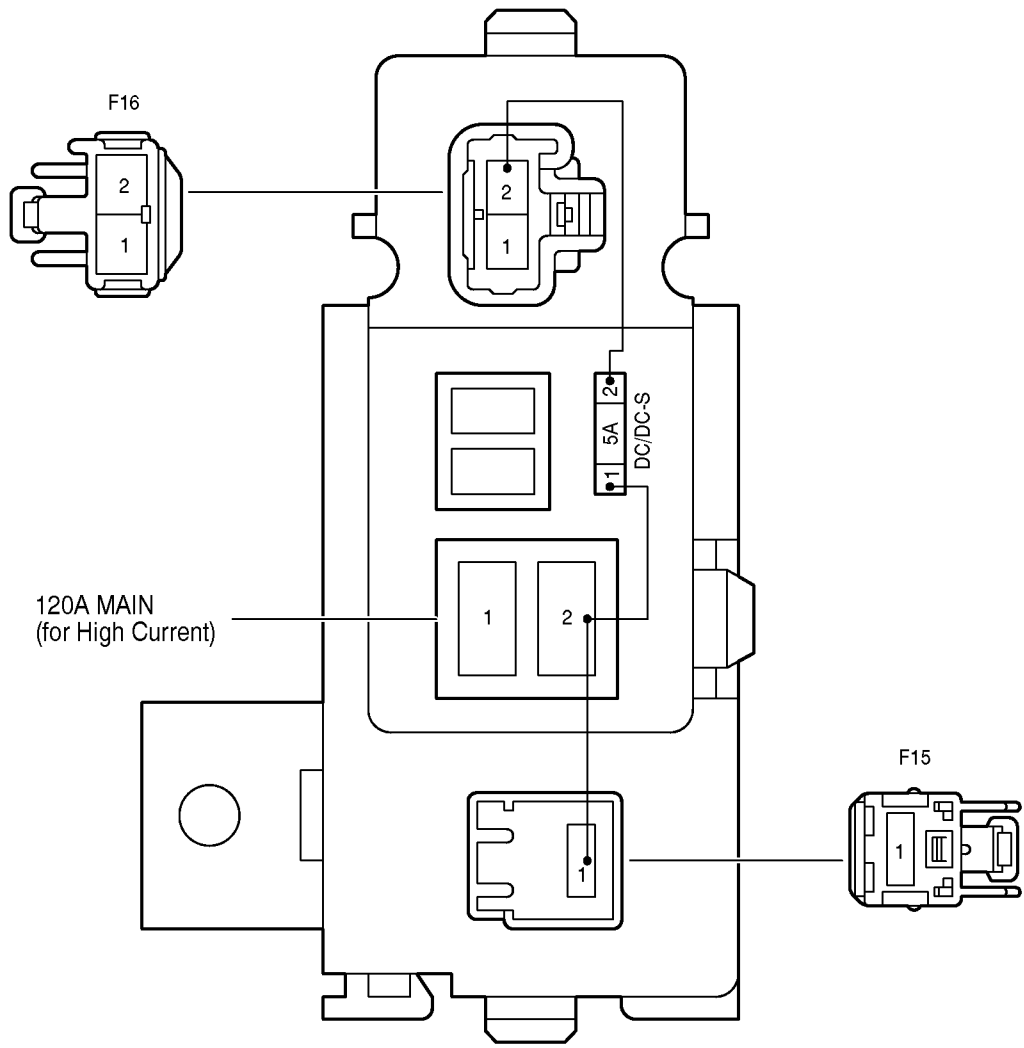

# F RELAY LOCATIONS


○ : Driver Side J/B      Lower Finish Panel (See Page 20)

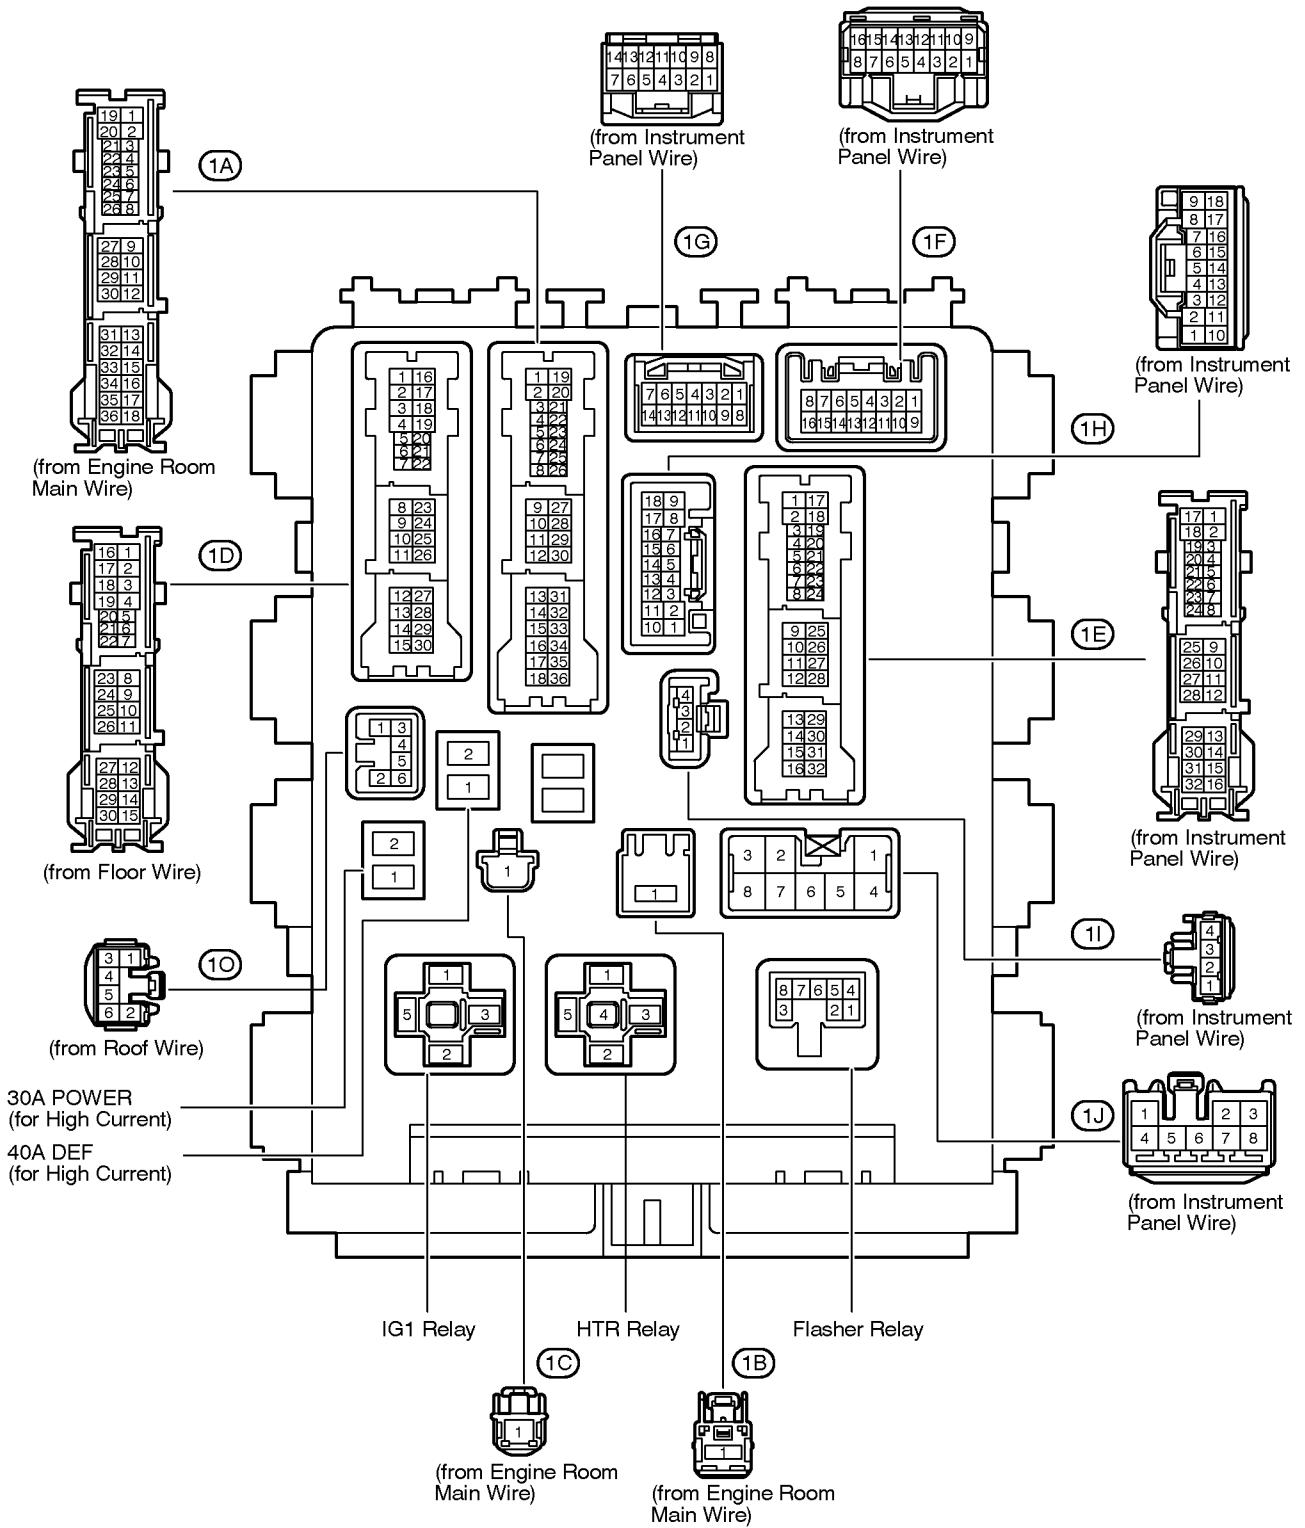

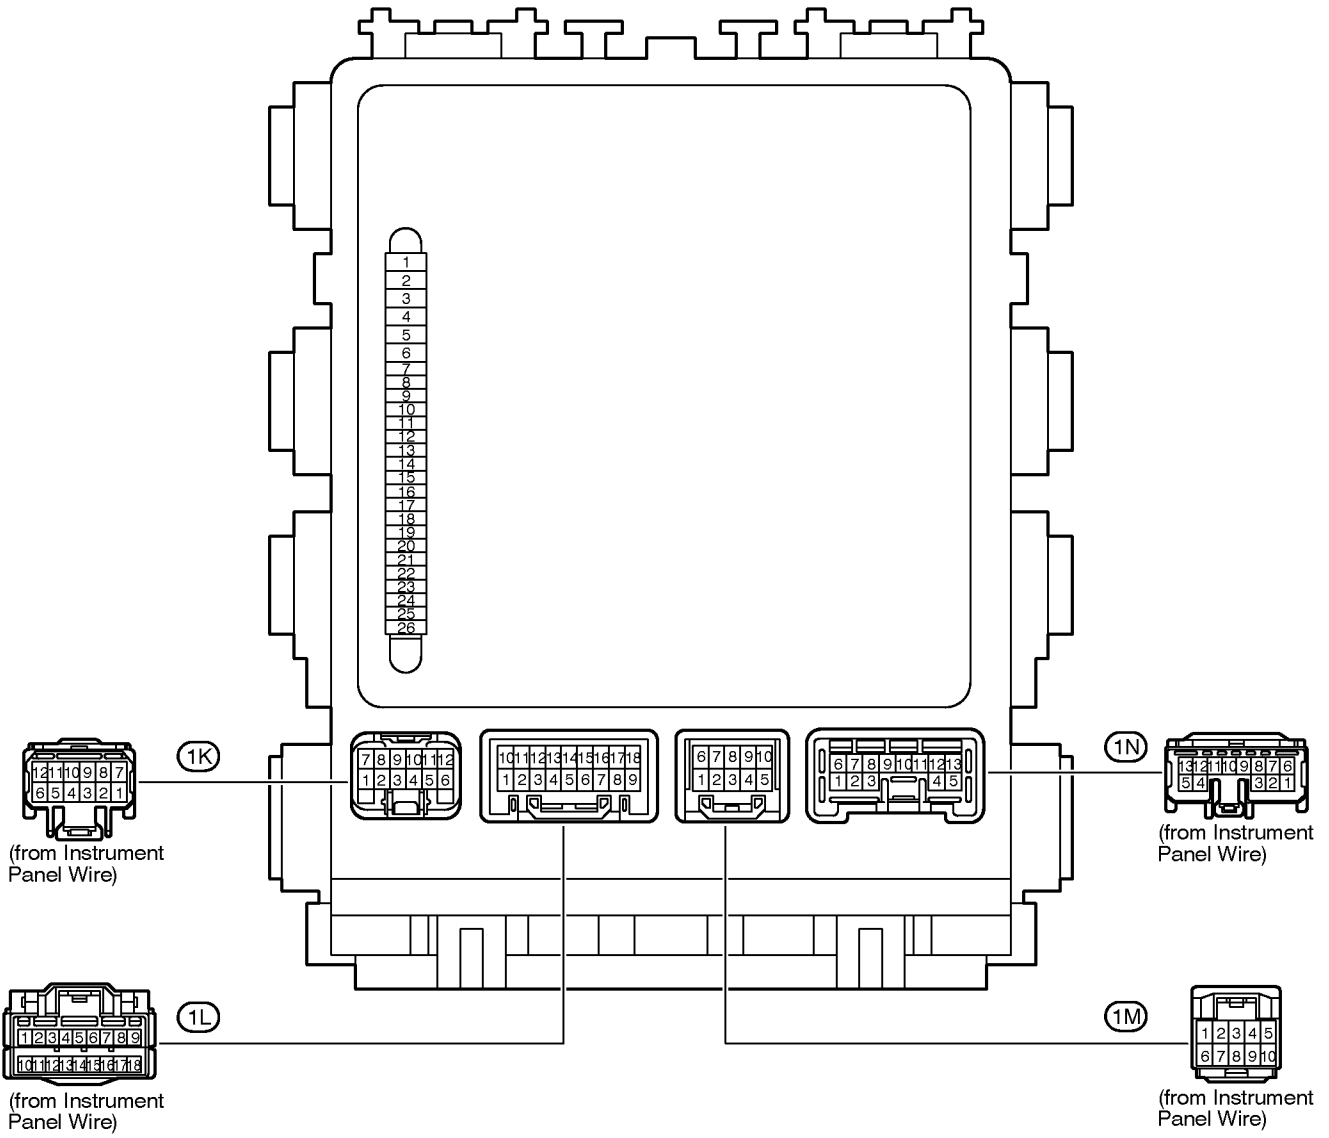

# F RELAY LOCATIONS

○ : Driver Side J/B      Lower Finish Panel (See Page 20)

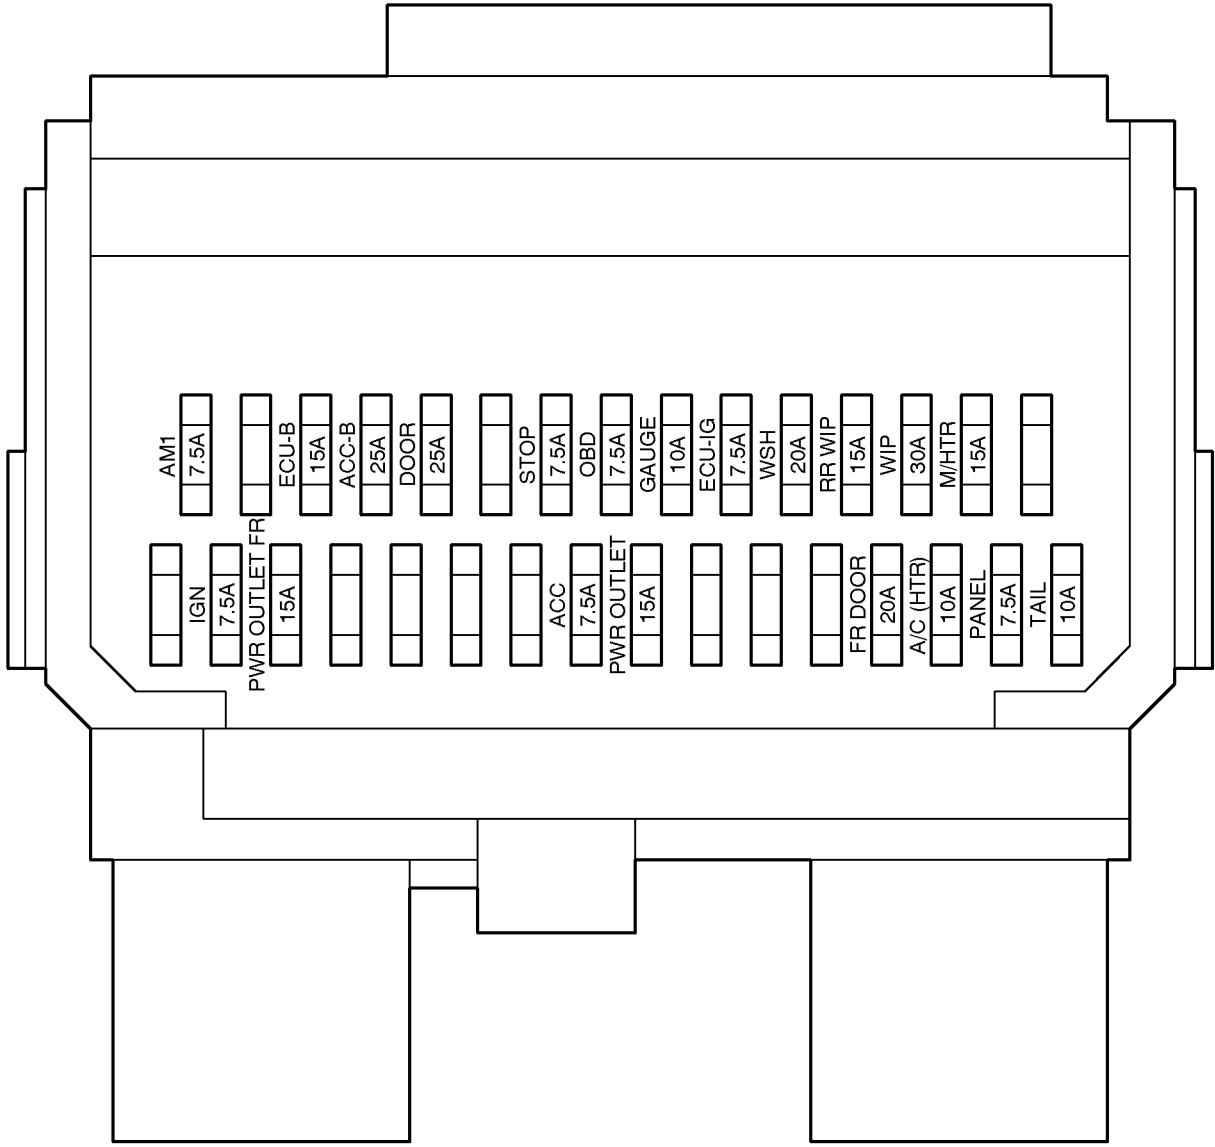







# F RELAY LOCATIONS

## [Driver Side J/B Inner Circuit]

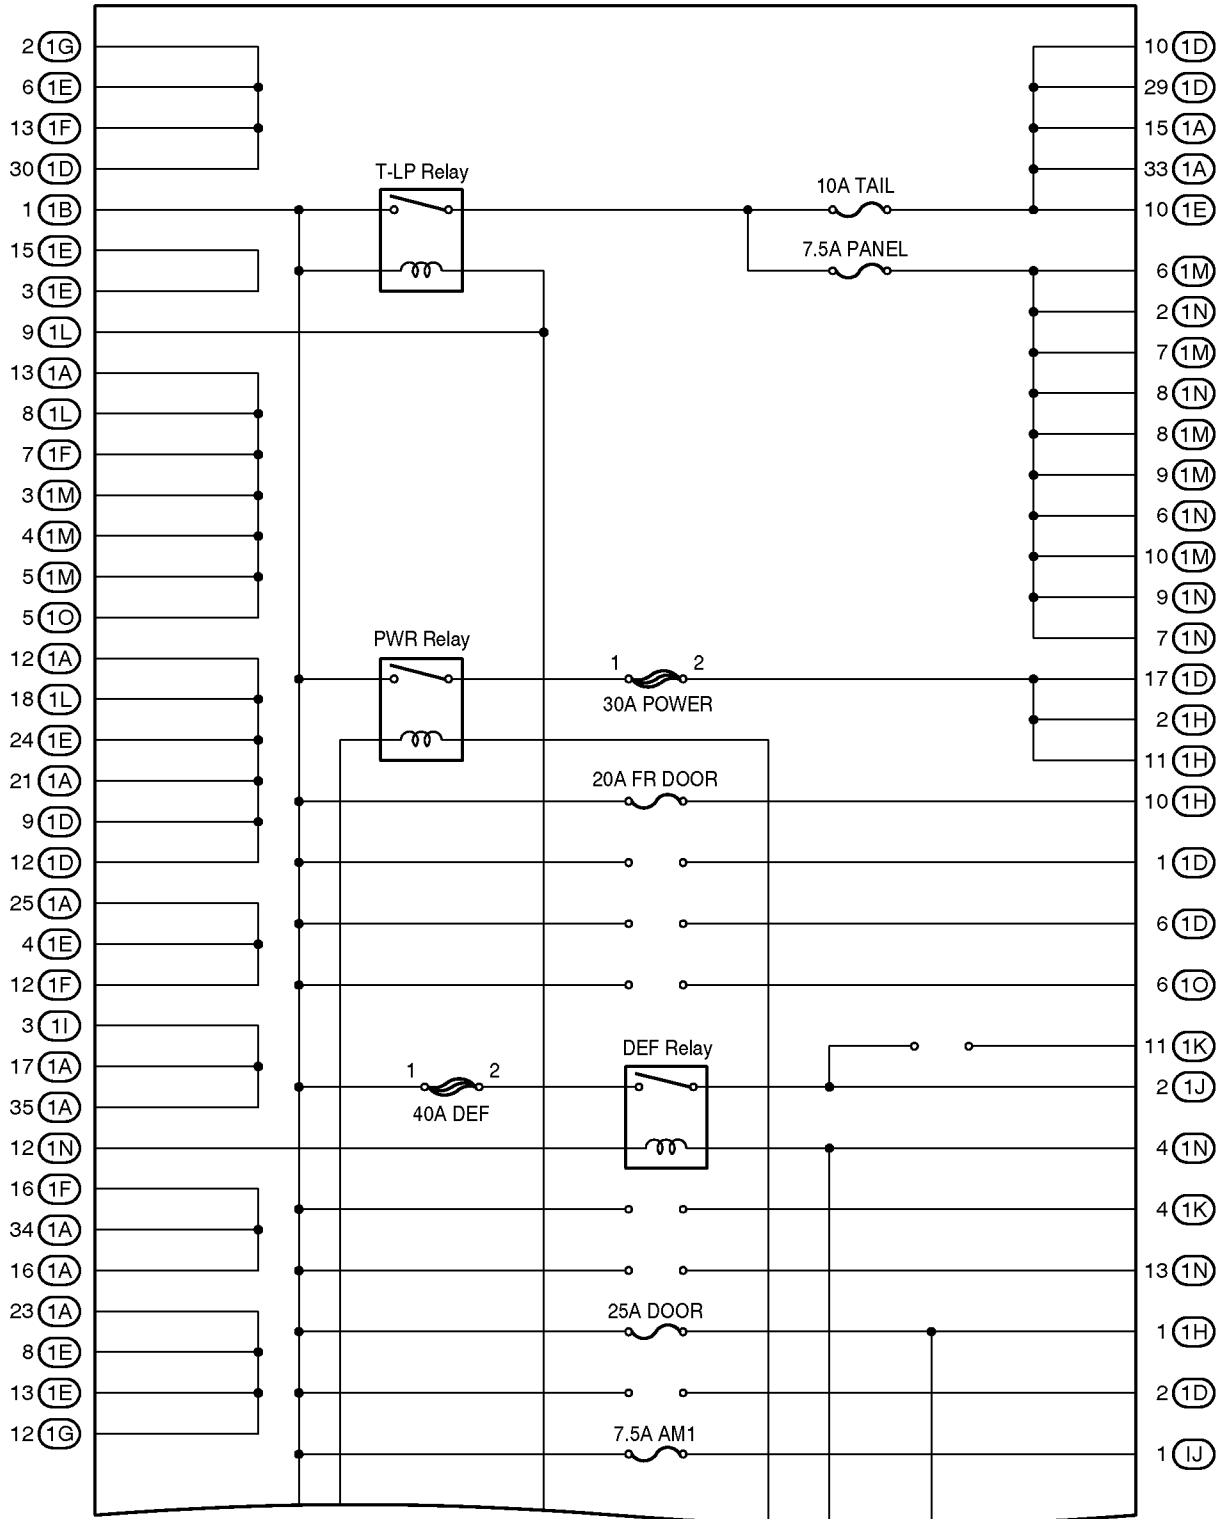

(Cont. Next Page)

(Cont'd)

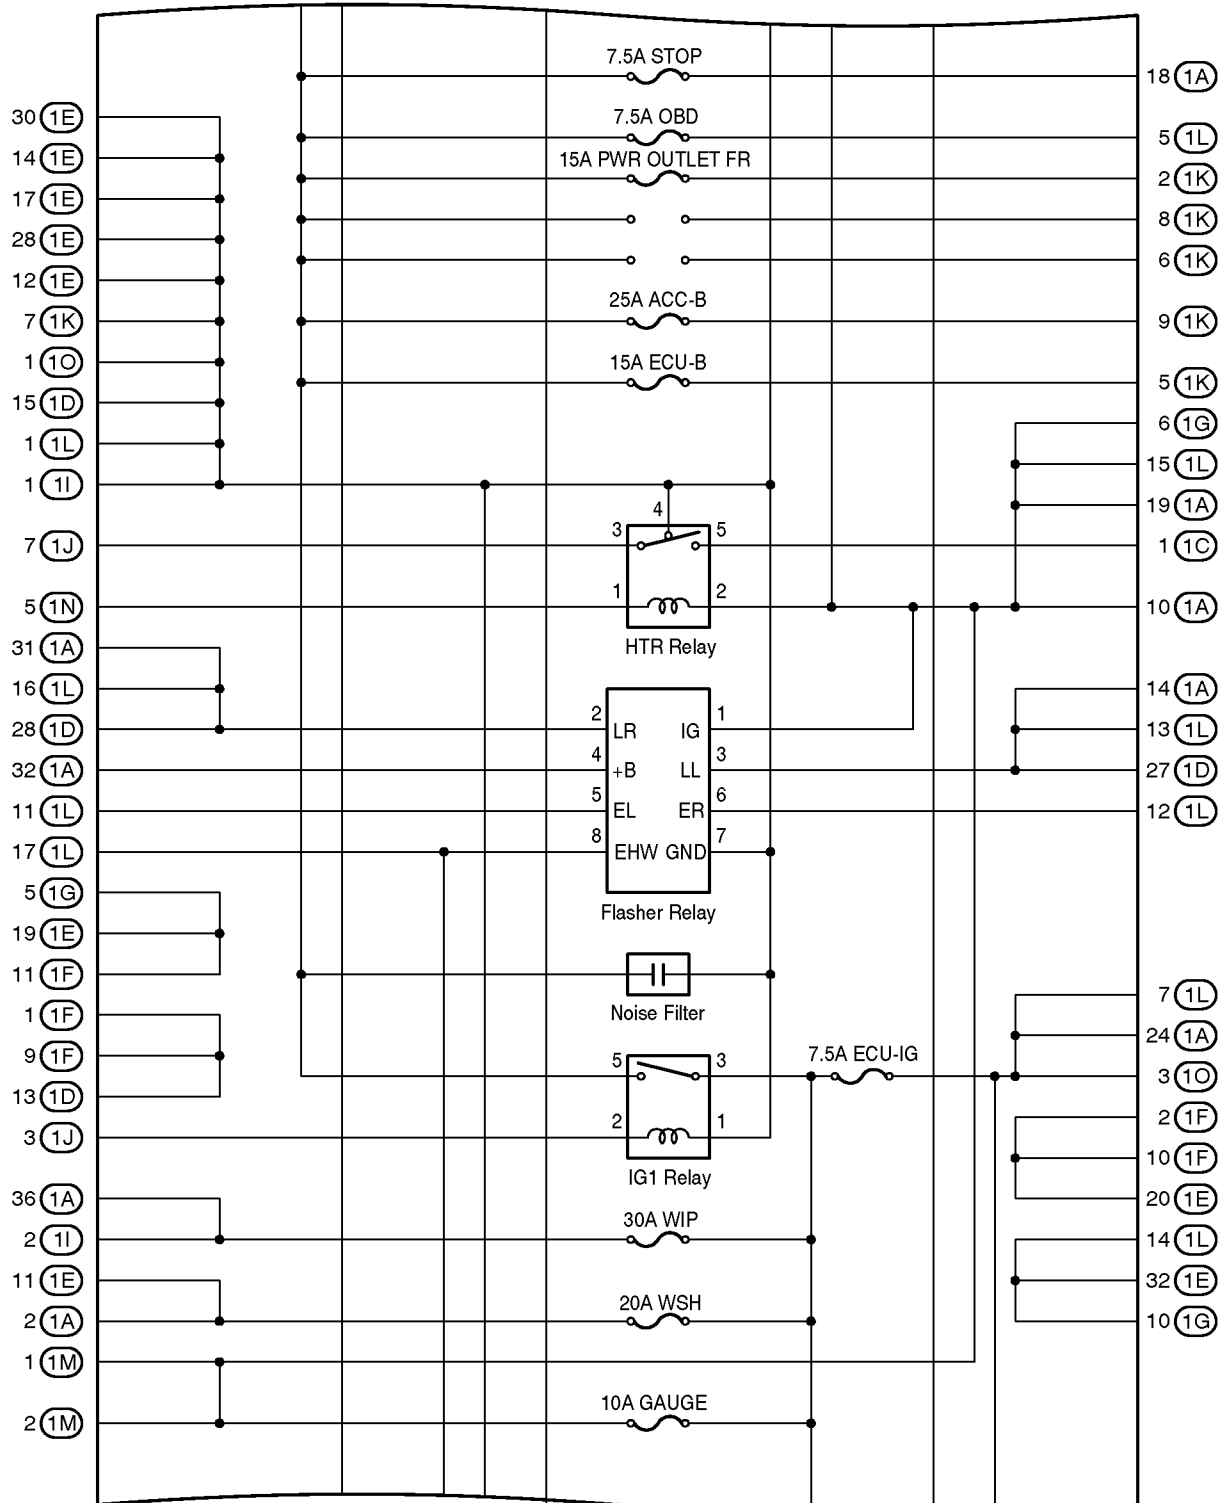


(Cont. Next Page)

# F RELAY LOCATIONS


## [Driver Side J/B Inner Circuit]

(Cont'd)

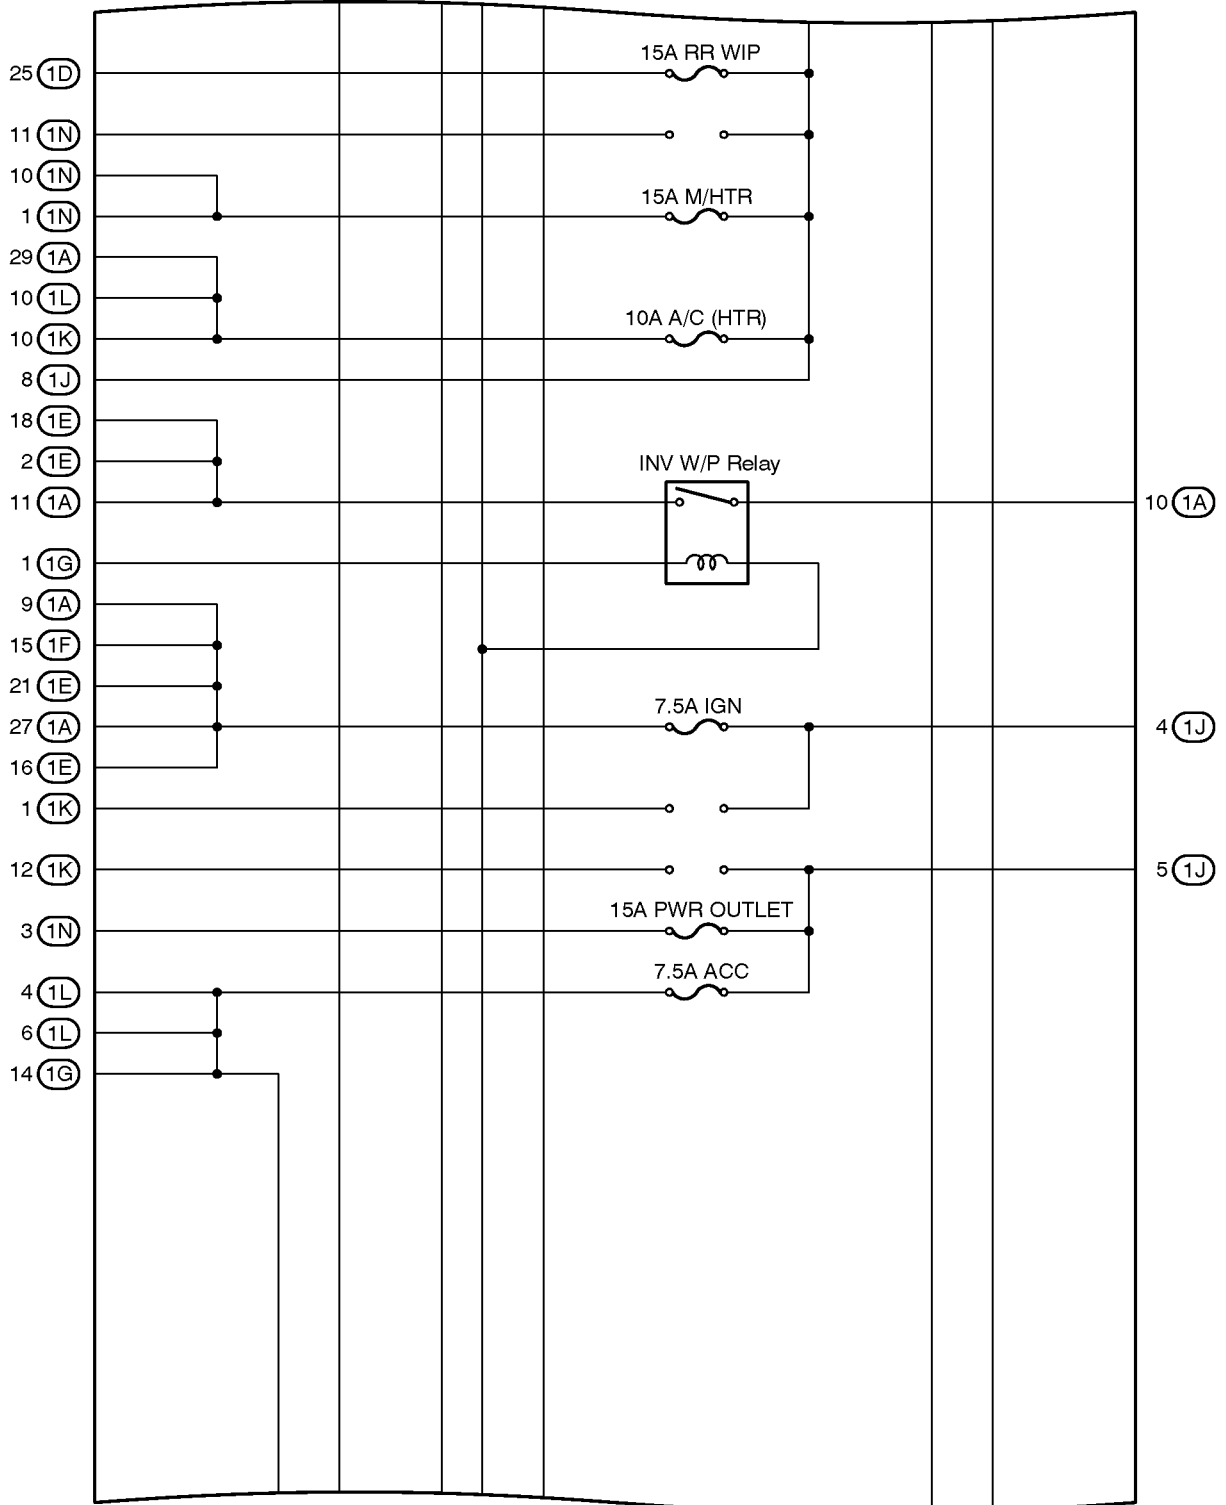


(Cont. Next Page)

(Cont'd)

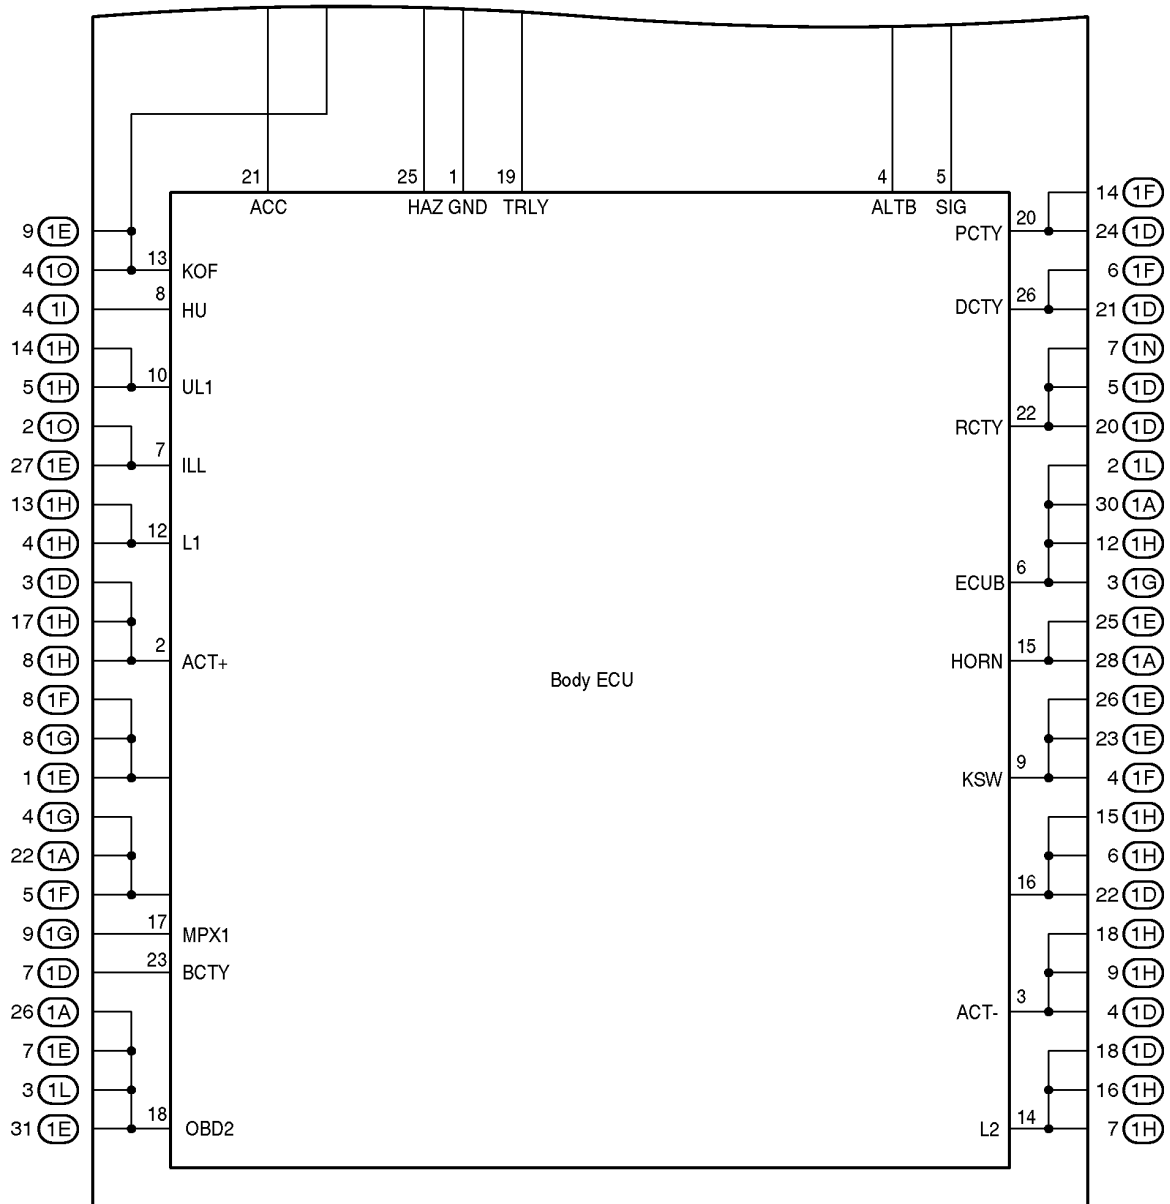

# F RELAY LOCATIONS


 : Center Connector No.1 **Behind the Combination Meter (See Page 20)**

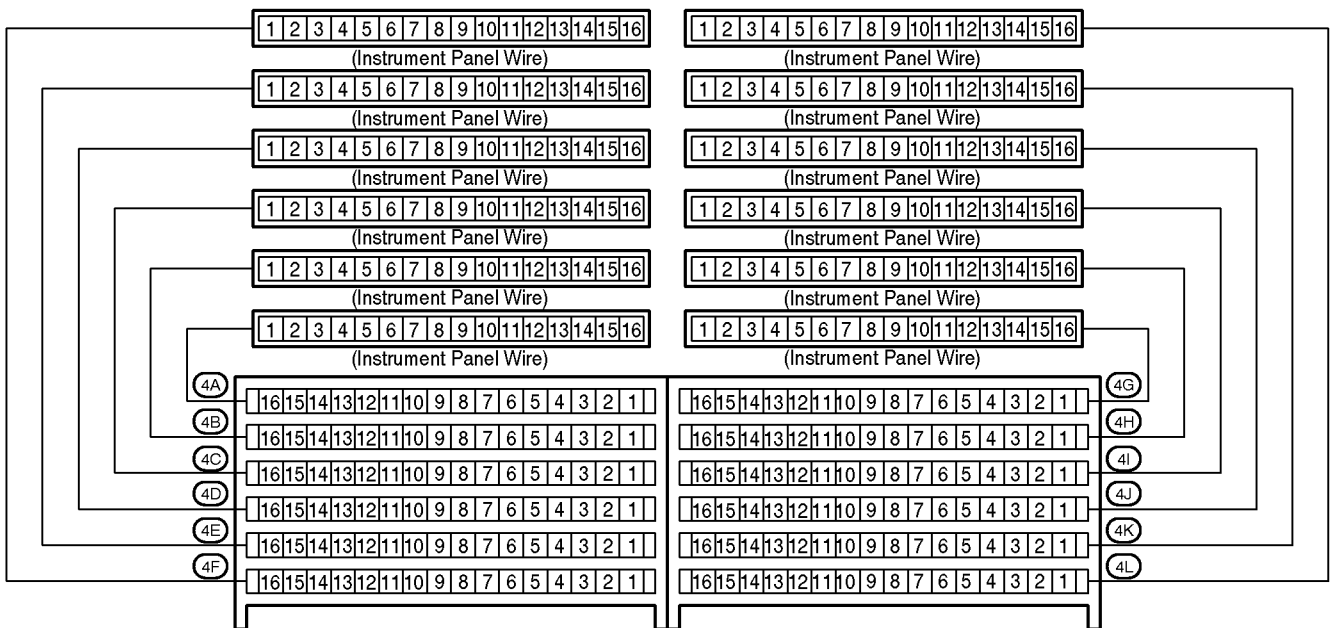




# F RELAY LOCATIONS

## [Center Connector No.1 Inner Circuit]

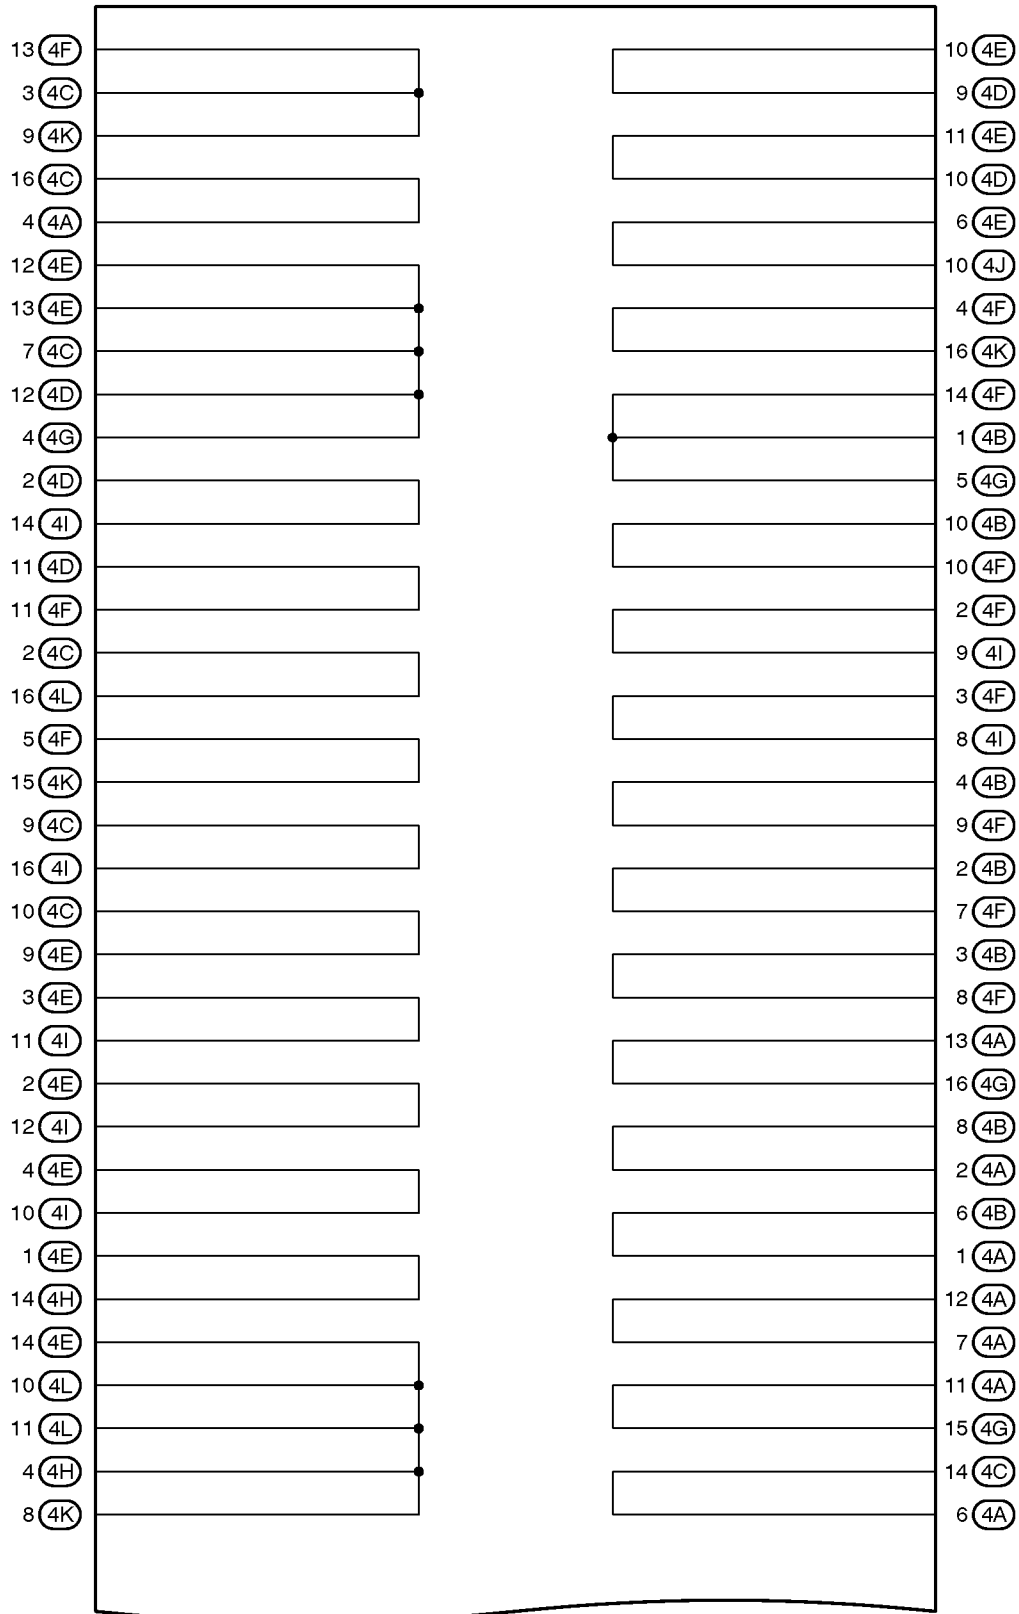

(Cont. Next Page)


(Cont'd)

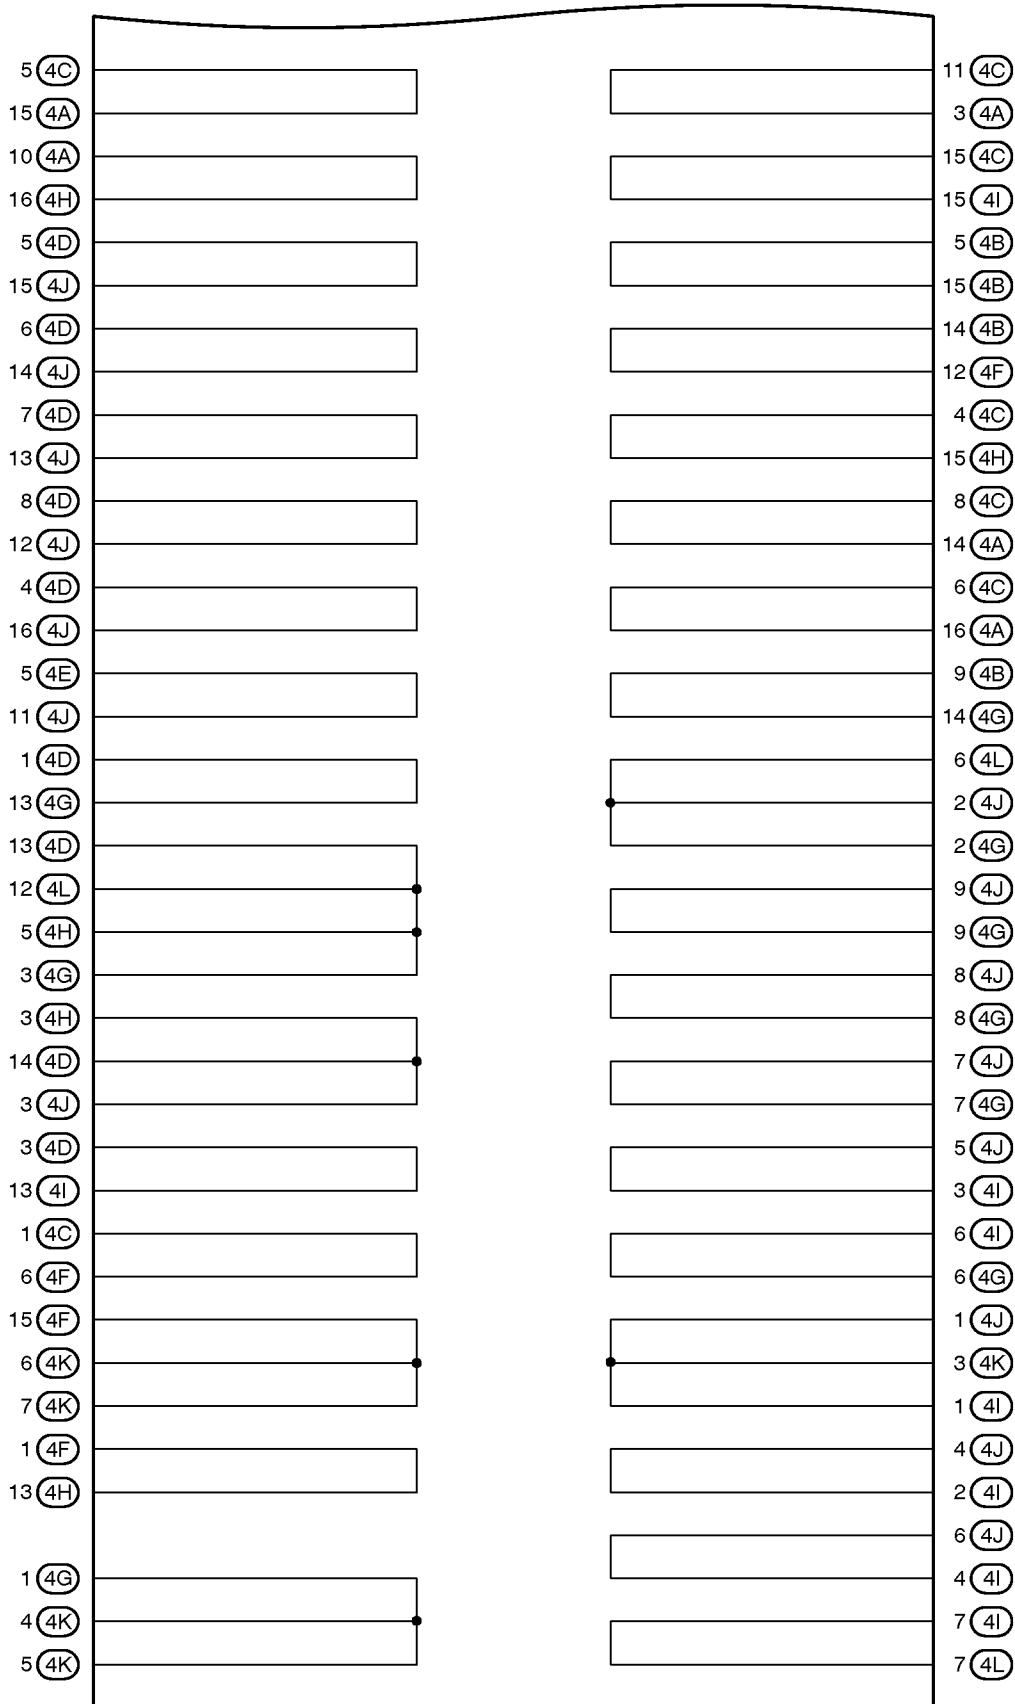




# F RELAY LOCATIONS

○ : Center Connector No.2 **Instrument Panel Brace RH (See Page 20)**

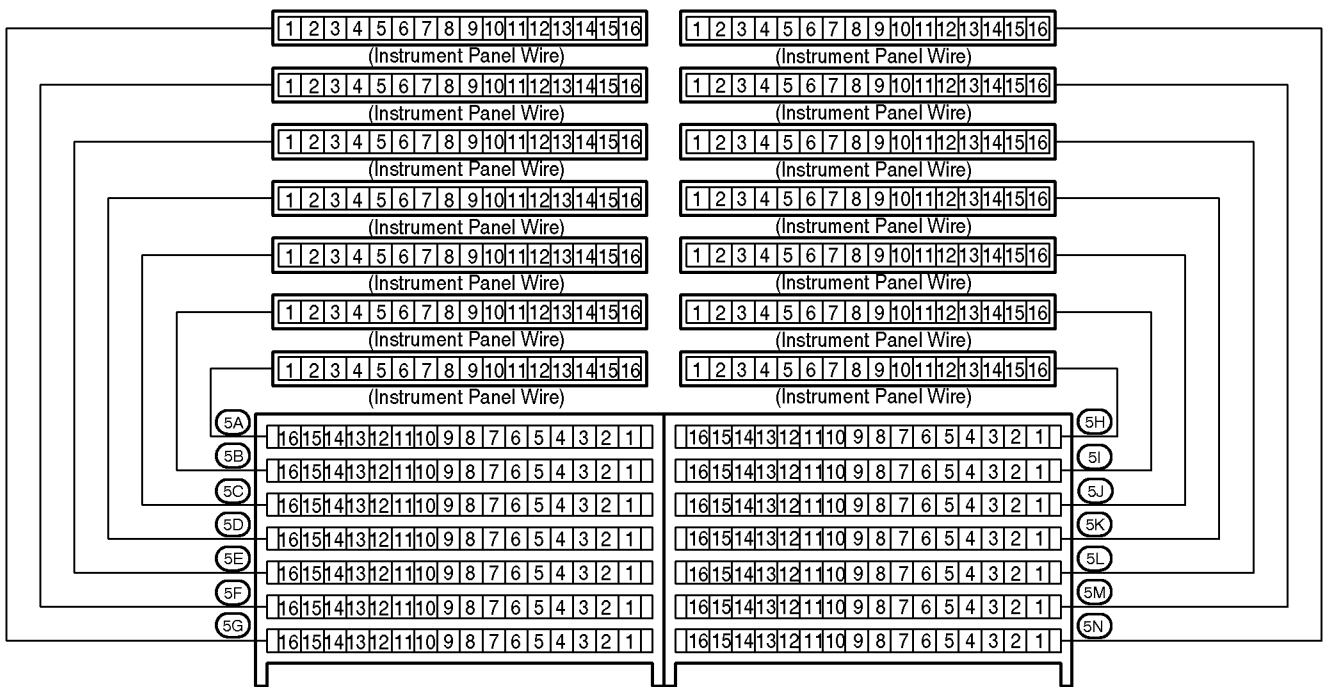

[Center Connector No.2 Inner Circuit]

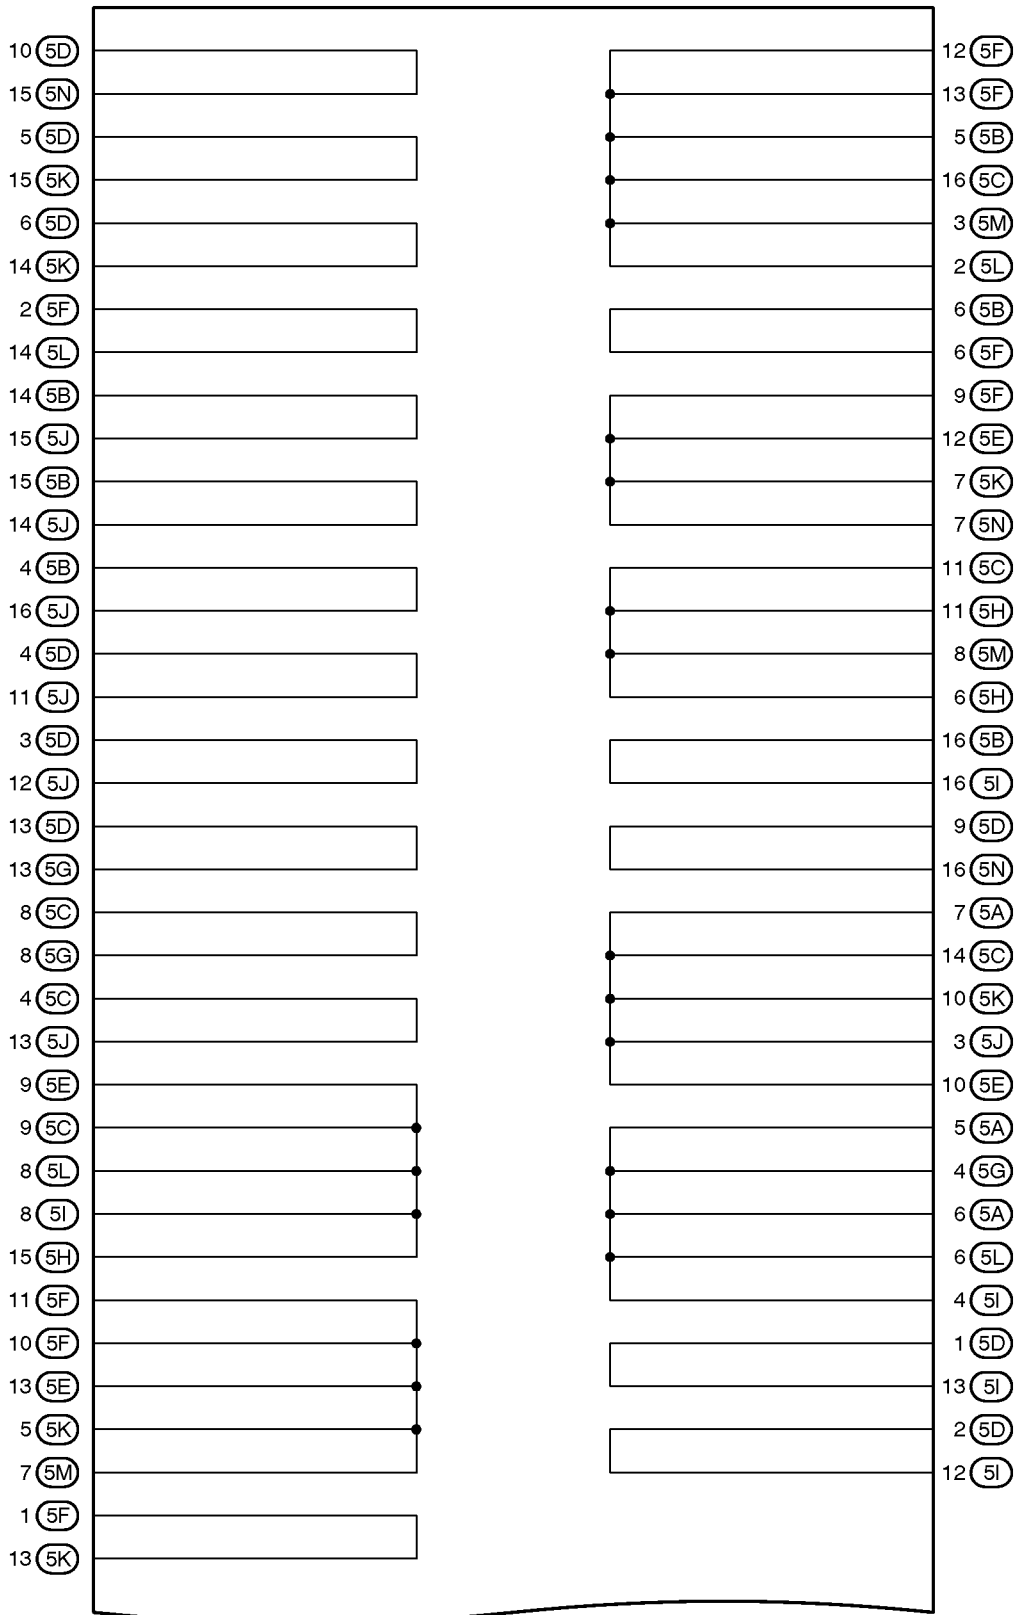


(Cont. Next Page)

# F RELAY LOCATIONS


## [Center Connector No.2 Inner Circuit]

(Cont'd)

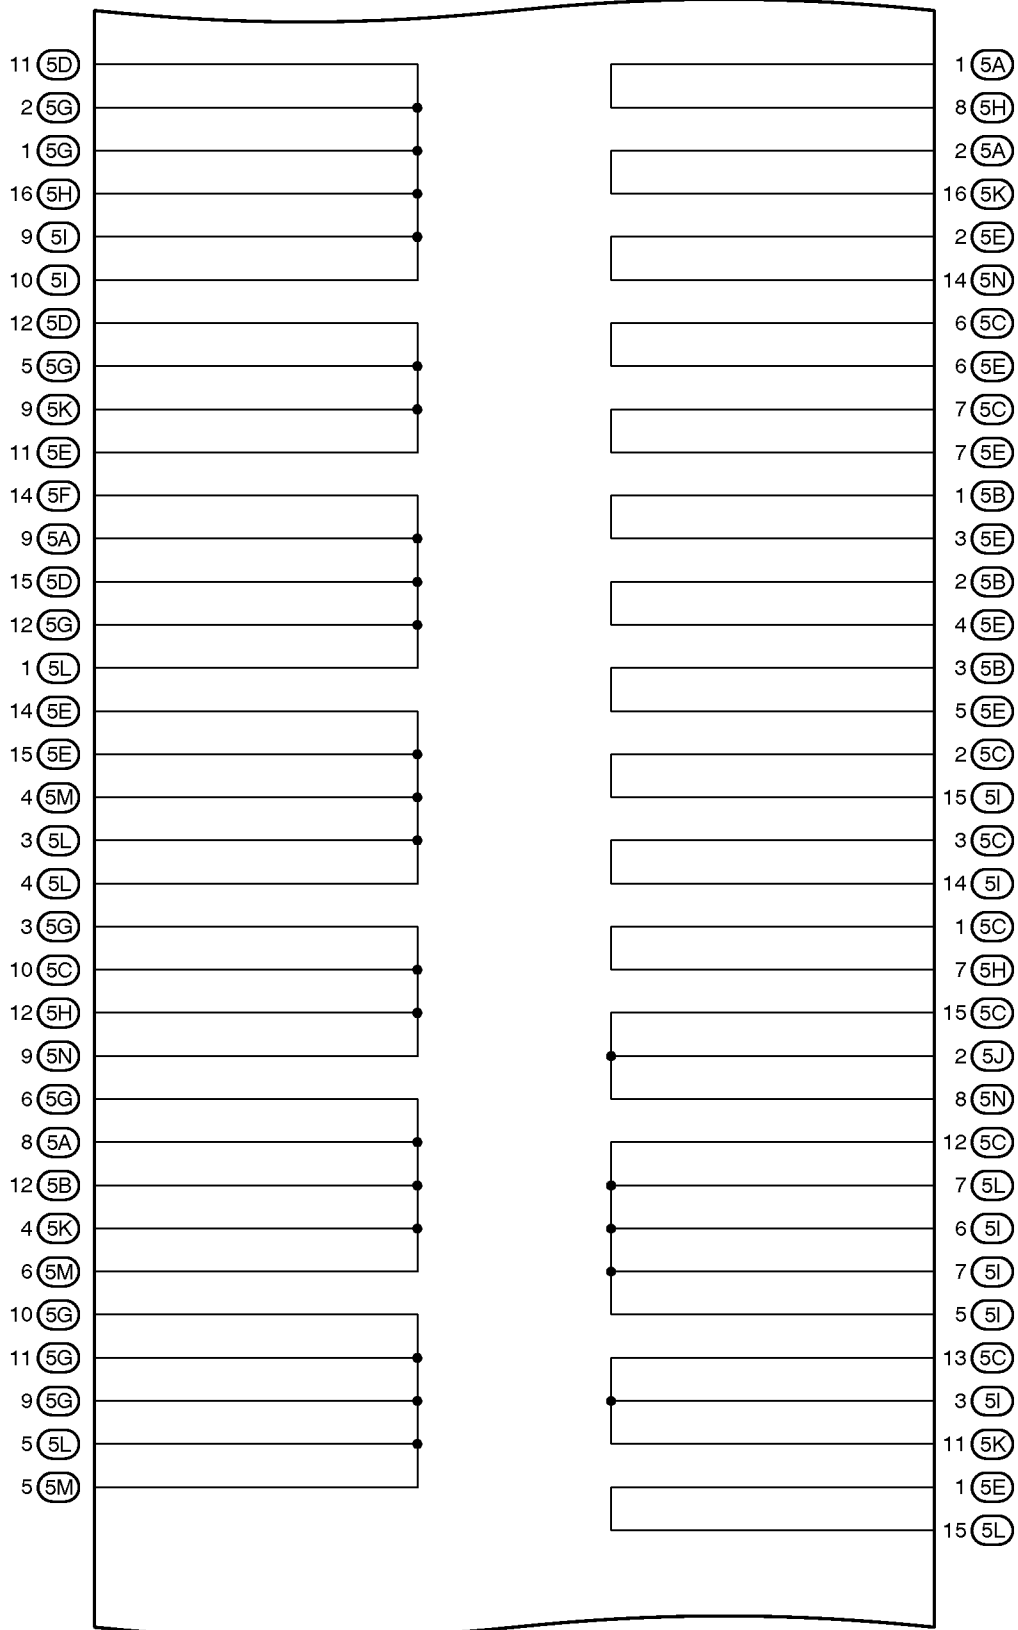


(Cont. Next Page)

(Cont'd)

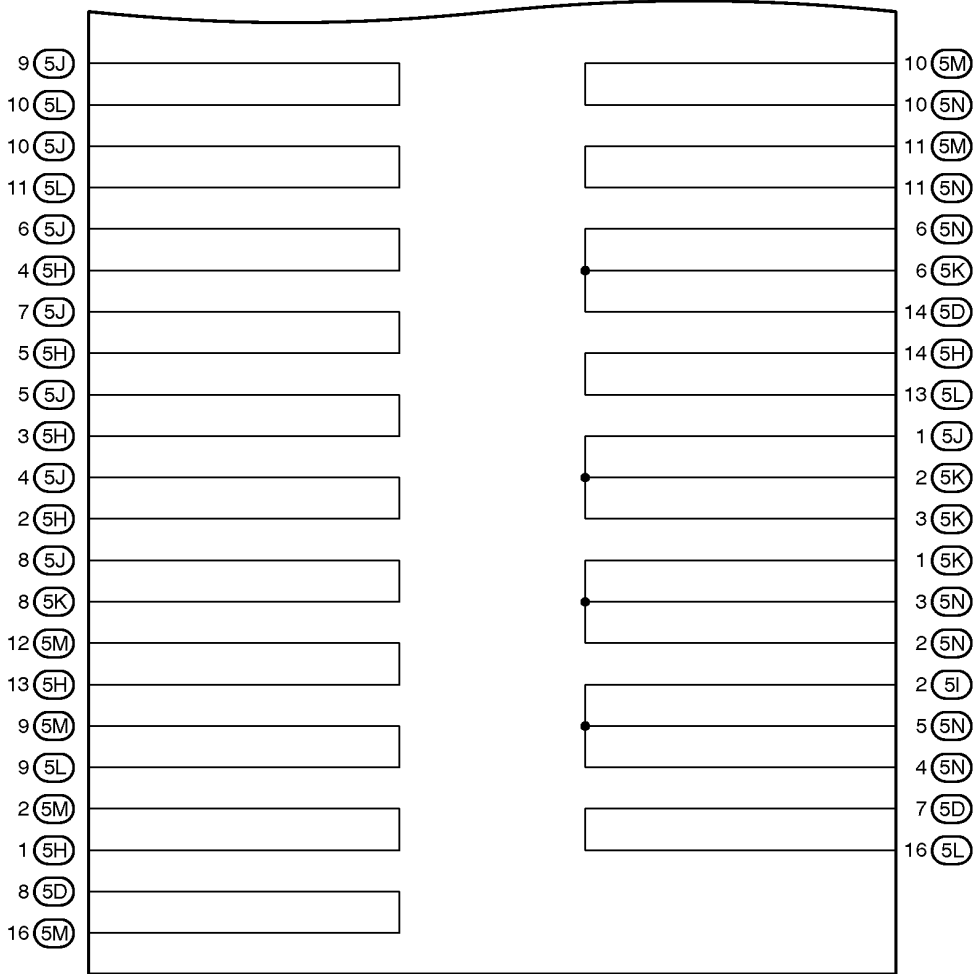


# G ELECTRICAL WIRING ROUTING

## Position of Parts in Engine Compartment

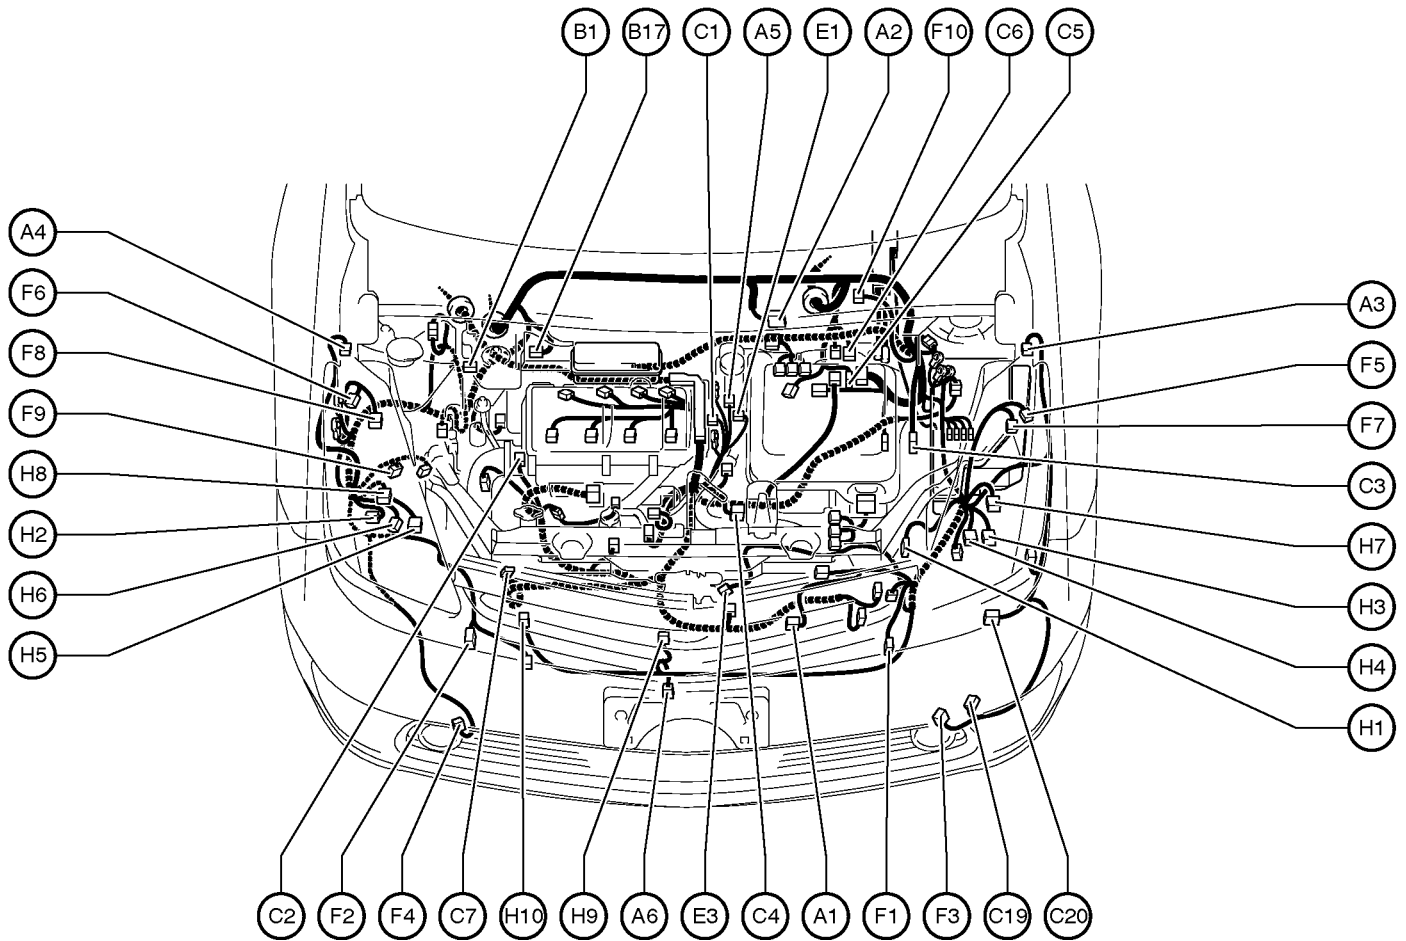

- |   |  |
|---|--|
| A 1 A/C Condenser Fan Motor                         | F 1 Front Airbag Sensor LH                   |
| A 2 ABS & BA & TRAC & VSC Actuator                  | F 2 Front Airbag Sensor RH                   |
| A 3 ABS Speed Sensor Front LH                       | F 3 Front Fog Light LH                       |
| A 4 ABS Speed Sensor Front RH                       | F 4 Front Fog Light RH                       |
| A 5 Air Fuel Ratio Sensor (Bank 1 Sensor 1)         | F 5 Front Side Marker Light LH               |
| A 6 Ambient Temp. Sensor                            | F 6 Front Side Marker Light RH               |
| B 1 Brake Fluid Level Warning SW                    | F 7 Front Turn Signal Light LH               |
| B17 Brake Master Stroke Simulator Cylinder Assembly | F 8 Front Turn Signal Light RH               |
| C 1 Camshaft Position Sensor                        | F 9 Front Washer Motor                       |
| C 2 Camshaft Timing Oil Control Valve               | F 10 Front Wiper Motor                       |
| C 3 Circuit Breaker Sensor                          | H 1 Headlight Beam Level Control Actuator LH |
| C 4 Compressor Assembly (Motor)                     | H 2 Headlight Beam Level Control Actuator RH |
| C 5 Converter                                       | H 3 Headlight Control ECU LH                 |
| C 6 Converter                                       | H 4 Headlight Control ECU LH                 |
| C 7 Crankshaft Position Sensor                      | H 5 Headlight Control ECU RH                 |
| C19 Coolant Heat Storage Tank Outlet Temp. Sensor   | H 6 Headlight Control ECU RH                 |
| C20 Coolant Heat Storage Water Pump                 | H 7 Headlight LH                             |
| E 1 Engine Coolant Temp. Sensor                     | H 8 Headlight RH                             |
| E 3 Engine Hood Courtesy SW                         | H 9 Horn (High)                              |
|   | H10 Horn (Lo)                                |

**Position of Parts in Engine Compartment**

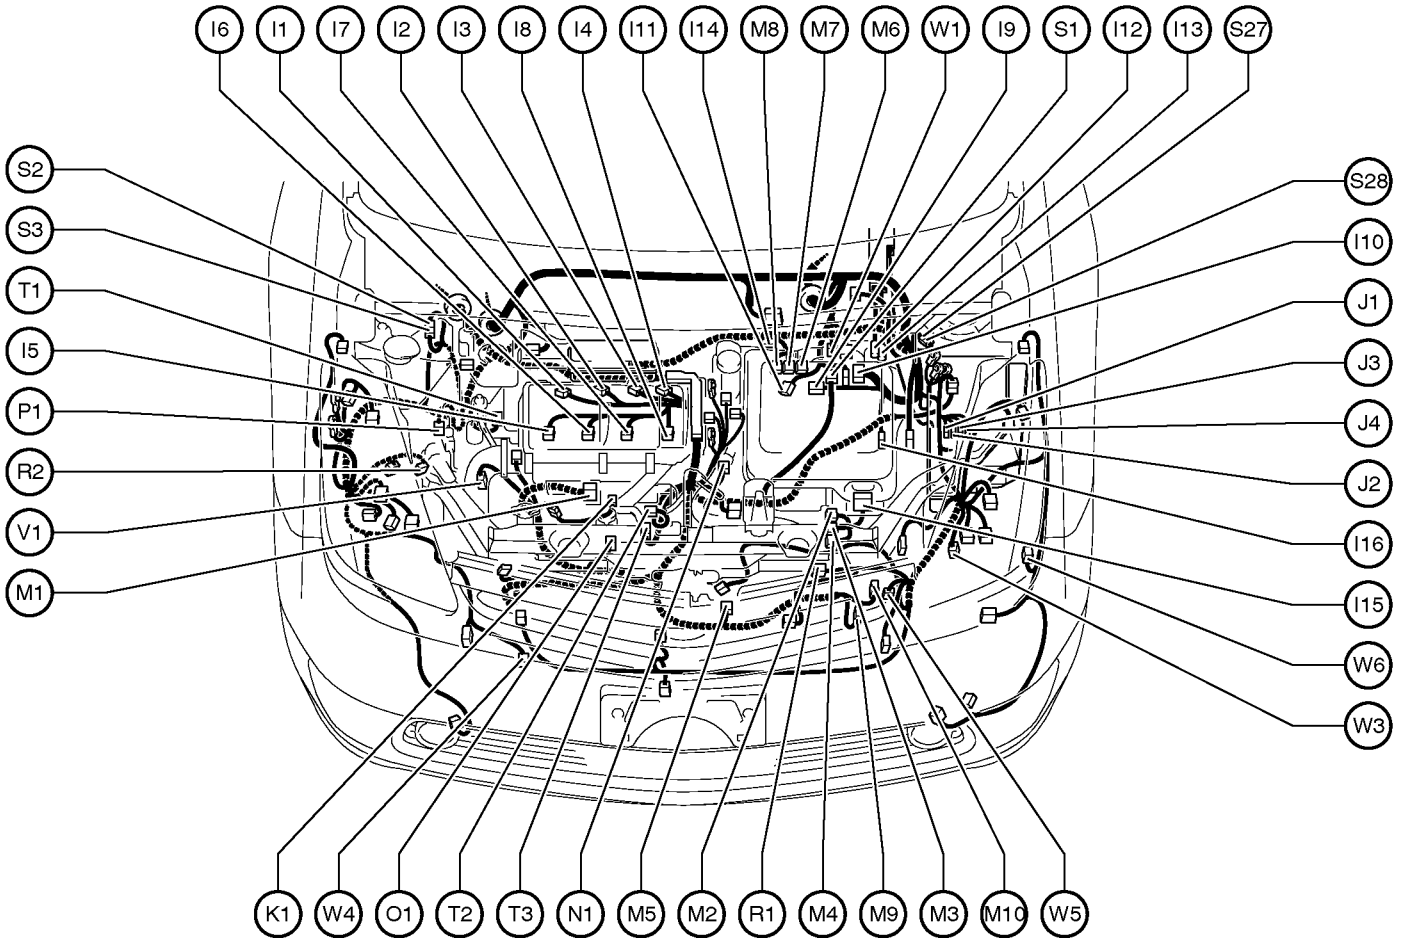

- I 1 Ignition Coil and Igniter No.1
- I 2 Ignition Coil and Igniter No.2
- I 3 Ignition Coil and Igniter No.3
- I 4 Ignition Coil and Igniter No.4
- I 5 Injector No.1
- I 6 Injector No.2
- I 7 Injector No.3
- I 8 Injector No.4
- I 9 Inverter
- I 10 Inverter
- I 11 Inverter
- I 12 Inverter
- I 13 Inverter
- I 14 Inverter
- I 15 Inverter
- I 16 Inverter

- J 1 Junction Connector
- J 2 Junction Connector
- J 3 Junction Connector
- J 4 Junction Connector

- K 1 Knock Sensor

- M 1 Mass Air Flow Meter
- M 2 Motor Generator No.1
- M 3 Motor Generator No.1
- M 4 Motor Generator No.1
- M 5 Motor Generator No.1
- M 6 Motor Generator No.2
- M 7 Motor Generator No.2

- M 8 Motor Generator No.2
- M 9 Motor Generator No.2
- M10 Motor Generator No.2

- N 1 Noise Filter (Ignition)

- O 1 Oil Pressure SW

- P 1 Pressure SW

- R 1 Radiator Fan Motor
- R 2 Rear Washer Motor

- S 1 Shift Control Actuator
- S 2 Short Connector
- S 3 Short Connector
- S27 Short Connector (Water Pump)
- S28 Short Connector (Water Pump)


- T 1 Theft Deterrent Horn
- T 2 Throttle Control Motor
- T 3 Throttle Position Sensor

- V 1 VSV (EVAP)

- W 1 Water Pump Motor (A/C)
- W 3 Water Pump Motor (Inverter)
- W 4 Water Temp. SW
- W 5 Water Valve
- W 6 Wireless Door Lock Buzzer


# G ELECTRICAL WIRING ROUTING

## Position of Parts in Instrument Panel

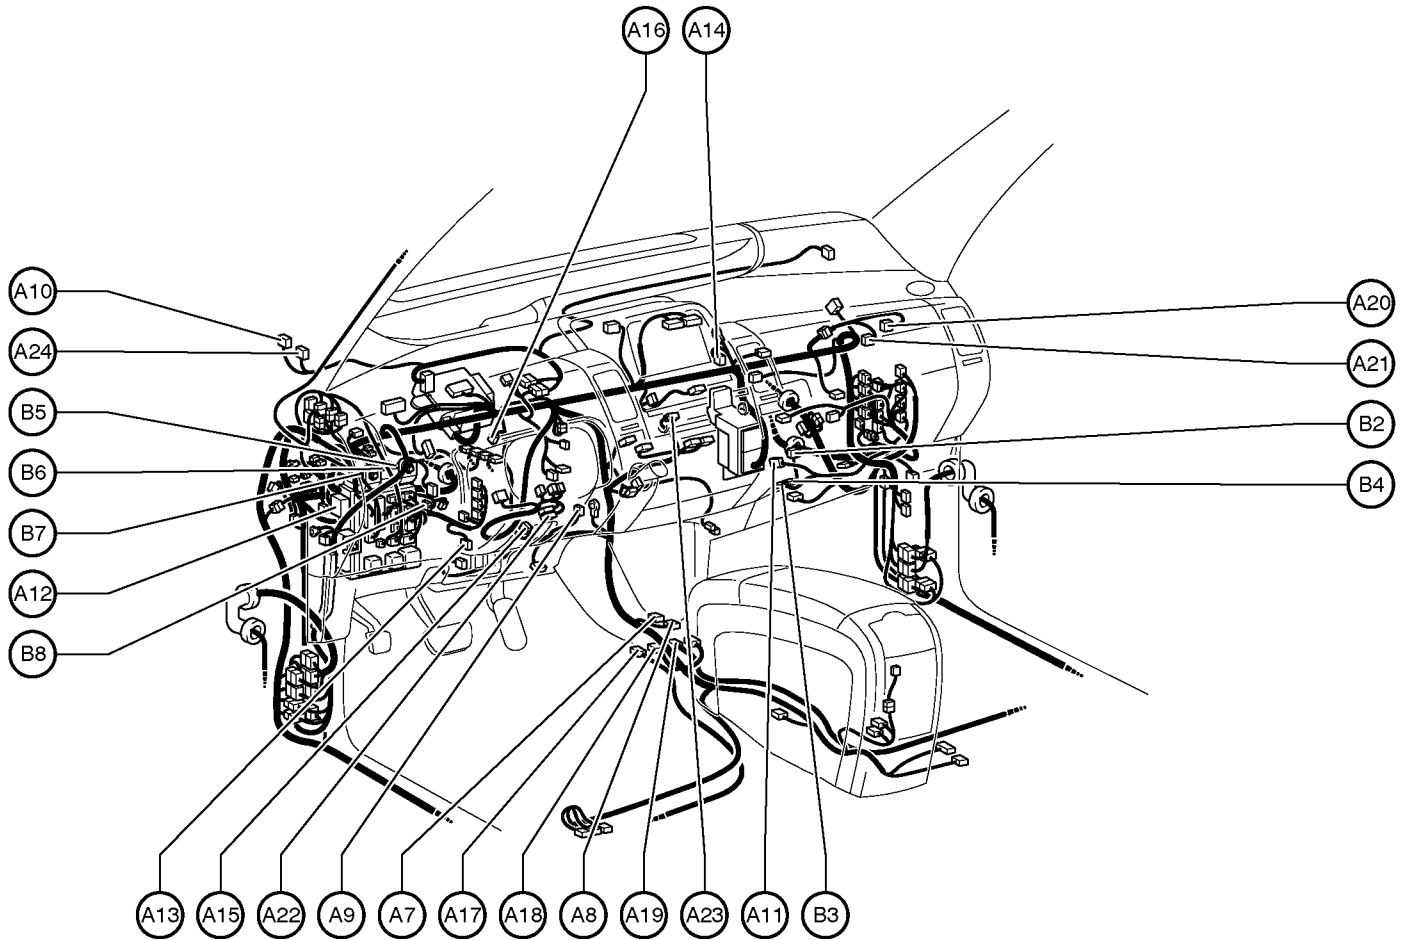

- |   |                               |
|---|-------------------------------|
| A 7 A/C Control Assembly                                | B 2 Blower Motor              |
| A 8 A/C Control Assembly                                | B 3 Blower Motor Controller   |
| A 9 A/C Room Temp. Sensor                               | B 4 Blower Motor Controller   |
| A10 A/C Solar Sensor                                    | B 5 Body ECU                  |
| A11 A/C Thermistor                                      | B 6 Body ECU                  |
| A12 ACC Relay   | B 7 Body ECU                  |
| A13 Accel Position Sensor                               | B 8 Brake Pedal Stroke Sensor |
| A14 Air Inlet Control Servo Motor                       |                               |
| A15 Air Mix Control Servo Motor                         |                               |
| A16 Air Vent Mode Control Servo Motor                   |                               |
| A17 Airbag Sensor Assembly                              |                               |
| A18 Airbag Sensor Assembly                              |                               |
| A19 Airbag Sensor Assembly                              |                               |
| A20 Airbag Squib (Front Passenger Airbag Assembly No.1) |                               |
| A21 Airbag Squib (Front Passenger Airbag Assembly No.2) |                               |
| A22 Airbag Squib (Steering Wheel Pad)                   |                               |
| A23 Antenna Amplifier                                   |                               |
| A24 Automatic Light Control Sensor                      |                               |

## Position of Parts in Instrument Panel

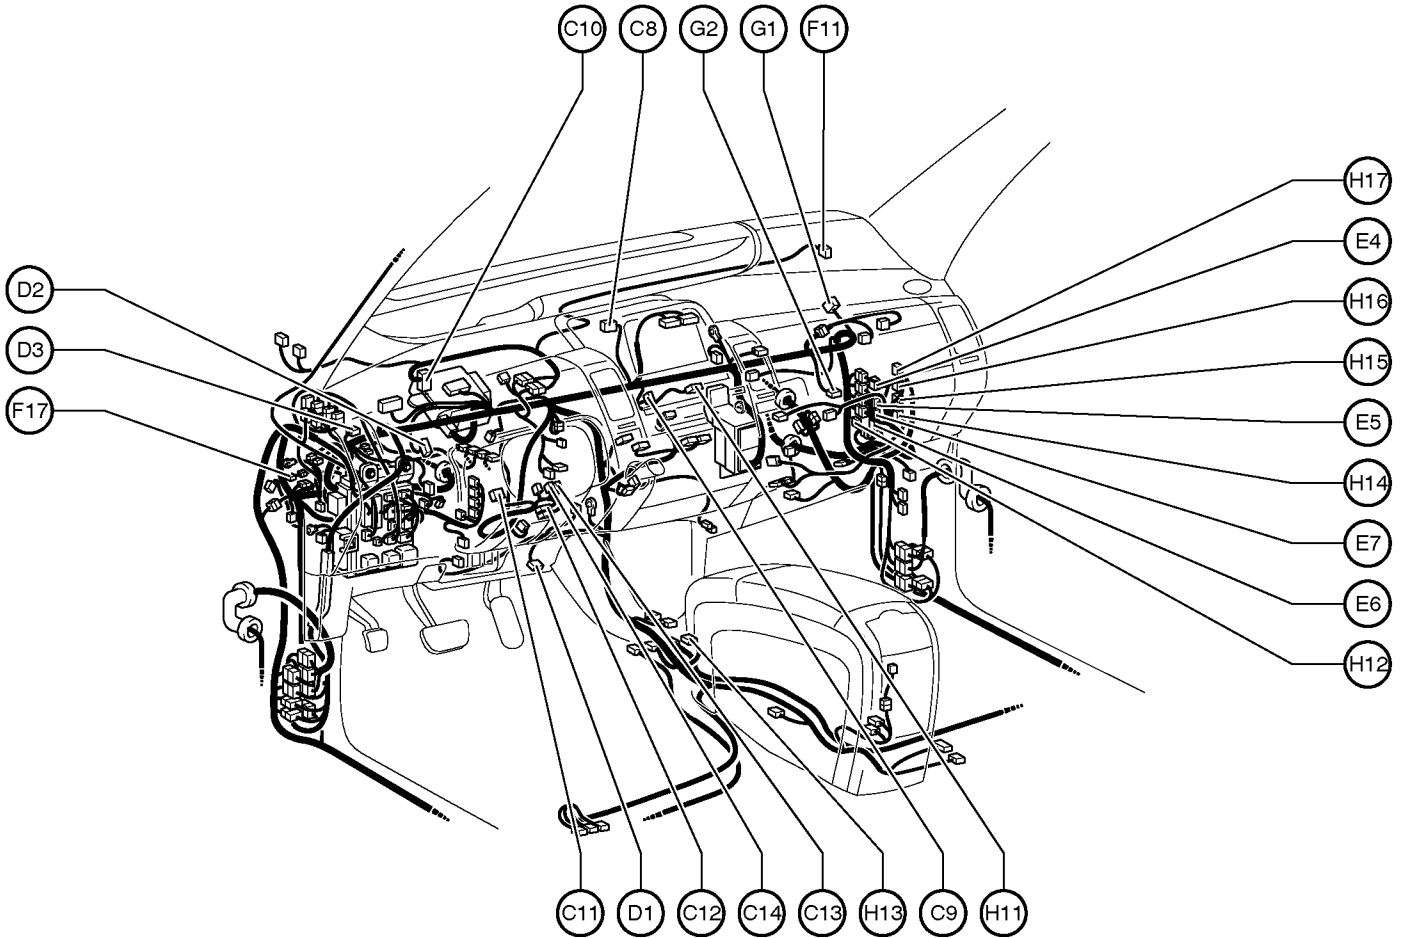

C 8 Center Speaker  
 C 9 Clock  
 C10 Combination Meter  
 C11 Combination SW  
 C12 Combination SW  
 C13 Combination SW  
 C14 Combination SW

D 1 Data Link Connector 3  
 D 2 Daytime Running Light Relay  
 D 3 Diode (Daytime Running Light)

E 4 Engine Control Module  
 E 5 Engine Control Module  
 E 6 Engine Control Module  
 E 7 Engine Control Module

F 11 Front Passenger Seat Belt Warning Light  
 F 17 Fuse Holder


G 1 Gateway ECU  
 G 2 Glove Box Light

H 11 Hazard SW  
 ODO/TRIP SW  
 H12 Headlight Beam Level Control ECU  
 H13 Heated Oxygen Sensor (Bank 1 Sensor 2)  
 H14 Hybrid Vehicle Control ECU  
 H15 Hybrid Vehicle Control ECU  
 H16 Hybrid Vehicle Control ECU  
 H17 Hybrid Vehicle Control ECU



# G ELECTRICAL WIRING ROUTING


## Position of Parts in Instrument Panel

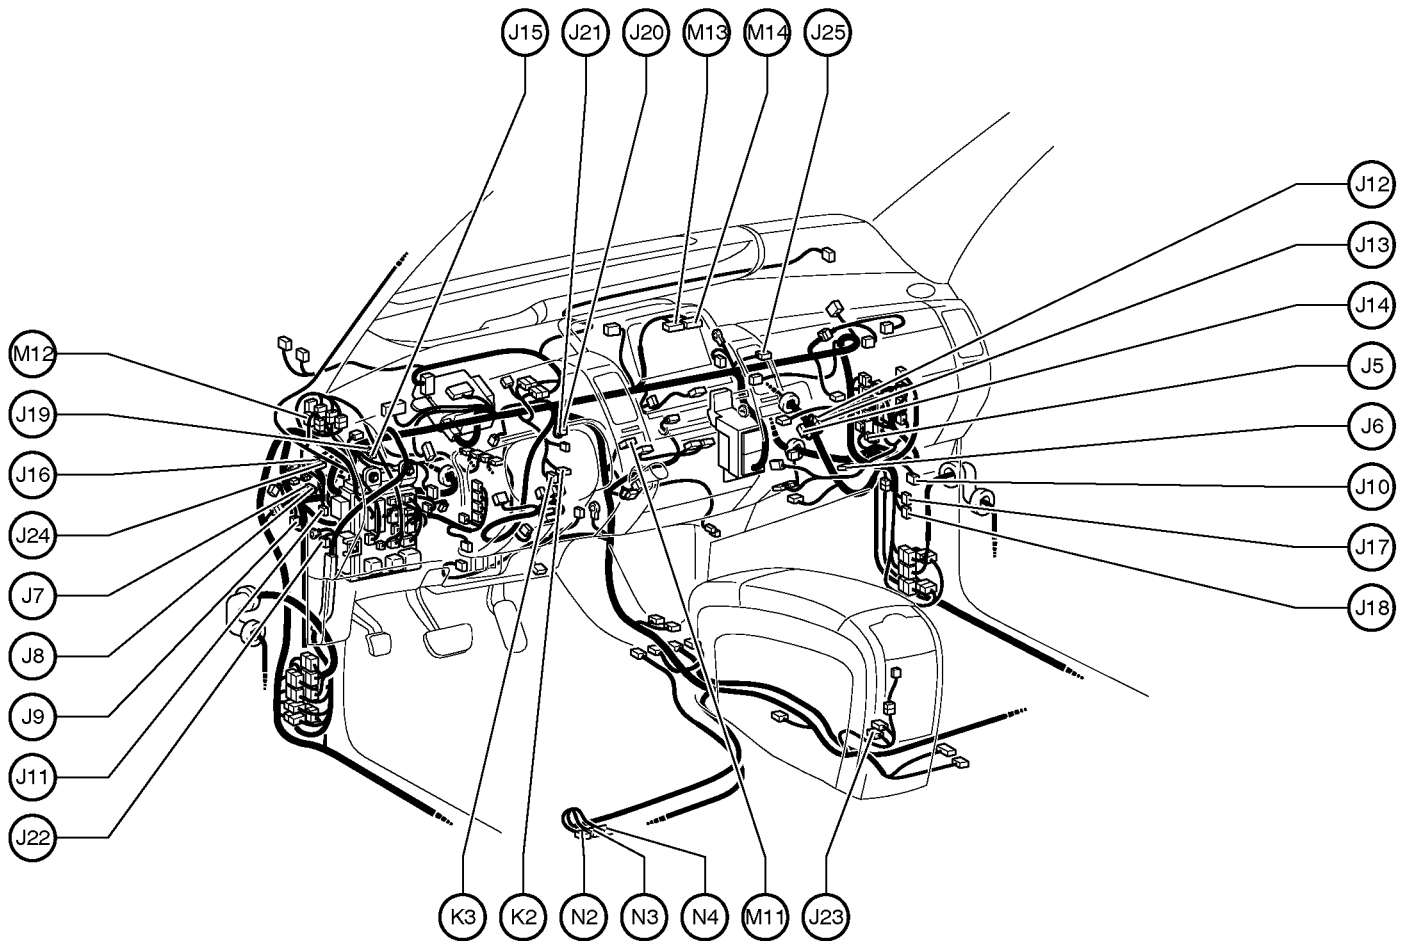

- J 5 Junction Connector
- J 6 Junction Connector
- J 7 Junction Connector
- J 8 Junction Connector
- J 9 Junction Connector
- J 10 Junction Connector
- J 11 Junction Connector
- J 12 Junction Connector
- J 13 Junction Connector
- J 14 Junction Connector
- J 15 Junction Connector
- J 16 Junction Connector
- J 17 Junction Connector
- J 18 Junction Connector
- J 19 Junction Connector
- J 20 Junction Connector
- J 21 Junction Connector
- J 22 Junction Connector
- J 23 Junction Connector
- J 24 Junction Connector
- J 25 Junction Connector

- K 2 Key Slot
- K 3 Key Slot
- M11 Main SW
- M12 Mirror Heater Relay
- M13 Multi-Display
- M14 Multi-Display
- N 2 Navigation ECU
- N 3 Navigation ECU
- N 4 Navigation ECU

## Position of Parts in Instrument Panel

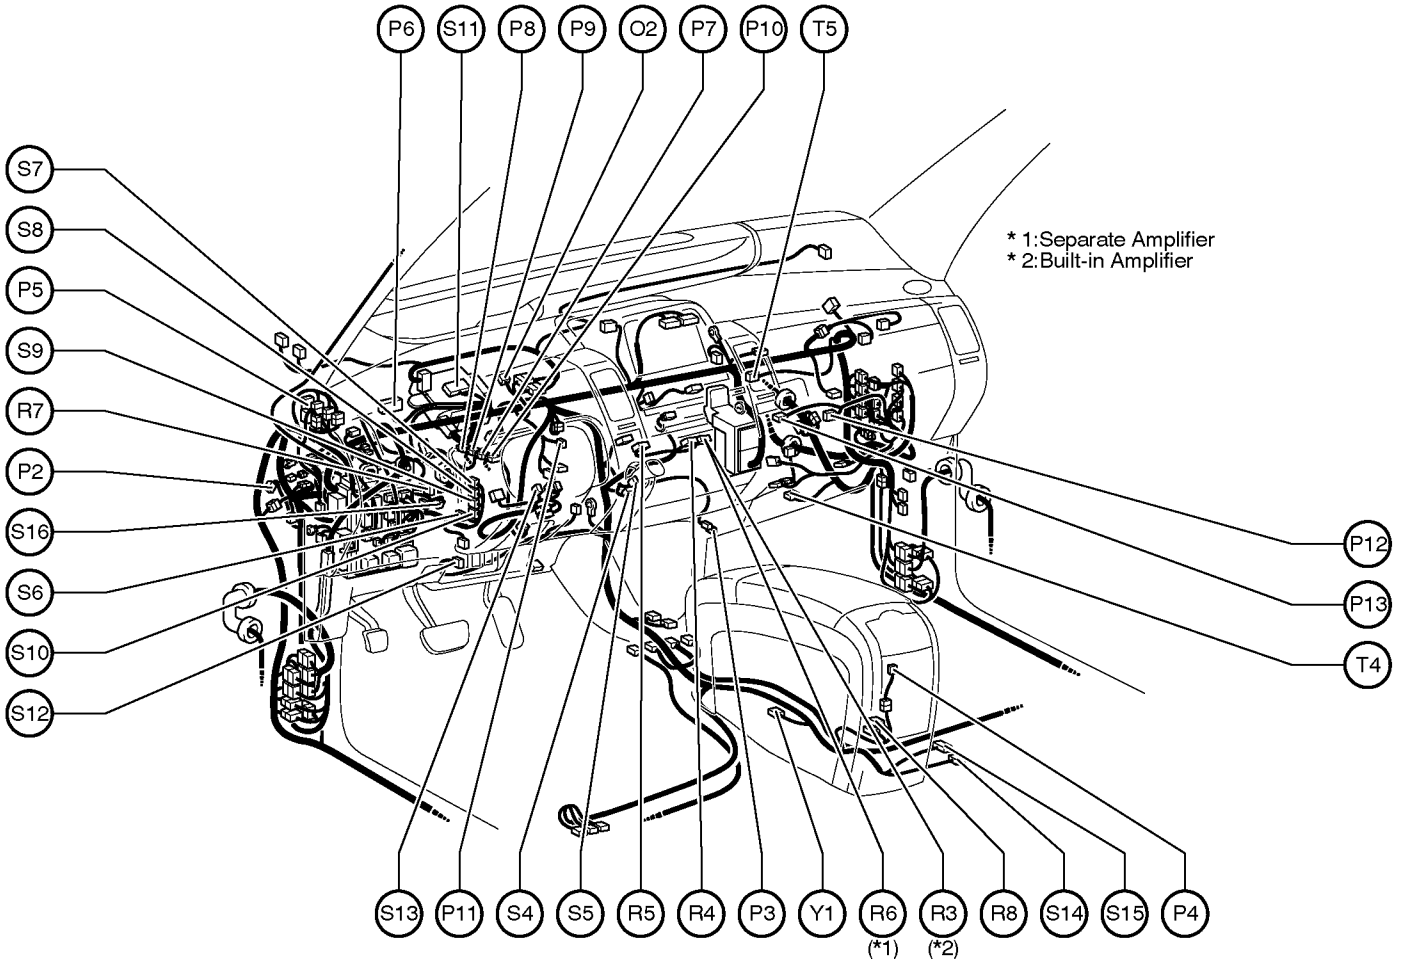

O 2 Option Connector (Glass Breakage Sensor)

P 2 Parking Brake SW

P 3 Power Outlet No.1

P 4 Power Outlet No.2

P 5 Power Outlet Relay

P 6 Power Source Control ECU

P 7 Power Steering ECU

P 8 Power Steering ECU

P 9 Power Steering Motor

P10 Power Steering Torque Sensor

P11 Power SW

P12 PTC Heater

P13 PTC Heater

R 3 Radio and Player

R 4 Radio and Player

R 5 Radio and Player

R 6 Radio and Player

R 7 Rheostat

R 8 Room Oscillator

S 4 Shift Lever Position Sensor

S 5 Shift Lever Position Sensor

S 6 Skid Control Buzzer

S 7 Skid Control ECU

S 8 Skid Control ECU

S 9 Skid Control ECU

S10 Skid Control ECU

S11 Smart Key ECU

S12 Smart Key System Cancel SW

S13 Steering Sensor

S14 Stereo Component Amplifier

S15 Stereo Component Amplifier

S16 Stop Light SW


T 4 Transmission Control ECU

T 5 Transponder Key Computer

Y 1 Yaw Rate Sensor

# G ELECTRICAL WIRING ROUTING

## Position of Parts in Body

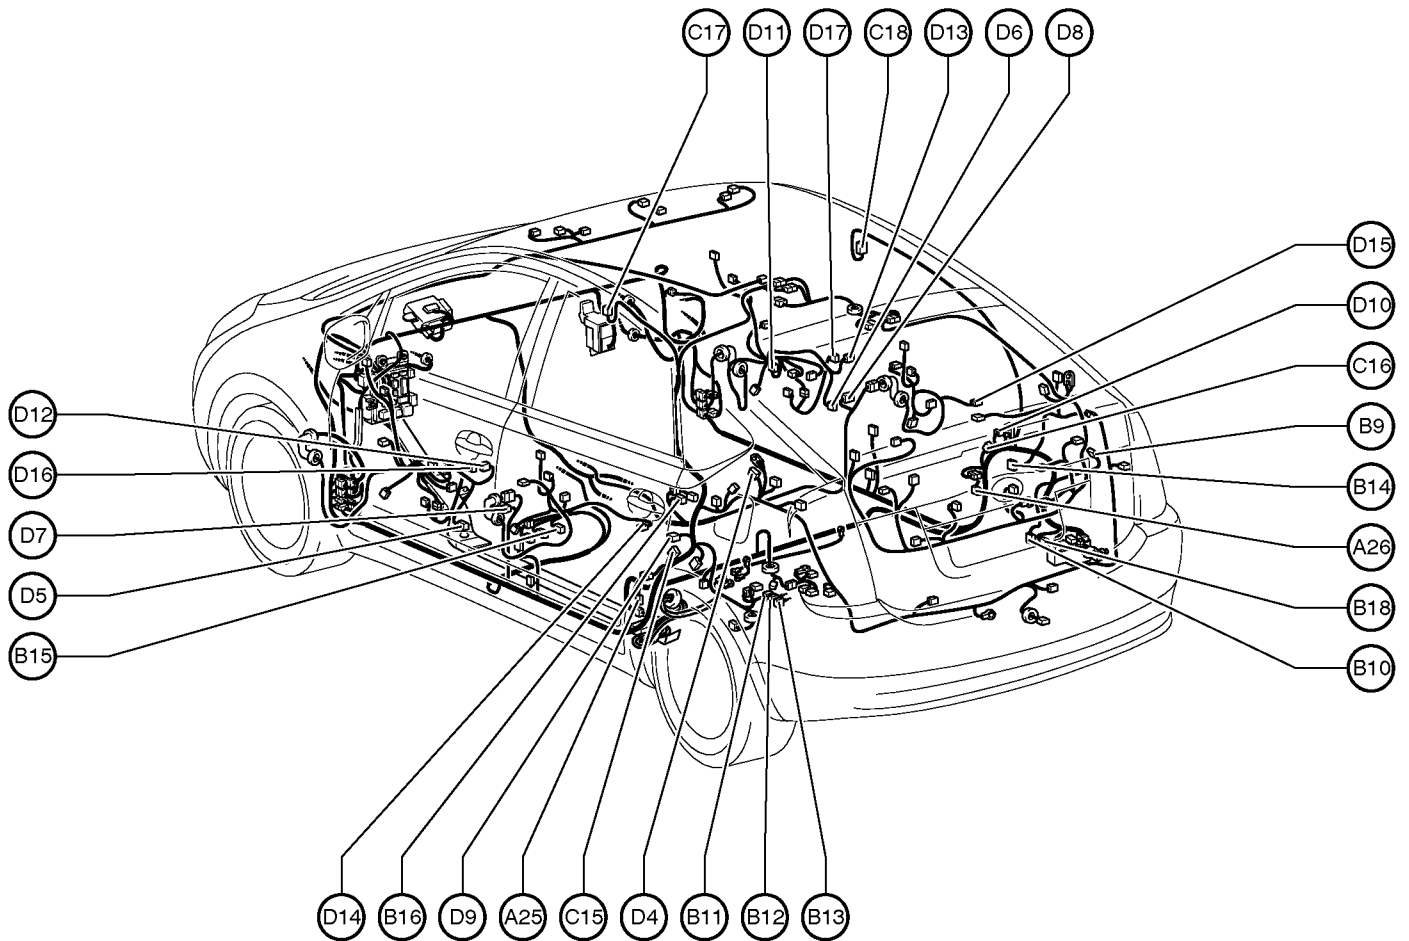


A25 ABS Speed Sensor Rear LH  
 A26 ABS Speed Sensor Rear RH

B 9 Battery Blower Motor  
 B10 Battery Blower Motor Controller  
 B11 Battery ECU  
 B12 Battery ECU  
 B13 Battery ECU  
 B14 Battery Fan Relay  
 B15 Buckle SW Front LH  
 B16 Buckle SW Front RH  
 B18 Brake Control Power Supply

C15 Curtain Shield Airbag Sensor LH  
 C16 Curtain Shield Airbag Sensor RH  
 C17 Curtain Shield Airbag Squib LH  
 C18 Curtain Shield Airbag Squib RH

D 4 Door Control Receiver  
 D 5 Door Courtesy Light Front LH  
 D 6 Door Courtesy Light Front RH  
 D 7 Door Courtesy SW Front LH  
 D 8 Door Courtesy SW Front RH  
 D 9 Door Courtesy SW Rear LH  
 D10 Door Courtesy SW Rear RH  
 D11 Door Lock Control SW Front RH  
 D12 Door Lock Motor Front LH  
 Door Unlock Detection SW Front LH  
 D13 Door Lock Motor Front RH  
 Door Unlock Detection SW Front RH  
 D14 Door Lock Motor Rear LH  
 Door Unlock Detection SW Rear LH  
 D15 Door Lock Motor Rear RH  
 Door Unlock Detection SW Rear RH  
 D16 Door Oscillator Front LH (w/ Sensor)  
 D17 Door Oscillator Front RH (w/ Sensor)

**Position of Parts in Body**

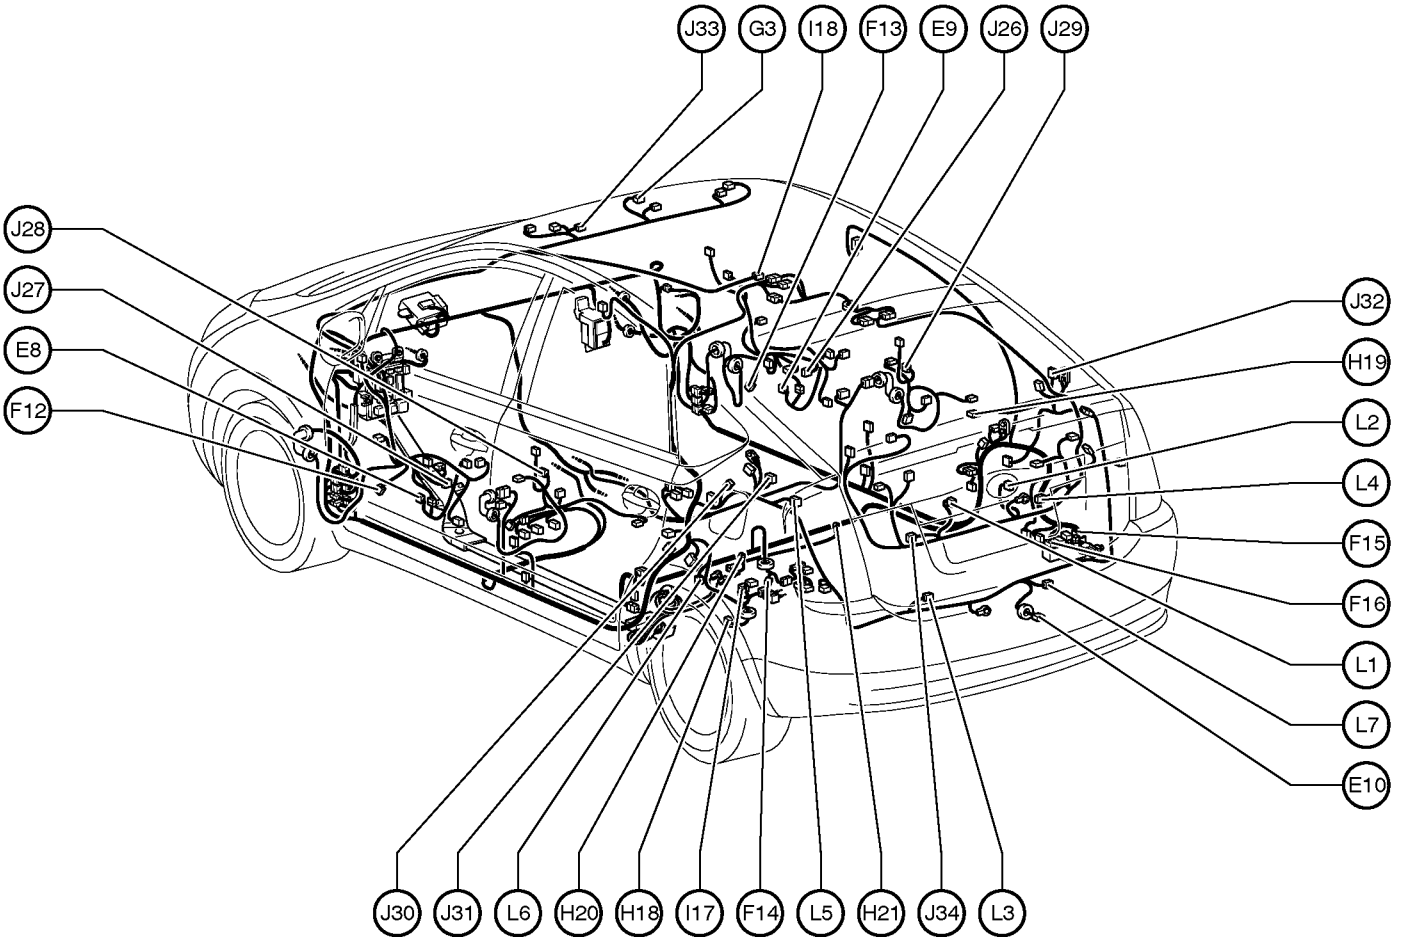

- E 8 Electrical Key Antenna (Driver's Side)
- E 9 Electrical Key Antenna (Front Passenger's Side)
- E10 Electrical Key Antenna (Luggage Compartment Door)

- F 12 Front Door Speaker LH
- F 13 Front Door Speaker RH
- F 14 Fuel Pump  
Fuel Sender
- F 15 Fusible Link Block
- F 16 Fusible Link Block

- G 3 Garage Door Opener  
Inner Mirror

- H18 Height Control Sensor
- H19 High Mounted Stop Light
- H20 Hybrid Vehicle Battery
- H21 Hybrid Vehicle Battery


- I 17 Inter Lock SW
- I 18 Interior Light

- J 26 Junction Connector
- J 27 Junction Connector
- J 28 Junction Connector
- J 29 Junction Connector
- J 30 Junction Connector
- J 31 Junction Connector
- J 32 Junction Connector
- J 33 Junction Connector
- J 34 Junction Connector

- L 1 License Plate Light LH
- L 2 License Plate Light RH
- L 3 Luggage Compartment Courtesy SW  
Luggage Compartment Door Opener Motor
- L 4 Luggage Compartment Door Lock SW  
Luggage Compartment Door Opener SW
- L 5 Luggage Compartment Light
- L 6 Luggage Oscillator (Inner)
- L 7 Luggage Oscillator (Outer)

# G ELECTRICAL WIRING ROUTING

## Position of Parts in Body

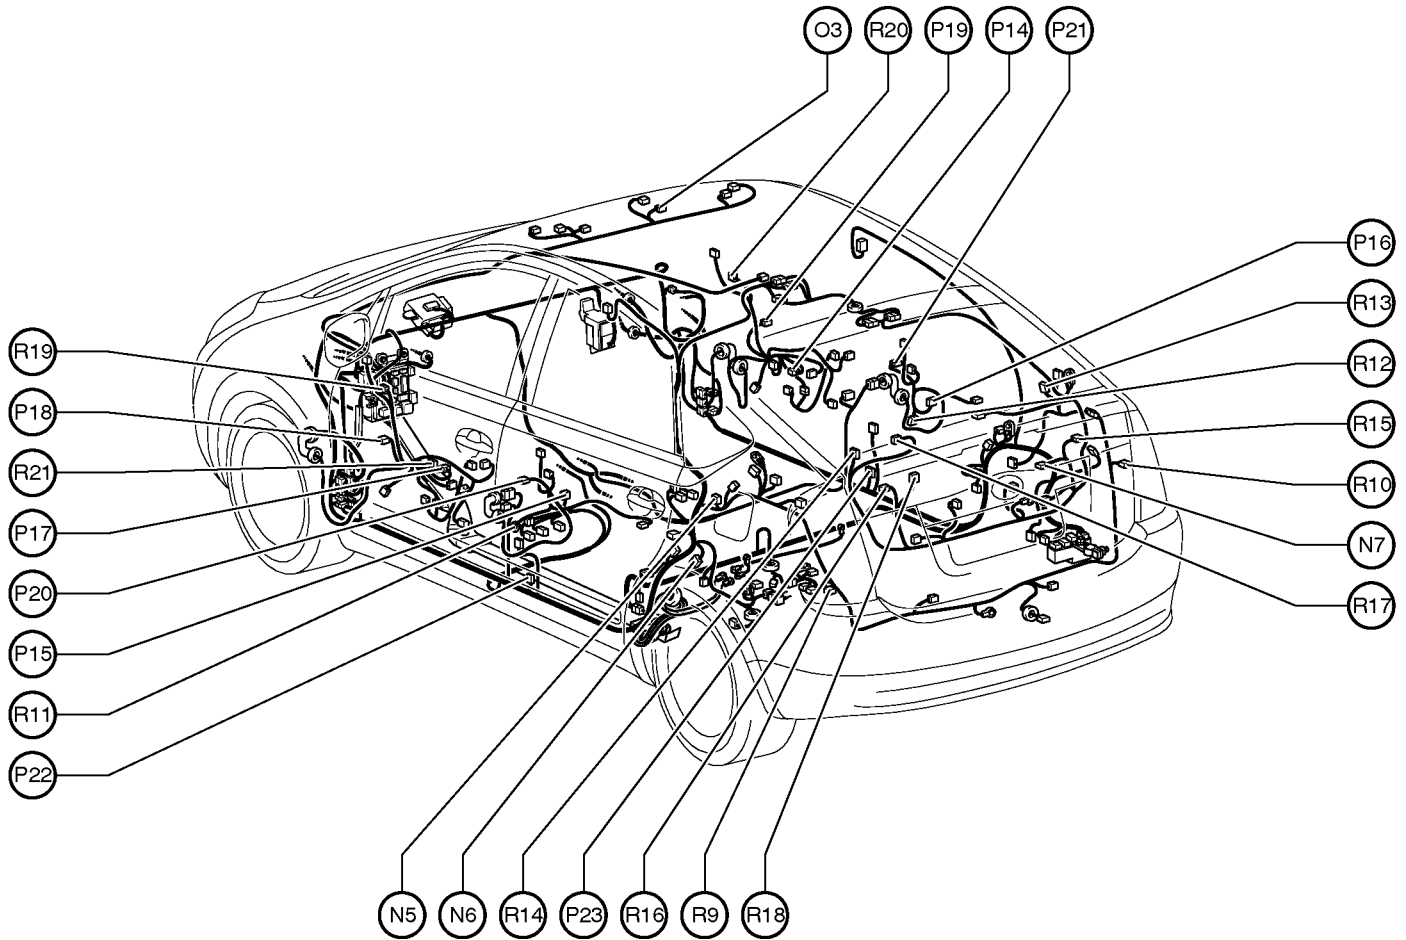


N 5 Noise Filter (High Mounted Stop Light)  
 N 6 Noise Filter (Rear Window Defogger)  
 N 7 Noise Filter (Rear Window Defogger)

O 3 Overhead J/B

P 14 Power Window Control SW Front RH  
 P 15 Power Window Control SW Rear LH  
 P 16 Power Window Control SW Rear RH  
 P 17 Power Window Master SW  
 P 18 Power Window Motor Front LH  
 P 19 Power Window Motor Front RH  
 P 20 Power Window Motor Rear LH  
 P 21 Power Window Motor Rear RH  
 P 22 Pretensioner LH  
 P 23 Pretensioner RH

R 9 Rear Combination Light LH  
 R 10 Rear Combination Light RH  
 R 11 Rear Door Speaker LH  
 R 12 Rear Door Speaker RH  
 R 13 Rear Window Defogger  
 R 14 Rear Window Defogger  
 R 15 Rear Window Defogger  
 R 16 Rear Window Defogger  
 R 17 Rear Wiper Motor  
 R 18 Rear Wiper Relay  
 R 19 Mirror Heater LH  
       Remote Control Mirror LH  
 R 20 Mirror Heater RH  
       Remote Control Mirror RH  
 R 21 Remote Control Mirror SW

## Position of Parts in Body

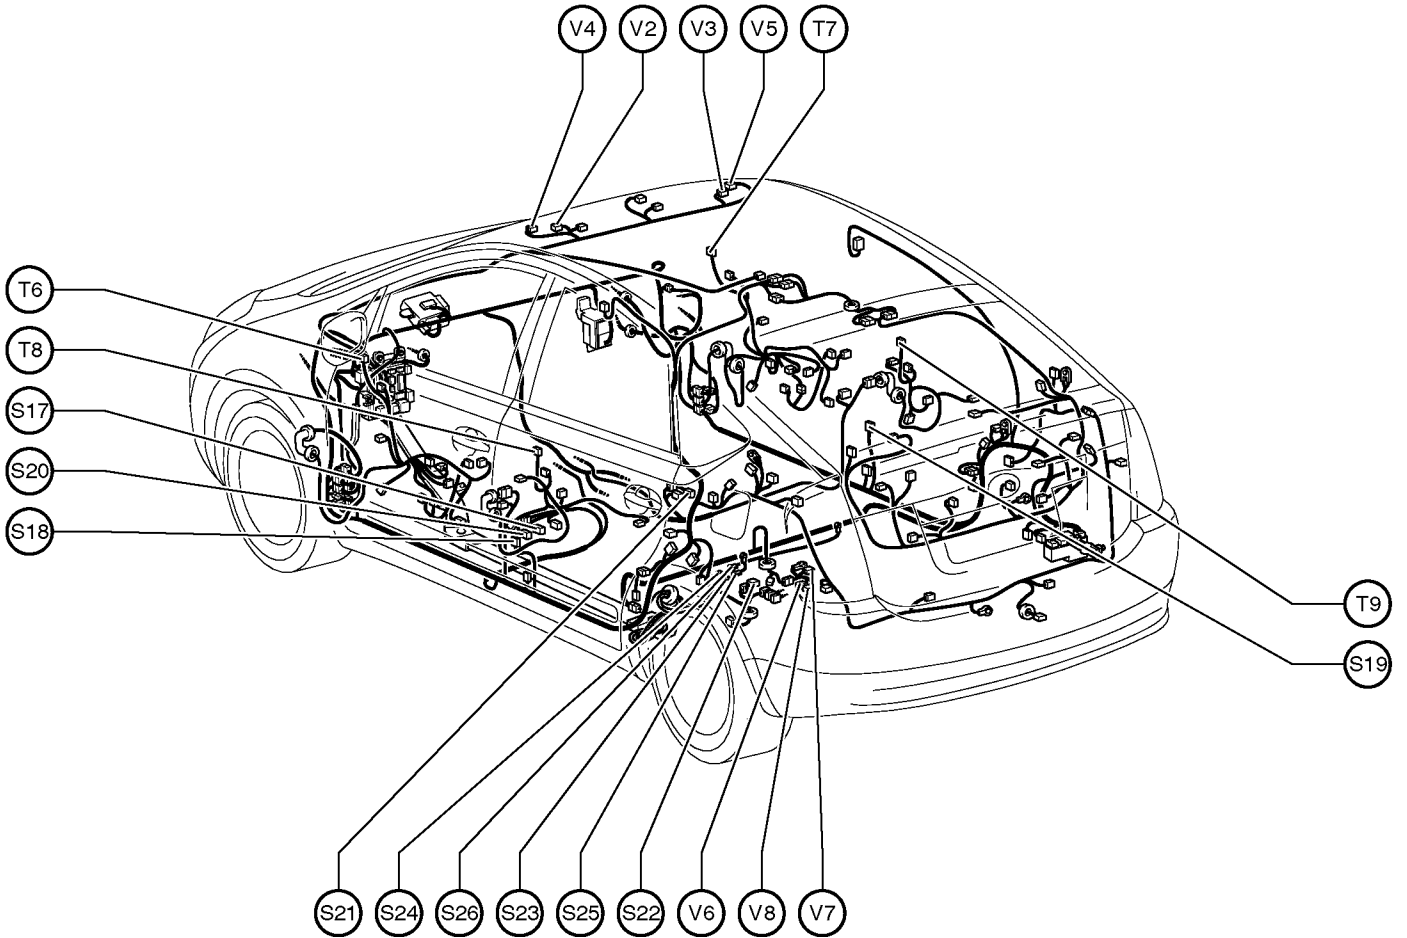


S17 Seat Position Airbag Sensor  
 S18 Side Airbag Sensor LH  
 S19 Side Airbag Sensor RH  
 S20 Side Airbag Squib LH  
 S21 Side Airbag Squib RH  
 S22 System Main Relay  
 S23 System Main Relay  
 S24 System Main Relay  
 S25 System Main Relay  
 S26 System Main Relay

T 6 Tweeter Front LH  
 T 7 Tweeter Front RH  
 T 8 Tweeter Rear LH  
 T 9 Tweeter Rear RH


V 2 Vanity Light LH  
 V 3 Vanity Light RH  
 V 4 Vanity Light SW LH  
 V 5 Vanity Light SW RH  
 V 6 Vapor Pressure Sensor  
 V 7 VSV (Canister Closed Valve)  
 V 8 VSV (Purge Flow Switching Valve)

# G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness  
 ▽ : Location of Ground Points

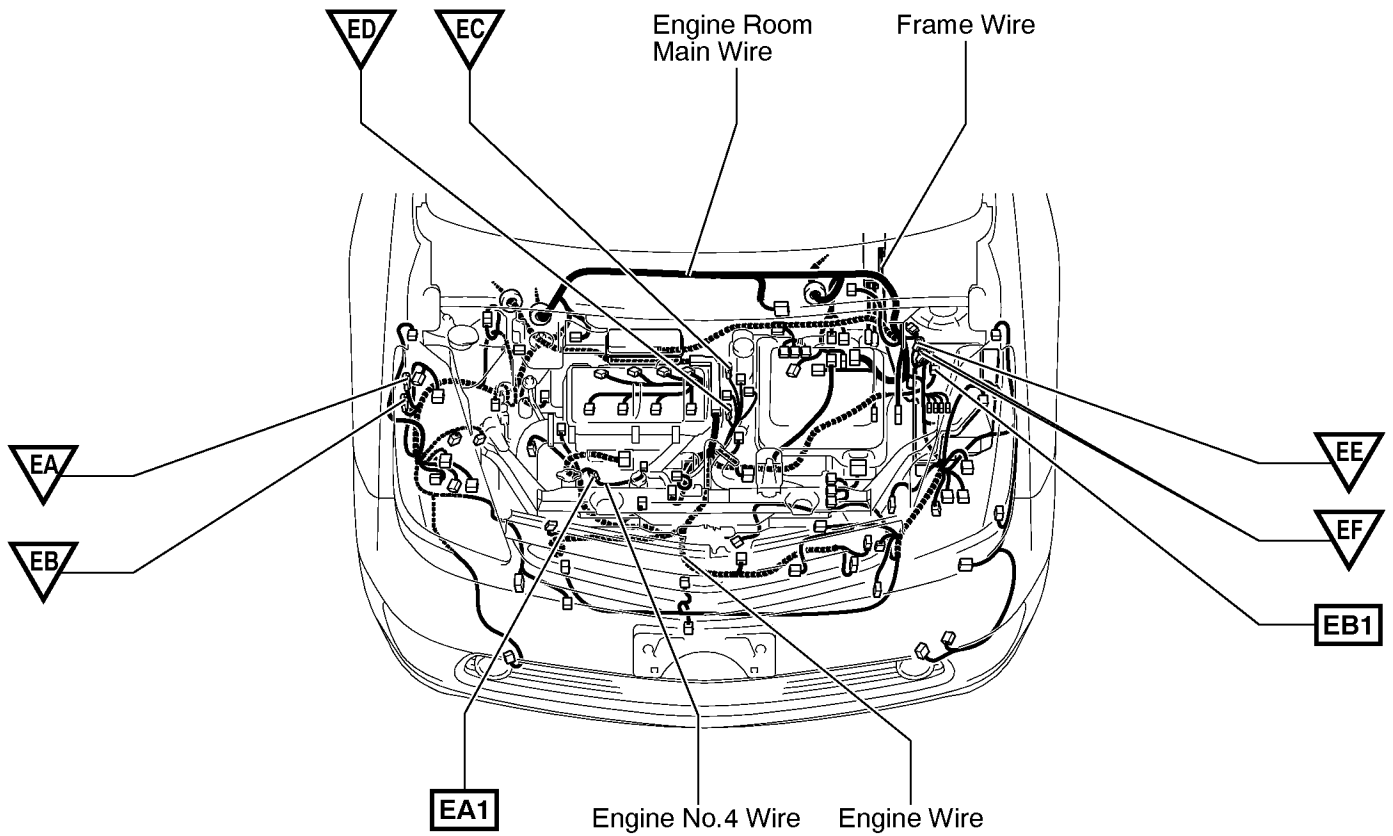

○ : Location of Splice Points

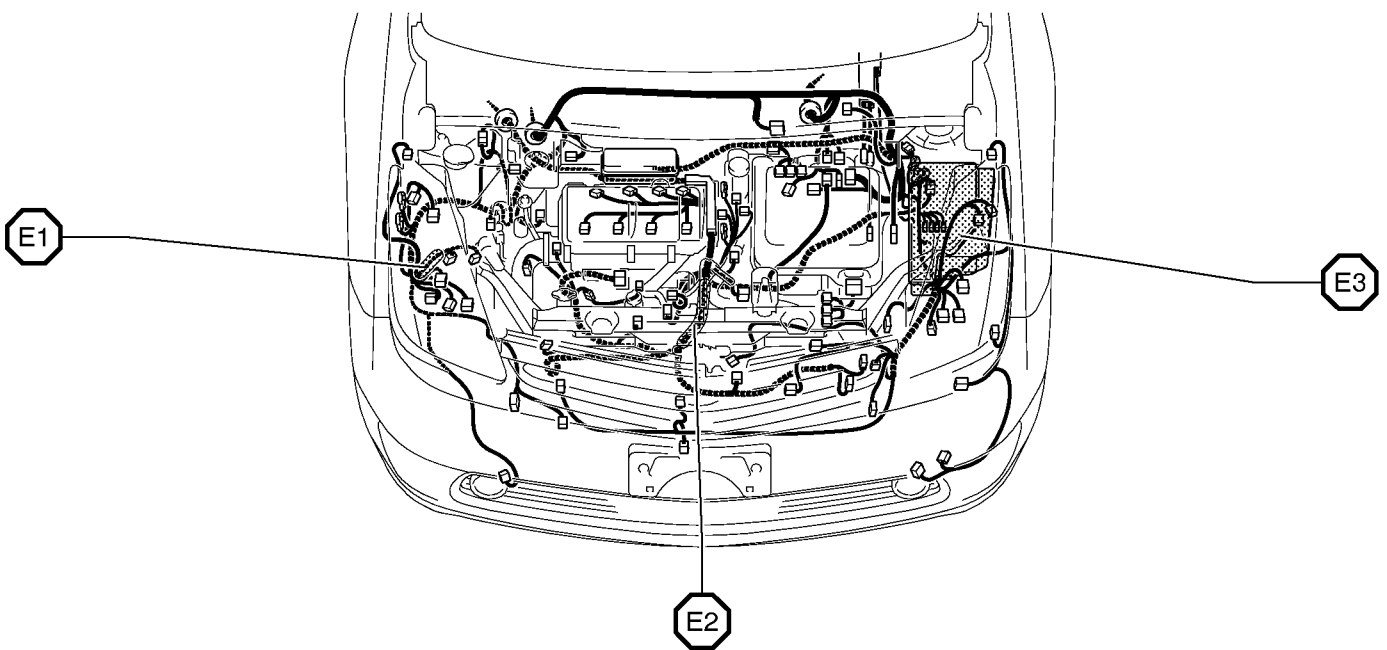

## Connector Joining Wire Harness and Wire Harness

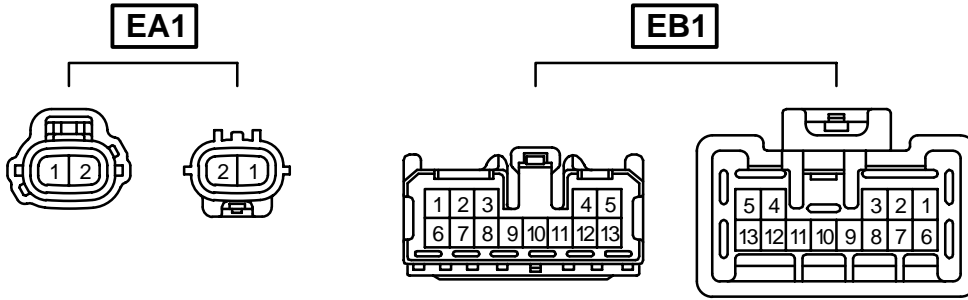


Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Wire and Engine No.4 Wire (Near the Radiator Fan)
EB1	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B)




# G ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

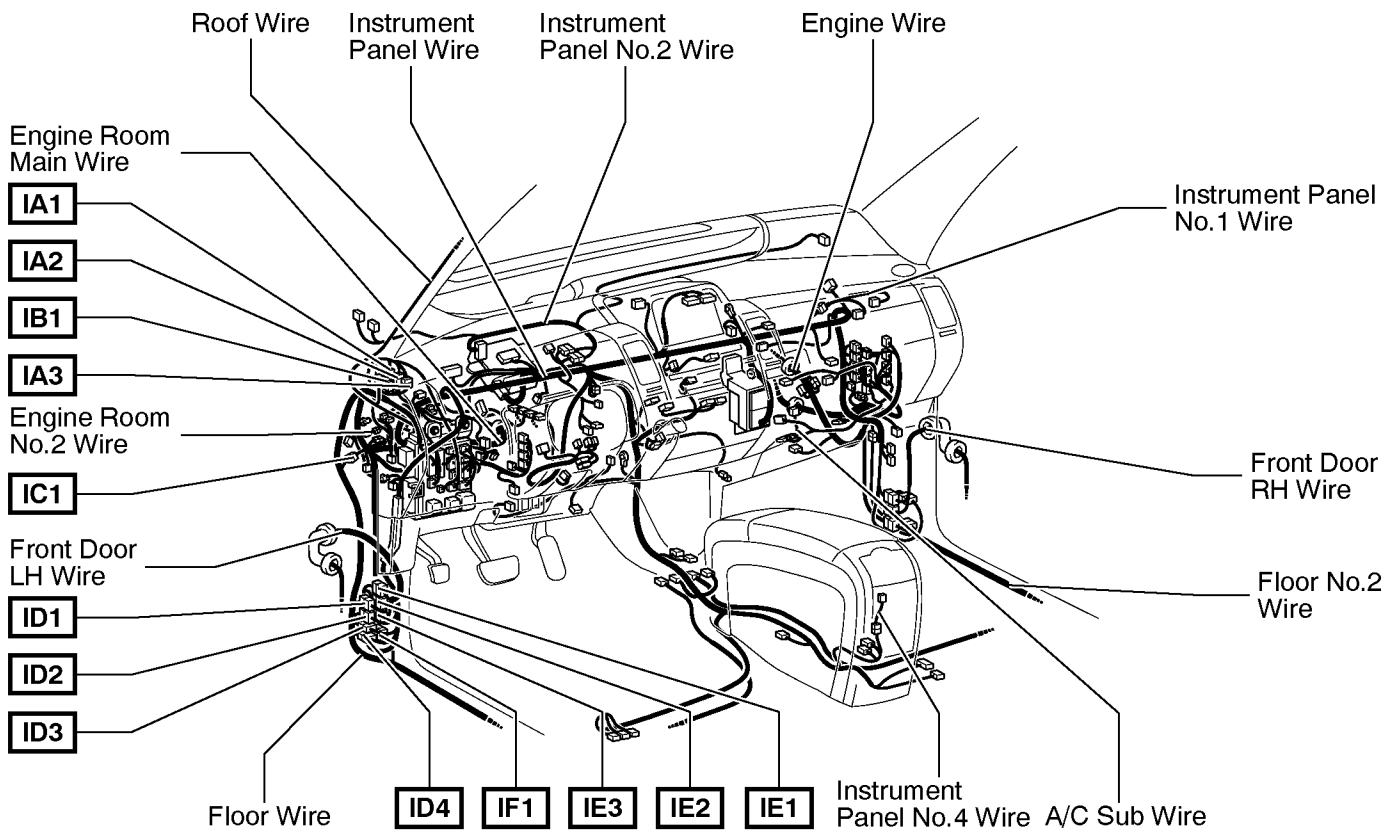

▽ : Location of Ground Points

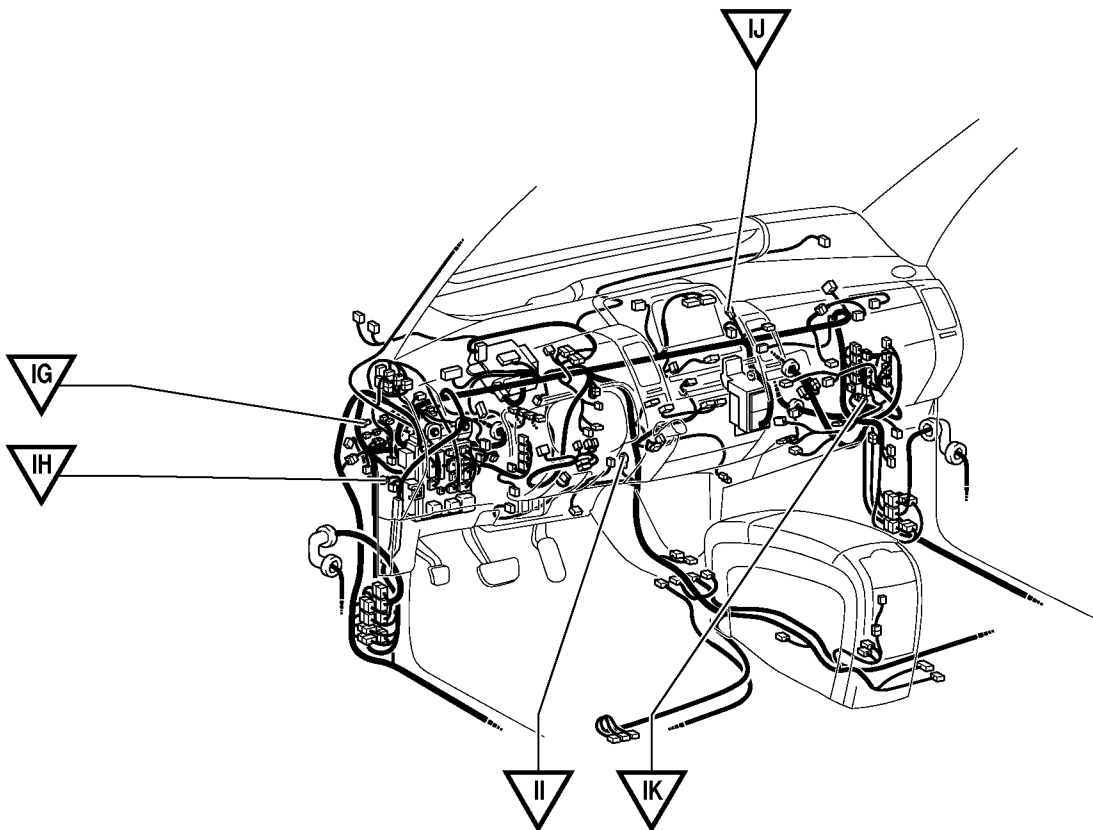


## Connector Joining Wire Harness and Wire Harness

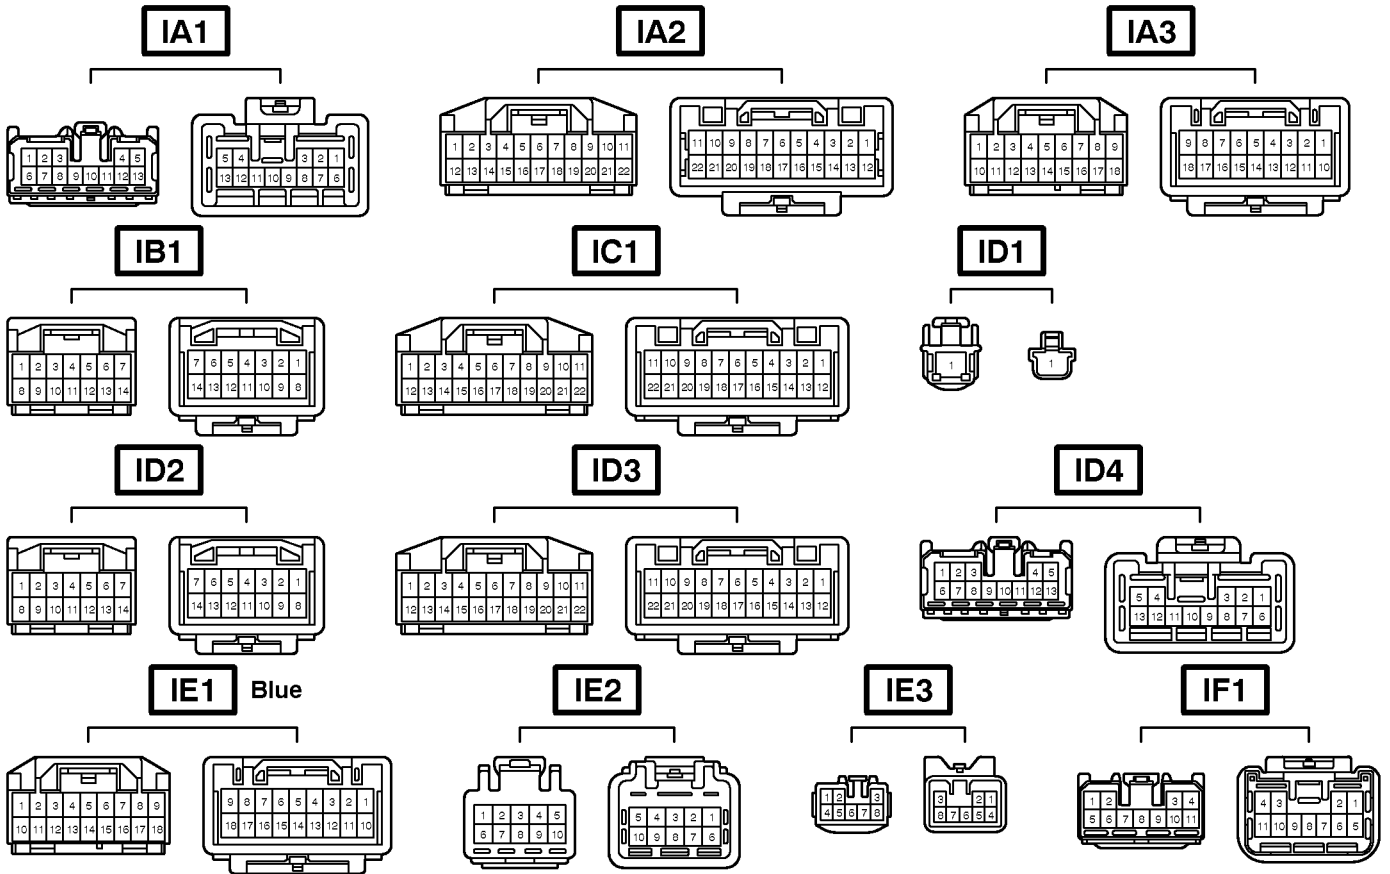


Code	Joining Wire Harness and Wire Harness (Connector Location)
IA1	
IA2	Engine Room Main Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)
IA3	
IB1	Roof Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)
IC1	Engine Room Main Wire and Floor Wire (Cowl Side Panel LH)
ID1	
ID2	Instrument Panel Wire and Floor Wire (Left Kick Panel)
ID3	
ID4	
IE1	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IE2	
IE3	
IF1	Floor Wire and Engine Room Main Wire (Left Kick Panel)

# G ELECTRICAL WIRING ROUTING


**□ : Location of Connector Joining Wire Harness and Wire Harness**

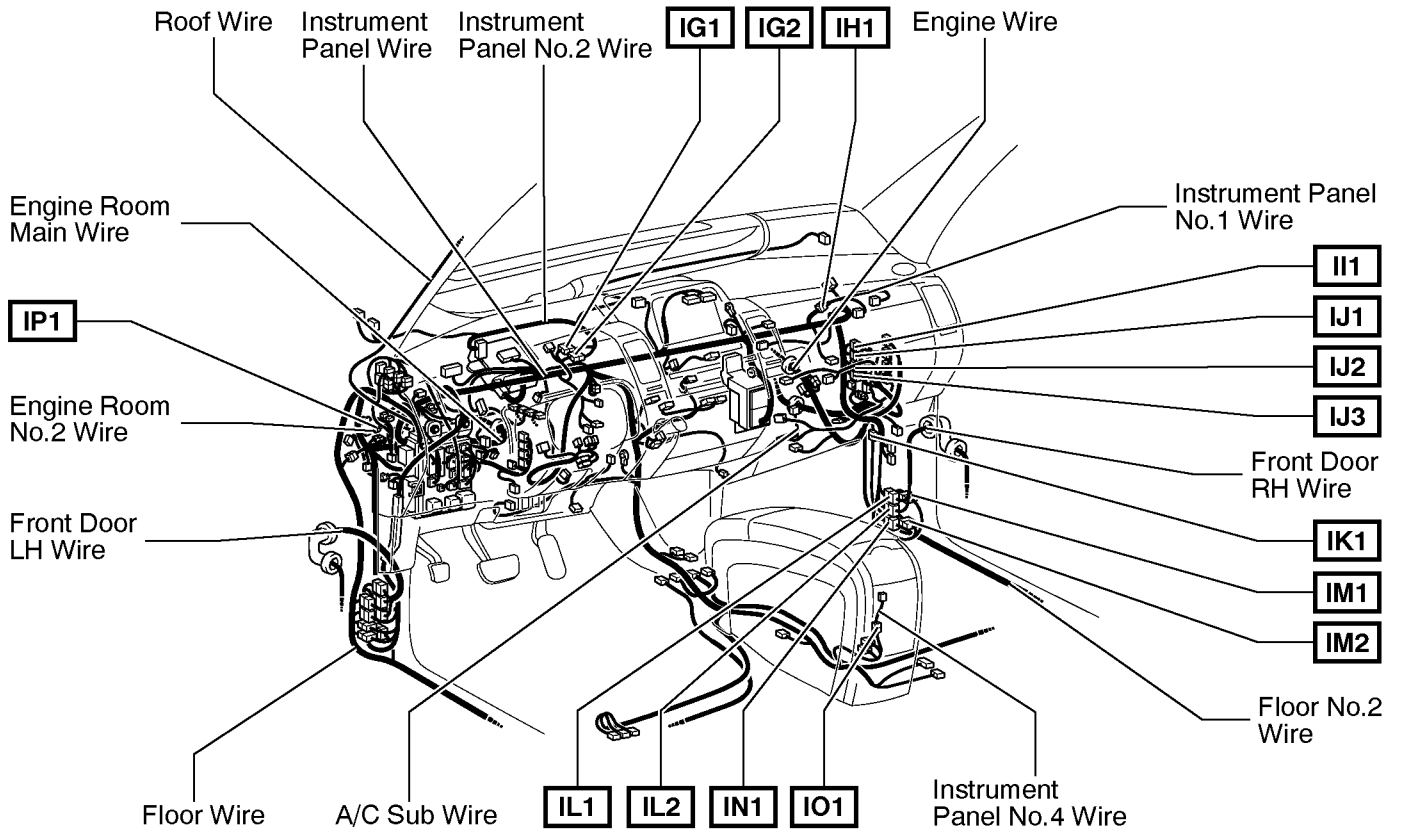

**○ : Location of Splice Points**

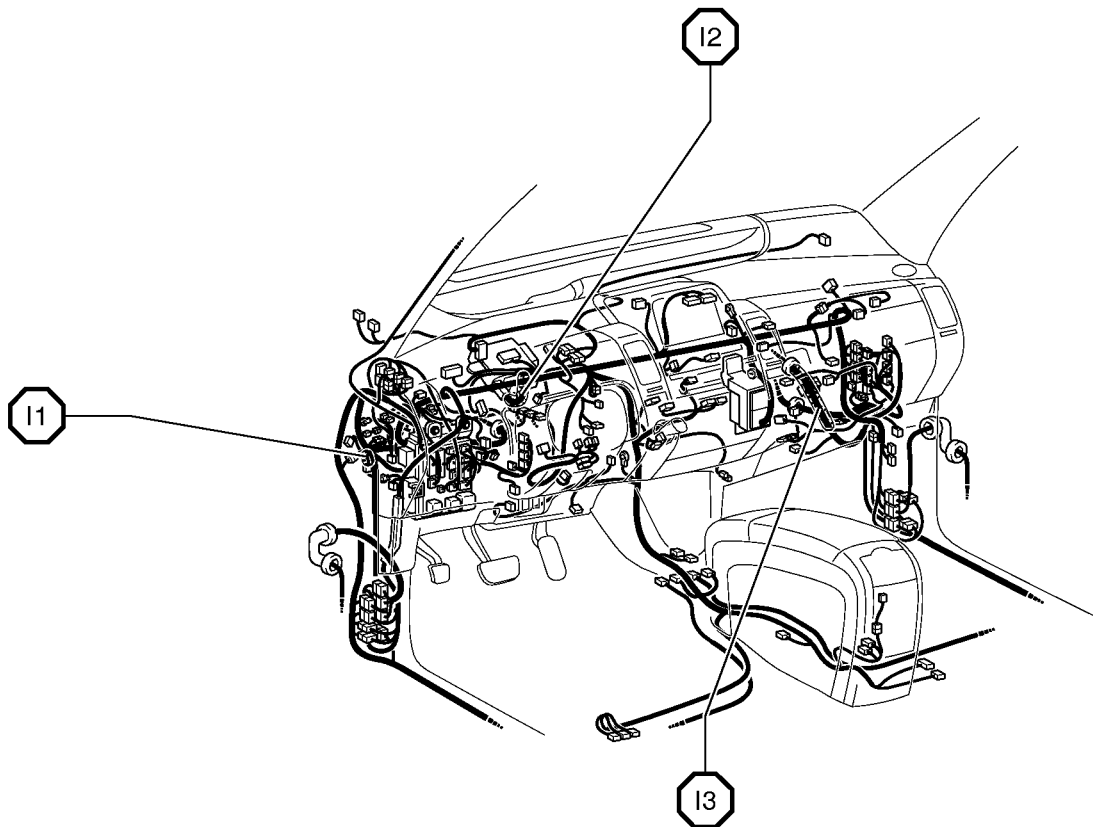


## Connector Joining Wire Harness and Wire Harness

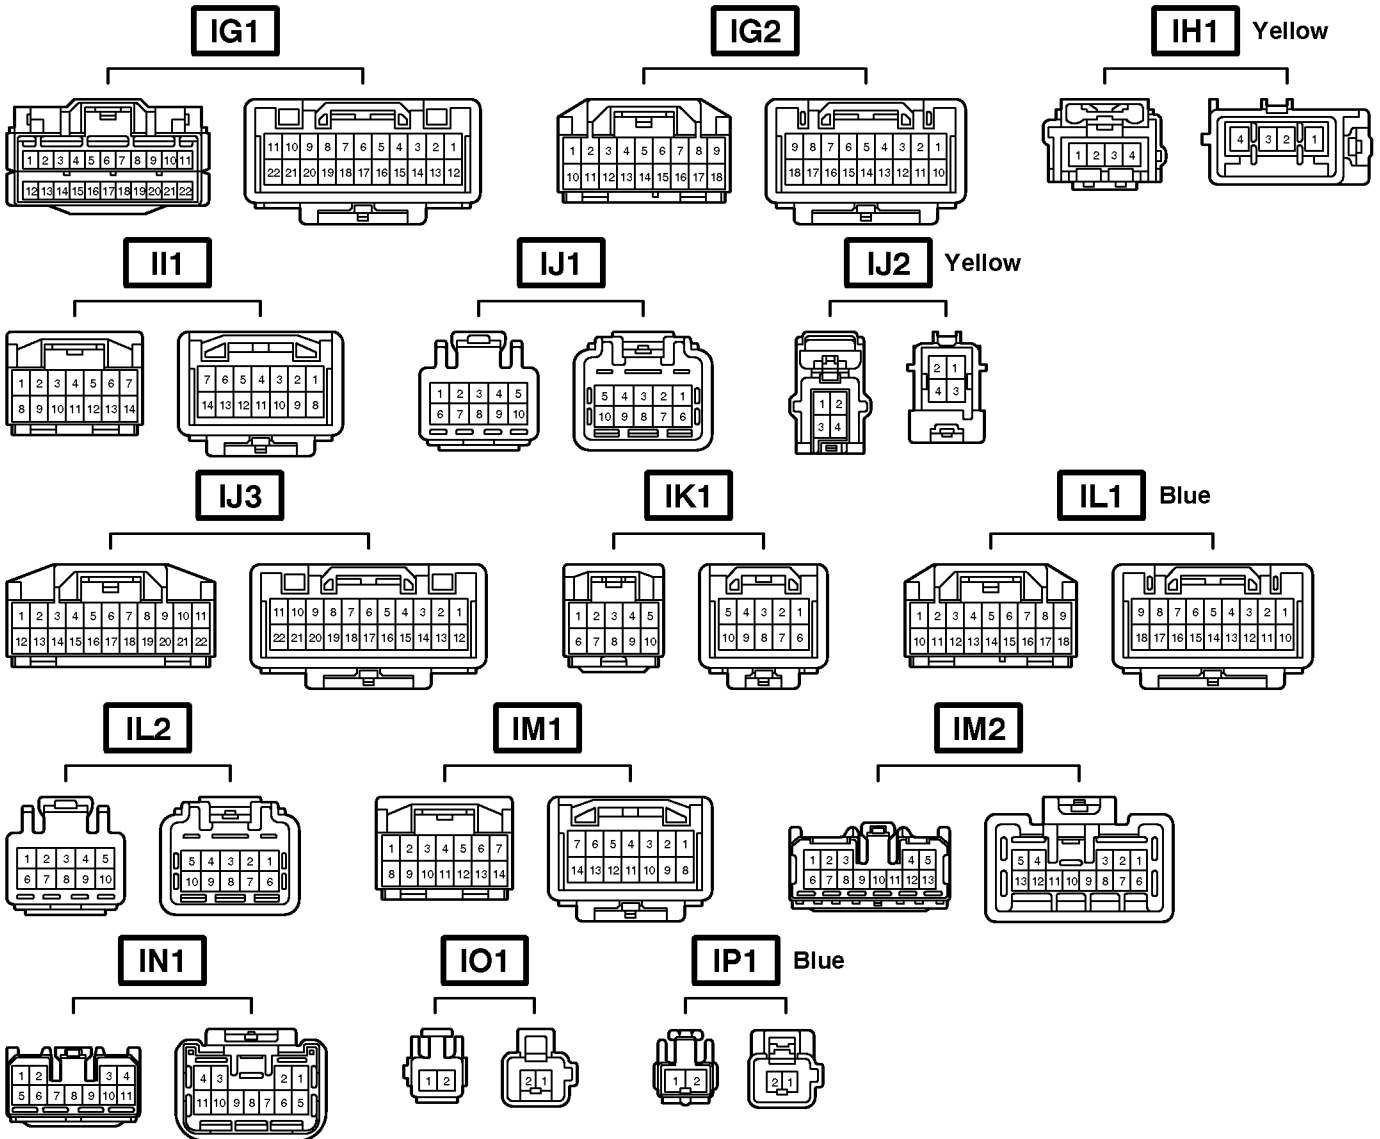


Code	Joining Wire Harness and Wire Harness (Connector Location)
IG1	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the Combination Meter)
IG2	Instrument Panel Wire and Instrument Panel No.1 Wire (Behind the Glove Box)
IH1	Instrument Panel Wire and Instrument Panel No.1 Wire (Behind the Glove Box)
II1	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
IJ1	Engine Room Main Wire and Instrument Panel Wire (Behind the Glove Box)
IJ2	Engine Room Main Wire and Instrument Panel Wire (Behind the Glove Box)
IJ3	Engine Room Main Wire and Instrument Panel Wire (Behind the Glove Box)
IK1	Engine Room Main Wire and Floor No.2 Wire (Cowl Side Panel RH)
IL1	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IL2	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IM1	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
IM2	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
IN1	Floor No.2 Wire and Engine Room Main Wire (Right Kick Panel)
IO1	Instrument Panel Wire and Instrument Panel No.4 Wire (Front Console Box LH)
IP1	Engine Room No.2 Wire and Engine Room Main Wire (Upper Parts of Front Body Pillar LH)

# G ELECTRICAL WIRING ROUTING


**□ : Location of Connector Joining Wire Harness and Wire Harness**

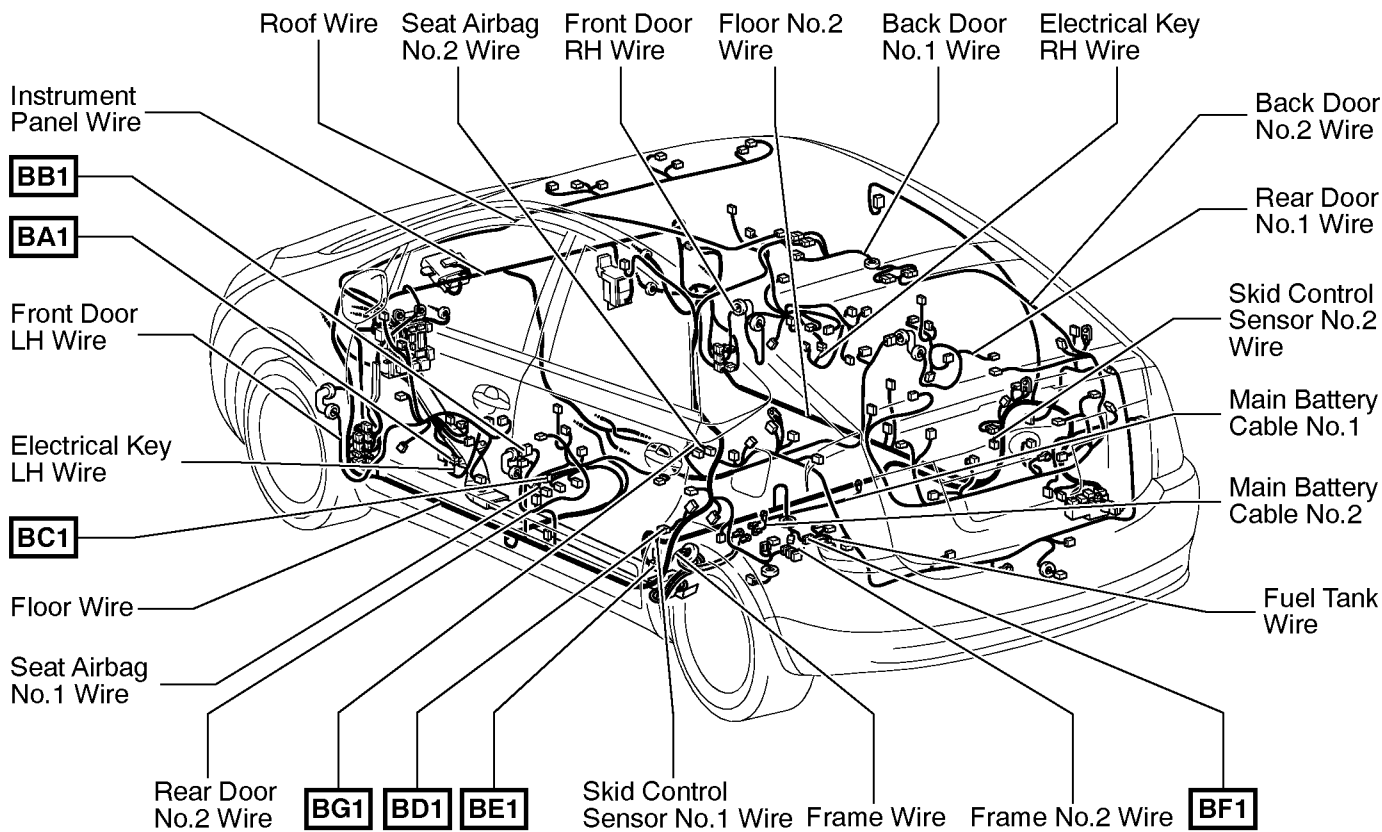

**▽ : Location of Ground Points**

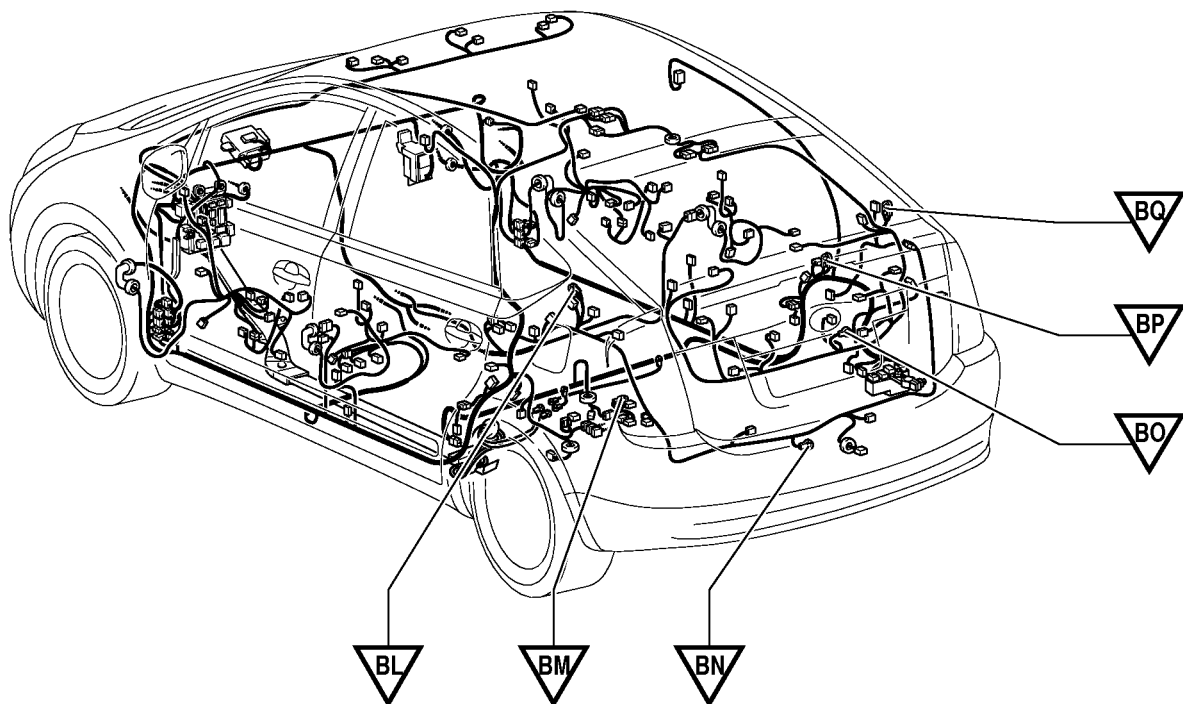


## Connector Joining Wire Harness and Wire Harness

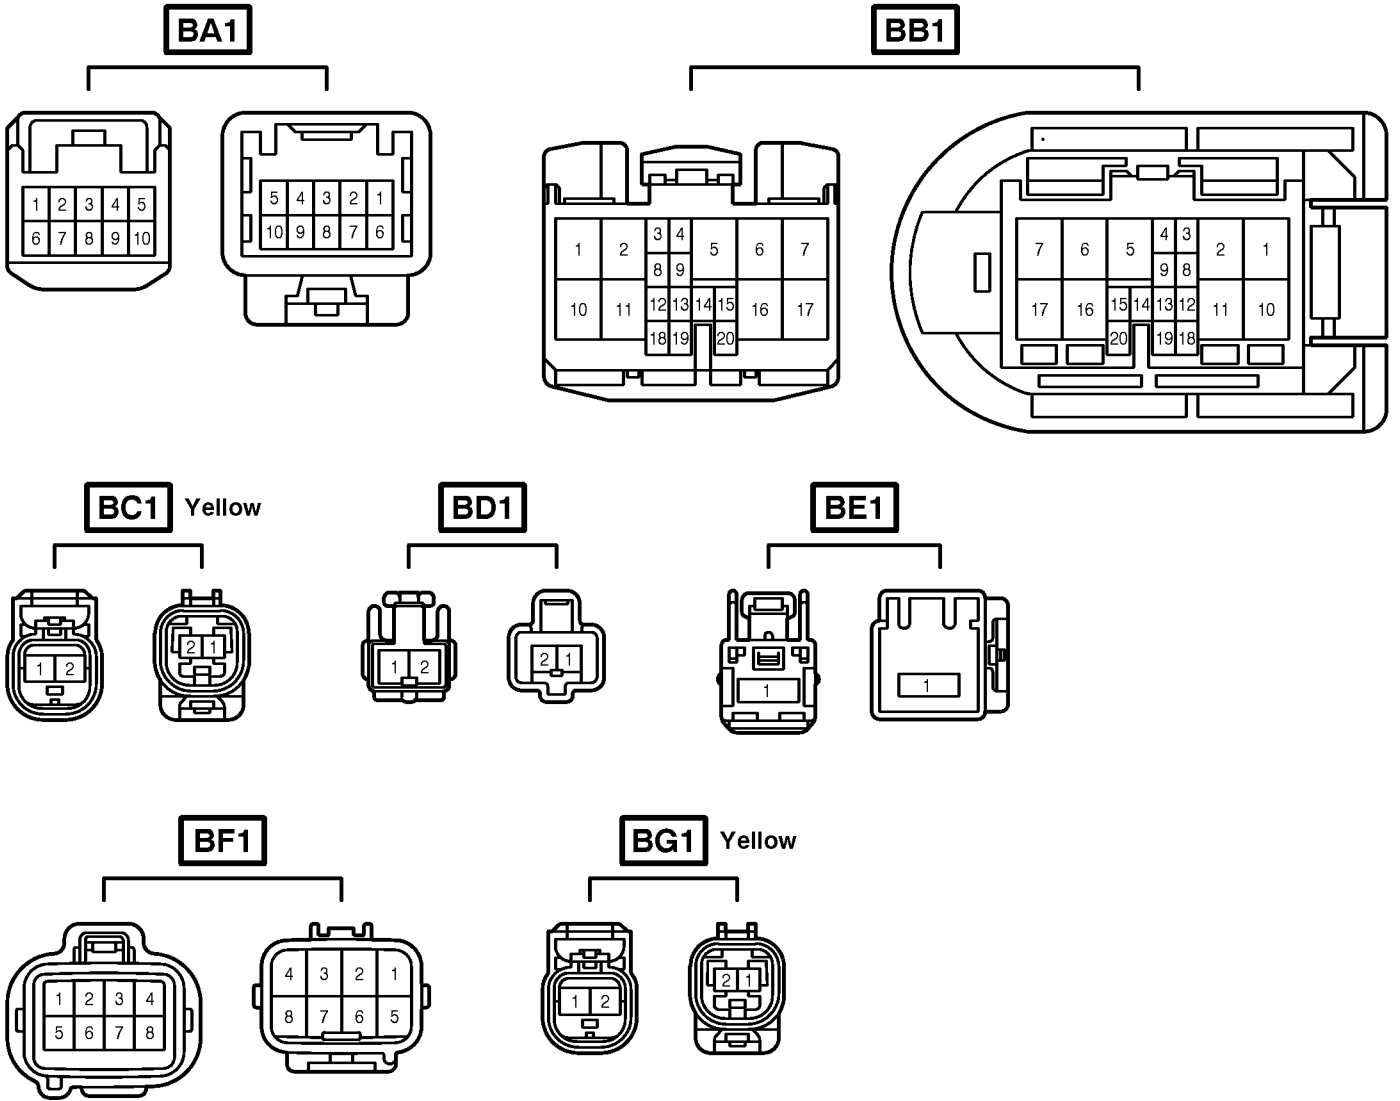


Code	Joining Wire Harness and Wire Harness (Connector Location)
BA1	Front Door LH Wire and Electrical Key LH Wire (Near the Front Door Outside Handle LH)
BB1	Rear Door No.2 Wire and Floor Wire (Left Center Pillar)
BC1	Floor Wire and Seat Airbag No.1 Wire (Under the Driver's Seat)
BD1	Skid Control Sensor No.1 Wire and Floor Wire (Front Side of Left Quarter Panel)
BE1	Frame Wire and Floor No.2 Wire (Front Side of Left Quarter Panel)
BF1	Floor No.2 Wire and Fuel Tank Wire (Near the Fuel Tank)
BG1	Floor No.2 Wire and Seat Airbag No.2 Wire (Under the Front Passenger's Seat)

# G ELECTRICAL WIRING ROUTING


**□ : Location of Connector Joining Wire Harness and Wire Harness**

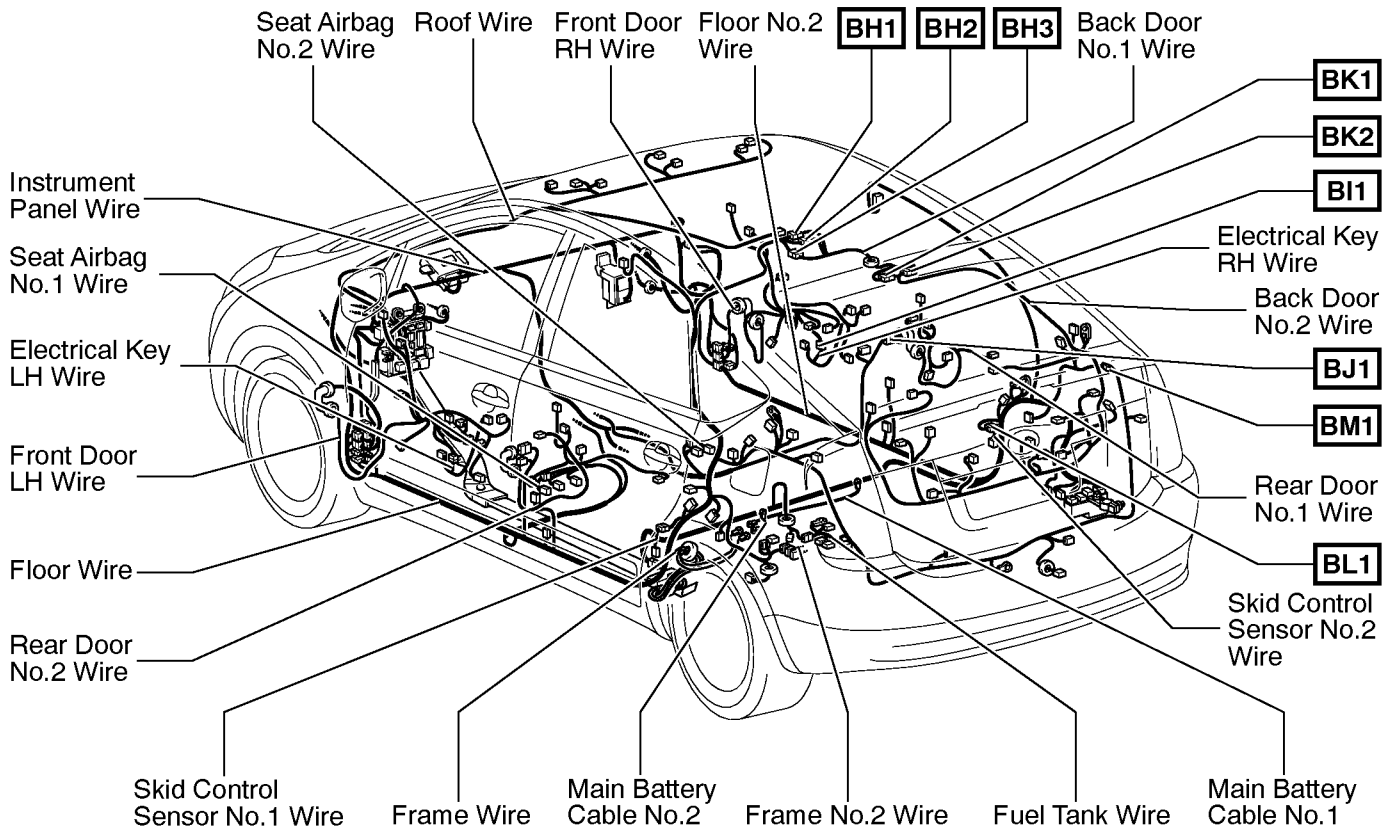

**○ : Location of Splice Points**

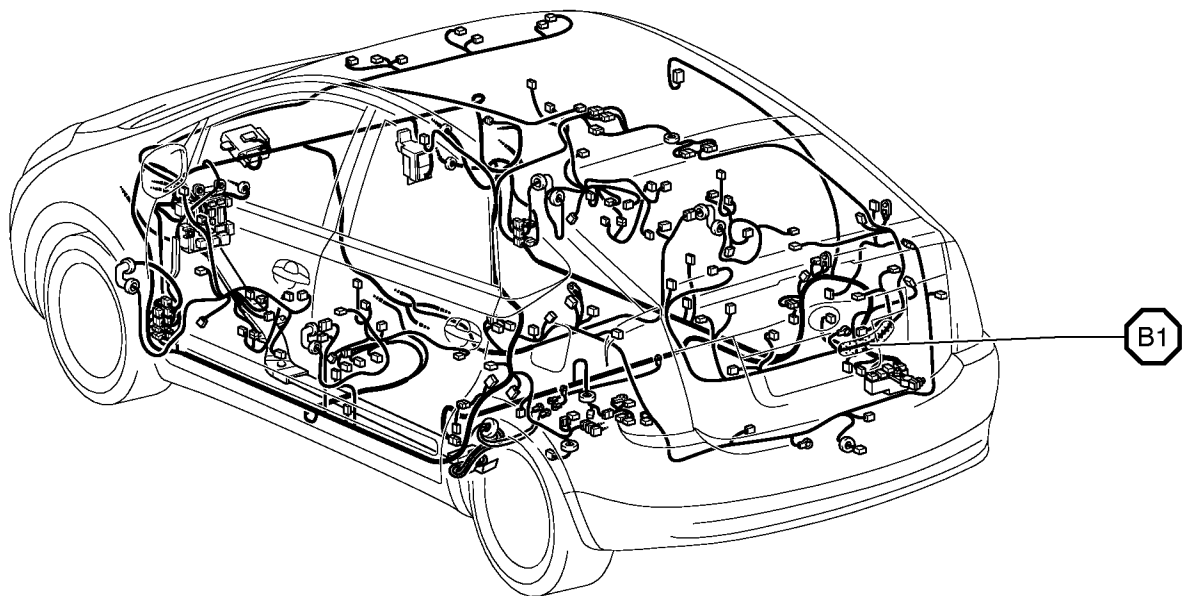

## Connector Joining Wire Harness and Wire Harness

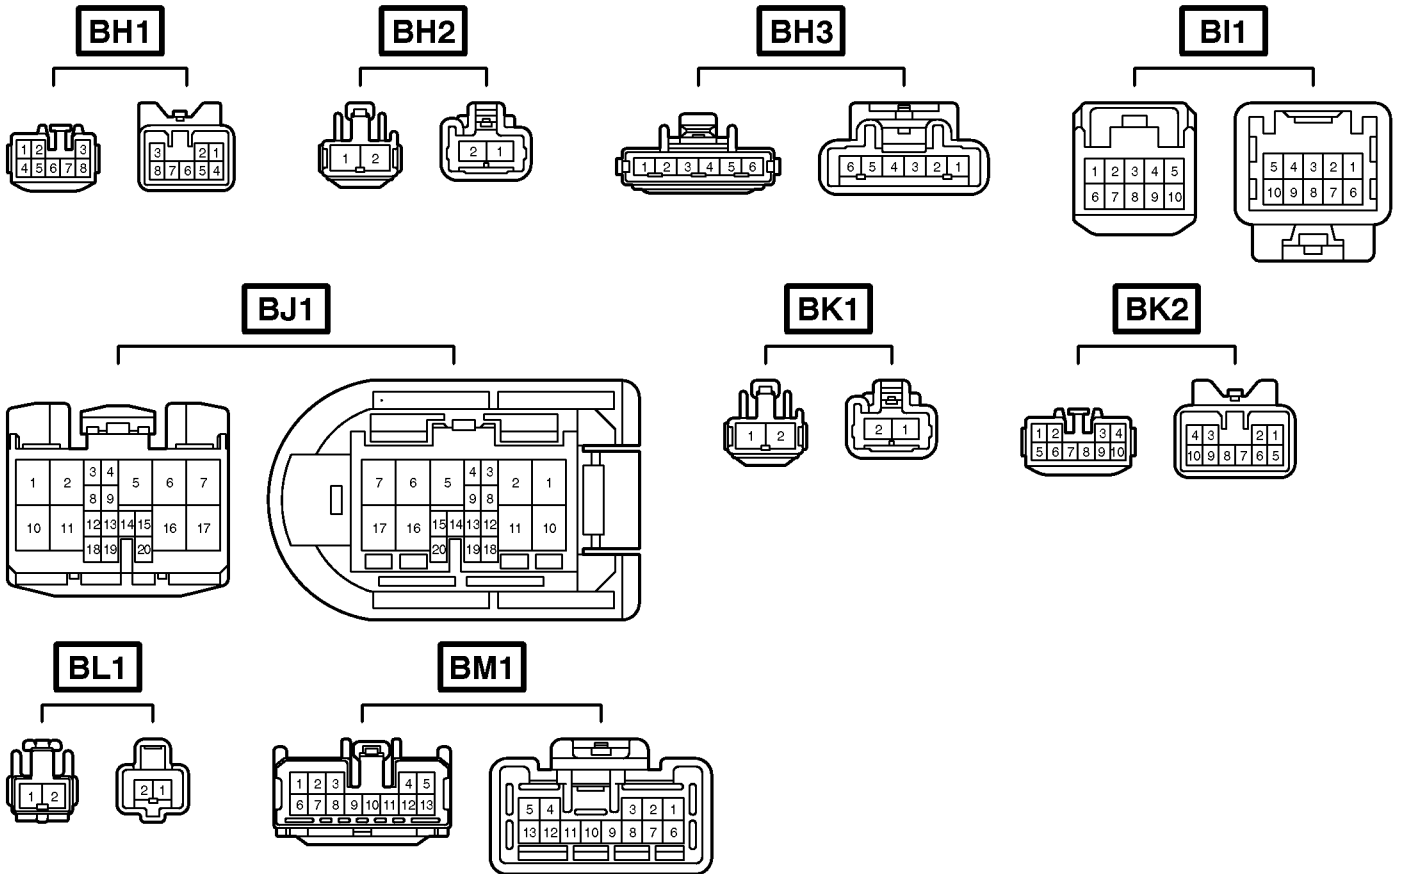

Code	Joining Wire Harness and Wire Harness (Connector Location)
BH1	
BH2	Back Door No.1 Wire and Floor Wire (Rear Side of Roof Panel)
BH3	
BI1	Front Door RH Wire and Electrical Key RH Wire (Near the Front Door Outside Handle RH)
BJ1	Rear Door No.1 Wire and Floor No.2 Wire (Right Center Pillar)
BK1	
BK2	Back Door No.1 Wire and Back Door No.2 Wire (Rear Side of Roof Panel)
BL1	Skid Control Sensor No.2 Wire and Floor No.2 Wire (Front Side of Right Quarter Panel)
BM1	Floor No.2 Wire and Floor Wire (Rear Side of Right Quarter Panel)






# 2004 PRIUS

## ELECTRICAL WIRING DIAGRAM

### SYSTEM CIRCUITS


	Page
Air Conditioning .....	352
Audio System (Built-in Amplifier) .....	336
Audio System (Separate Amplifier) .....	326
Automatic Glare-Resistant EC Mirror .....	322
Automatic Light Control .....	160
Back-Up Light .....	186
Brake Control System .....	290
Clock .....	312
Combination Meter .....	342
Cruise Control .....	270
Door Lock Control .....	210
Engine Control .....	132
EPS .....	284
Front Fog Light .....	162
Front Wiper and Washer .....	198
Garege Door Opener .....	324
Headlight .....	148
Headlight Beam Level Control .....	156
Horn .....	310
Hybrid Vehicle Immobilizer System .....	82
Ignition .....	128
Illumination .....	178
Interior Light .....	170
Key Reminder .....	190
Light Auto Turn Off System .....	164
Luggage Compartment Door Opener .....	242
Mirror Heater .....	318
Multi-Display (Built-in Amplifier) .....	336
Multi-Display (Separate Amplifier) .....	326
Multiplex Communication System (AVC-LAN Bus) .....	78
Multiplex Communication System (BEAN Bus) .....	70
Multiplex Communication System (CAN Bus) .....	74
Power Outlet .....	314
Power Source .....	66
Power Window .....	206
Push Button Start System .....	82
Radiator Fan and Condenser Fan .....	348
Rear Window Defogger .....	318
Rear Wiper and Washer .....	202
Remote Control Mirror .....	316
Seat Belt Waning .....	194
Shift Control System .....	256
Smart Entry System .....	216
SRS .....	303
Stop Light .....	184
Taillight .....	178
Theft Deterrent .....	246
TOYOTA Hybrid System .....	96
Turn Signal and Hazard Warning Light .....	166
Wireless Door Lock Control (w/ Smart Entry System) .....	216
Wireless Door Lock Control (w/o Smart Entry System) .....	234

# Multiplex Communication System – BEAN Bus

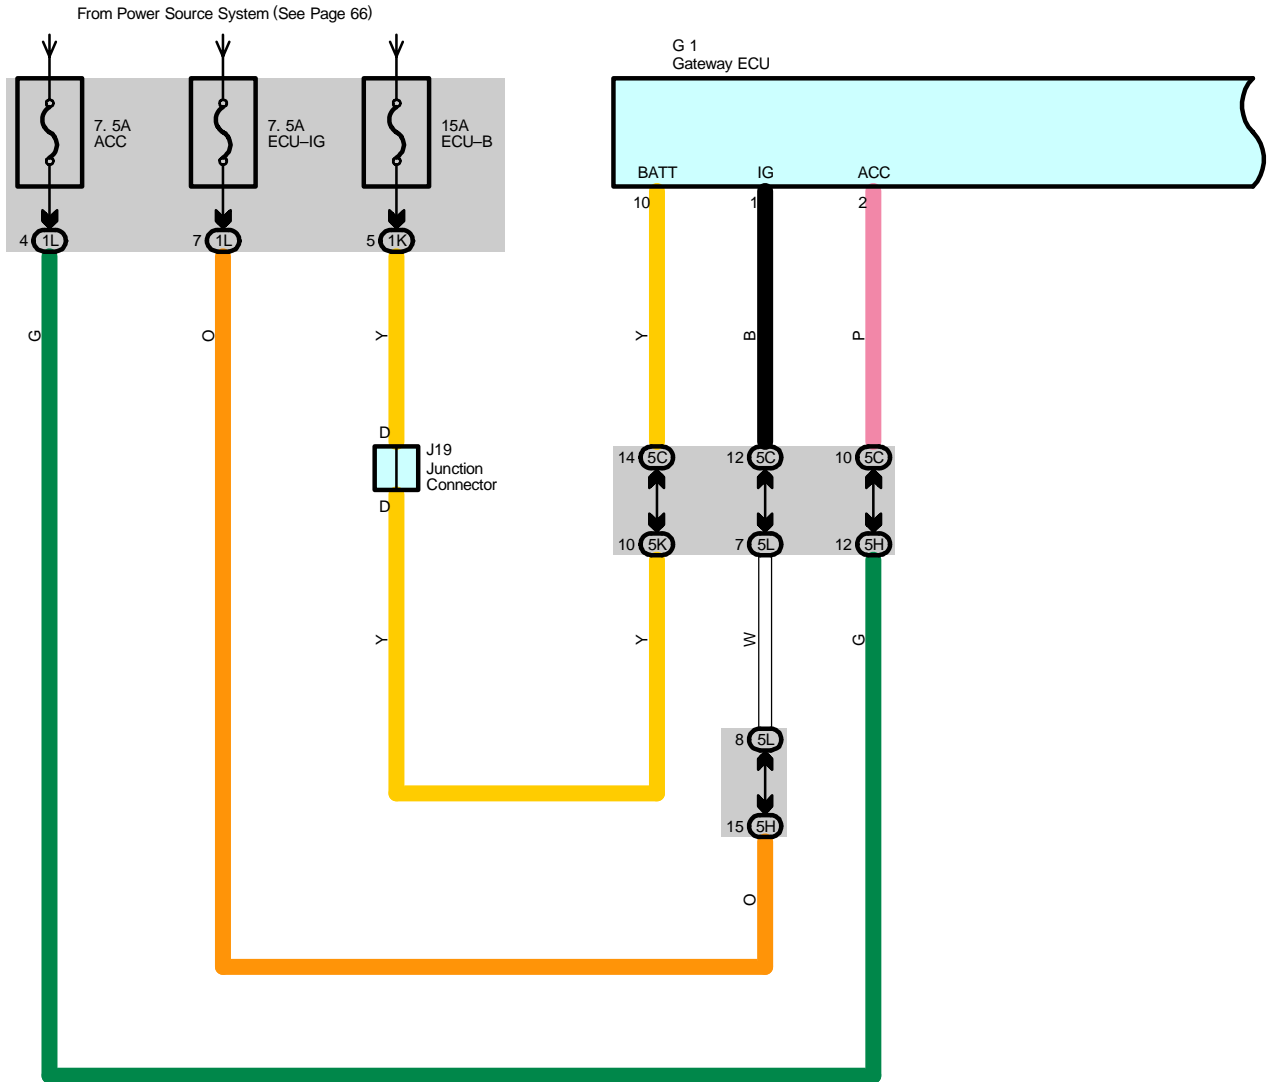

\* 1 : w/ Smart Entry System  
 \* 2 : w/o Smart Entry System

G 1  
 Gateway ECU

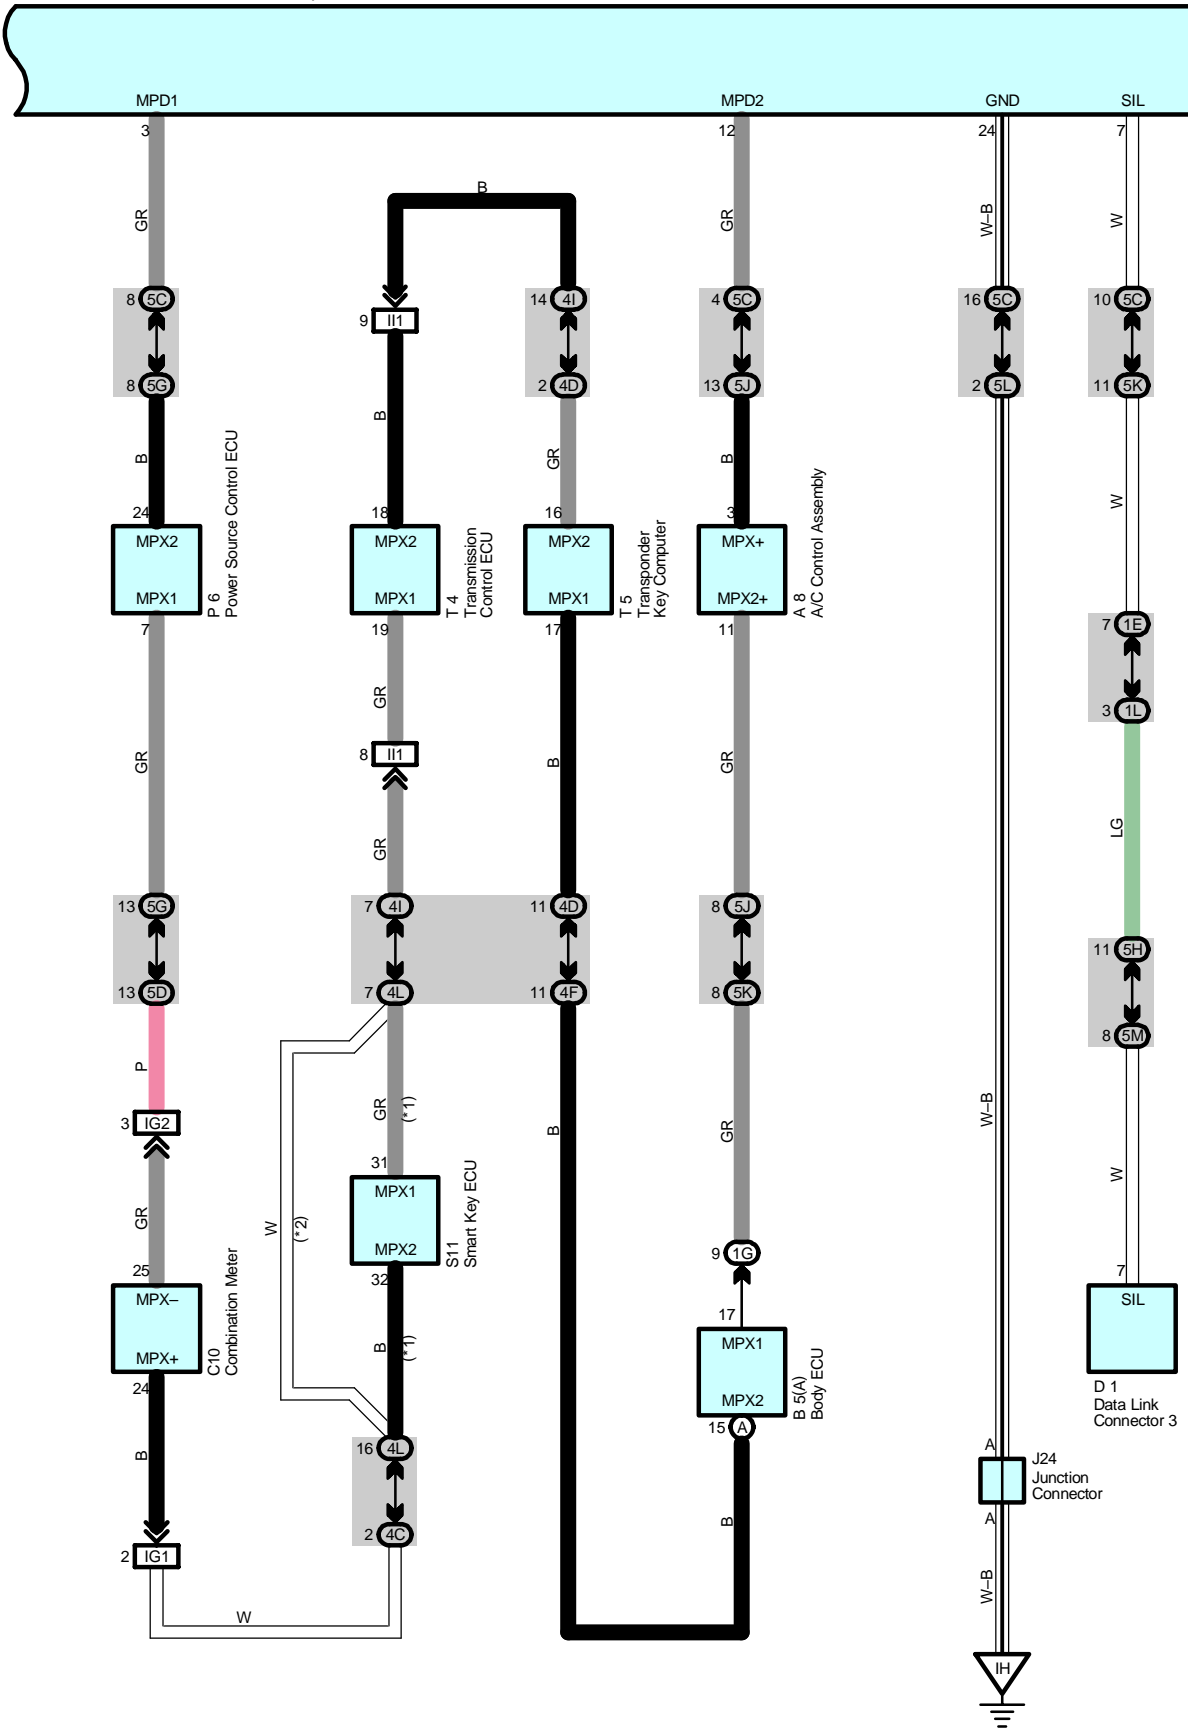

# Multiplex Communication System – BEAN Bus

## System Outline

BEAN consists of body electrical systems such as body ECU, A/C control assembly, power source control ECU, combination meter, smart key ECU\*, transmission control ECU, transponder key computer and gateway ECU. Gateway ECU has communication circuit to correspond with different types of communication data. Different types of communication data can be shared among communication parts after it goes through gateway ECU. Vehicle information is input to body ECU at an assembling plant as a representative ECU which delivers the information to other ECUs through multiplex communication.

\* Optional equipment

This system is working for the following systems:

- \* Air Conditioning
- \* Audio System
- \* Brake Control System
- \* Combination Meter
- \* Cruise Control
- \* Engine Control
- \* EPS
- \* Headlight
- \* Hybrid Vehicle Immobilizer System
- \* Illumination
- \* Interior Light
- \* Key Reminder
- \* Luggage Compartment Door Opener
- \* Mirror Heater
- \* Multi-Display
- \* Push Button Start System
- \* Rear Window Defogger
- \* Shift Control System
- \* Smart Entry System
- \* Taillight
- \* TOYOTA Hybrid System

## Service Hints

### G1 Gateway ECU

10-Ground : Always approx. 12 volts

1-Ground : Approx. 12 volts with the power SW at IG ON position

2-Ground : Approx. 12 volts with the power SW at ACC ON or IG ON position

24-Ground : Always continuity

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A8	<a href="#">46</a>	G1	<a href="#">47</a>	S11	<a href="#">49</a>
B5   A	<a href="#">46</a>	J19	<a href="#">48</a>	T4	<a href="#">49</a>
C10	<a href="#">47</a>	J24	<a href="#">48</a>	T5	<a href="#">49</a>
D1	<a href="#">47</a>	P6	<a href="#">49</a>		

 : **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1G		
1K		
1L		
4C	36	Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4D		
4F		
4I		
4L		
5C	40	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5D		
5G		
5H		
5J		
5K		
5L		
5M		


 : **Connector Joining Wire Harness and Wire Harness**


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IG1	58	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the Combination Meter)
IG2		
II1	58	Engine Wire and Instrument Panel Wire (Behind the Glove Box)

 : **Ground Points**

Code	See Page	Ground Points Location
IH	56	Cowl Side Panel LH

# Multiplex Communication System – CAN Bus

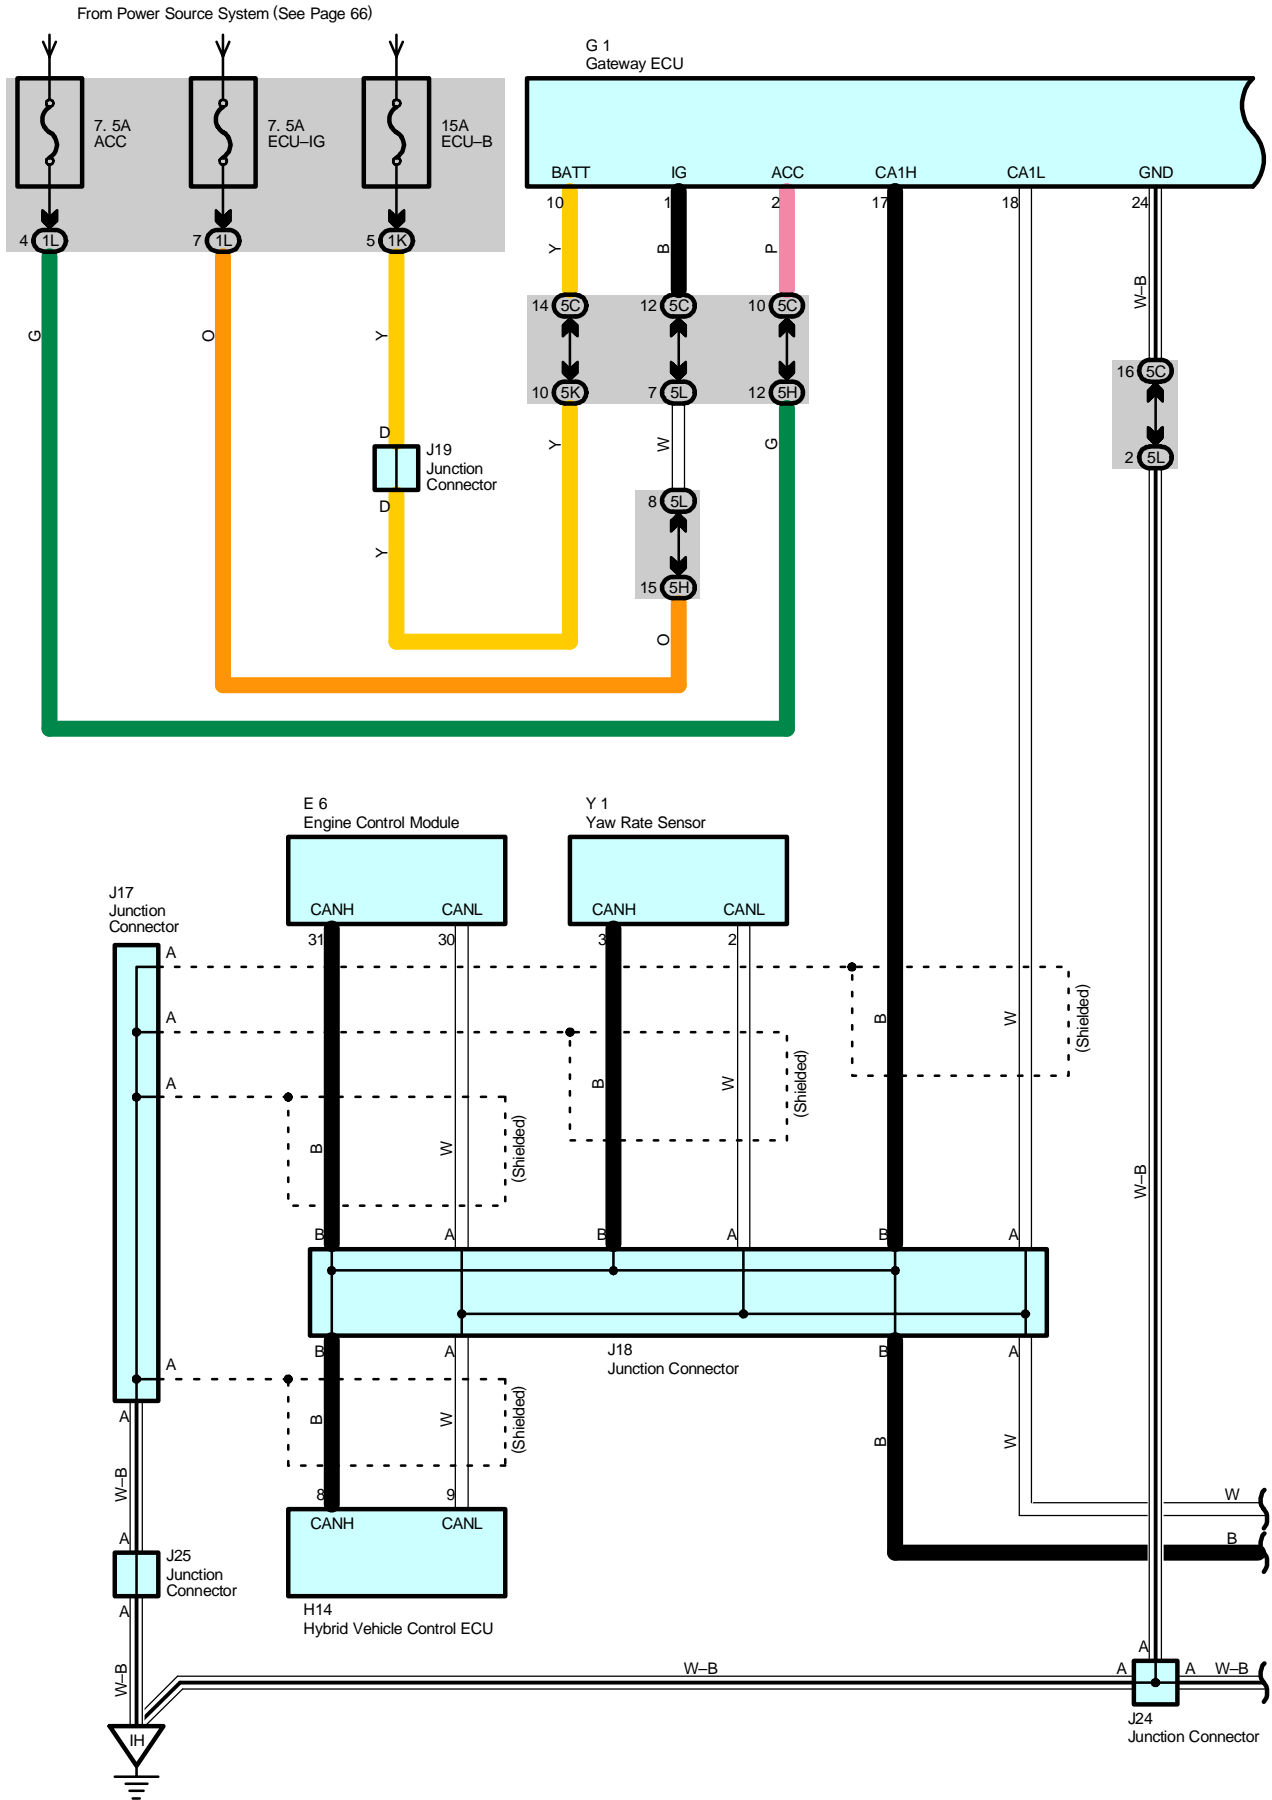

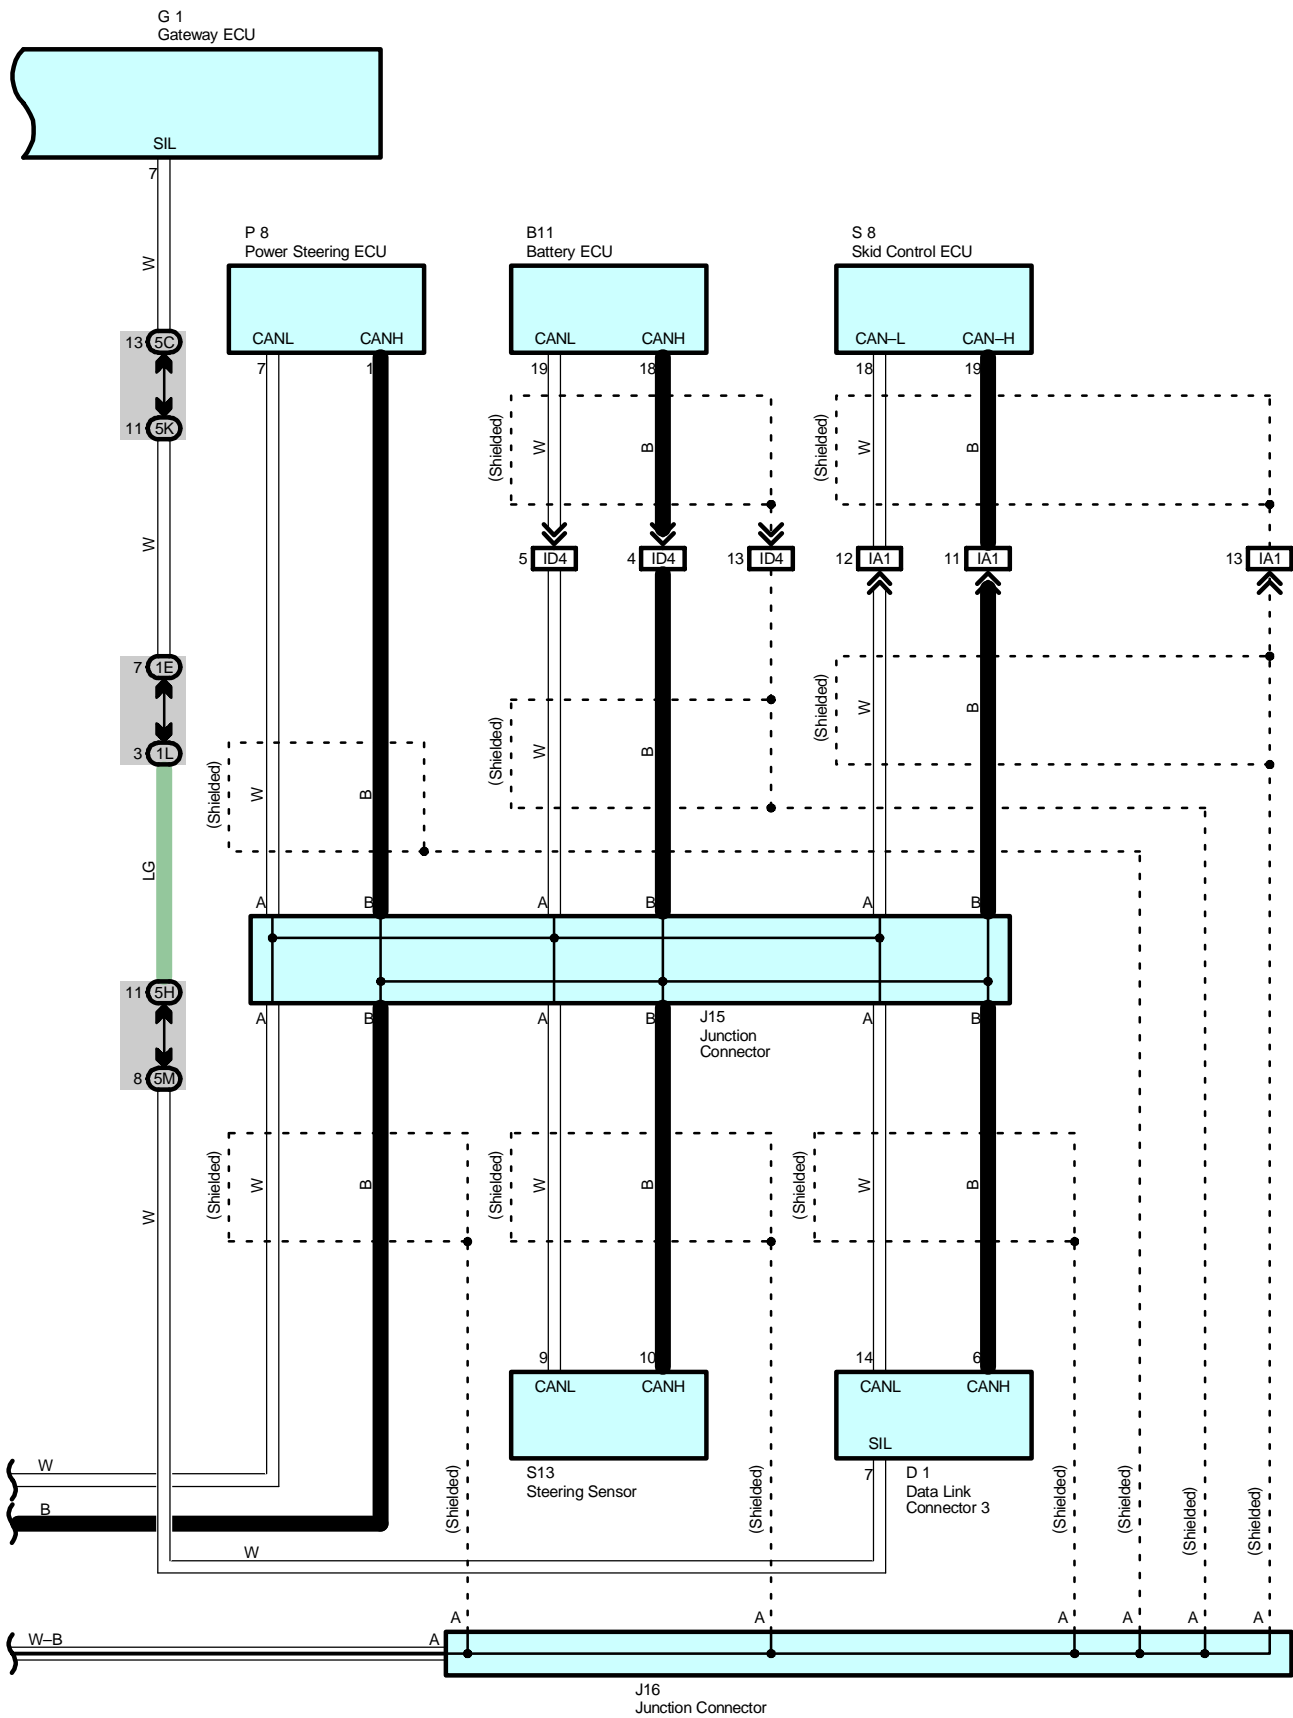



# Multiplex Communication System – CAN Bus

## System Outline

CAN has two lines as a pair which make communication with operating voltage. CAN has excellent data speed and error detecting capacity. It consists of vehicle control systems such as hybrid vehicle control ECU, engine control module, yaw rate sensor, battery ECU, power steering ECU, skid control ECU, power steering torque sensor, data link connector 3 and gateway ECU. Gateway ECU has communication circuit to correspond with different types of communication data. Different types of communication data can be shared among communication parts after it goes through gateway ECU.

This system is working for the following systems:

- \* Air Conditioning
- \* Audio System
- \* Back-Up Light
- \* Brake Control System
- \* Combination Meter
- \* Cruise Control
- \* Engine Control
- \* EPS
- \* Headlight
- \* Hybrid Vehicle Immobilizer System
- \* Multi-Display
- \* Push Button Start System
- \* Shift Control System
- \* Smart Entry System
- \* Theft Deterrent
- \* TOYOTA Hybrid System

## Service Hints

### G1 Gateway ECU

10-Ground : Always approx. 12 volts

1-Ground : Approx. 12 volts with the power SW at IG ON position

2-Ground : Approx. 12 volts with the power SW at ACC ON or IG ON position

24-Ground : Always continuity

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
B11	50	J16	48	P8	49
D1	47	J17	48	S8	49
E6	47	J18	48	S13	49
G1	47	J19	48	Y1	49
H14	47	J24	48		
J15	48	J25	48		

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1K		
1L		
5C	40	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5H		
5K		
5L		
5M		

## □ : Connector Joining Wire Harness and Wire Harness


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	56	Engine Room Main Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)
ID4	56	Instrument Panel Wire and Floor Wire (Left Kick Panel)




**: Ground Points**

Code	See Page	Ground Points Location
IH	<a href="#">56</a>	Cowl Side Panel LH

# Multiplex Communication System – AVC-LAN Bus

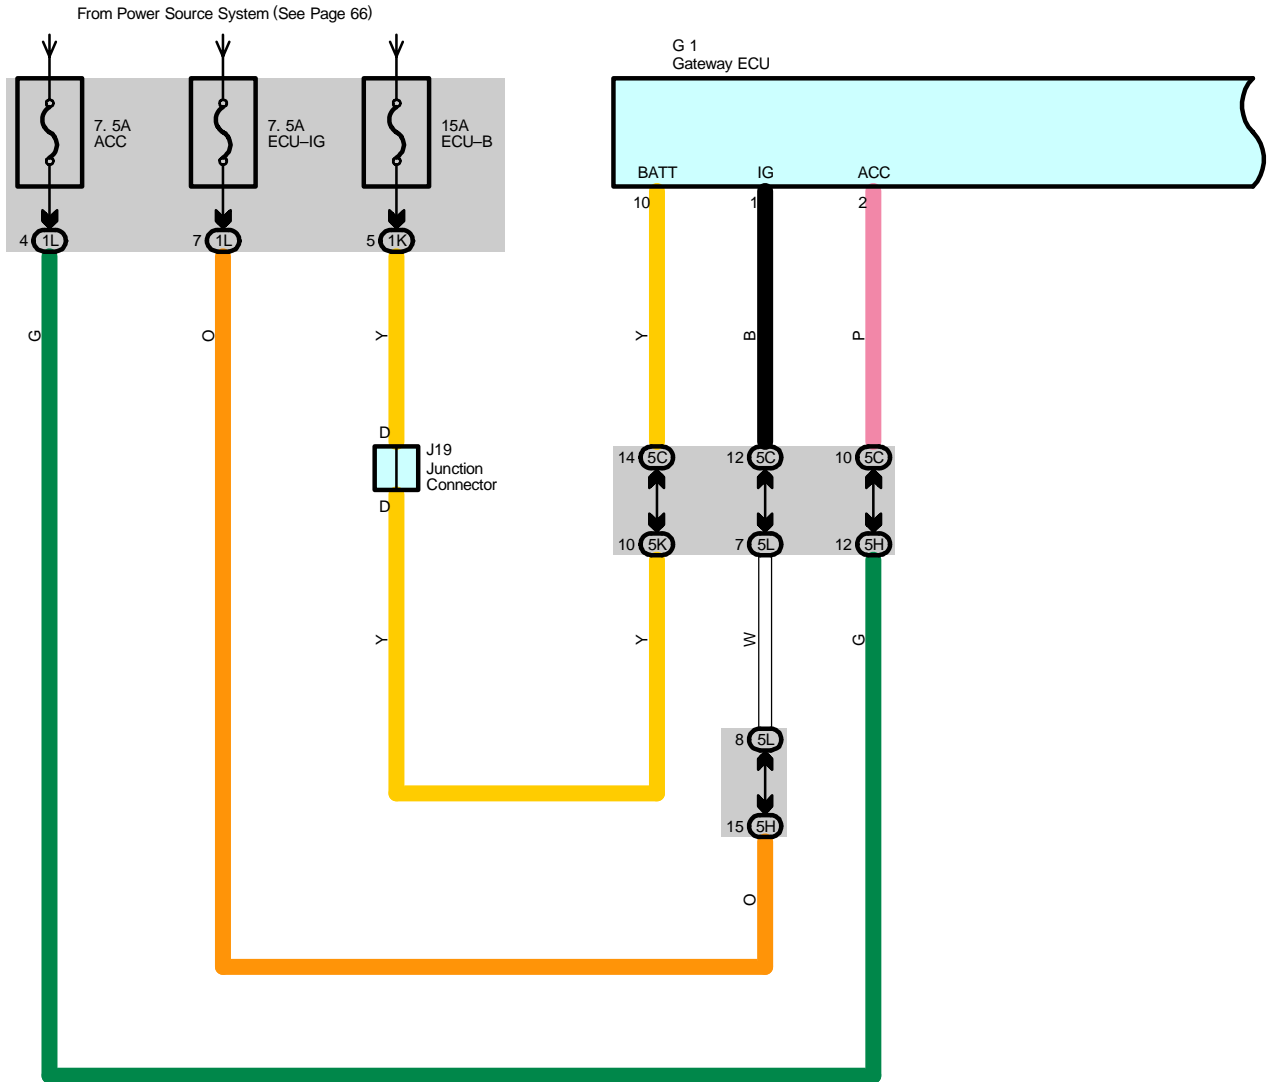

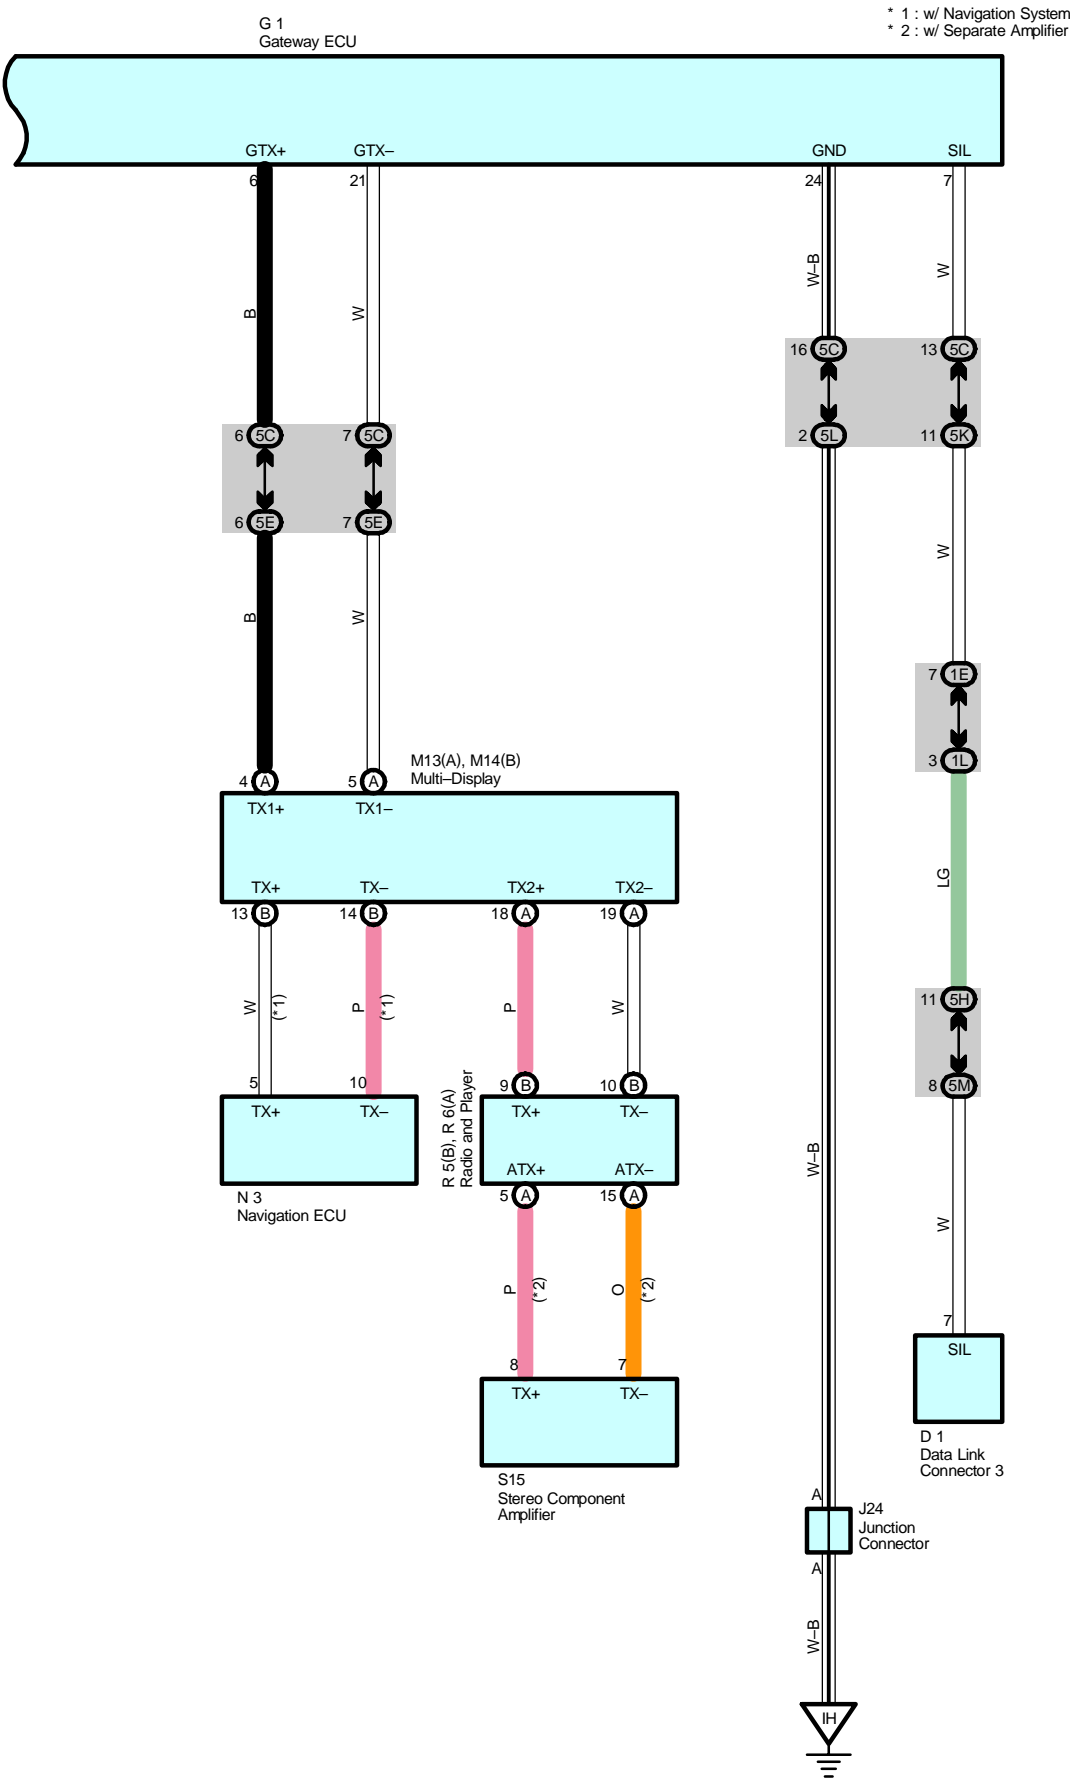

# Multiplex Communication System – AVC–LAN Bus

## System Outline

AVC–LAN consists of audio visual systems such as multi–display, navigation ECU\*, radio and player, stereo component amplifier\* and gateway ECU. Gateway ECU has communication circuit to correspond with different types of communication data. Different types of communication data can be shared among communication parts after it goes through gateway ECU.

\* Optional equipment

This system is working for the following systems:

- \* Air Conditioning
- \* Audio System
- \* Brake Control System
- \* Combination Meter
- \* Engine Control
- \* EPS
- \* Hybrid Vehicle Immobilizer System
- \* Mirror Heater
- \* Multi–Display
- \* Push Button Start System
- \* Rear Wiper and Washer
- \* Shift Control System
- \* TOYOTA Hybrid System

## Service Hints

### G1 Gateway ECU

10–Ground : Always approx. 12 volts

1–Ground : Approx. 12 volts with the power SW at IG ON position

2–Ground : Approx. 12 volts with the power SW at ACC ON or IG ON position

24–Ground : Always continuity

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
D1	47	M13	A 48	R6	B 49
G1	47	M14	B 48	S15	49
J19	48	N3	48		
J24	48	R5	A 49		

## ○ : Junction Block and Wire Harness Connector


Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1K		
1L		
5C	40	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5E		
5H		
5K		
5L		
5M		


## ▽ : Ground Points

Code	See Page	Ground Points Location
IH	56	Cowl Side Panel LH



# Push Button Start System and Hybrid Vehicle Immobilizer System

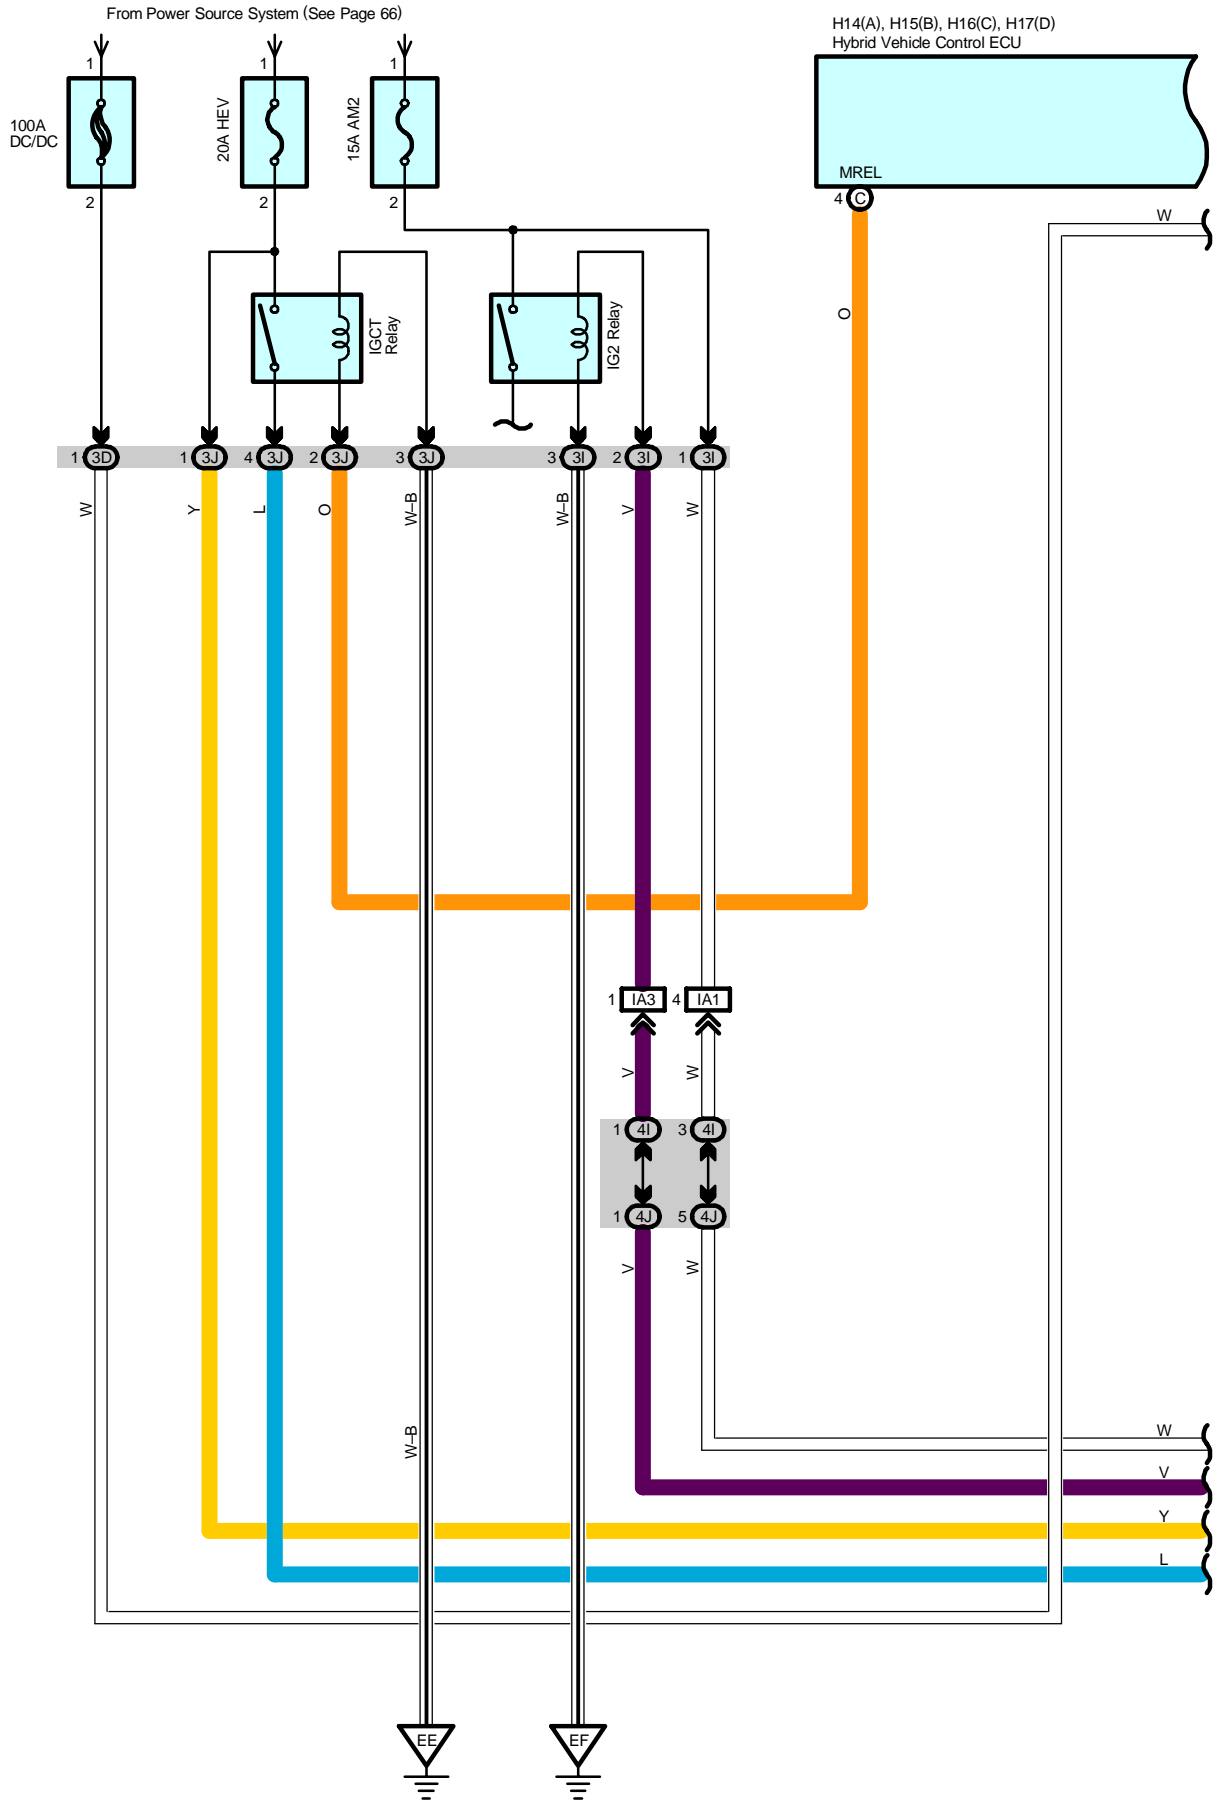


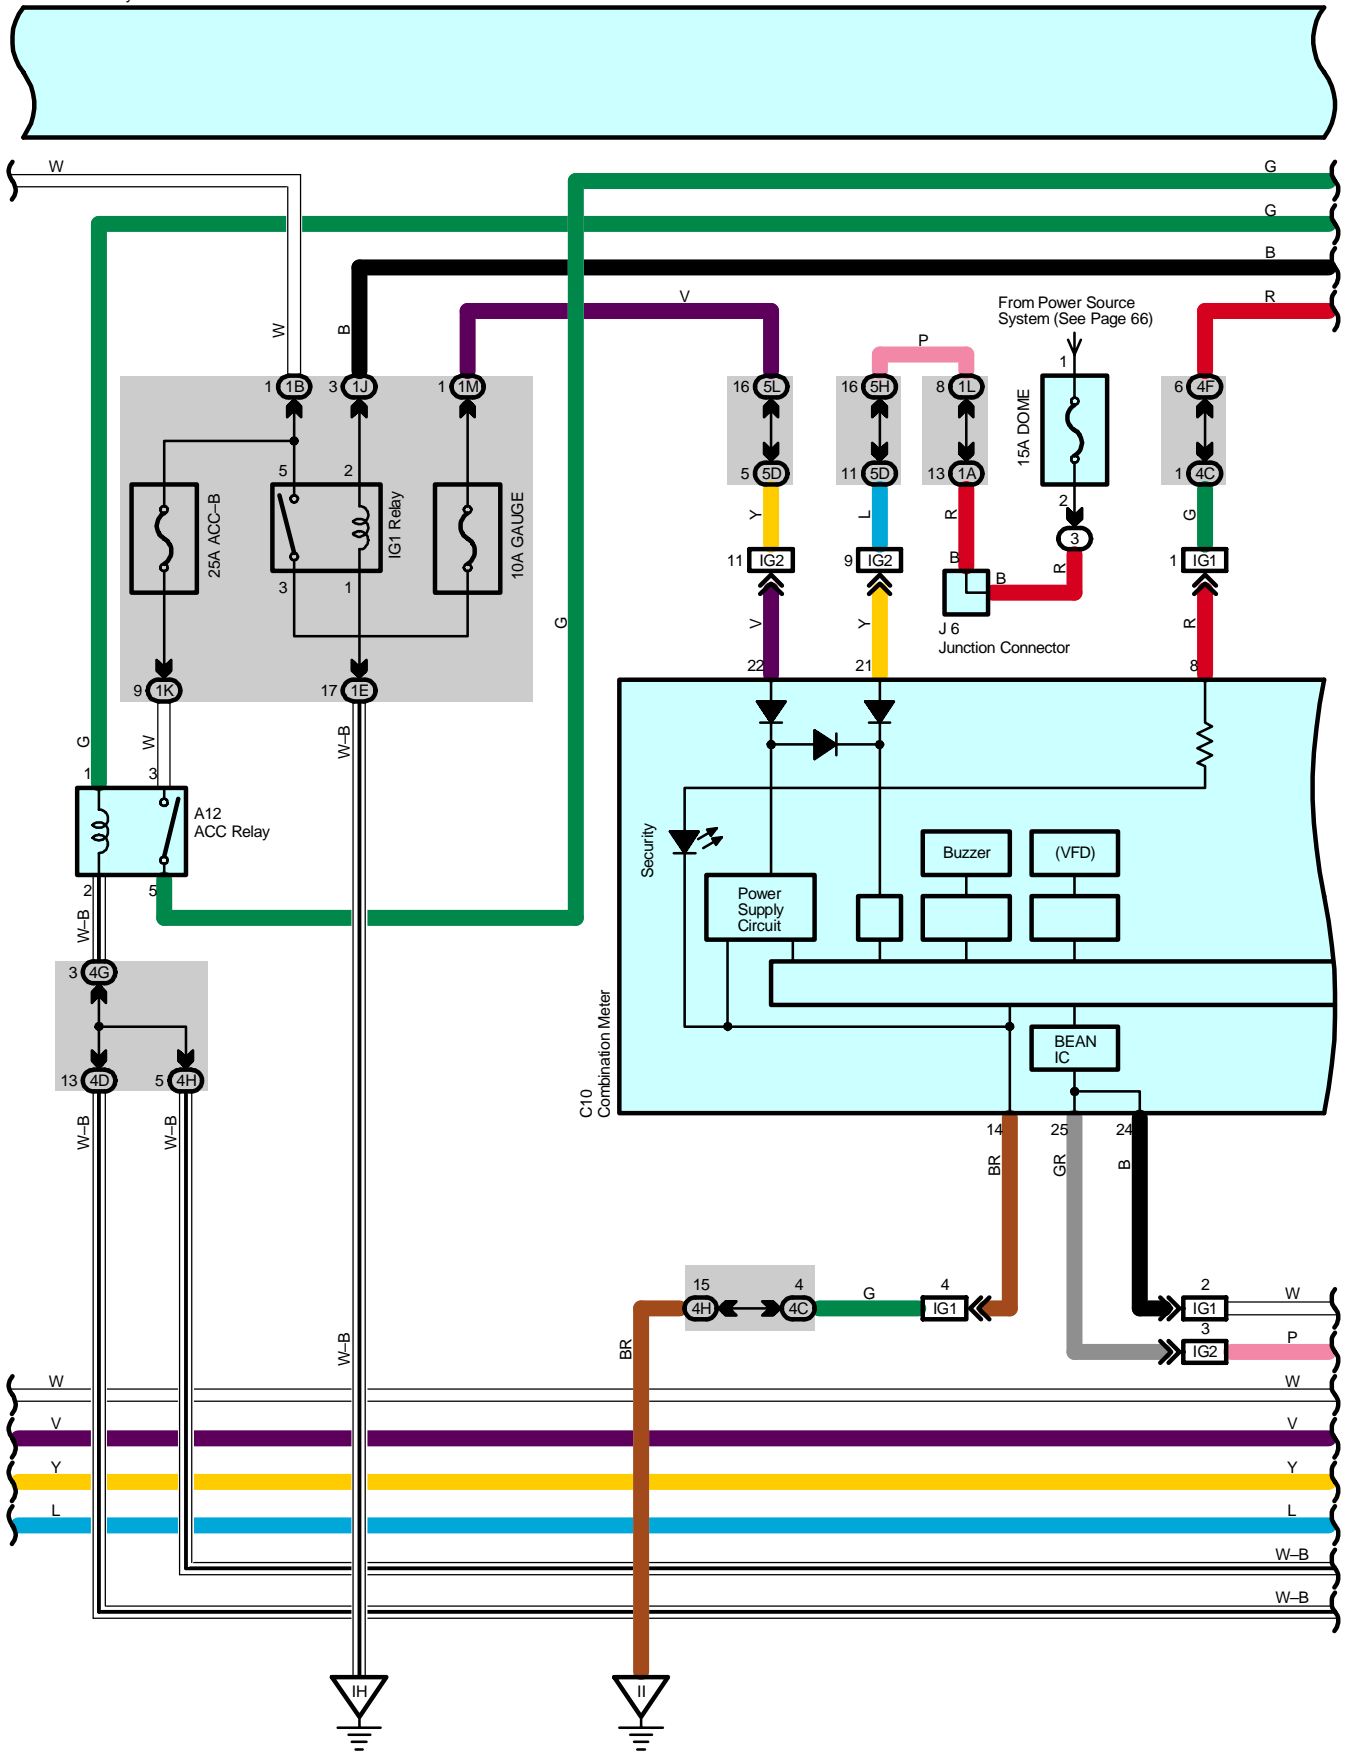




# Push Button Start System and Hybrid Vehicle Immobilizer System

H14(A), H15(B), H16(C), H17(D)  
Hybrid Vehicle Control ECU

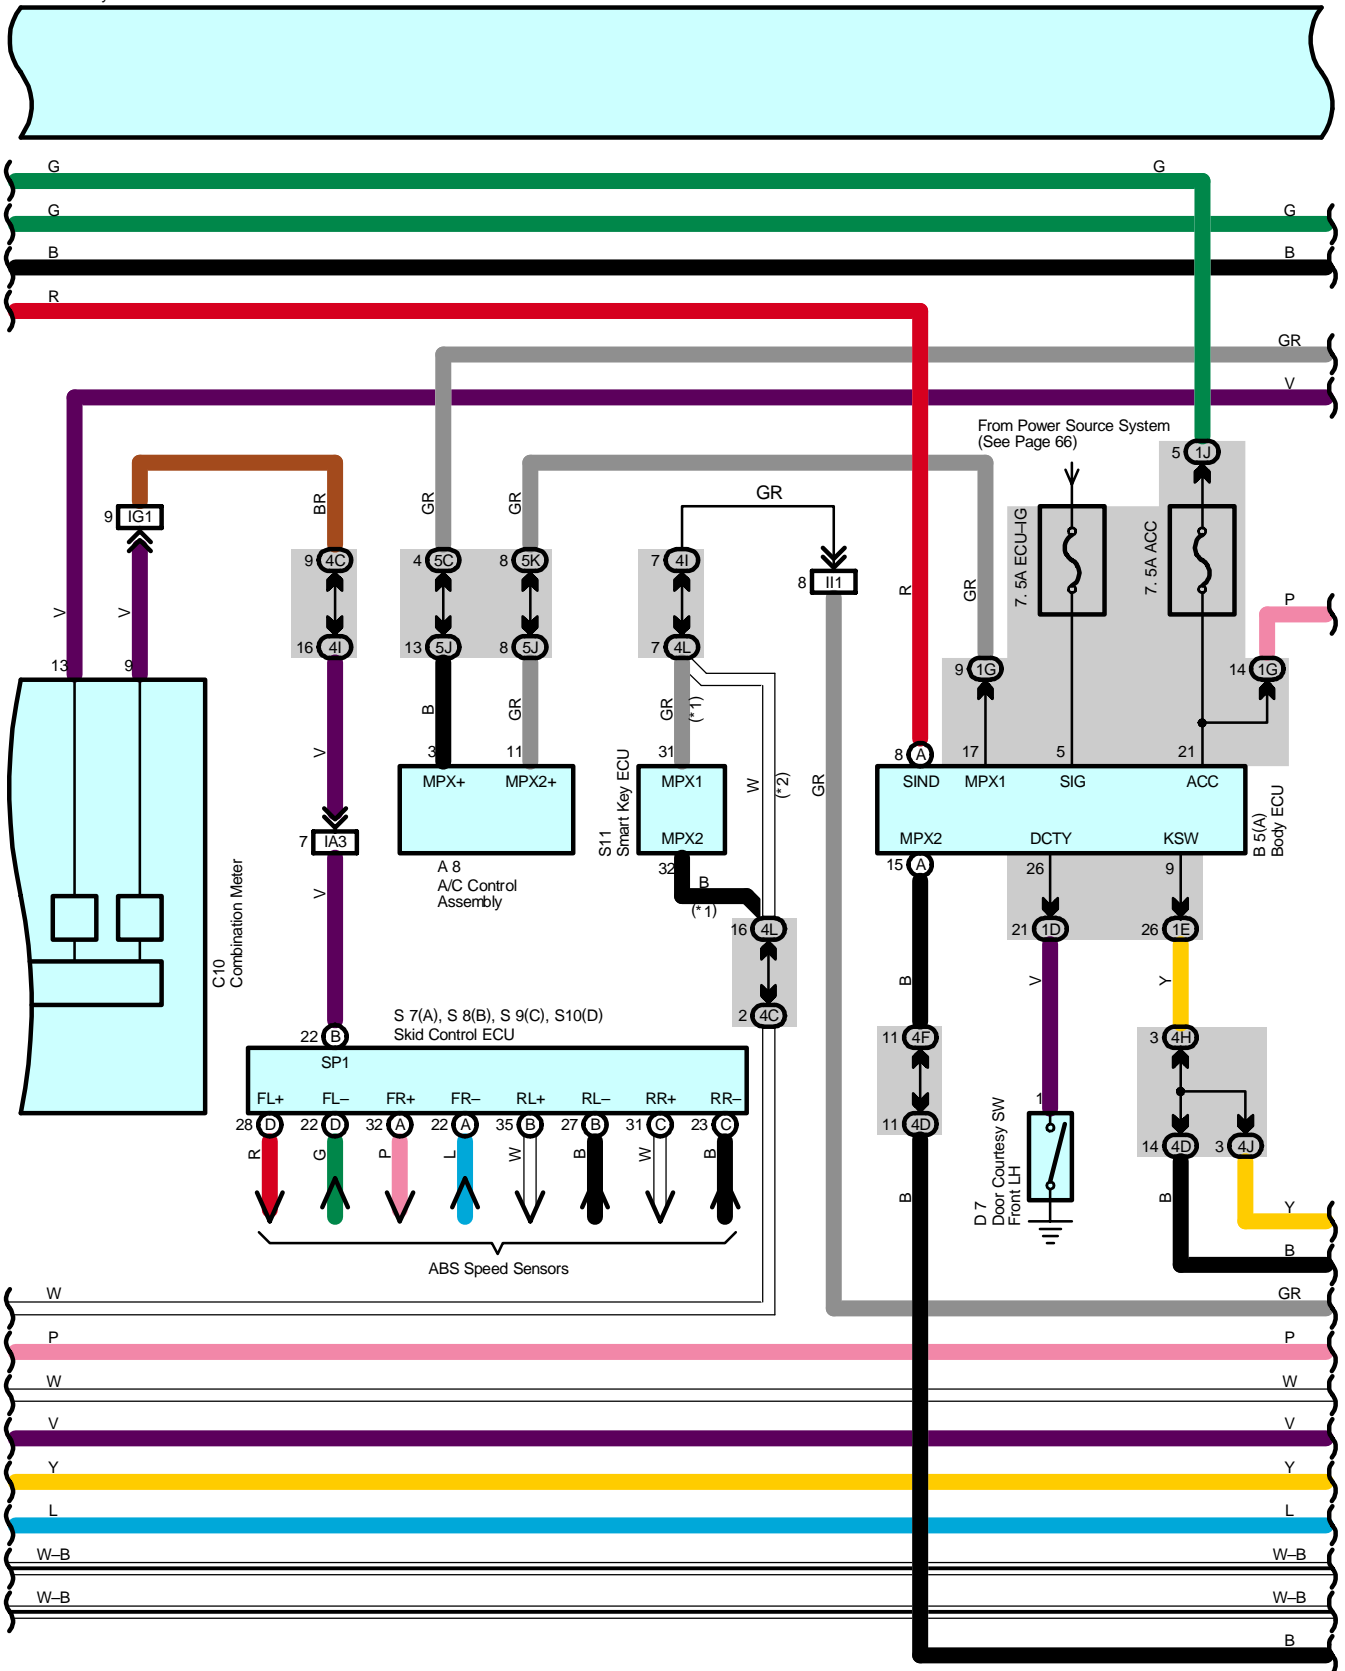


H14(A), H15(B), H16(C), H17(D)  
Hybrid Vehicle Control ECU

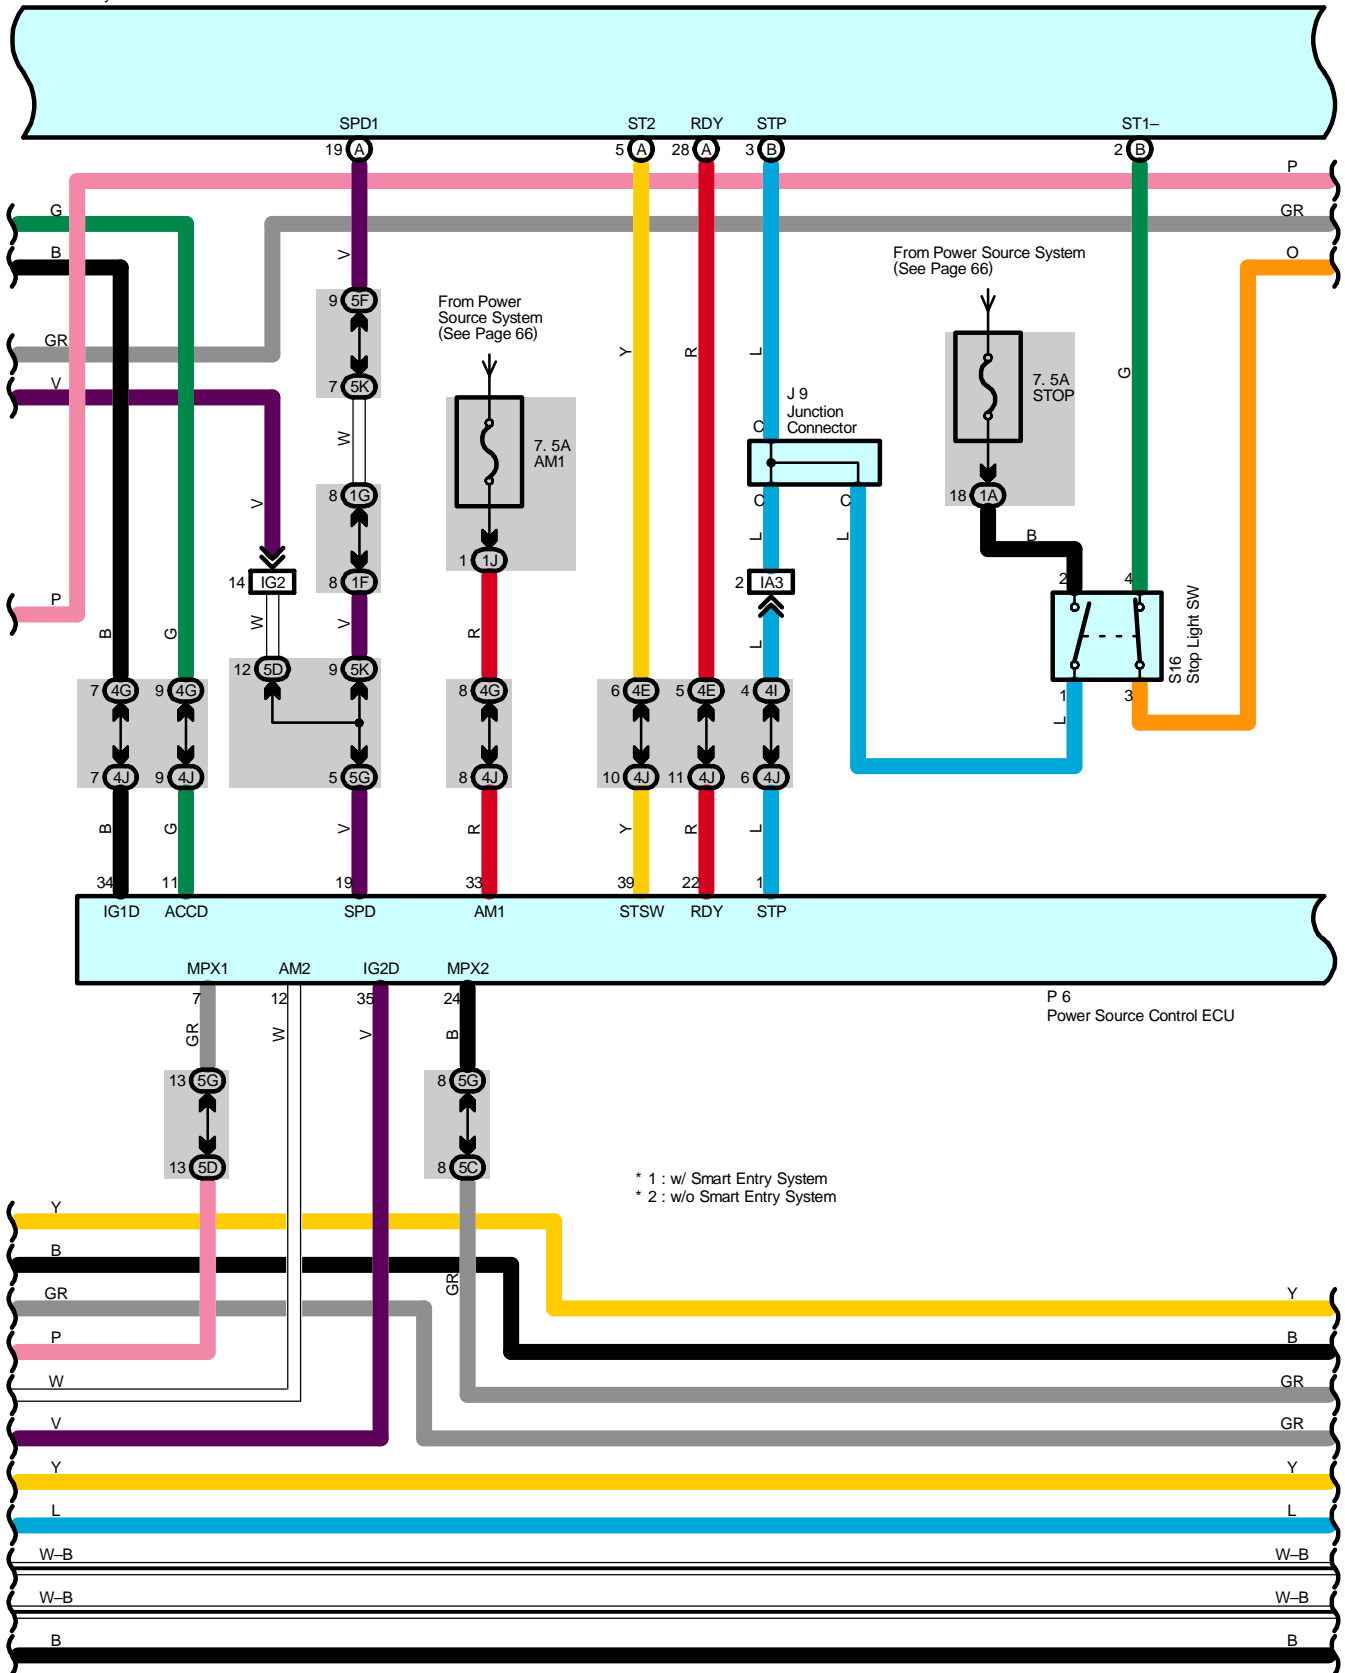




H14(A), H15(B), H16(C), H17(D)  
Hybrid Vehicle Control ECU

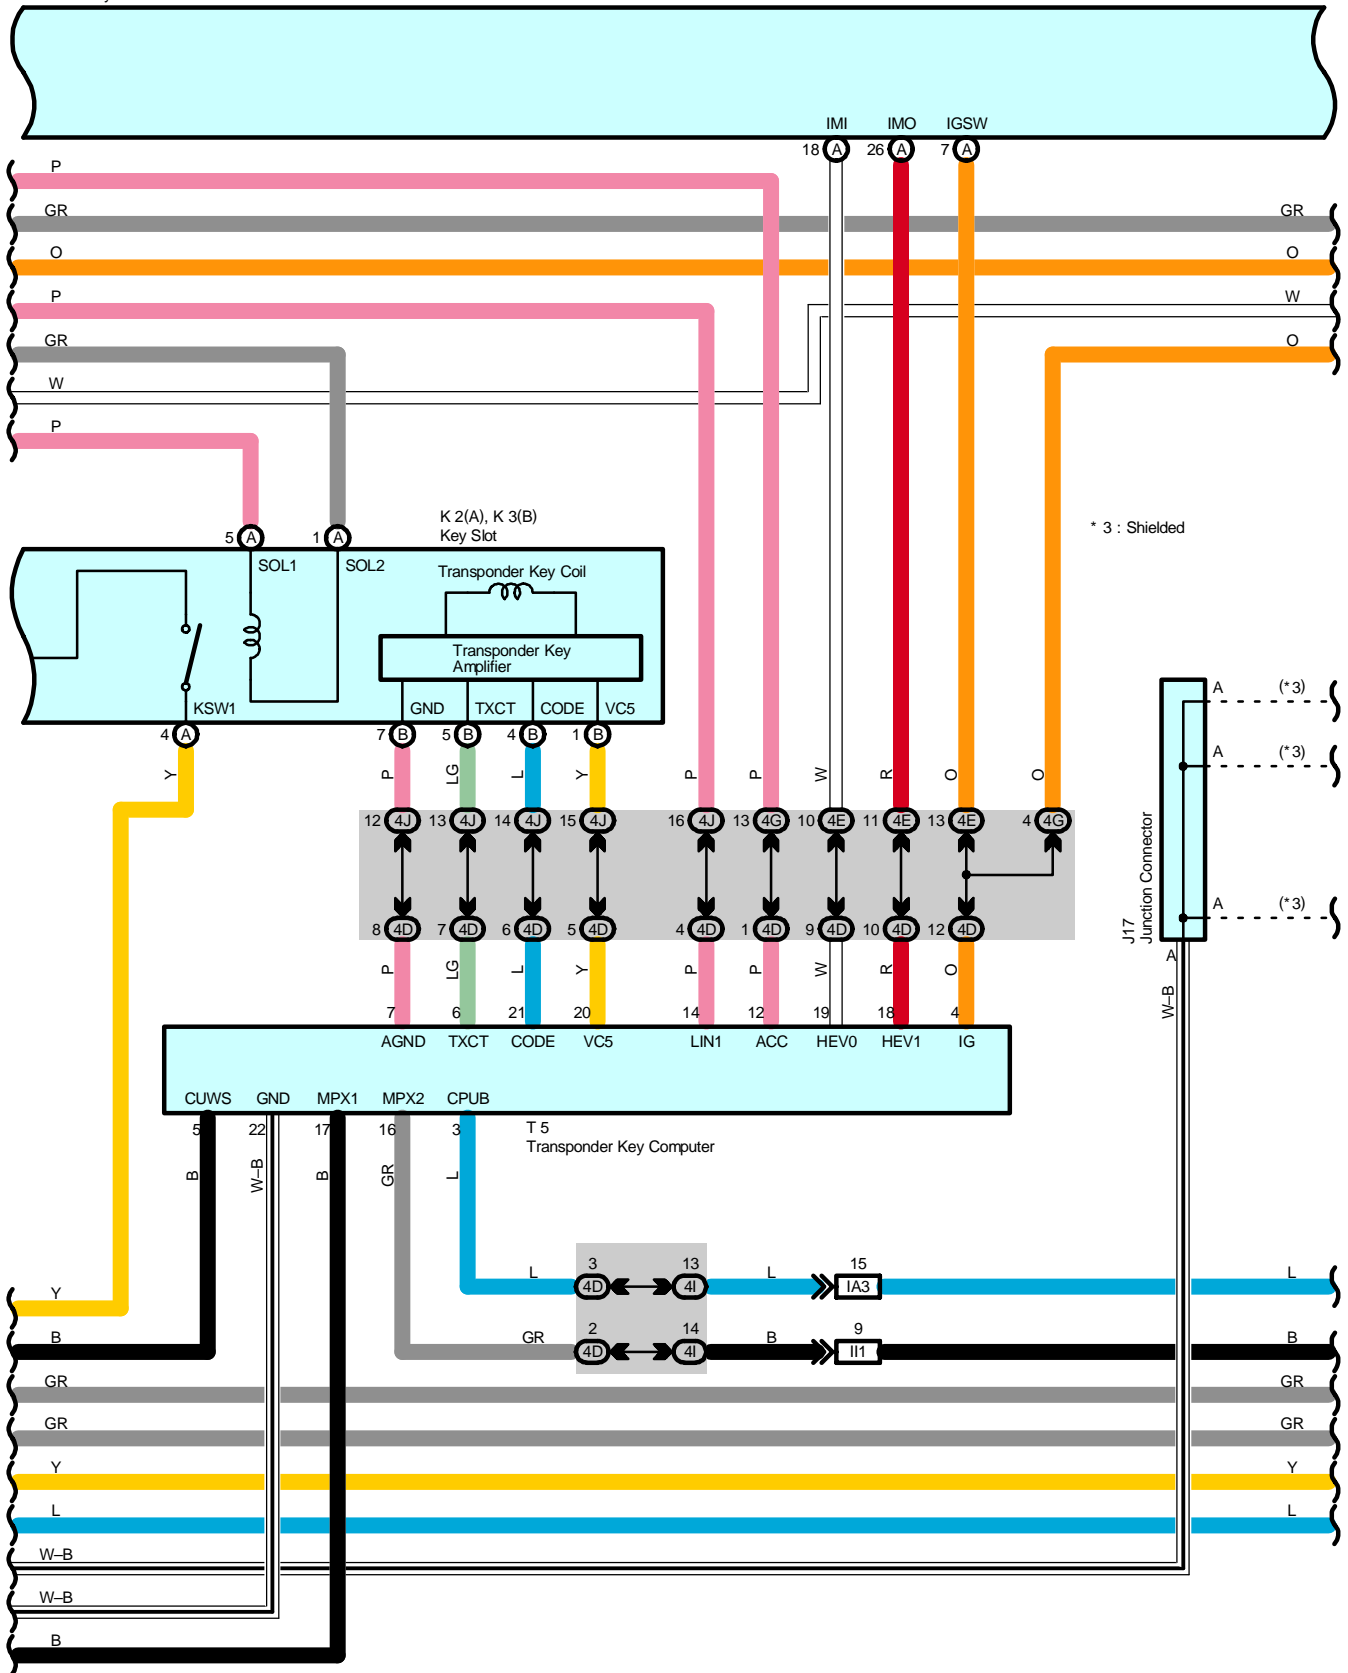




H14(A), H15(B), H16(C), H17(D)  
Hybrid Vehicle Control ECU

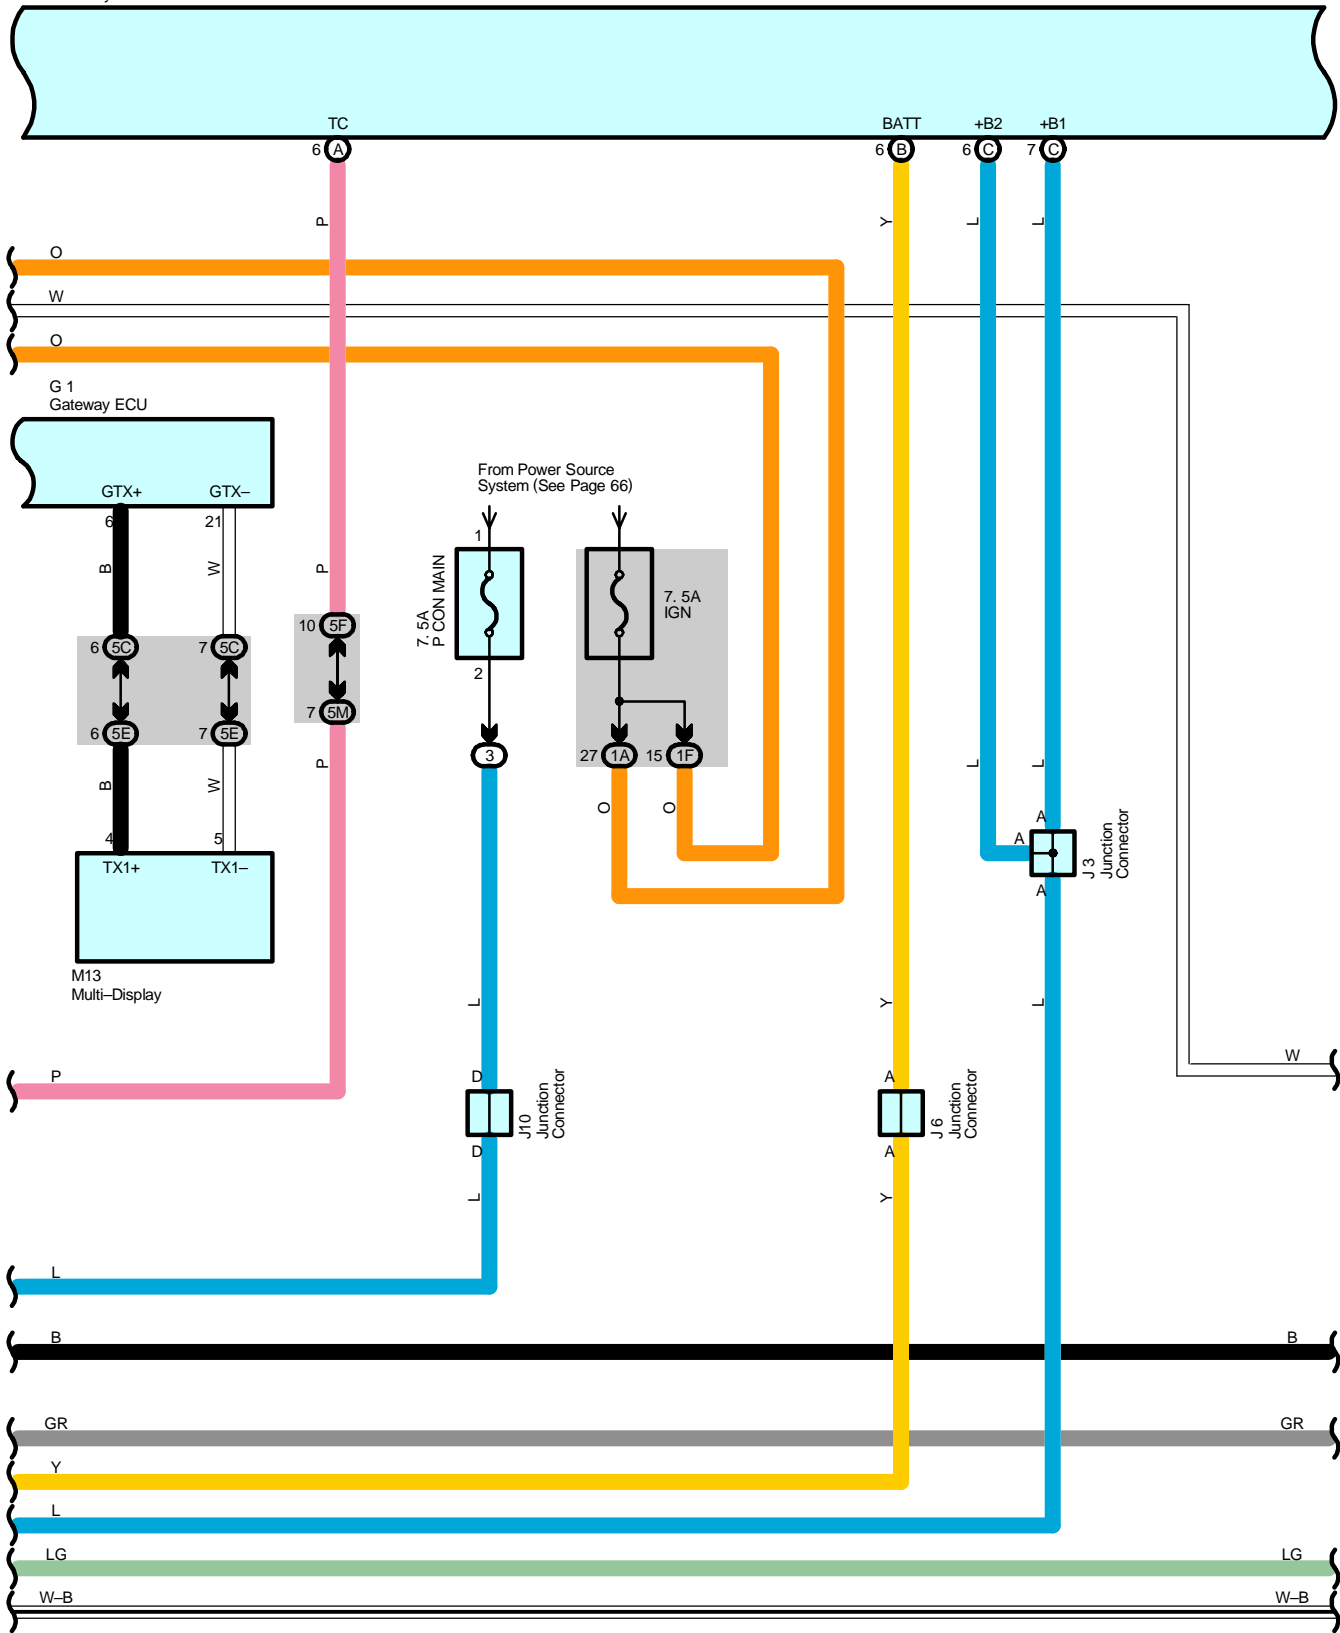

# Push Button Start System and Hybrid Vehicle Immobilizer System

H14(A), H15(B), H16(C), H17(D)  
Hybrid Vehicle Control ECU

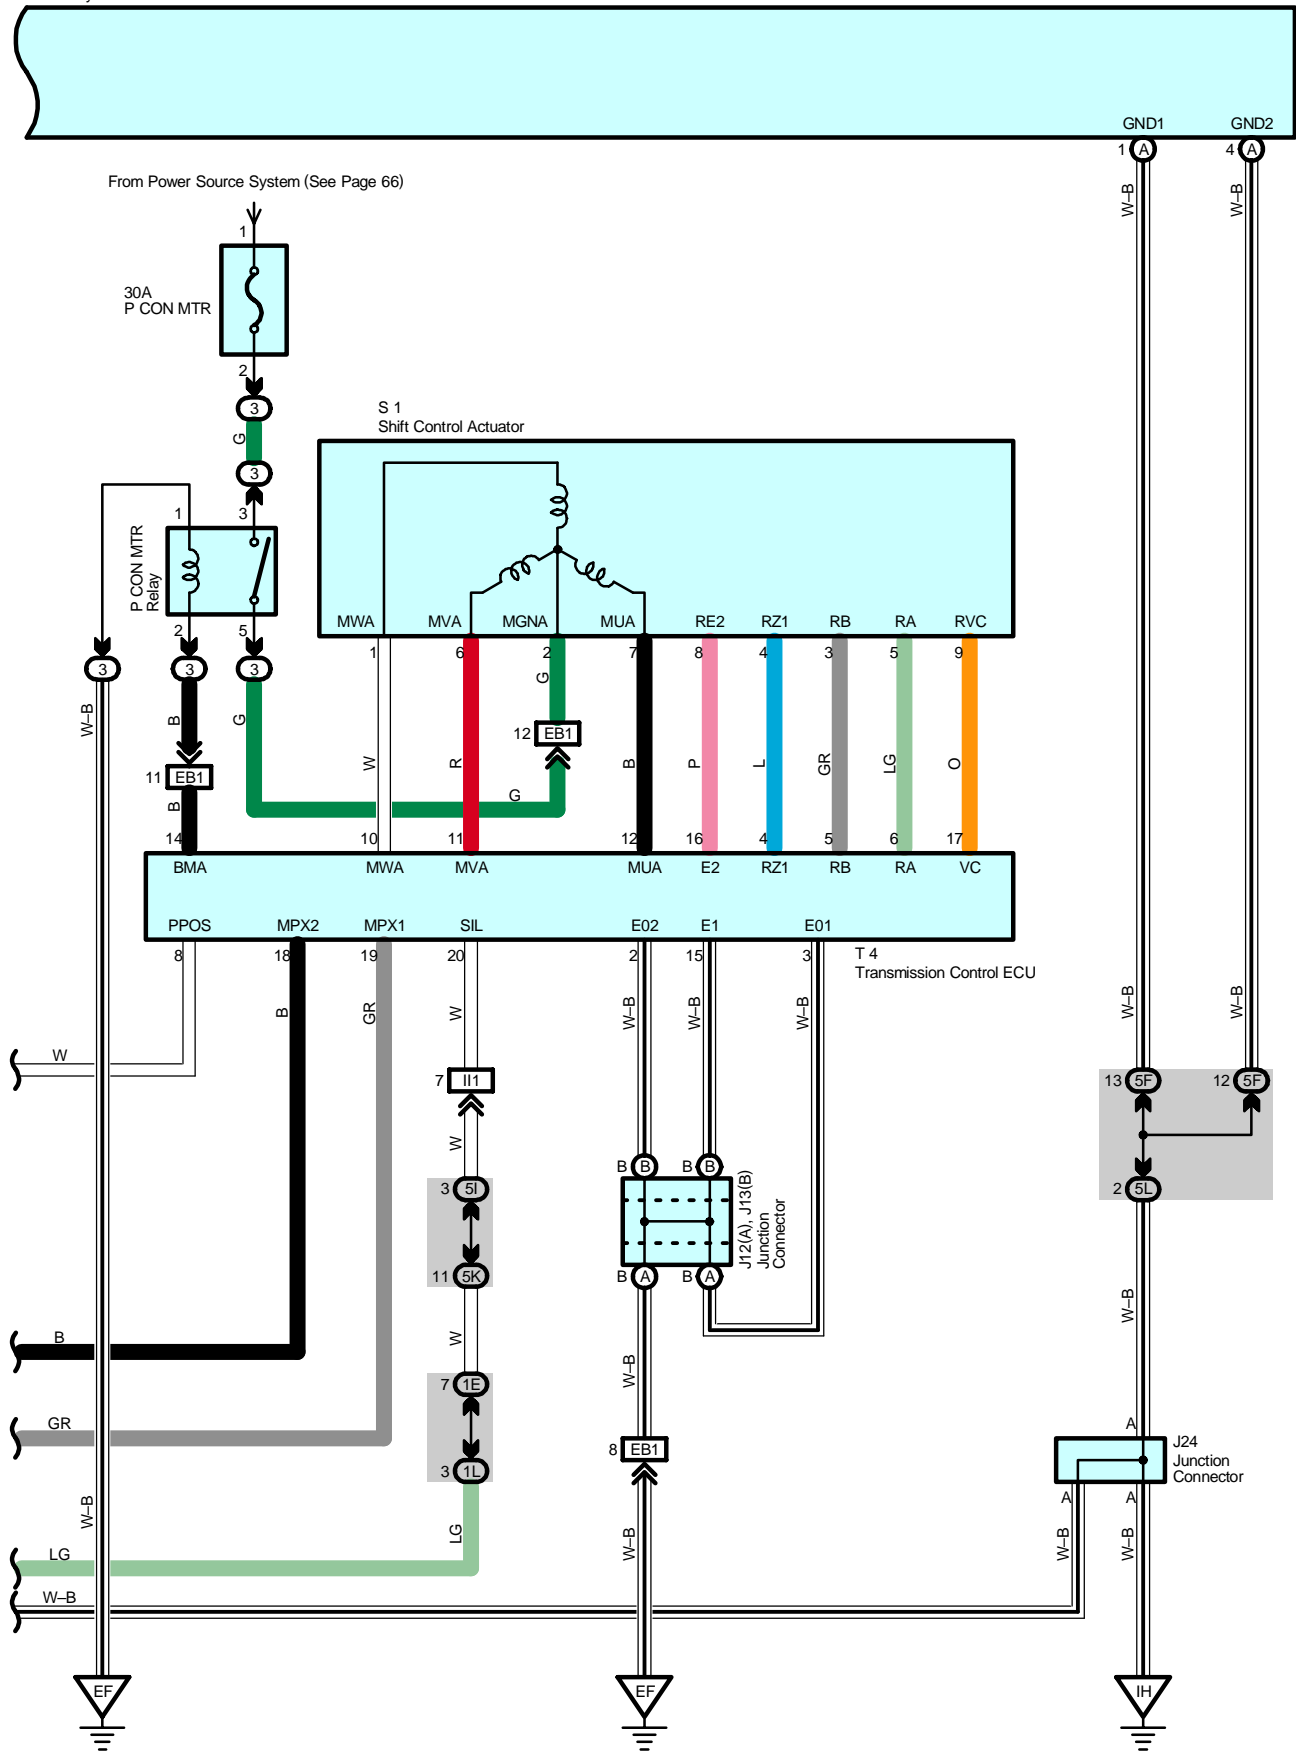

## System Outline

This is the system to change power supply mode by pushing power SW and to start hybrid system by operating power SW and brake pedal simultaneously. It also has function to hold the electrical key in the key slot and not to release the key from it unless the power supply condition and shift range position are met. If there is abnormality in the system, amber portion of power SW blinks to warn the driver.

### 1. ACC ON Operation

When the electrical key turns on half-inserted SW and deep-inserted SW after inserting in the key slot, transponder key computer activates transponder key amplifier incorporated in key slot to identify ID. After the identification, if power SW is pushed without depressing brake pedal, power source control ECU starts. The ECU confirms that the brake pedal is not depressed from signal of stop light SW and also requests transponder key computer for ID identification result. If the ID identification is normal, power source control ECU turns on ACC relay and changes indicator of power SW to green lighting. In consequence, power supply is set to ACC ON condition.

### 2. IG ON Operation

If power SW is pushed without depressing brake pedal when ACC ON, power source control ECU confirms that the brake pedal is not depressed, and then turns on IG1 relay and IG2 relay as well as change indicator of power SW to amber lighting. Power supply is IG ON condition then.

### 3. Hybrid Start-Up Operation (READY)

When the electrical key turns on half-inserted SW and deep-inserted SW after inserting in the key slot, transponder key computer activates transponder key amplifier incorporated in key slot to identify ID. After the identification, if power SW is pushed with depressing brake pedal, power source control ECU starts. The ECU confirms that the brake pedal is depressed from signal of stop light SW and also requests transponder key computer for ID identification result. If the ID identification is normal, the ECU turns on ACC relay, IG1 relay and IG2 relay, and changes indicator of power SW to amber lighting. Power supply is IG ON condition then.

After that, power source control ECU sends start-up signal to hybrid vehicle control ECU. Hybrid vehicle control ECU and transponder key computer make communication for start-up permission. Hybrid vehicle control ECU controls to start-up hybrid system (READY).

At starting up hybrid system, power source control ECU controls to light off indicator of power SW.

### 4. Power Supply Off Operation

\* When shift range is in P range

If power SW is pushed with power supply at READY condition while the vehicle is stationary, power source control ECU confirms that shift range is in P range, and then turns off ACC relay, IG1 relay and IG2 relay to put power supply in OFF condition. The ECU also controls to light off indicator of power SW.

If power SW is pushed with power supply at IG ON condition and without depressing brake pedal while the vehicle is stationary, power source control ECU confirms that shift range is in P range, and then turns off ACC relay, IG1 relay and IG2 relay to put power supply in OFF condition. The ECU also controls to light off indicator of power SW.

If electrical key is taken off from key slot with power supply at ACC ON condition while the vehicle is stationary, power source control ECU controls to put power supply in OFF condition automatically, which lights off indicator of power SW.

\* When shift range is in other than P range

If power SW is pushed with power supply at IG ON (Including READY) condition while the vehicle is stationary, parking lock operation is carried out. After that, power source control ECU confirms that shift range is in P range and then turns off ACC relay, IG1 relay and IG2 relay to put power supply in OFF condition. The ECU controls to light off indicator of power SW.

### 5. Key Interlock Operation

Power source control ECU controls to hold the electrical key in the key slot and not to release the key from it unless the power supply condition and shift range position are met. Power supply condition and shift range position during the key interlock in operation are as follows;

\* At starting-up hybrid system

\* At power supply at IG ON

\* At power supply at ACC ON and shift range at other than P range

### 6. Emergency Stop Operation of Hybrid System

If power SW is kept pushed more than three seconds during driving, hybrid system stops and power supply is changed to ACC ON.

### 7. Power Supply Resuming Control

Power source control ECU always stores power supply condition (OFF, ACC ON, IG ON)

When power supply is resumed after shutting off power supply by disconnecting battery terminal, original power supply condition returns due to control of power source control ECU.



# Push Button Start System and Hybrid Vehicle Immobilizer System

## Service Hints

### P6 Power Source Control ECU

12, 33–Ground : Always approx. 12 volts

34, 35–Ground : Approx. 12 volts with the power SW at IG ON position

11–Ground : Approx. 12 volts with the power SW at ACC ON or IG ON position

6–Ground : Always continuity

1–Ground : Approx. 12 volts with the brake pedal depressed

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A8	46	H17   D	47	K2   A	48
A12	46	J3	45	K3   B	48
B5   A	46	J6	48	M13	48
C7	44	J9	48	P6	49
C10	47	J10	48	P11	49
D1	47	J12   A	48	S1	45
D7	50	J13   B	48	S7   A	49
E4   A	47	J14	48	S8   B	49
E6   C	47	J15	48	S9   C	49
E7   D	47	J16	48	S10   D	49
G1	47	J17	48	S11	49
H14   A	47	J18	48	S16	49
H15   B	47	J24	48	T4	49
H16   C	47	J25	48	T5	49

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	22	Engine Room R/B (Engine Compartment Left)

 : **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1B		
1D		
1E	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1F		
1G		
1J		
1K		
1L		
1M		
3D	22	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
3I		
3J		
4C	36	Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4D		
4E		
4F		
4G		
4H		
4I		
4J		
4L		
5C	40	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5D		
5E		
5F		
5G		
5H		
5I		
5J		
5K		
5L		
5M		

 : **Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB1	54	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B)
IA1	56	Engine Room Main Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)
IA3		
IG1	58	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the Combination Meter)
IG2		
II1	58	Engine Wire and Instrument Panel Wire (Behind the Glove Box)

 : **Ground Points**

Code	See Page	Ground Points Location
EC	54	Engine Block
EE	54	Left Side of the Suspension Tower
EF		
IH	56	Cowl Side Panel LH
II	56	Instrument Panel Brace LH

# Push Button Start System and Hybrid Vehicle Immobilizer System

---




: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I3	<a href="#">58</a>	Engine Wire			






H14(A), H15(B), H16(C), H17(D)  
Hybrid Vehicle Control ECU

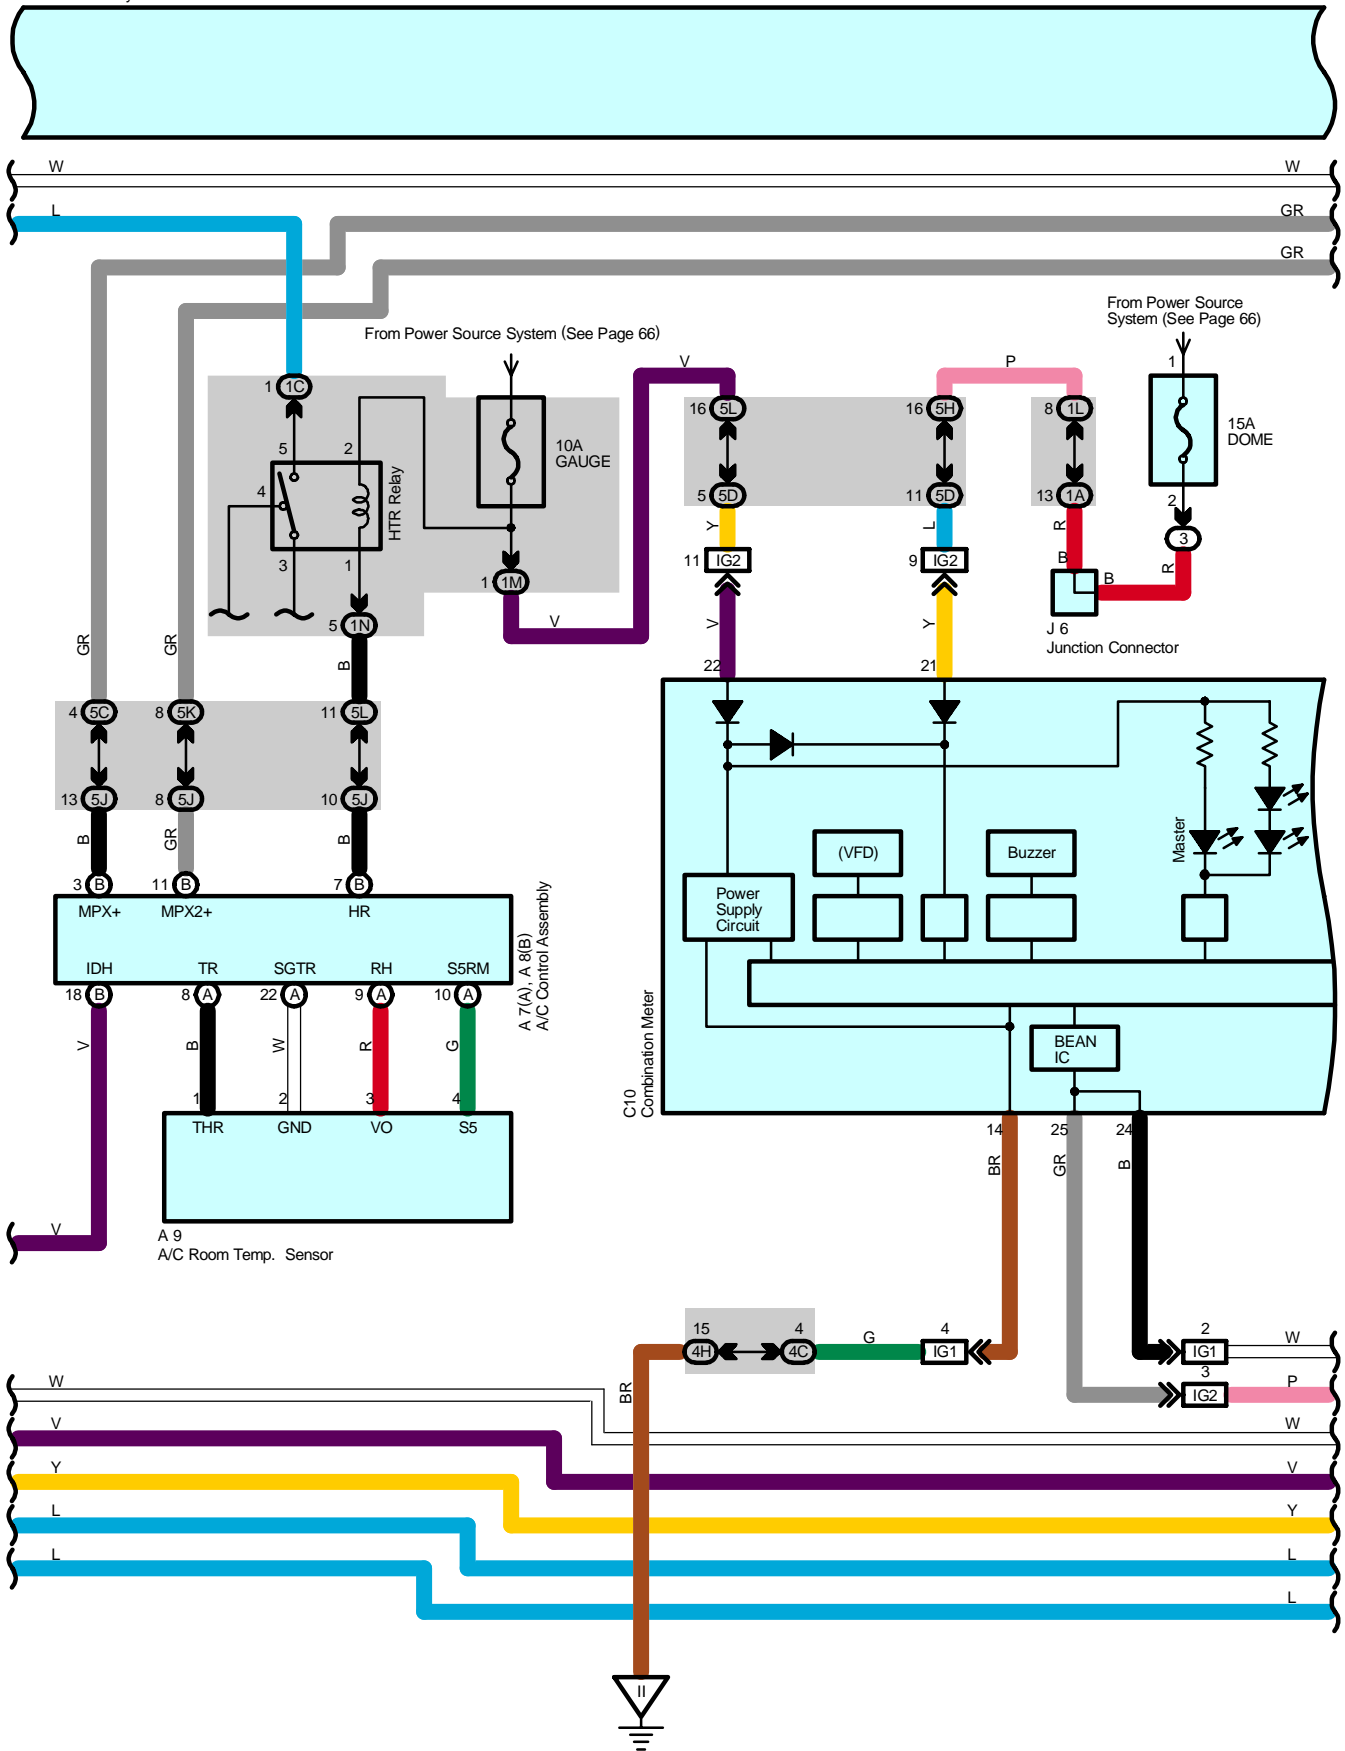




H14(A), H15(B), H16(C), H17(D)  
Hybrid Vehicle Control ECU

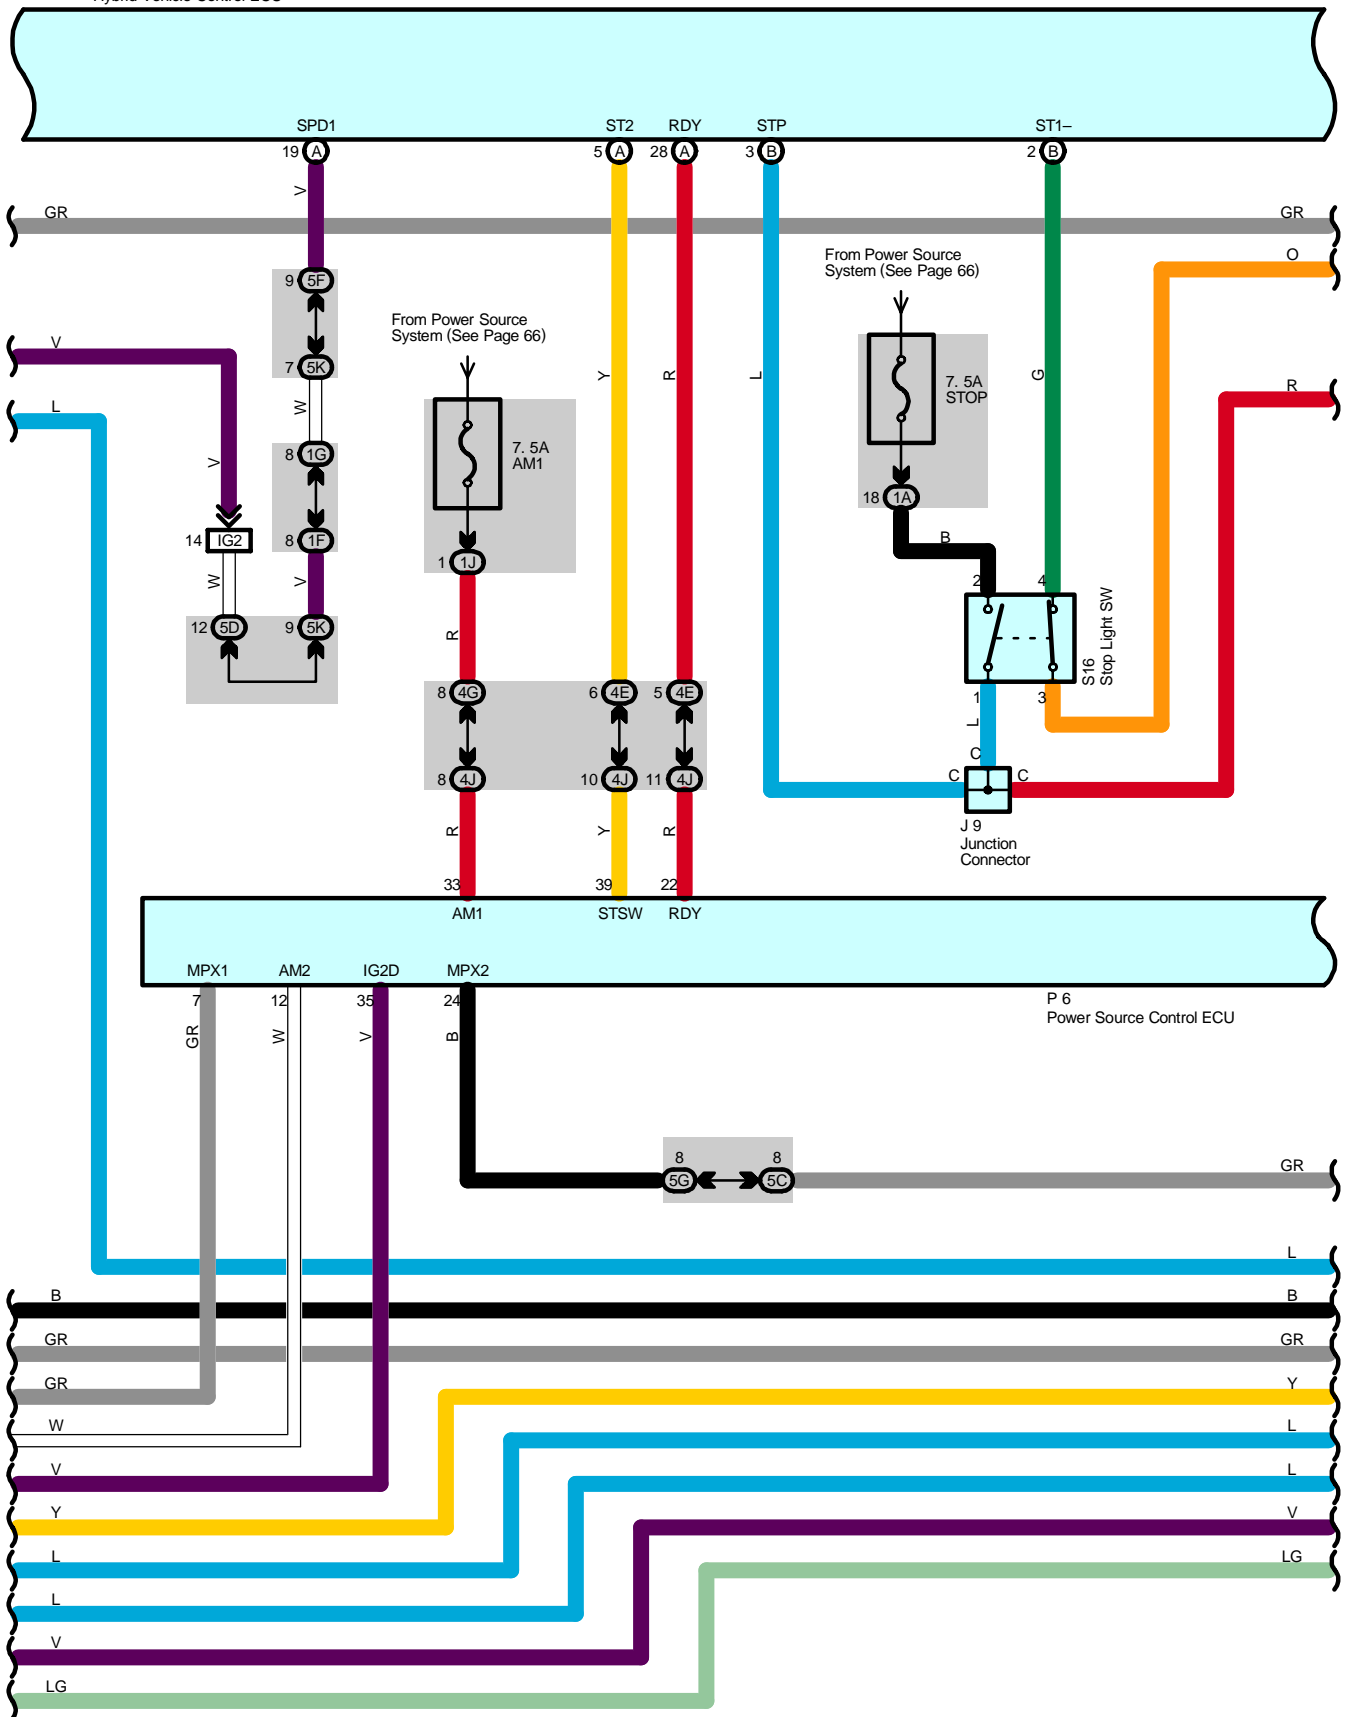




# TOYOTA Hybrid System

H14(A), H15(B), H16(C), H17(D)  
Hybrid Vehicle Control ECU

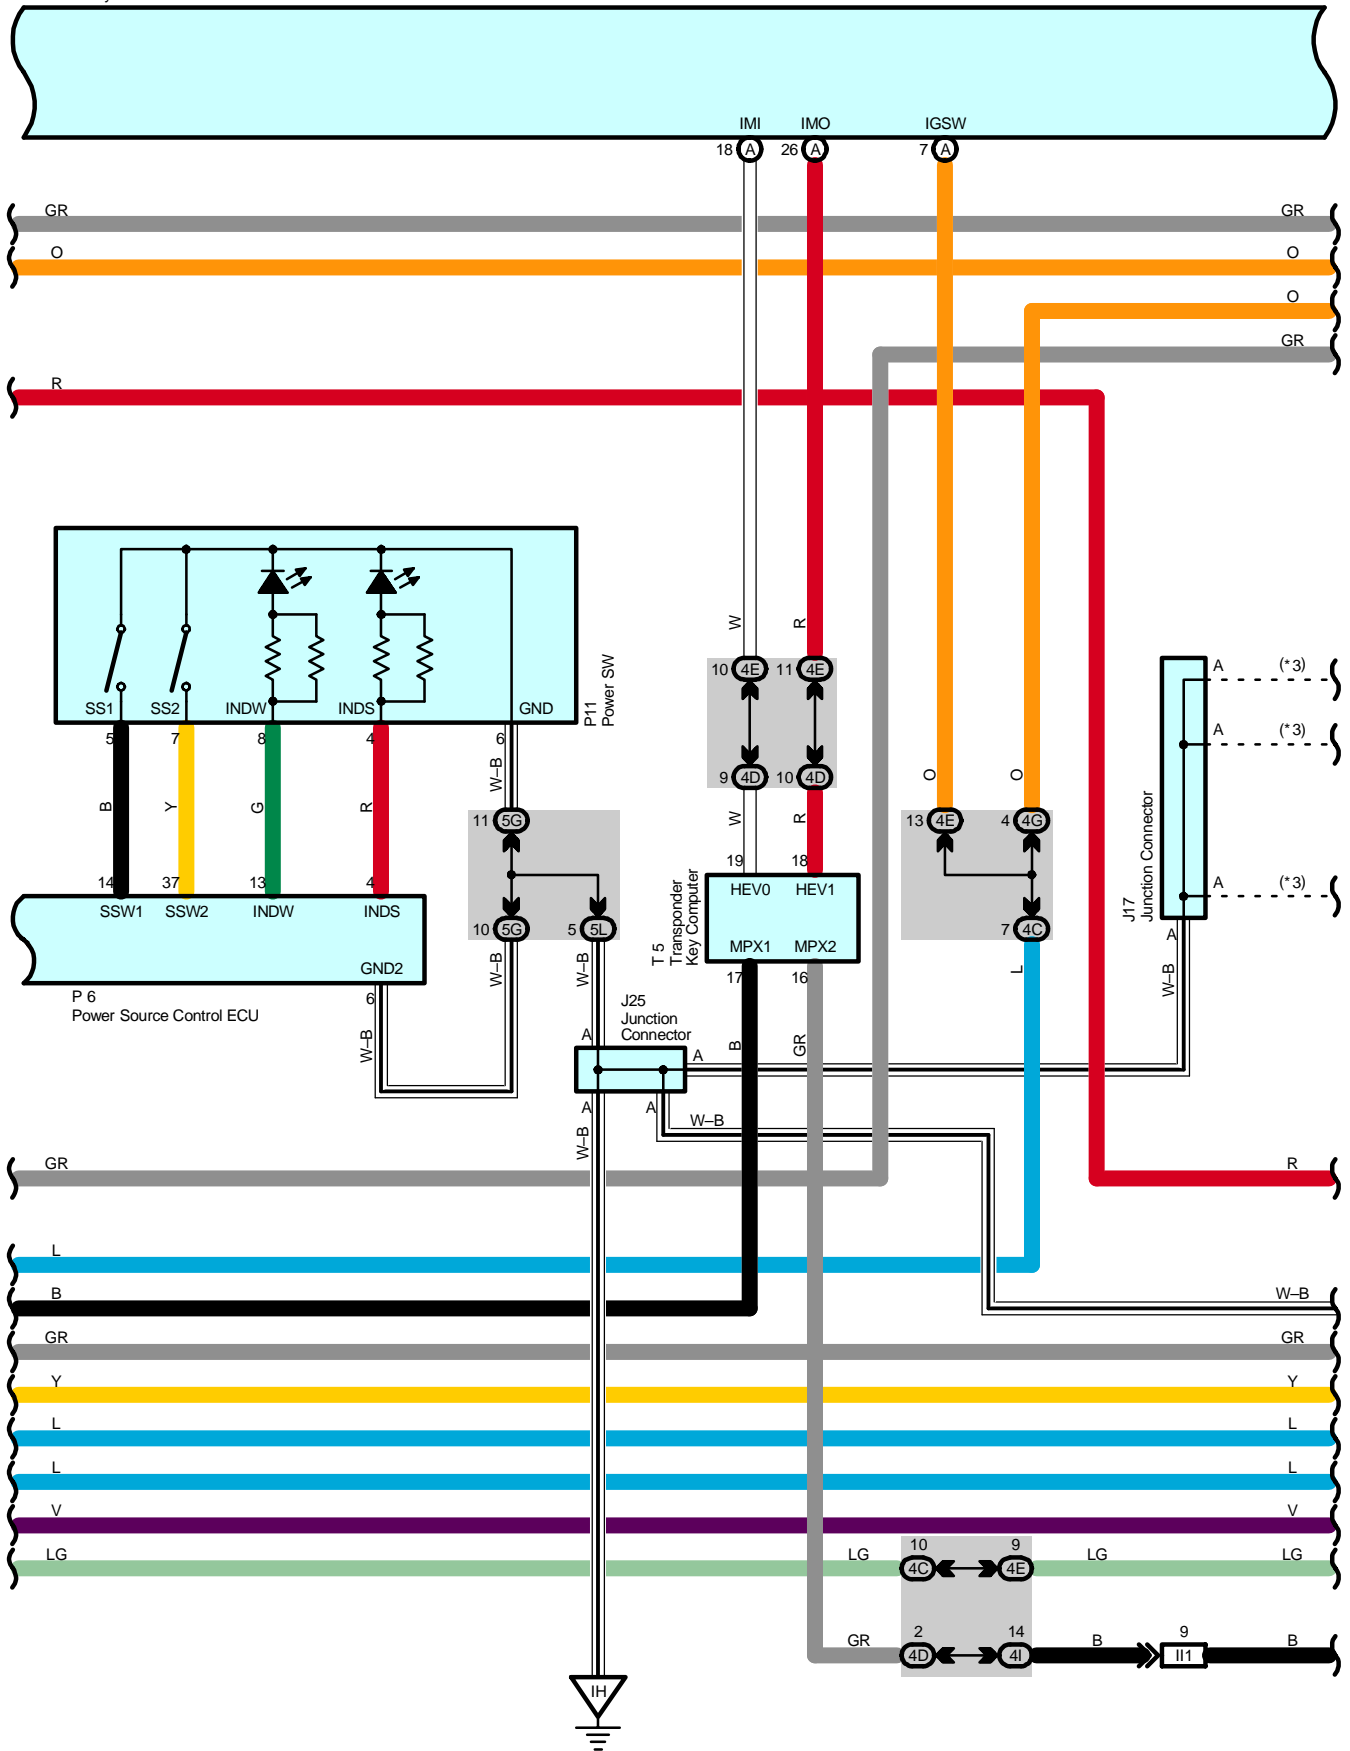


H14(A), H15(B), H16(C), H17(D)  
Hybrid Vehicle Control ECU

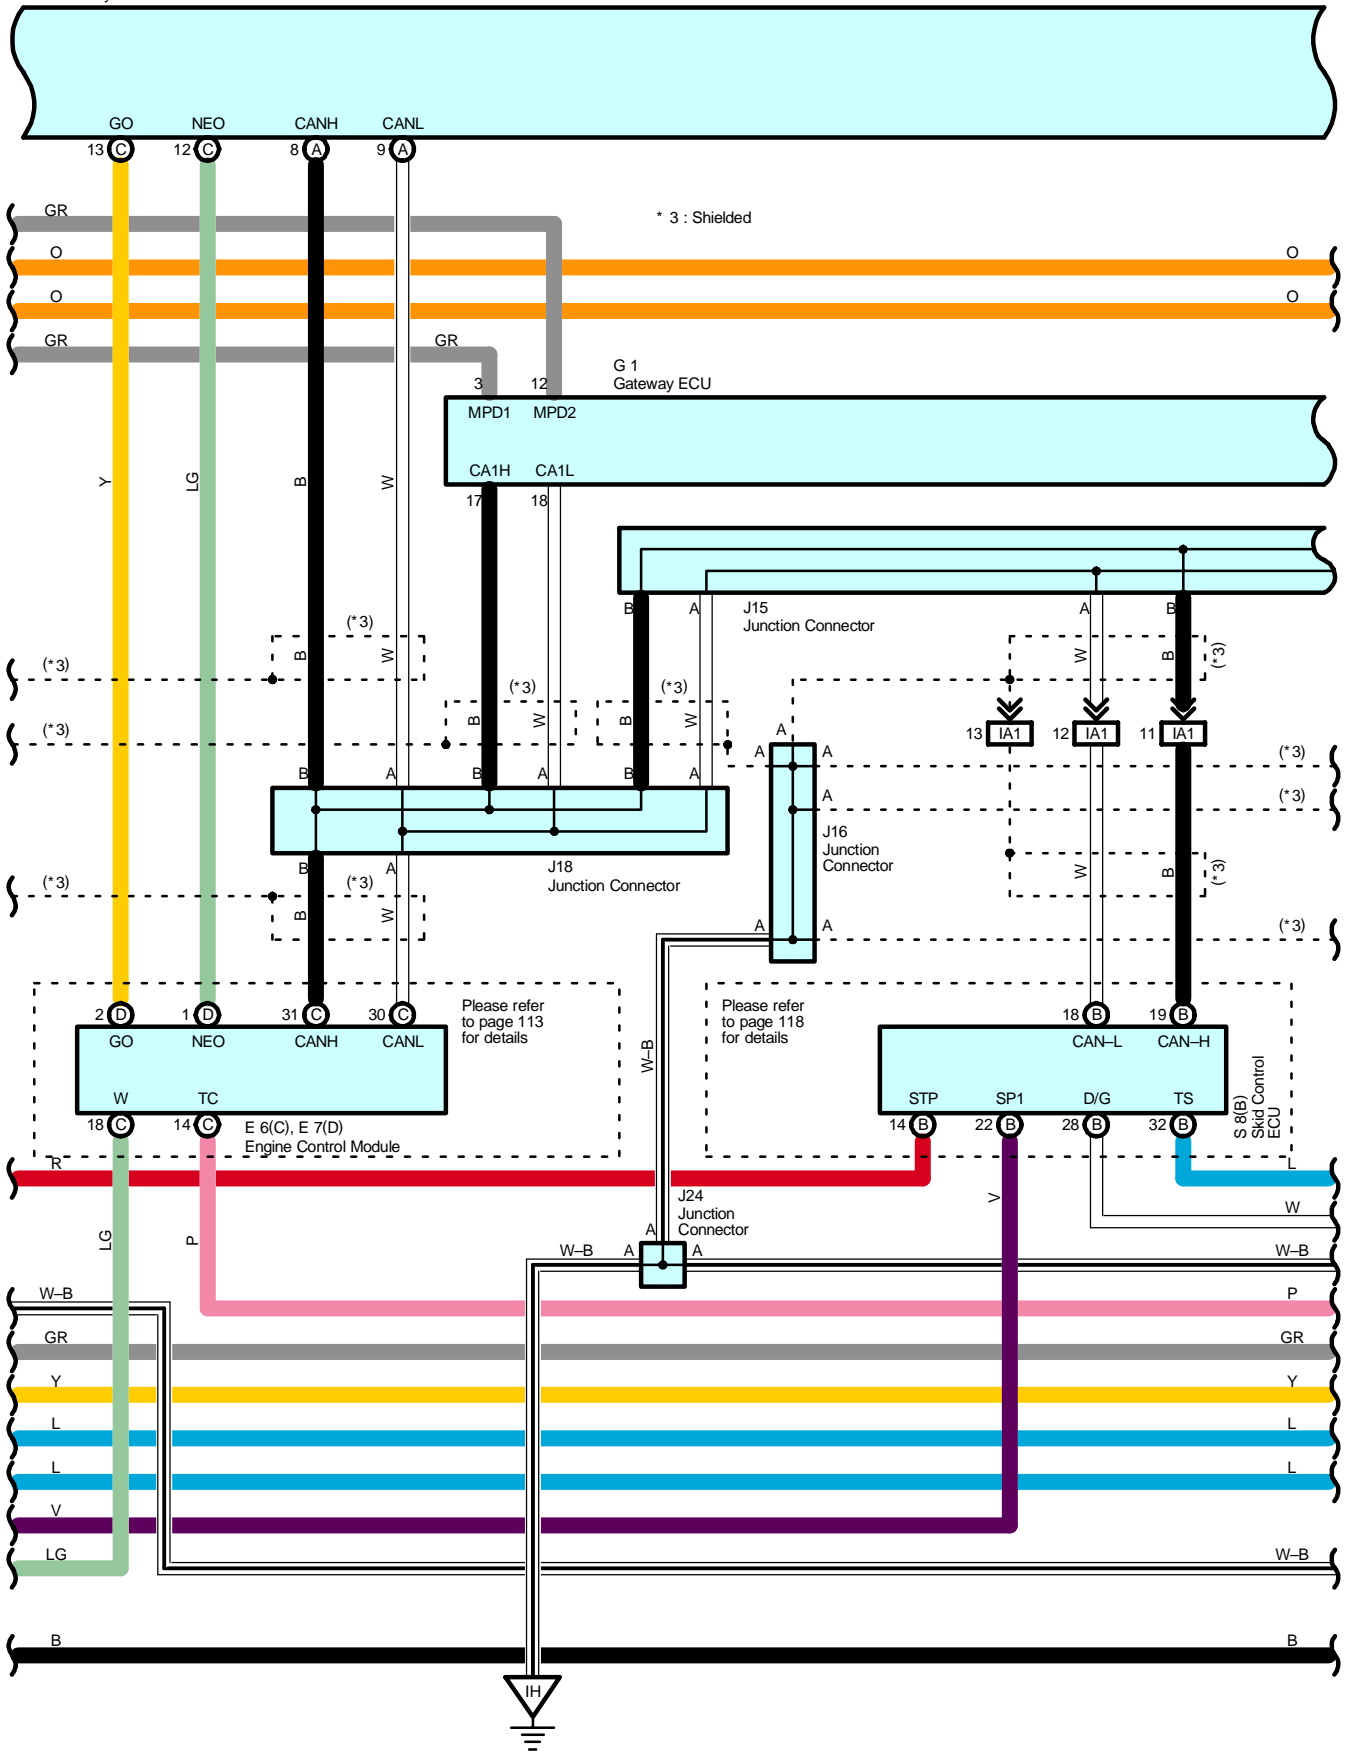


# TOYOTA Hybrid System

H14(A), H15(B), H16(C), H17(D)  
Hybrid Vehicle Control ECU

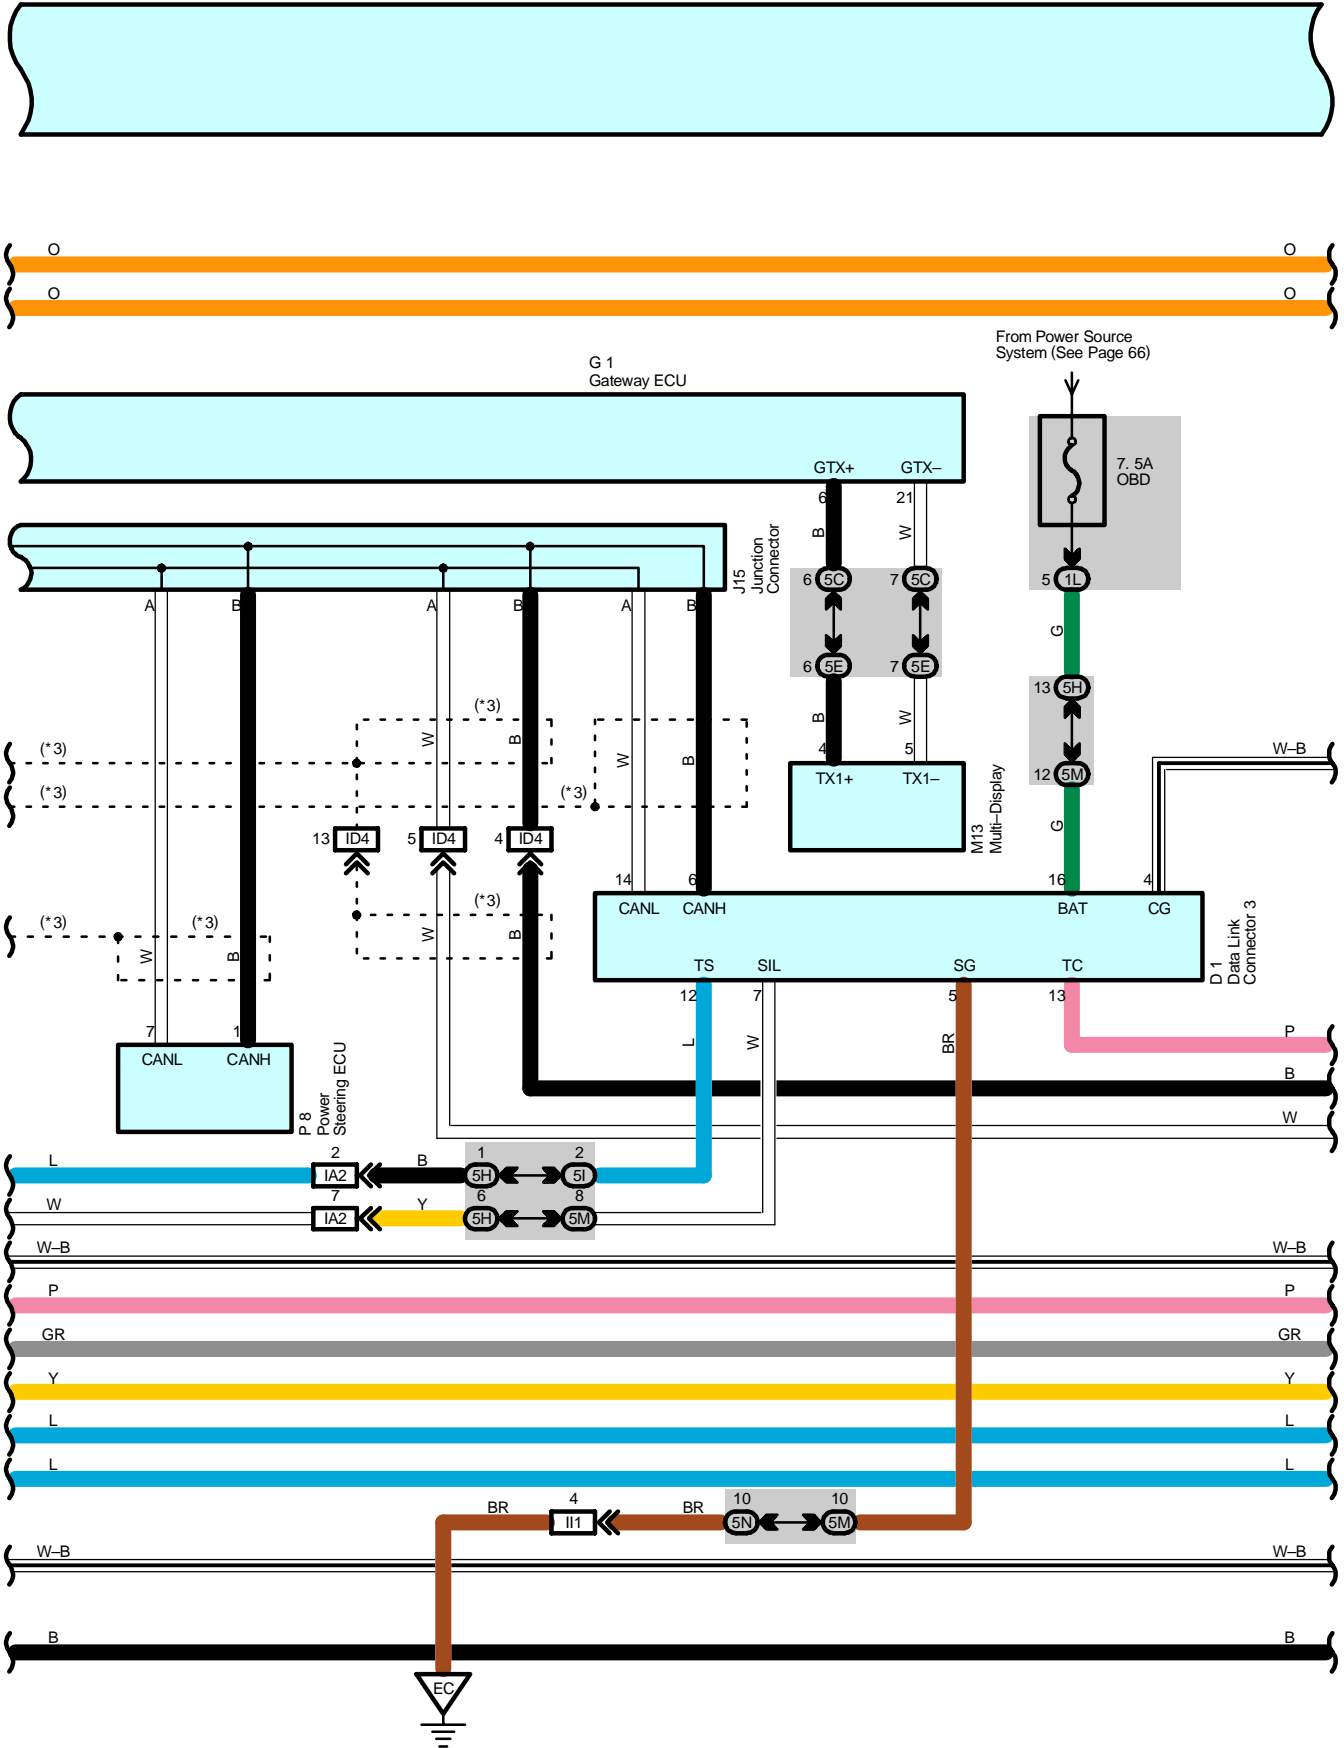


H14(A), H15(B), H16(C), H17(D)  
Hybrid Vehicle Control ECU

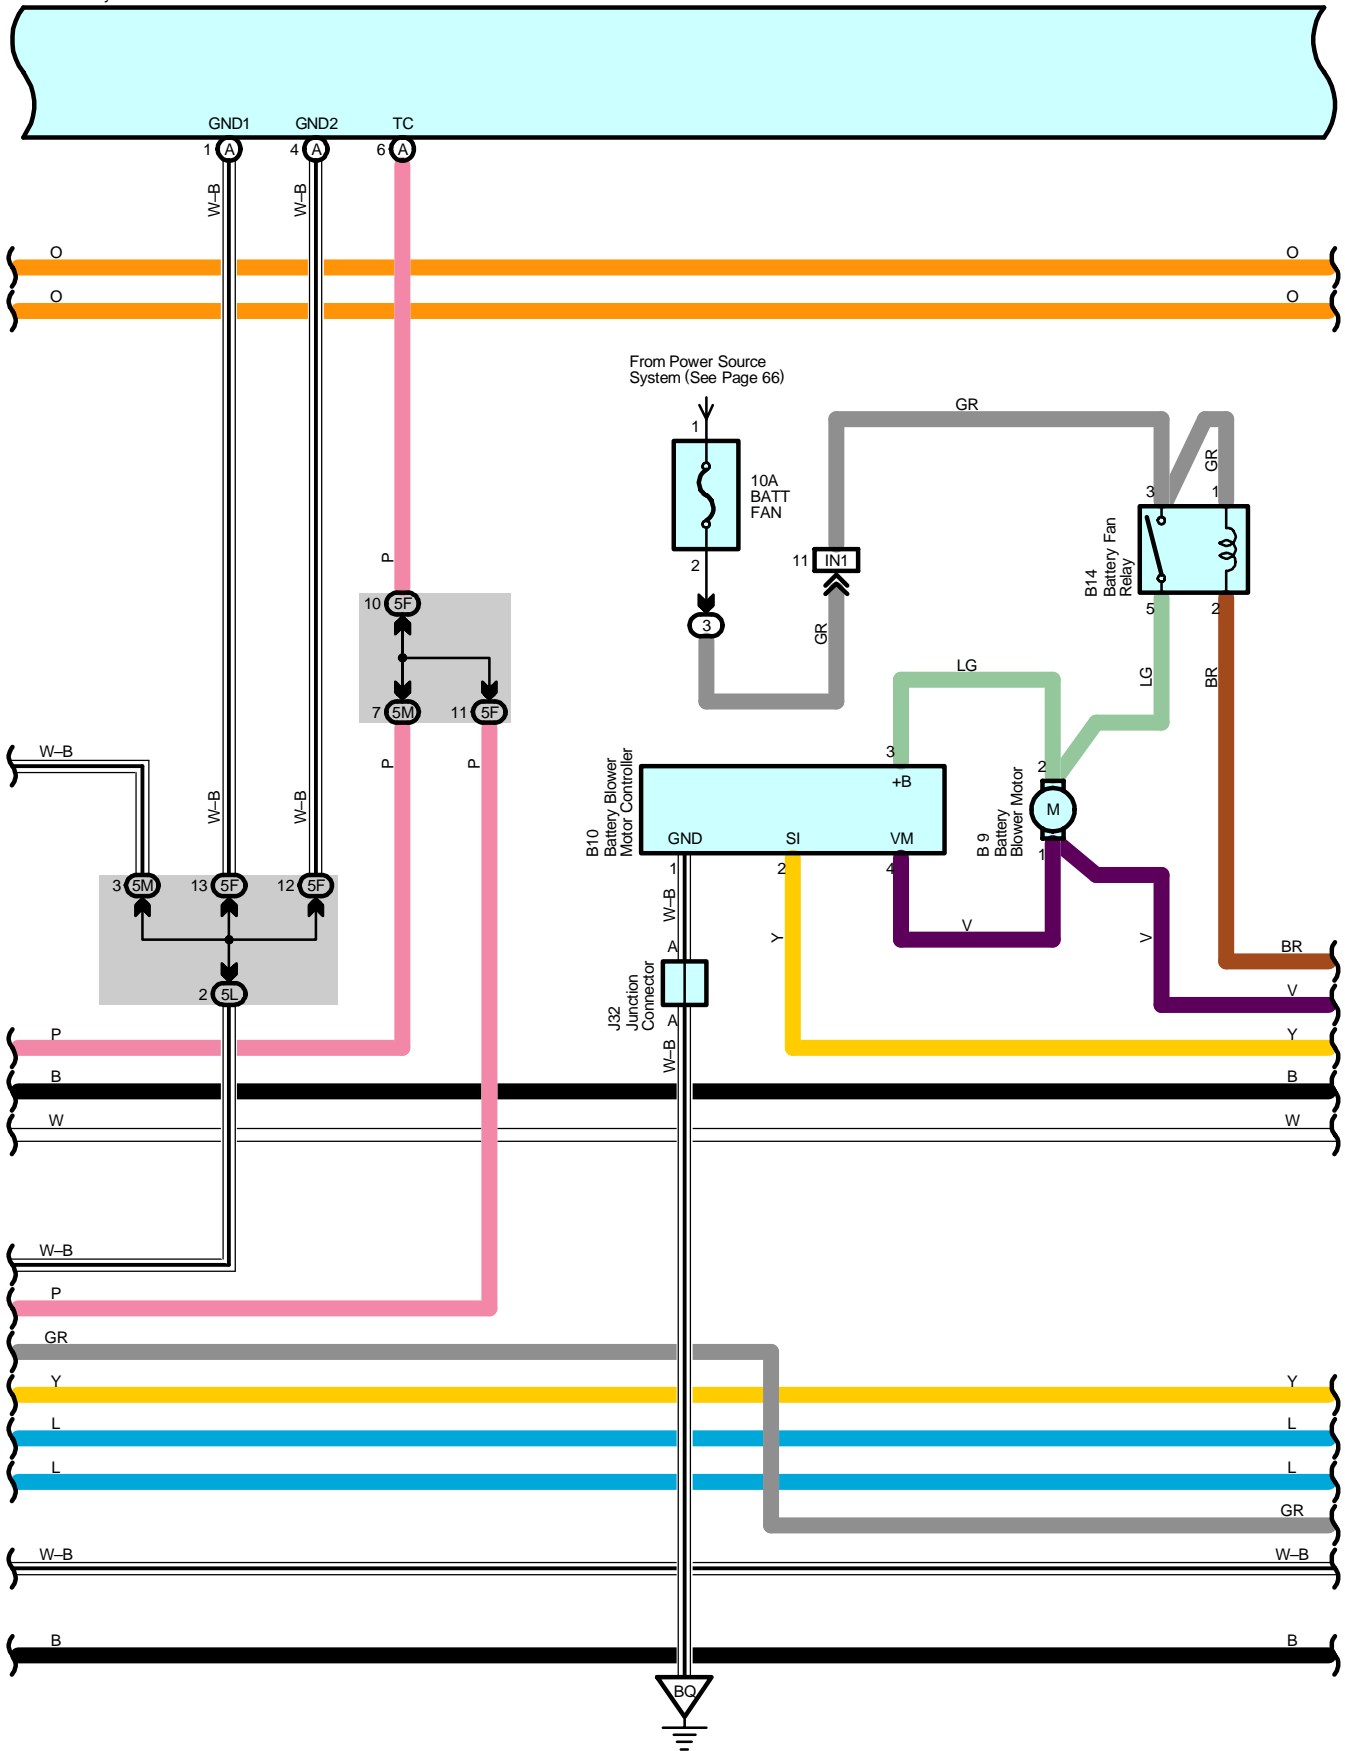


# TOYOTA Hybrid System

H14(A), H15(B), H16(C), H17(D)  
Hybrid Vehicle Control ECU

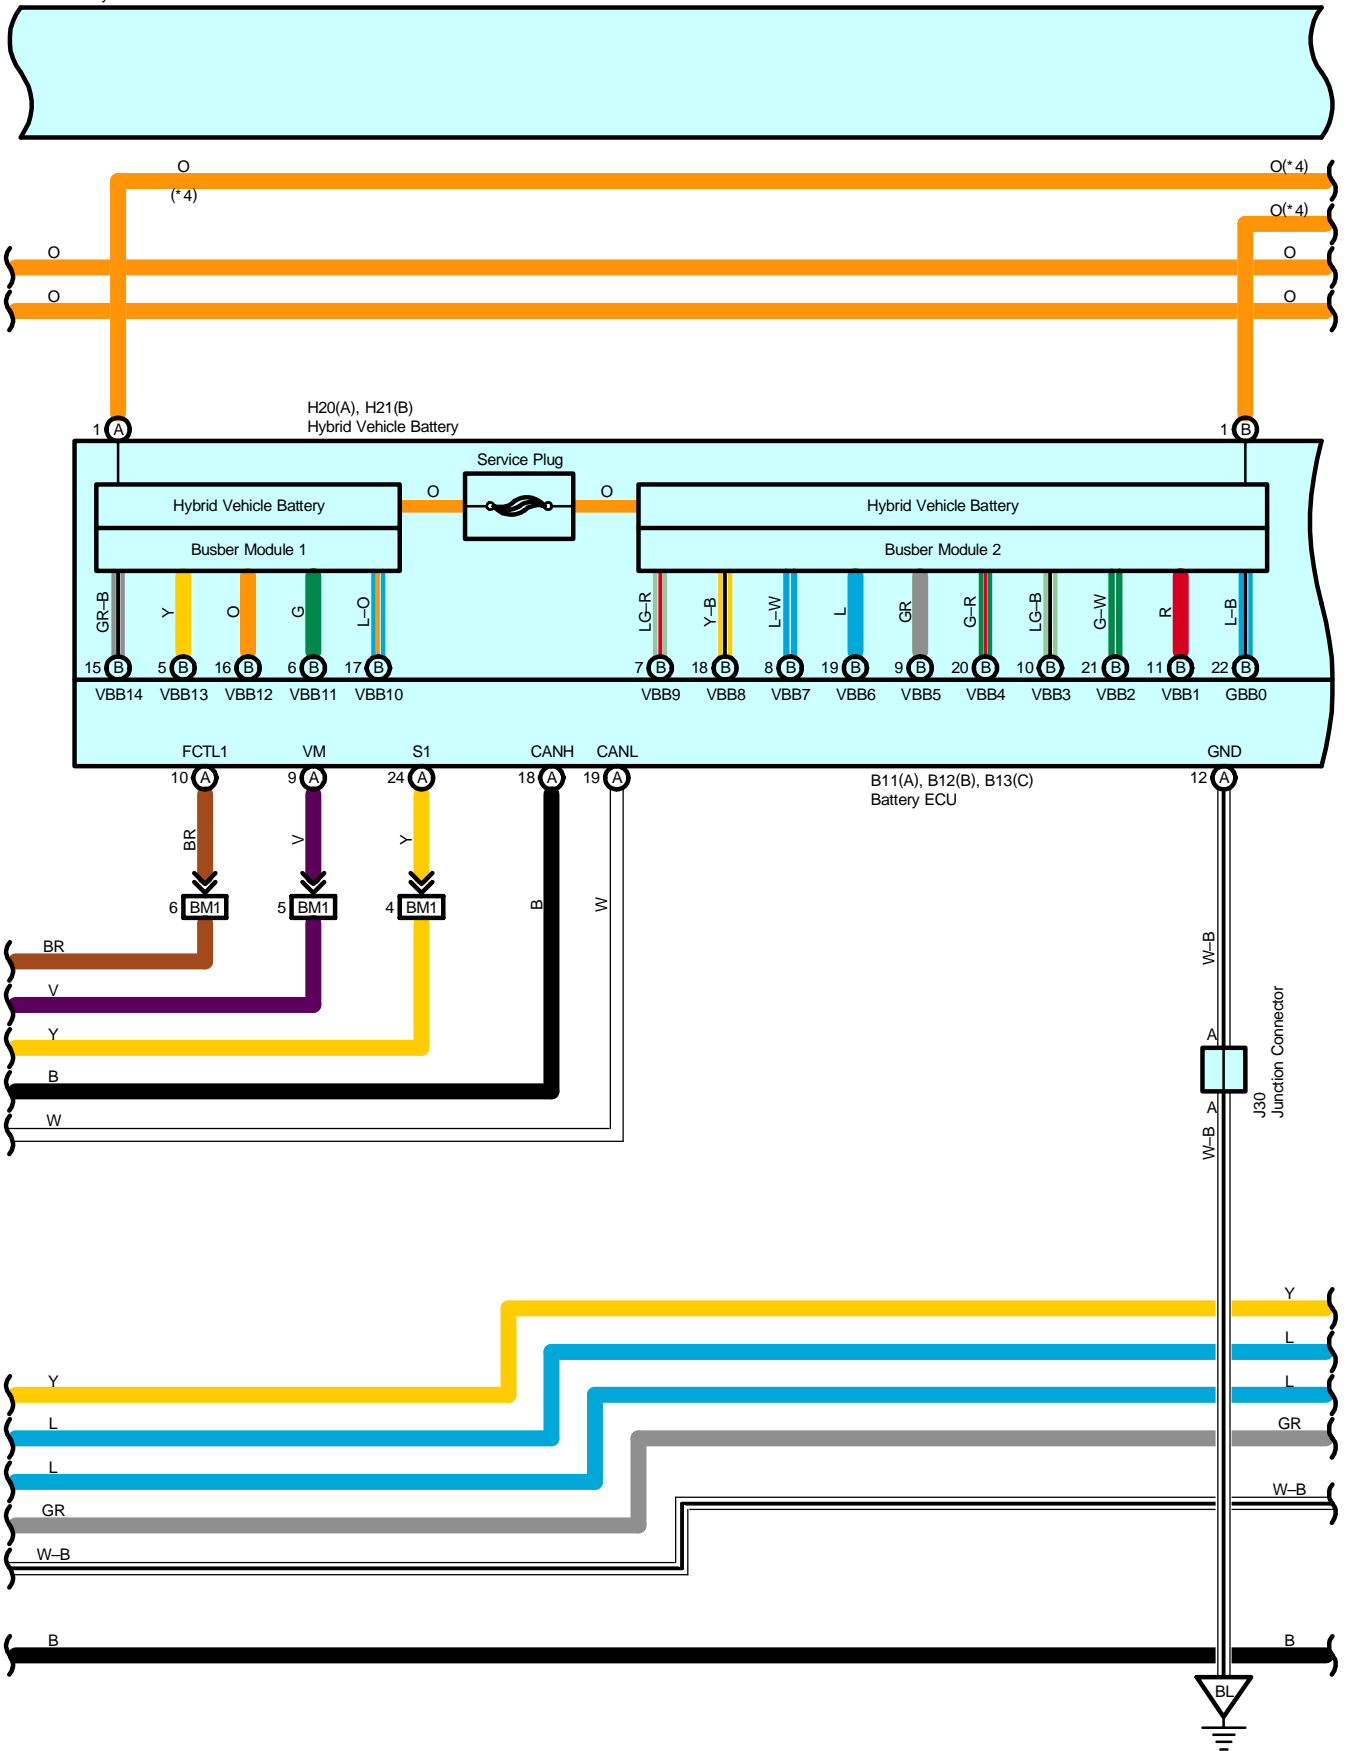


H14(A), H15(B), H16(C), H17(D)  
Hybrid Vehicle Control ECU

\* 4 : High Voltage

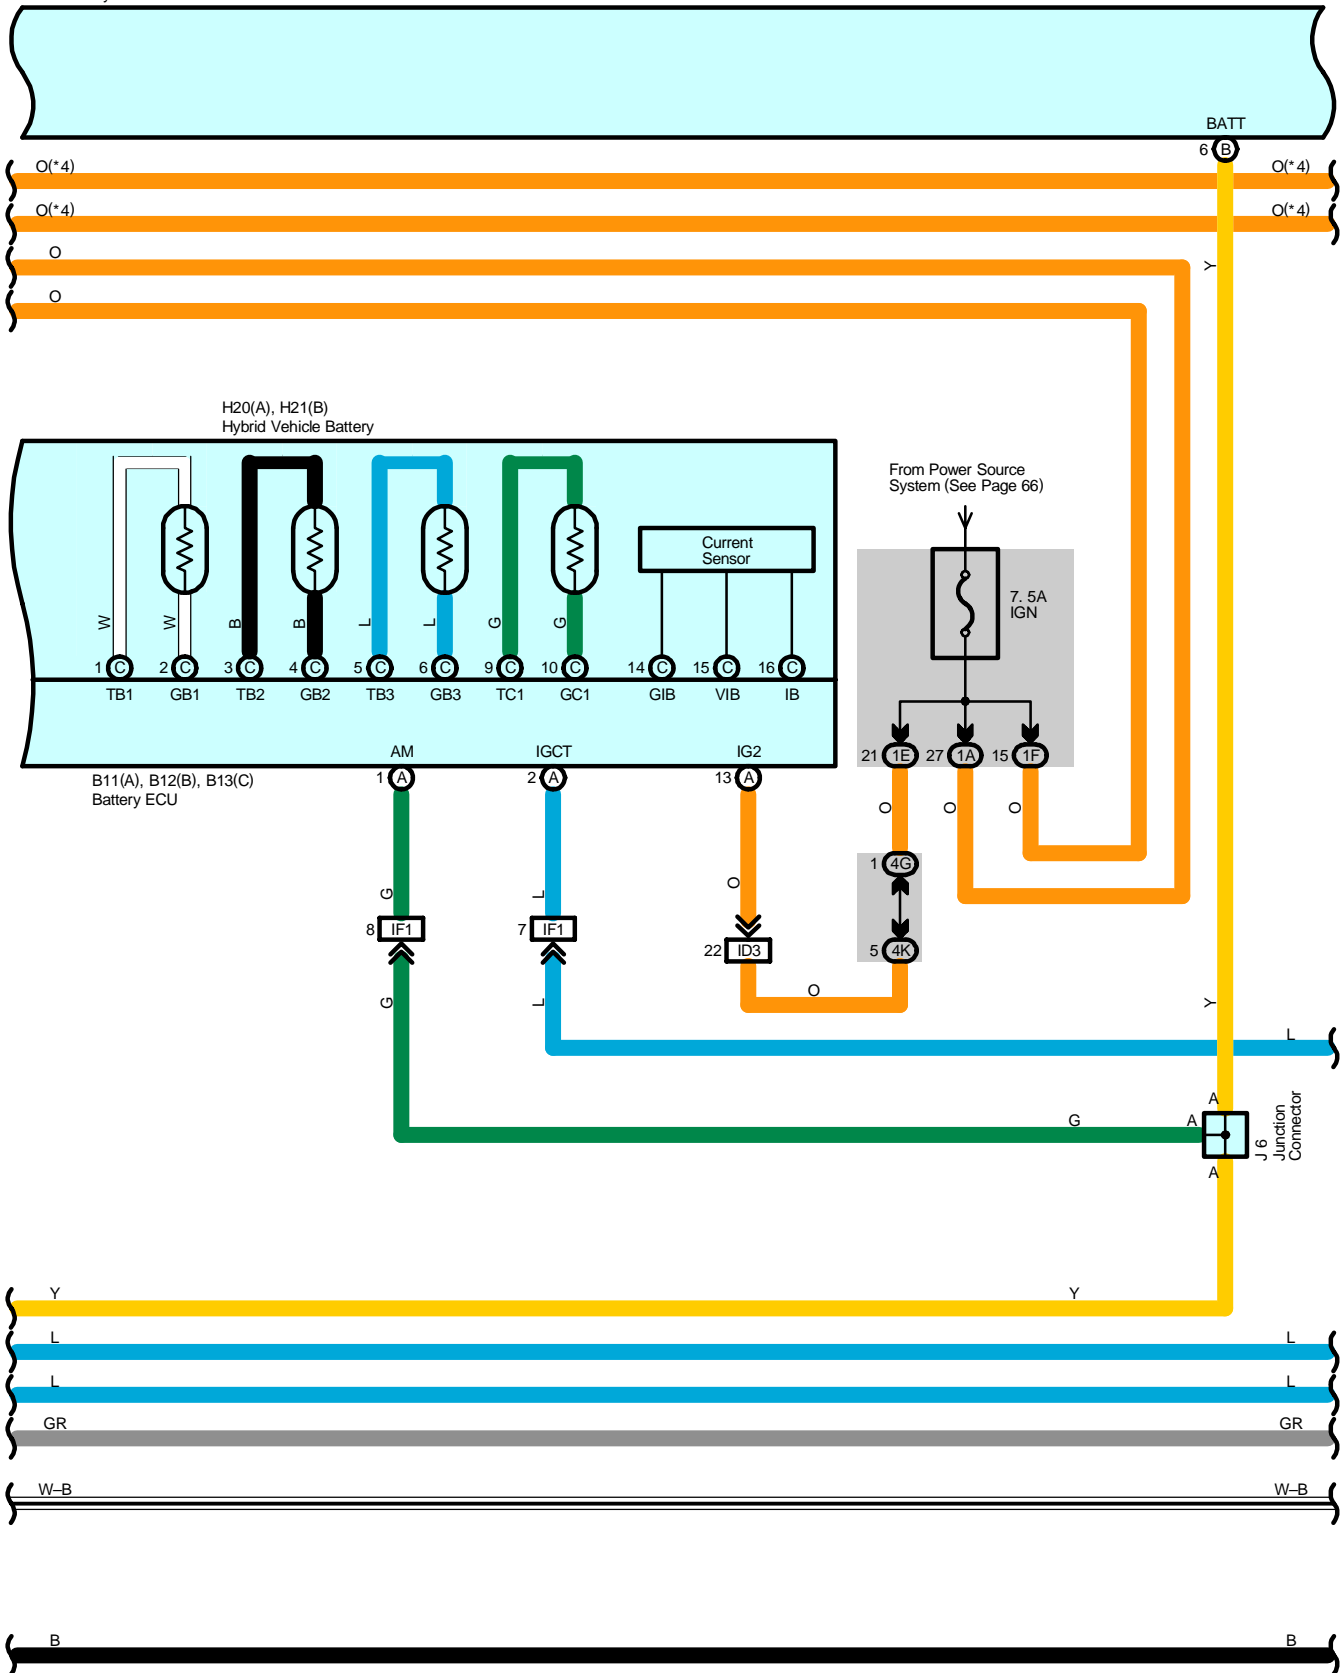


# TOYOTA Hybrid System

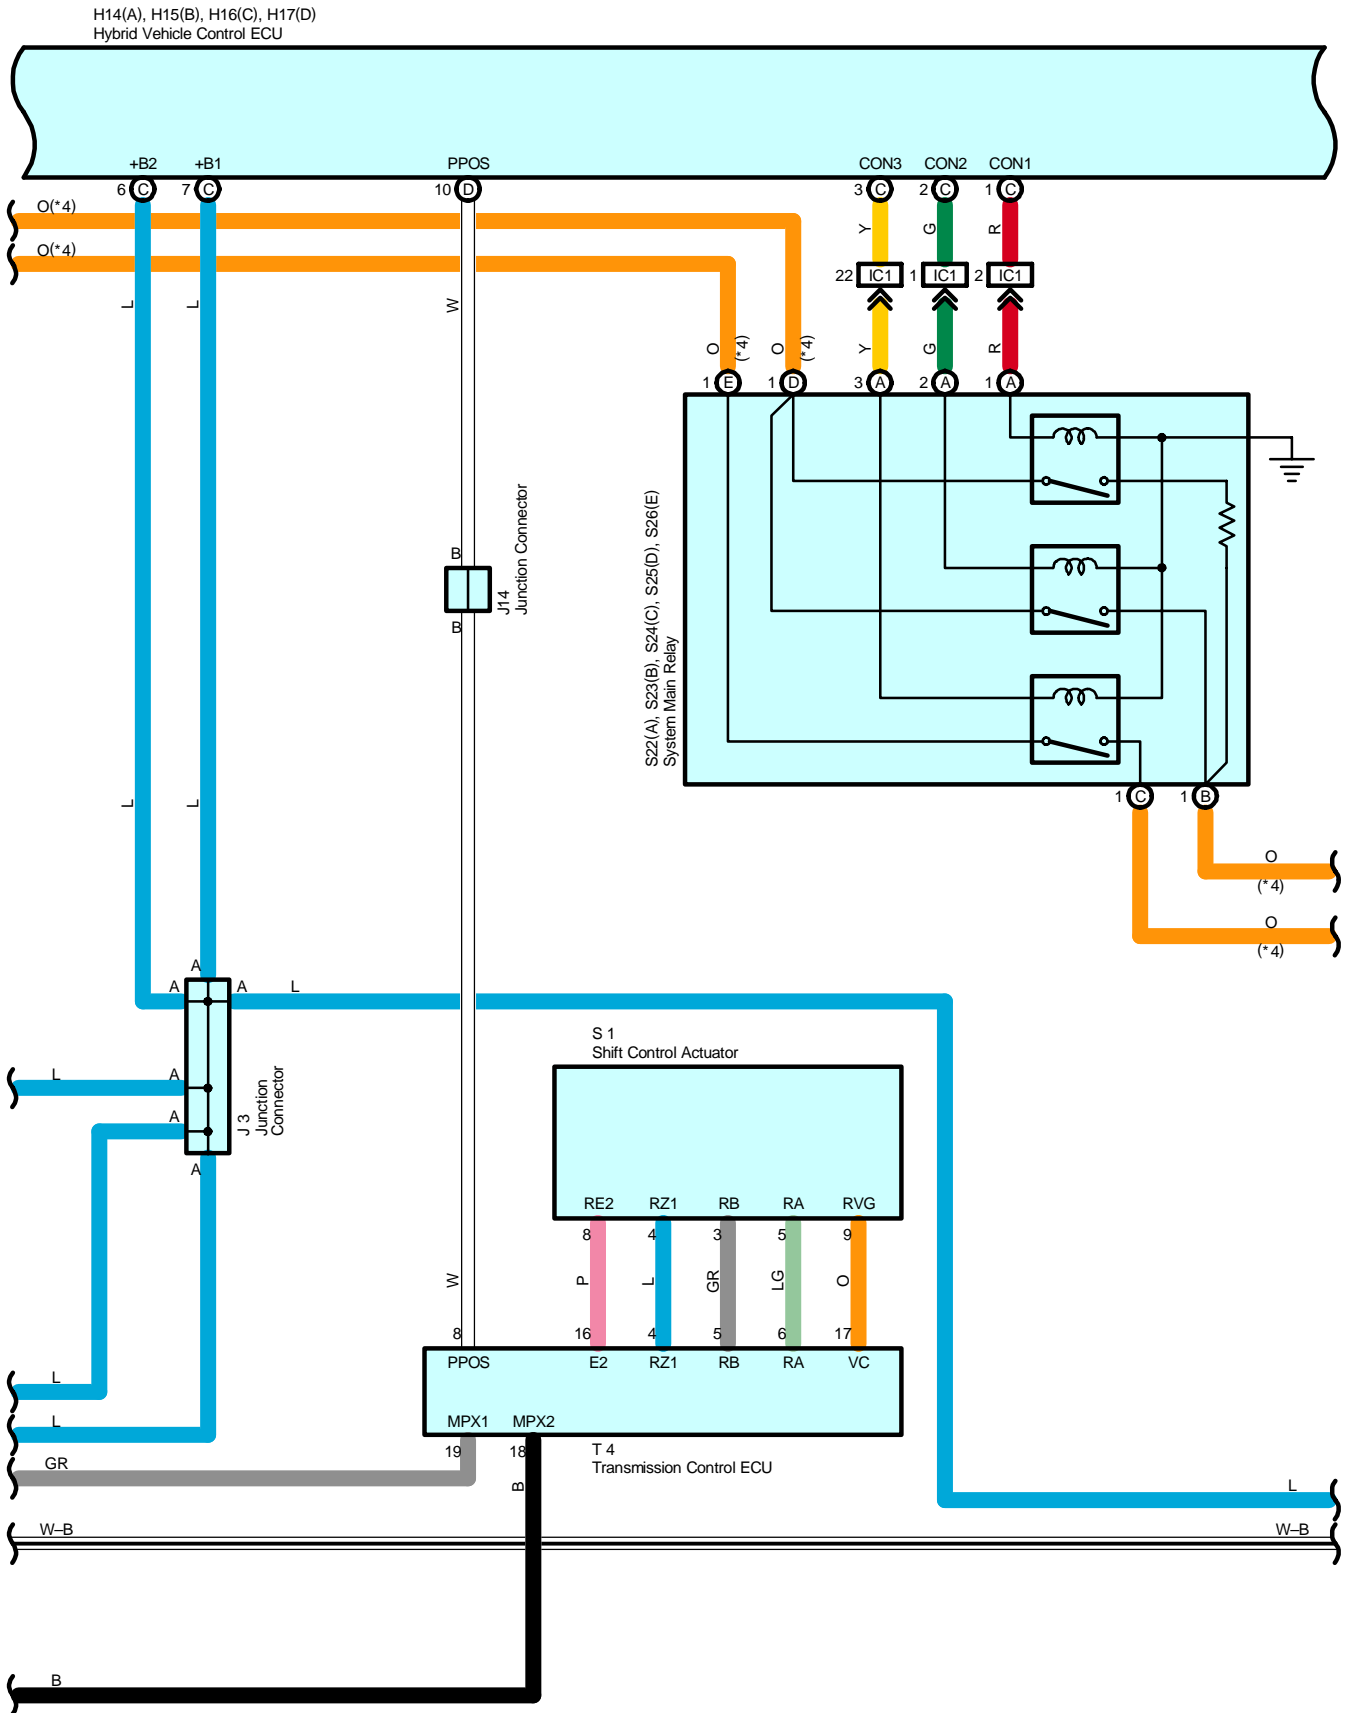

H14(A), H15(B), H16(C), H17(D)  
Hybrid Vehicle Control ECU

\* 3 : Shielded  
\* 4 : High Voltage

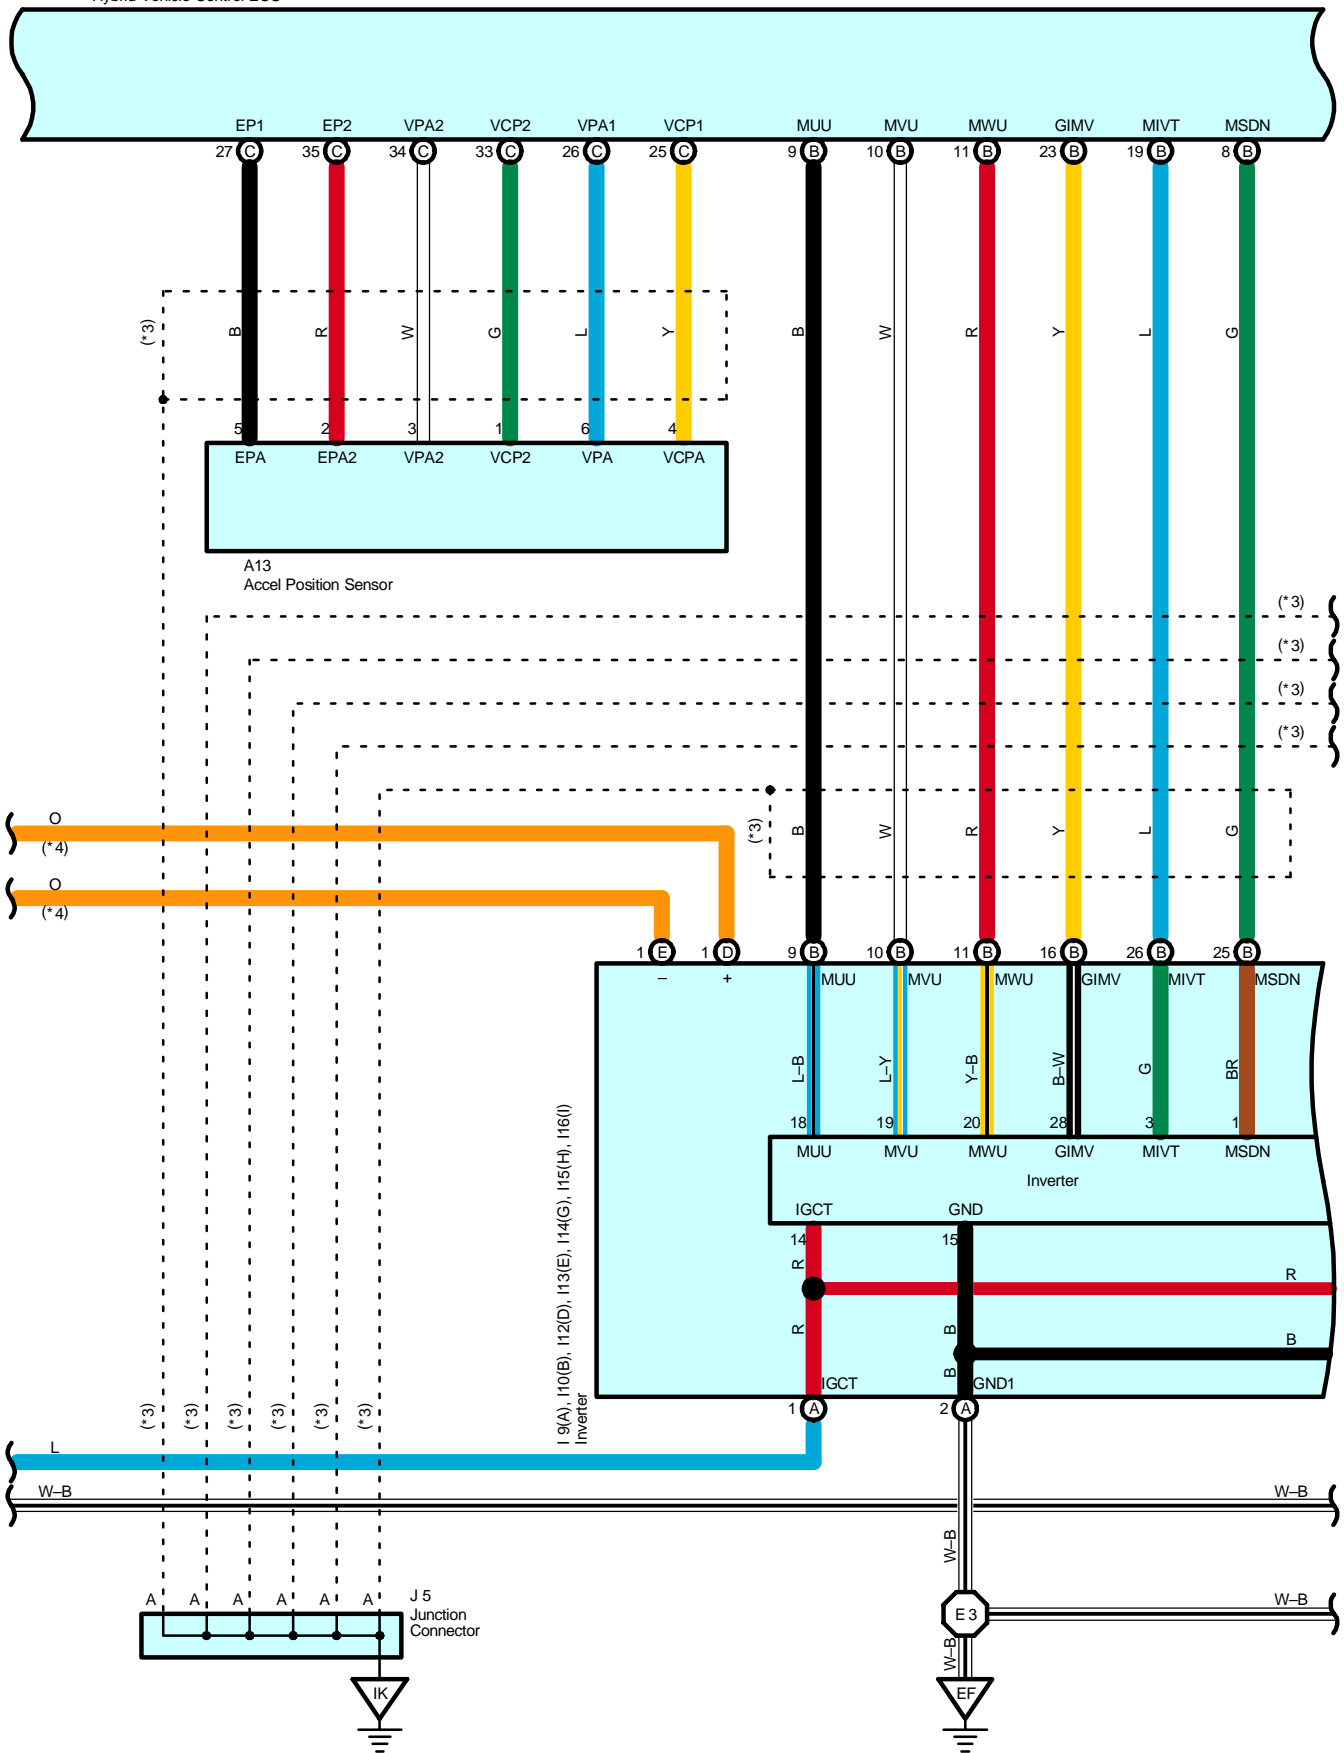




# TOYOTA Hybrid System


\* 3 : Shielded

H14(A), H15(B), H16(C), H17(D)  
Hybrid Vehicle Control ECU

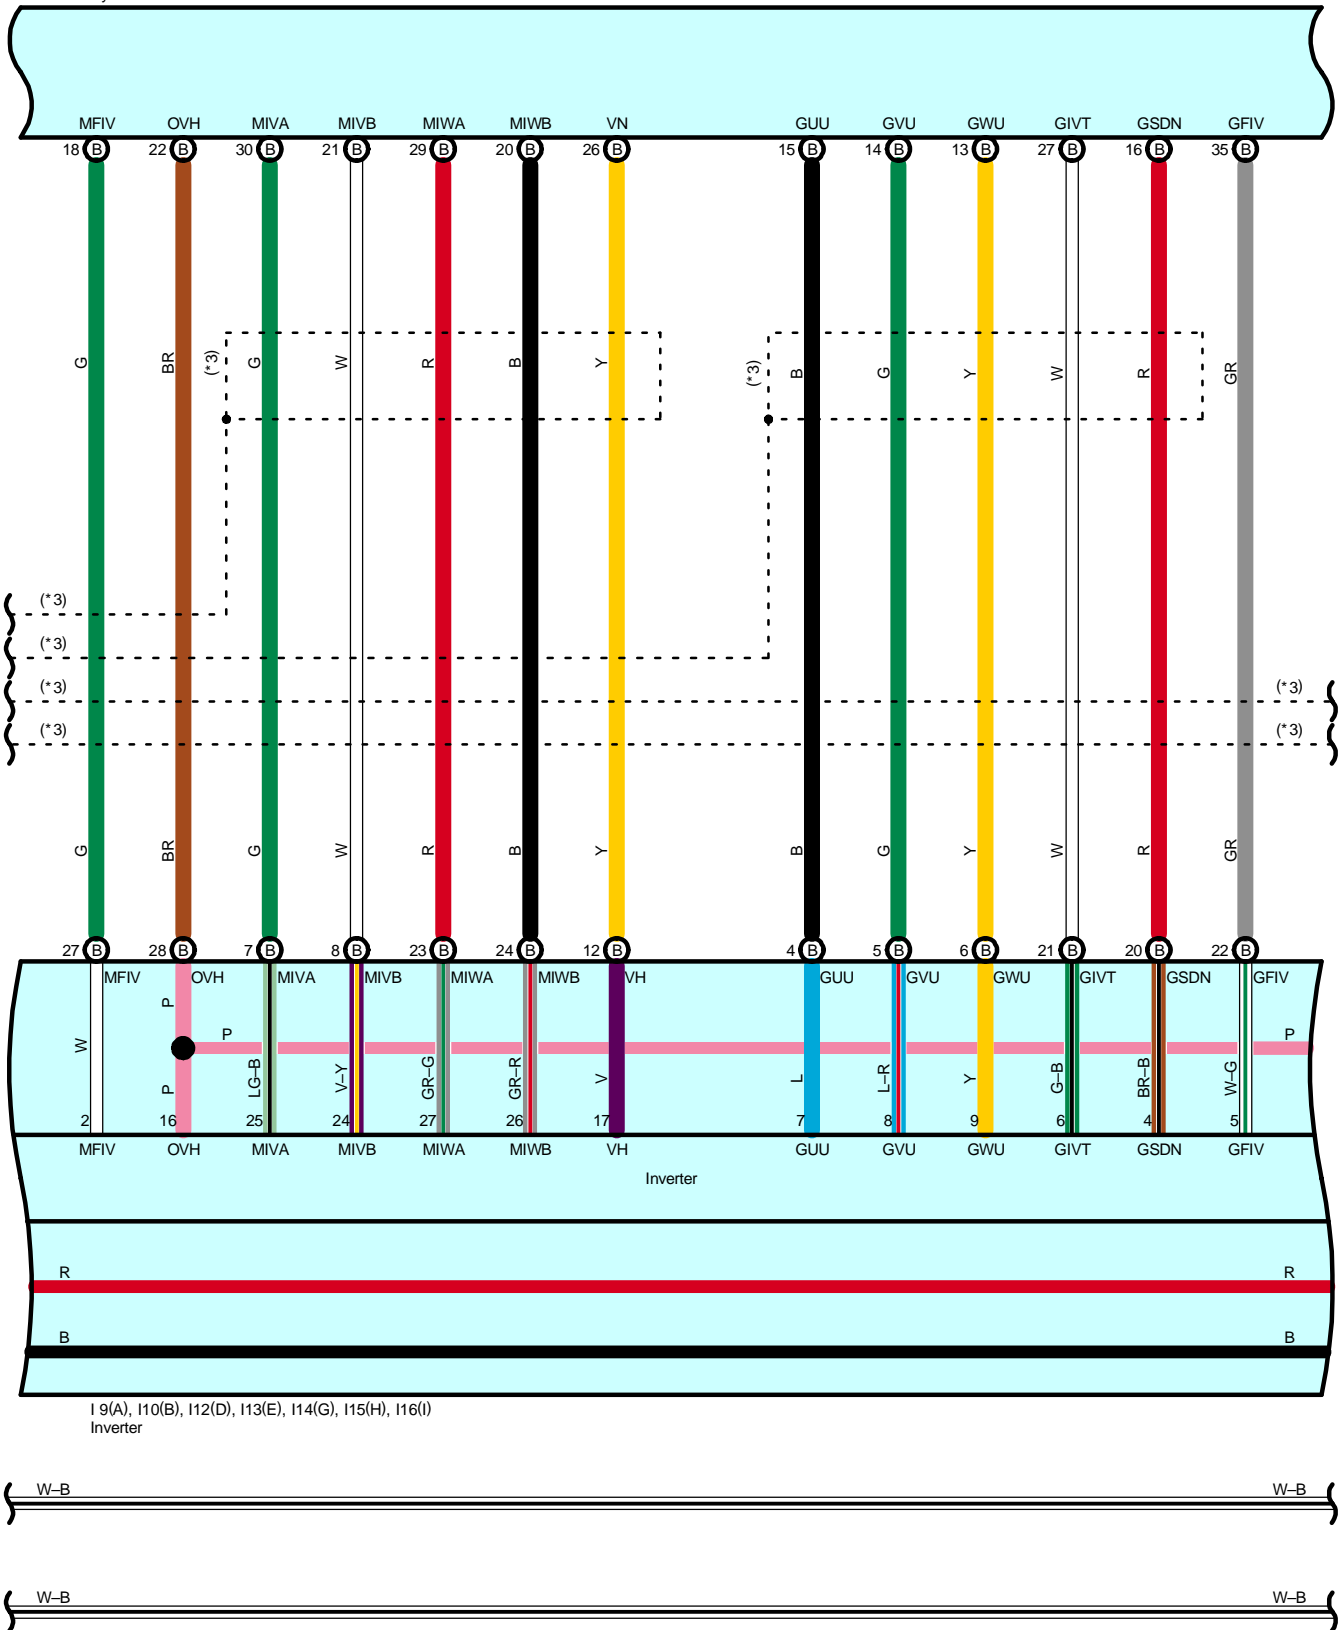

I 9(A), I10(B), I12(D), I13(E), I14(G), I15(H), I16(I)  
Inverter


H14(A), H15(B), H16(C), H17(D)  
Hybrid Vehicle Control ECU

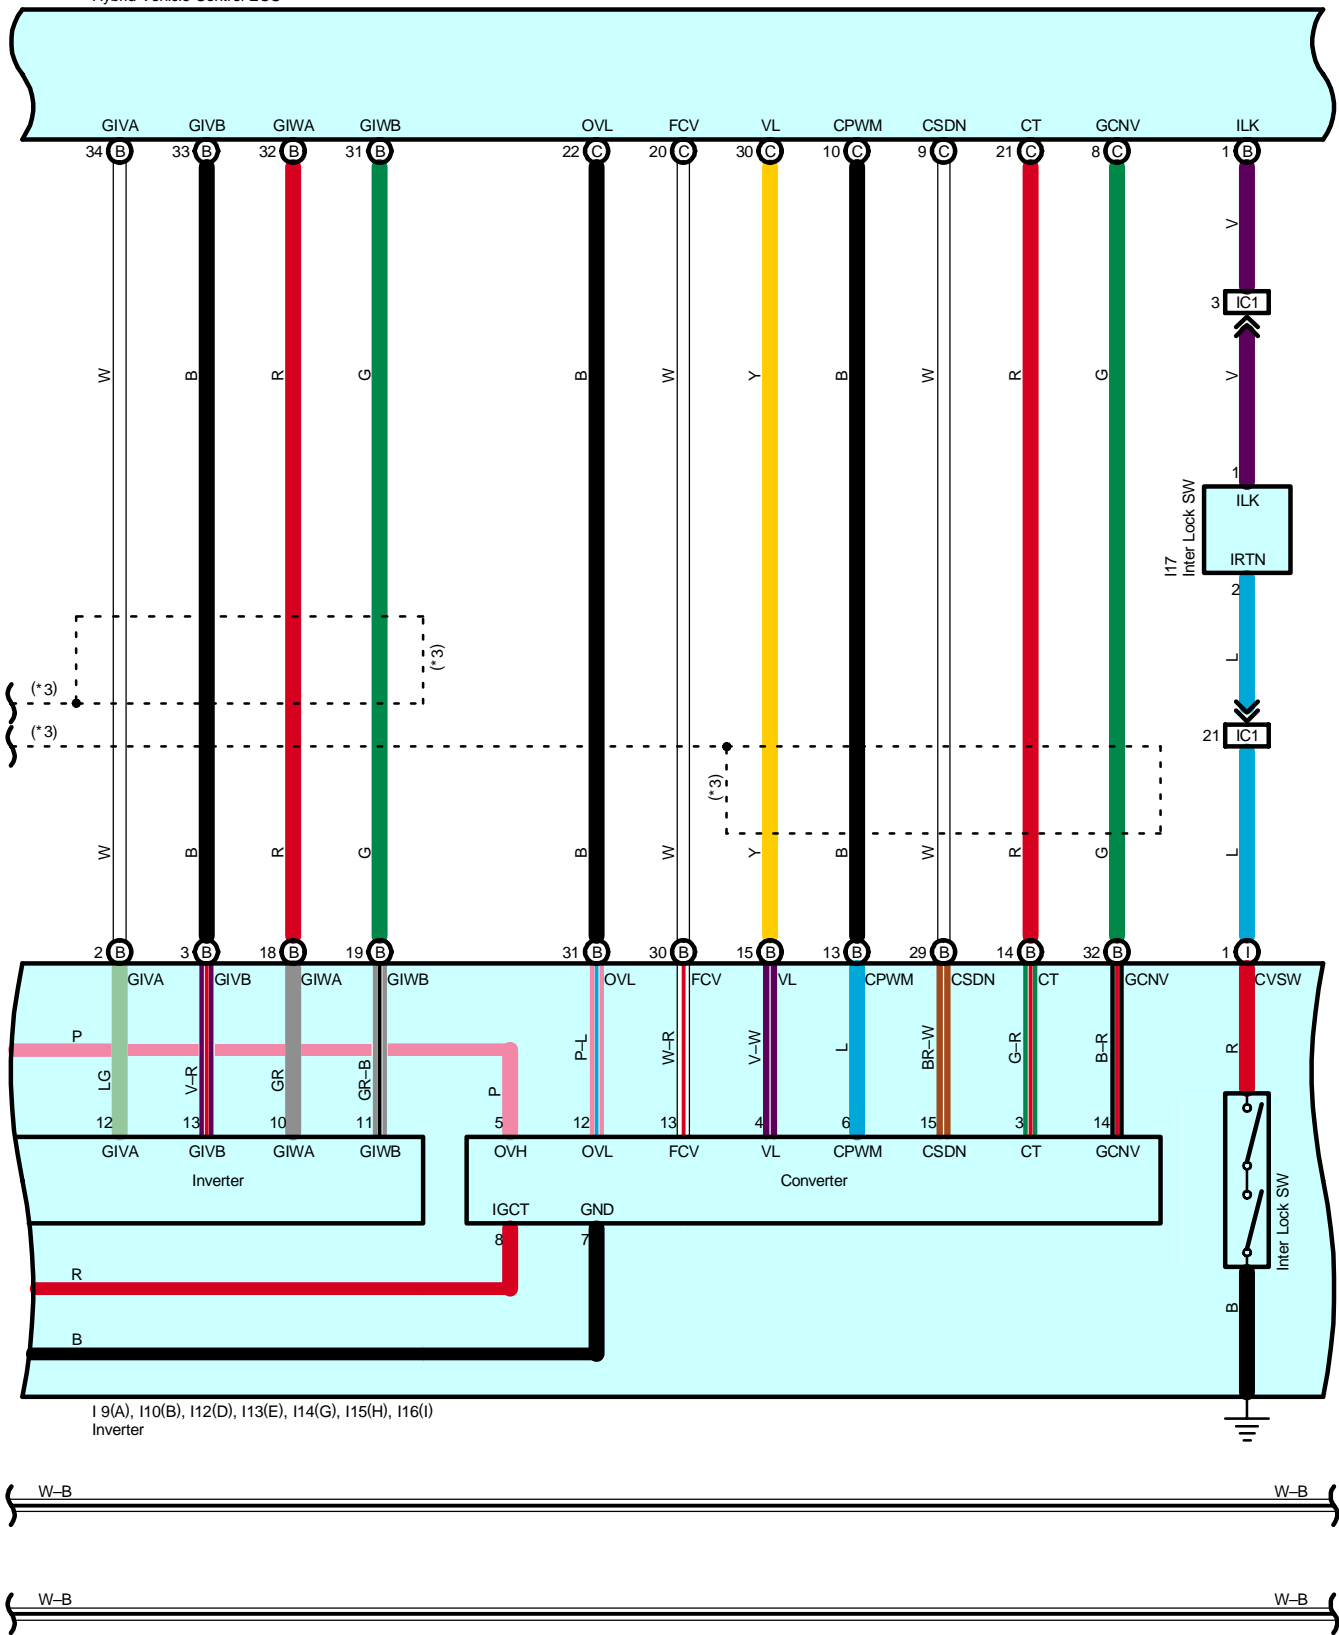


# TOYOTA Hybrid System

H14(A), H15(B), H16(C), H17(D)  
Hybrid Vehicle Control ECU

\* 3 : Shielded  
\* 4 : High Voltage

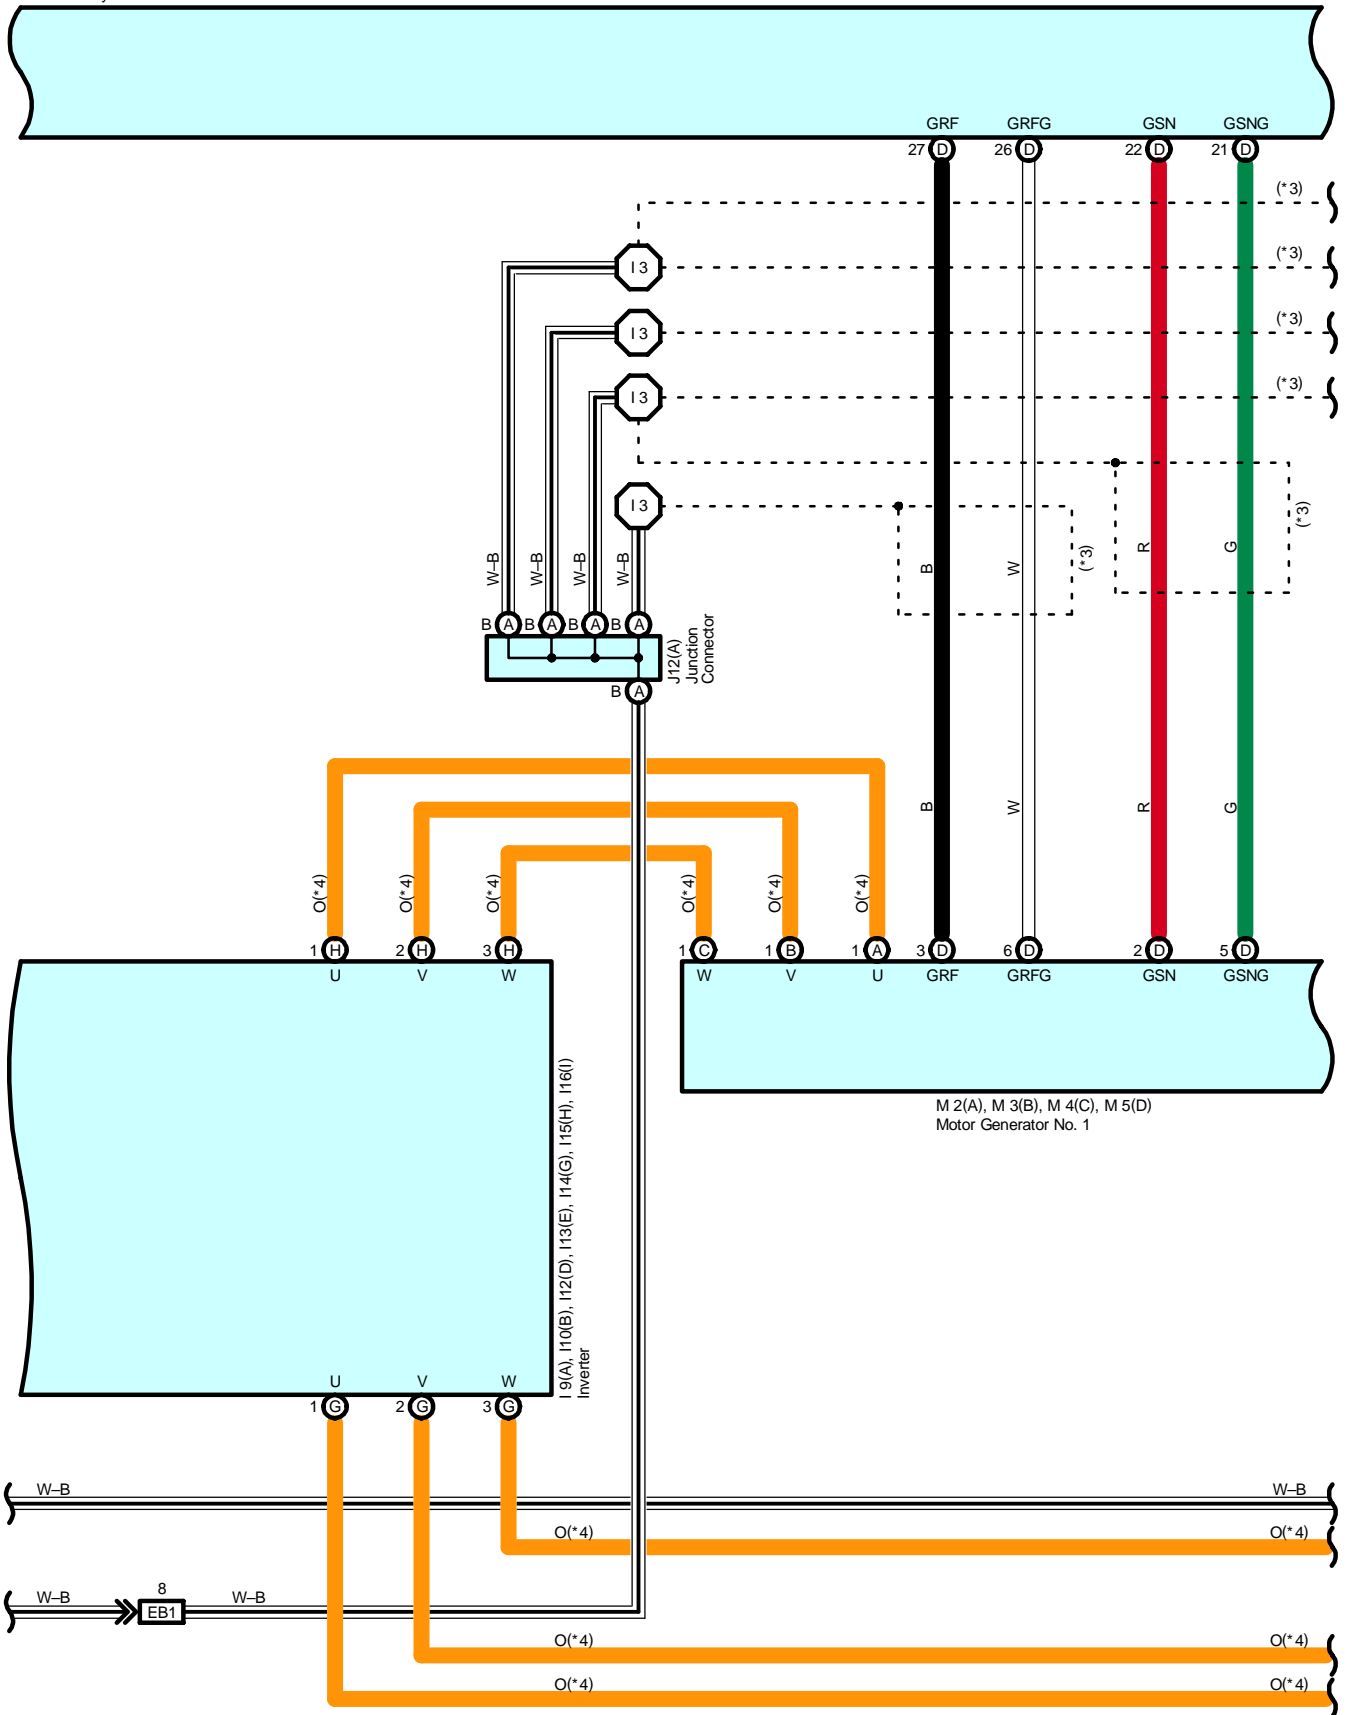


H14(A), H15(B), H16(C), H17(D)  
Hybrid Vehicle Control ECU

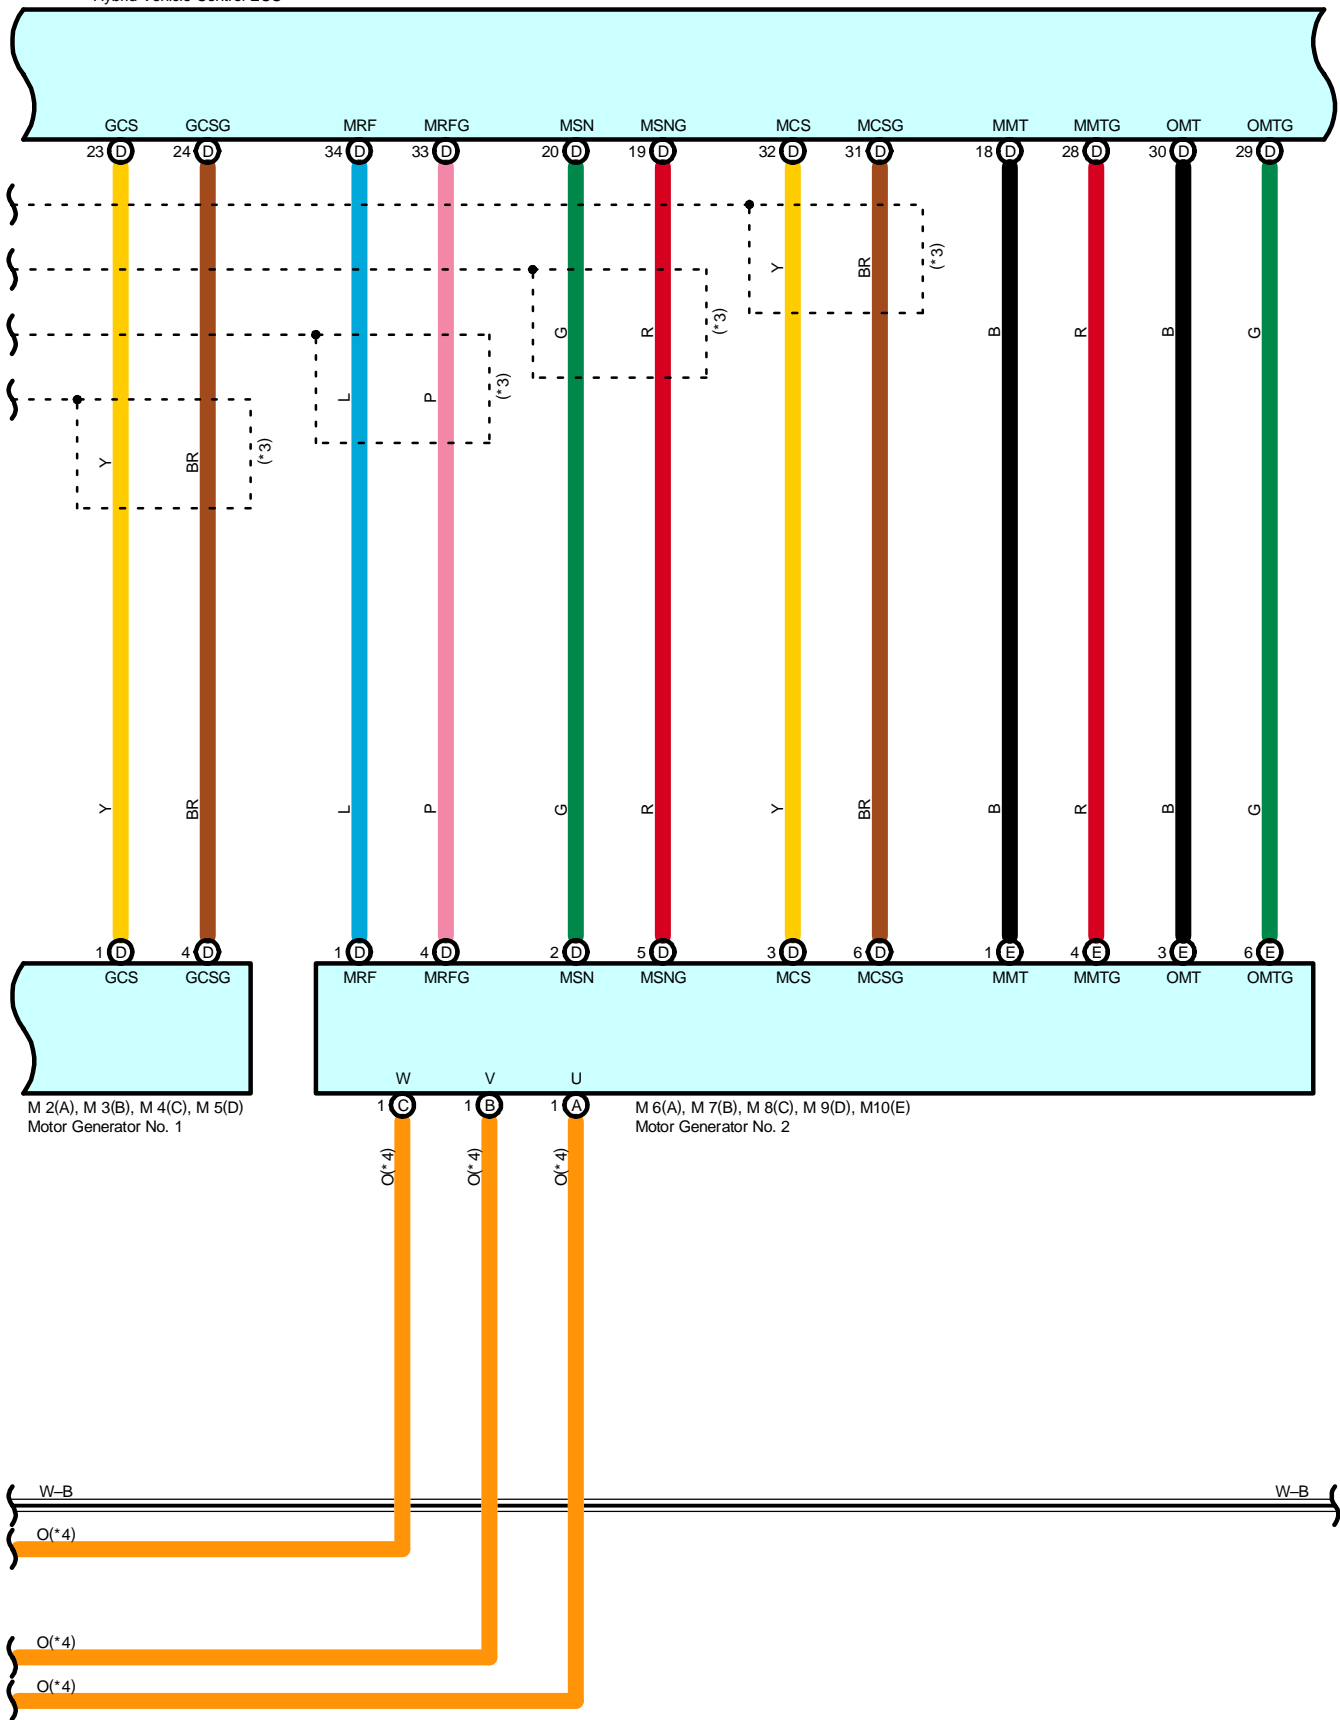

# TOYOTA Hybrid System


\* 3 : Shielded

H14(A), H15(B), H16(C), H17(D)  
Hybrid Vehicle Control ECU

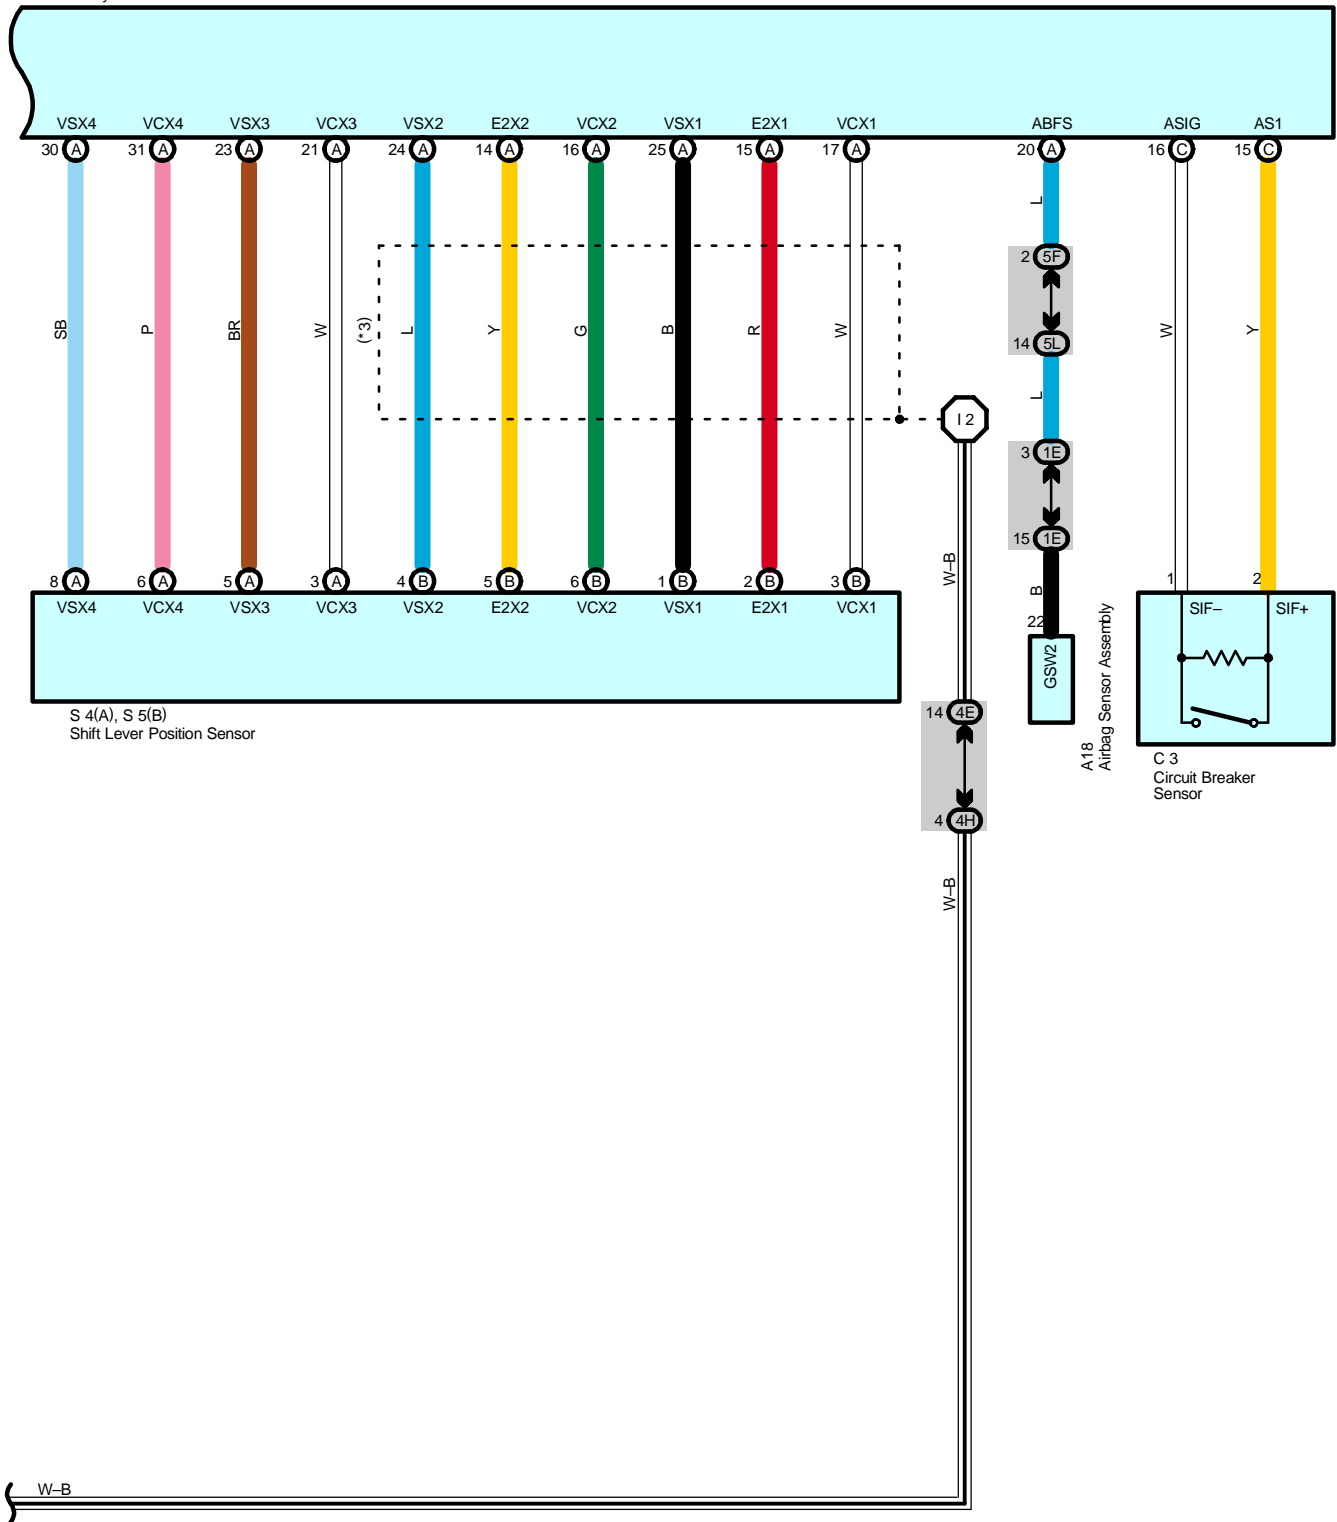

[Details of Engine Control Module Section]


From Power Source System (See Page 66)

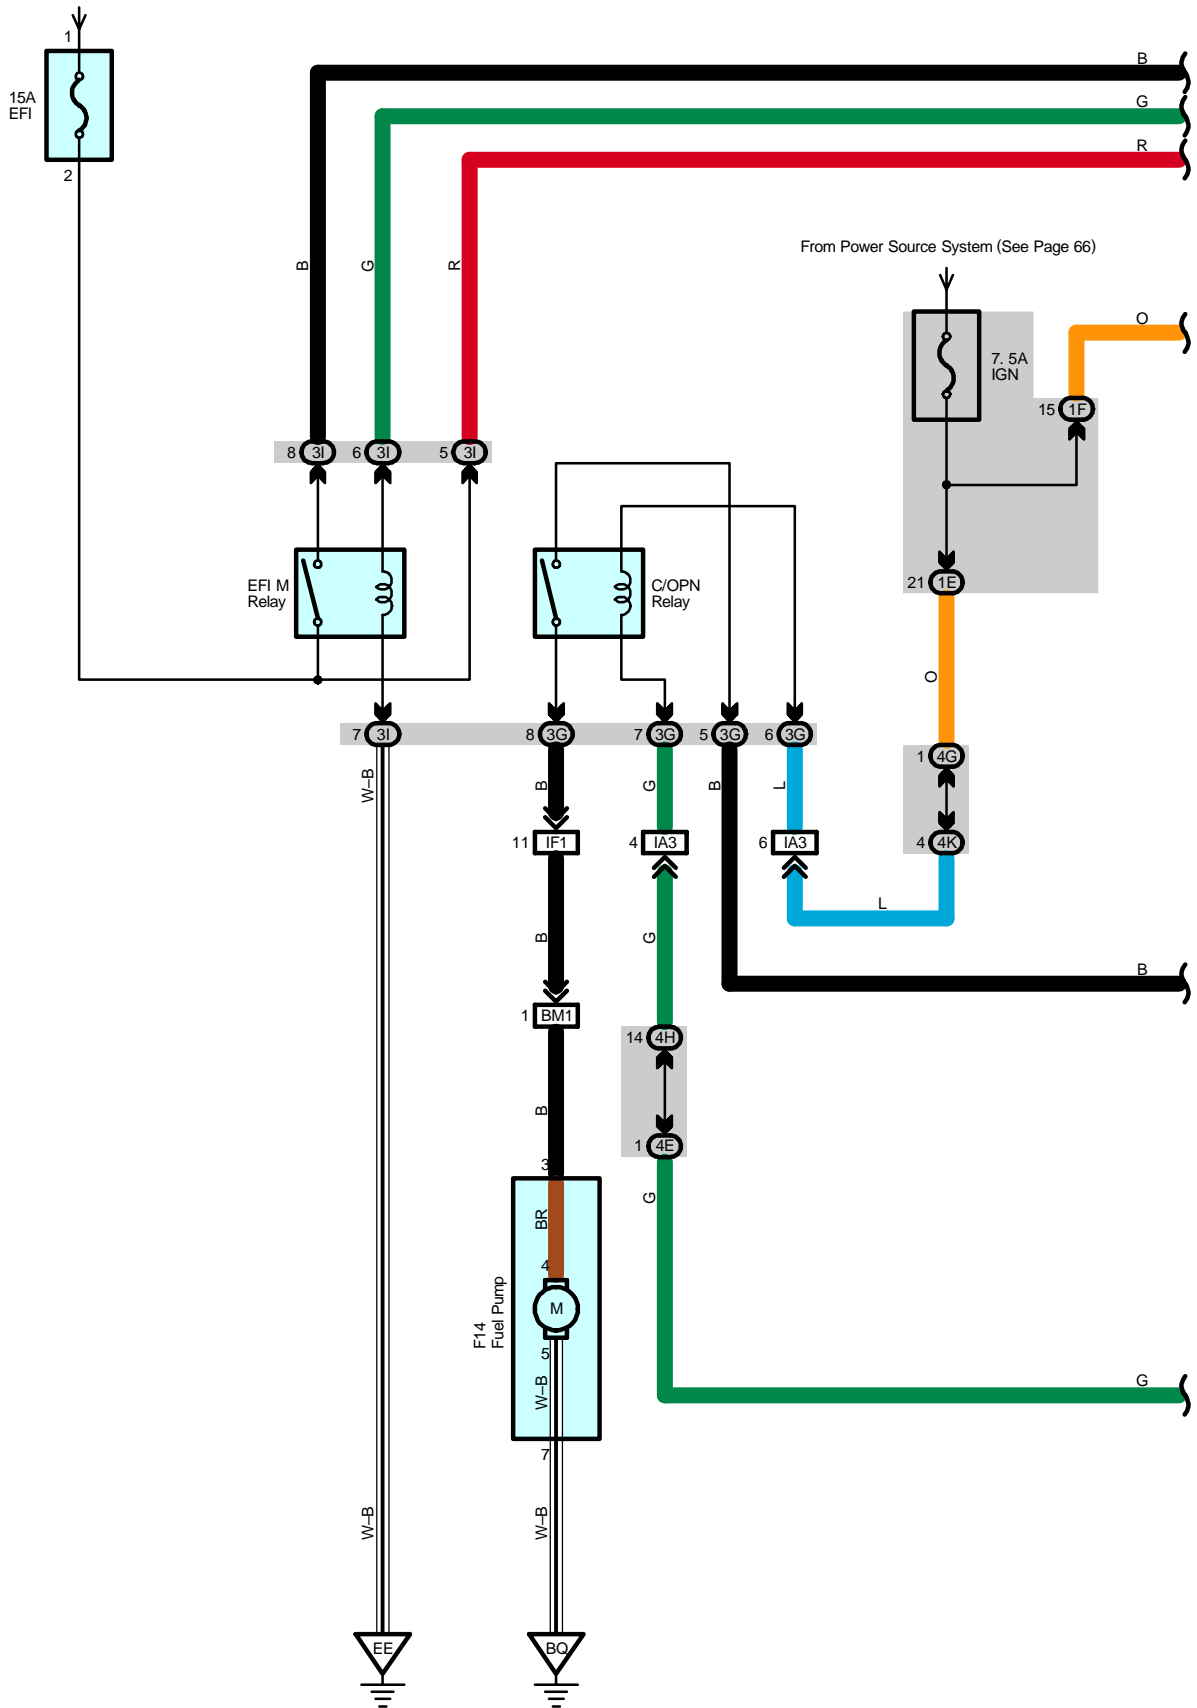



From Power Source System (See Page 66)

\* 3 : Shielded

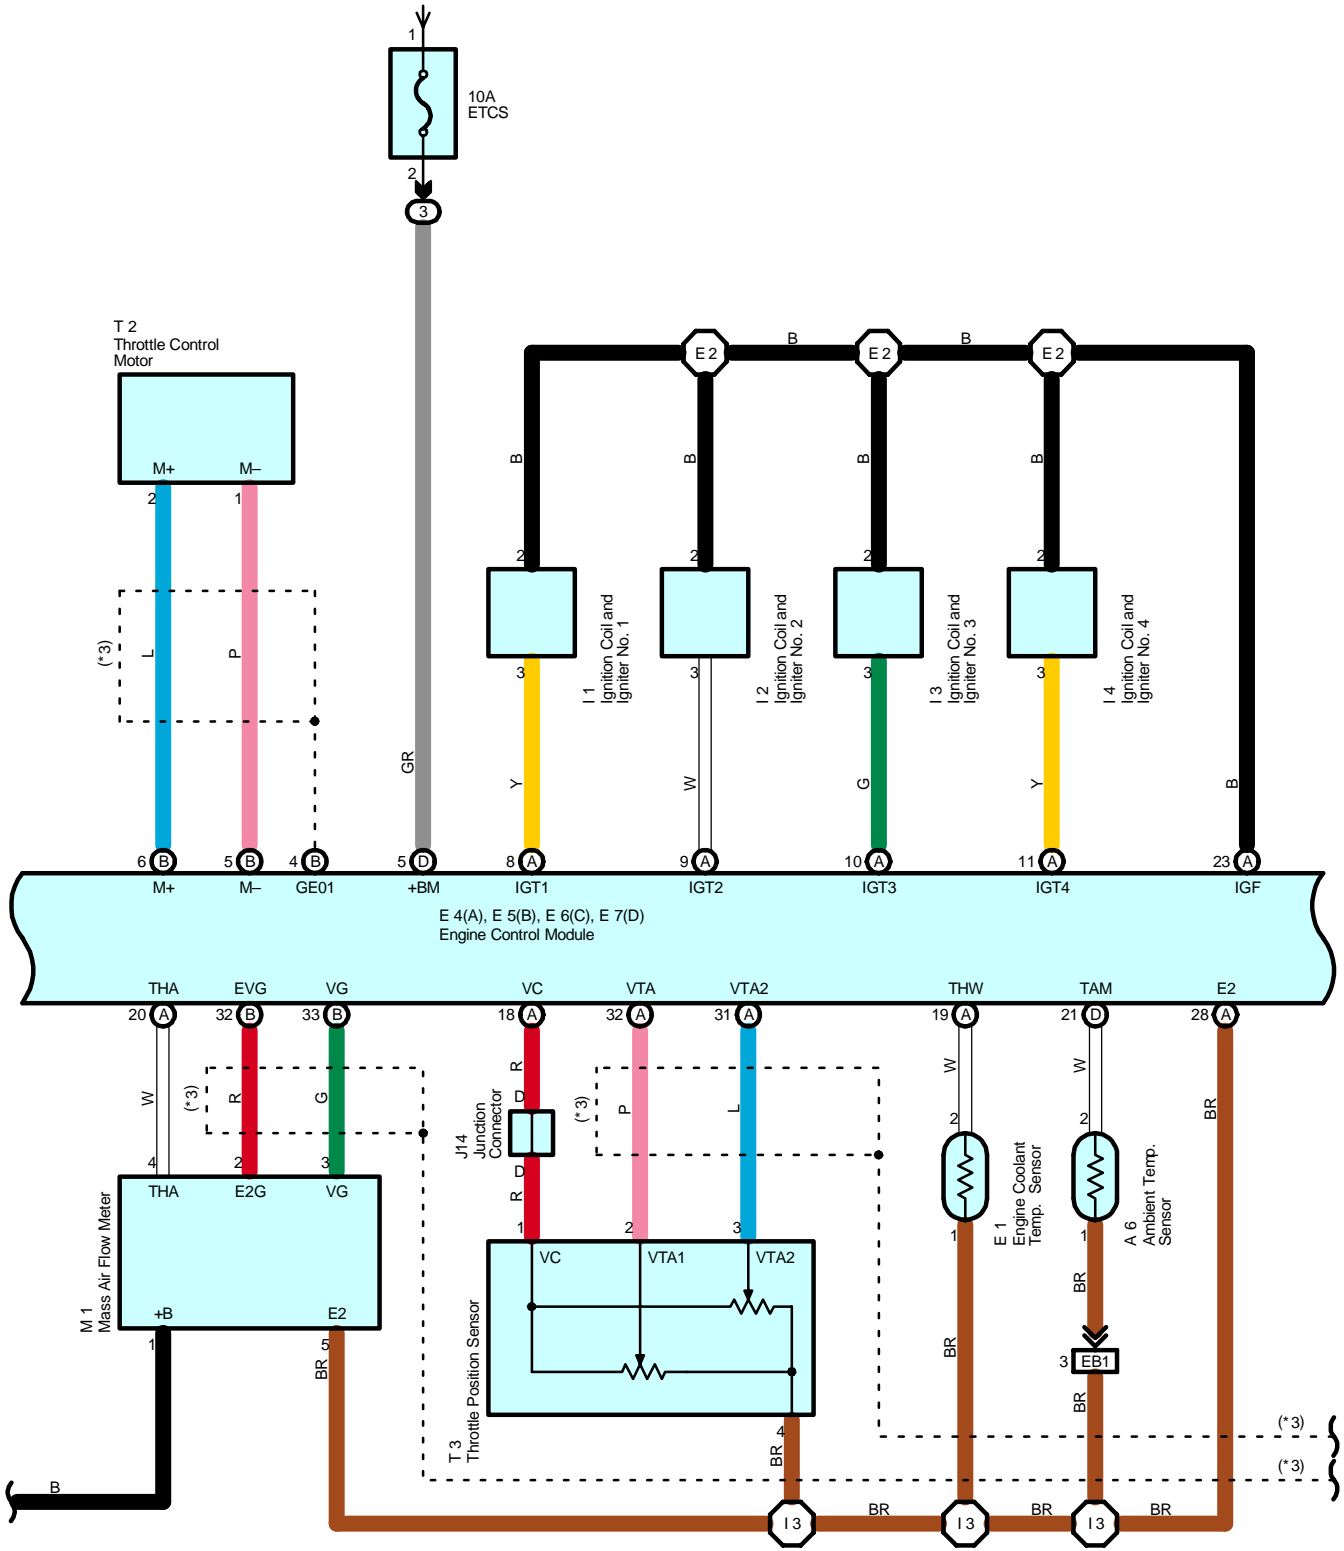





# TOYOTA Hybrid System

[Details of Engine Control Module Section]

From Power Source System (See Page 66)

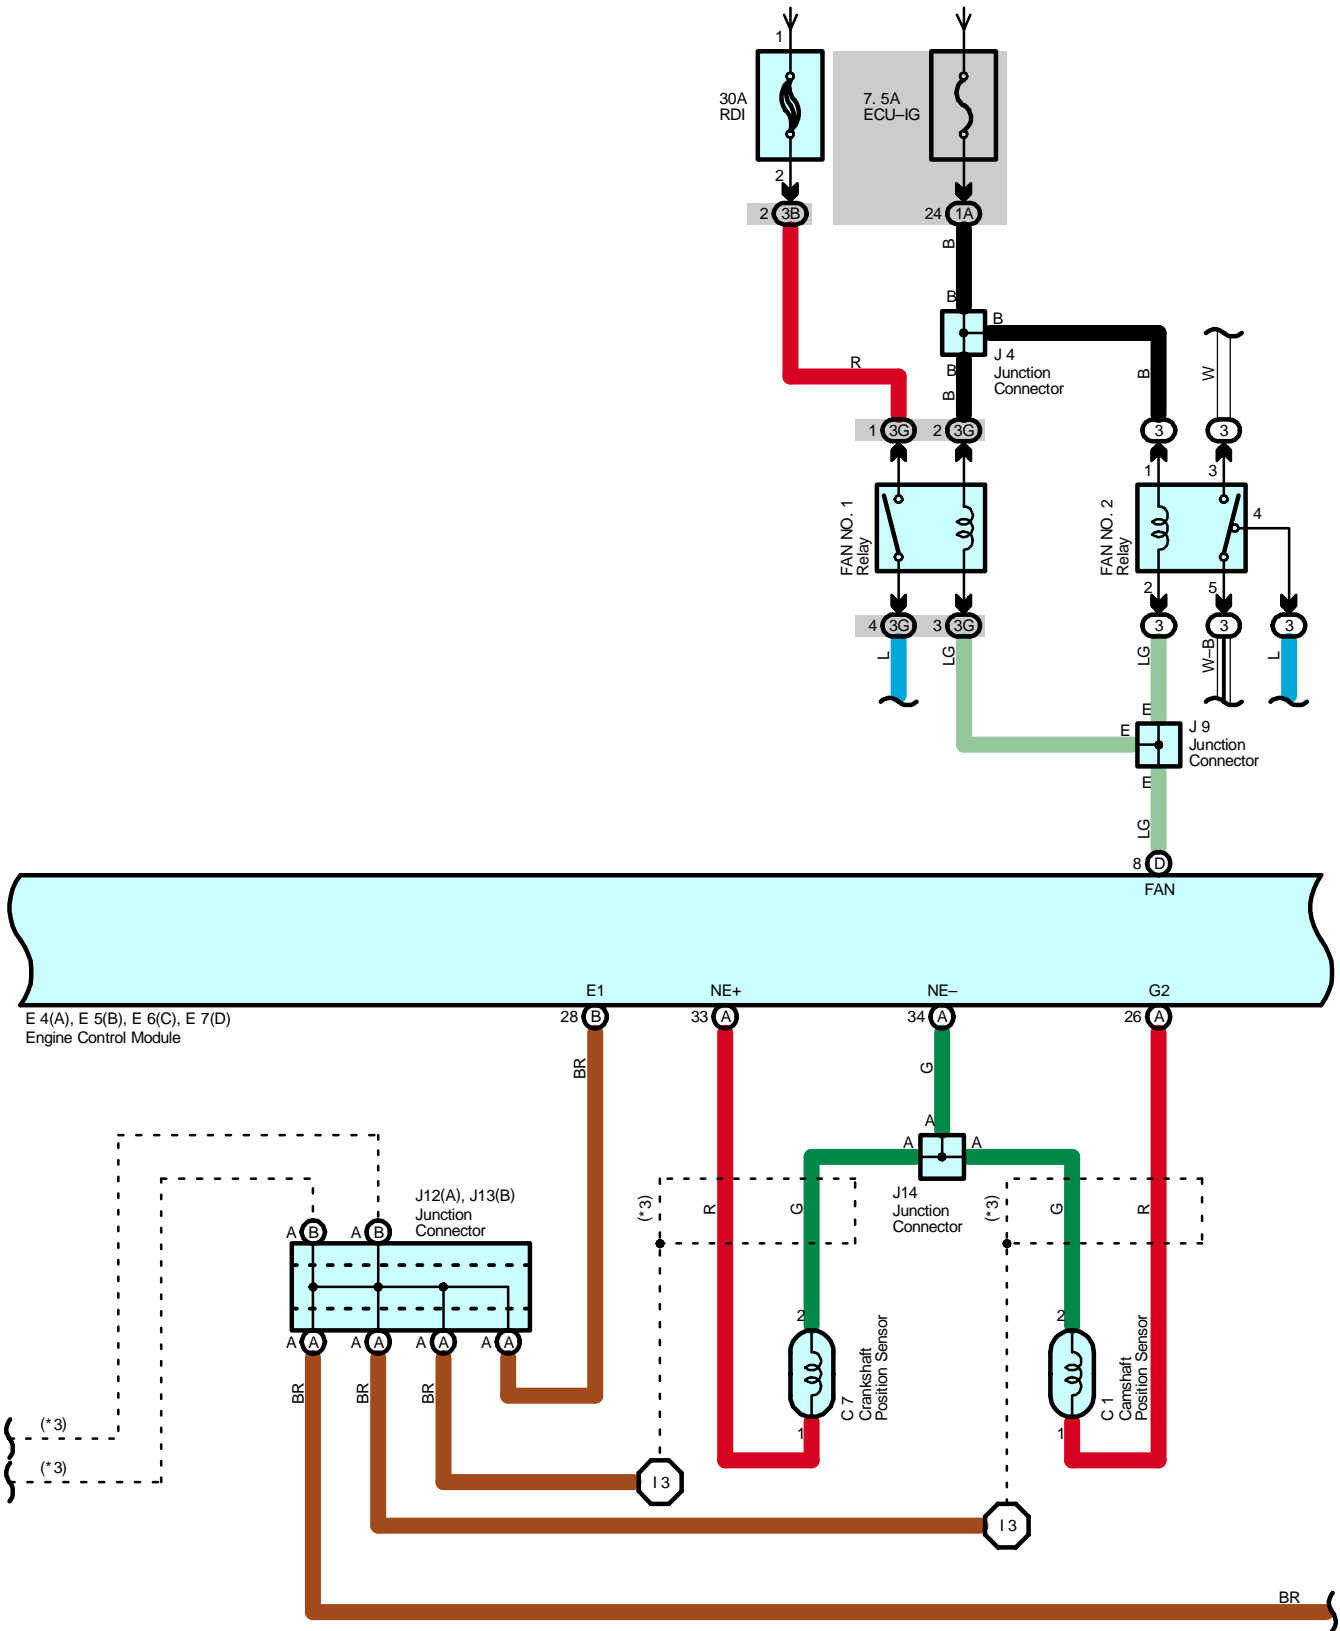


\* 3 : Shielded

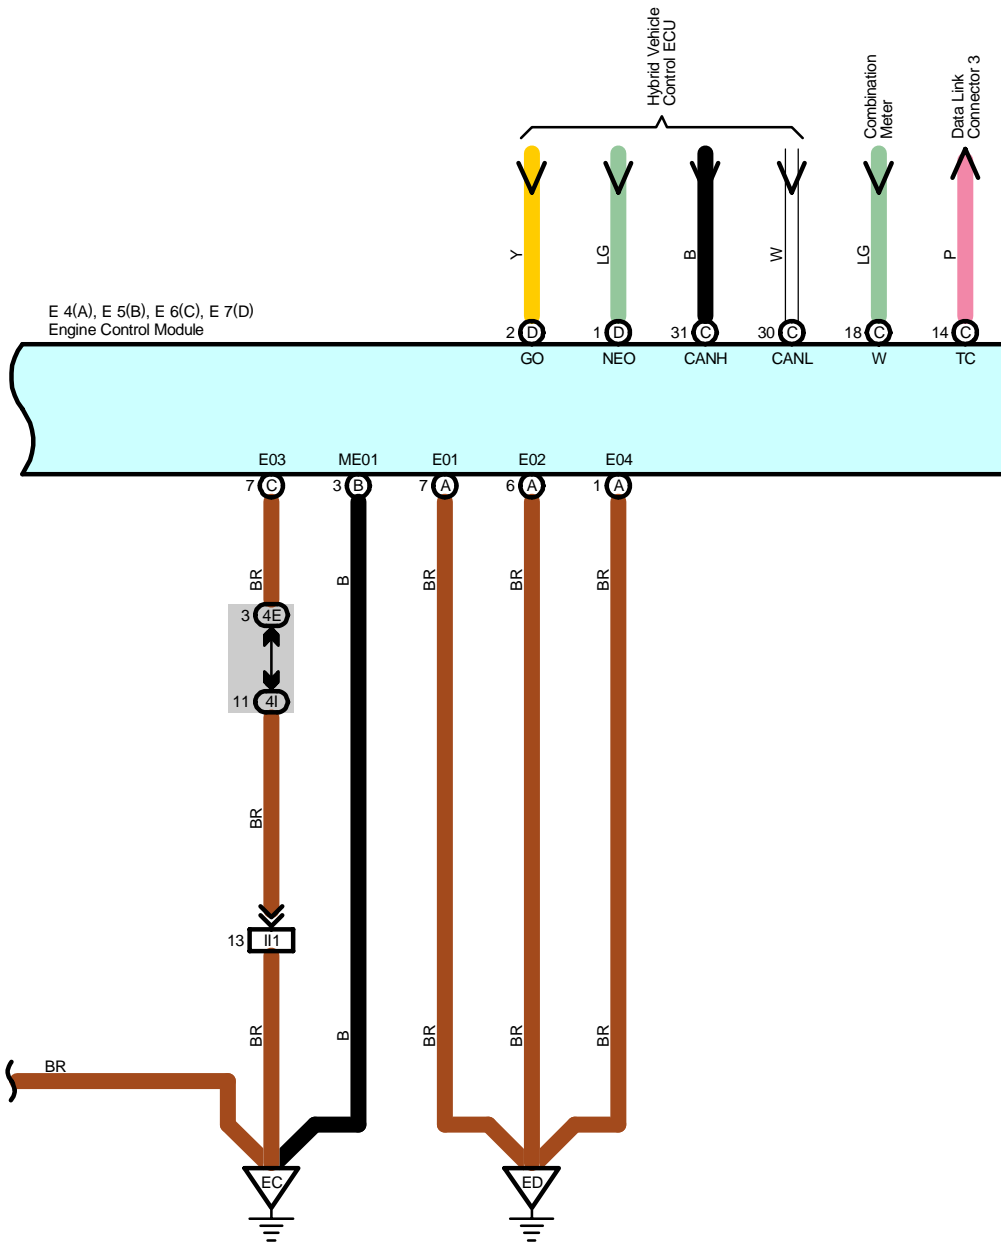

# TOYOTA Hybrid System


[Details of Skid Control ECU Section]

From Power Source System (See Page 66)

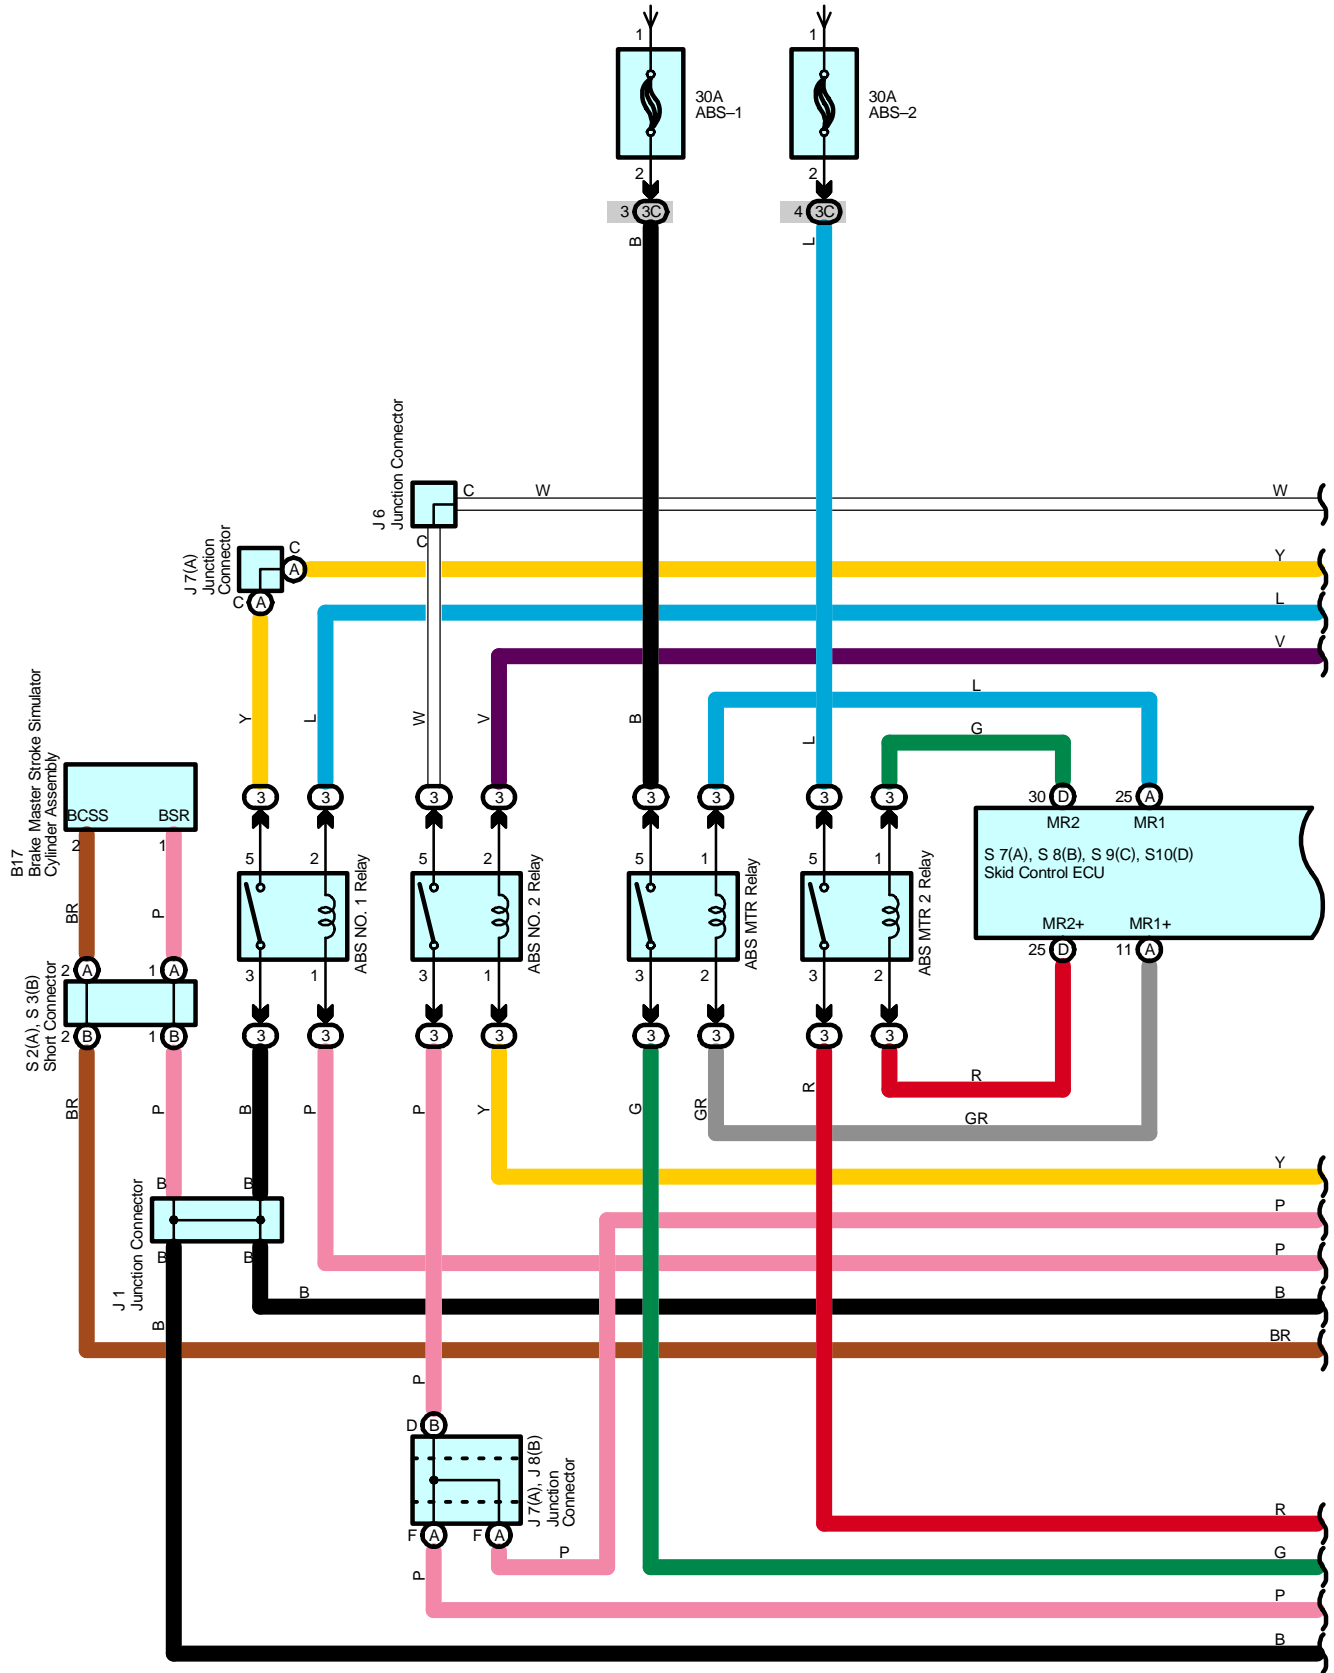


From Power Source System (See Page 66)

\* 3 : Shielded

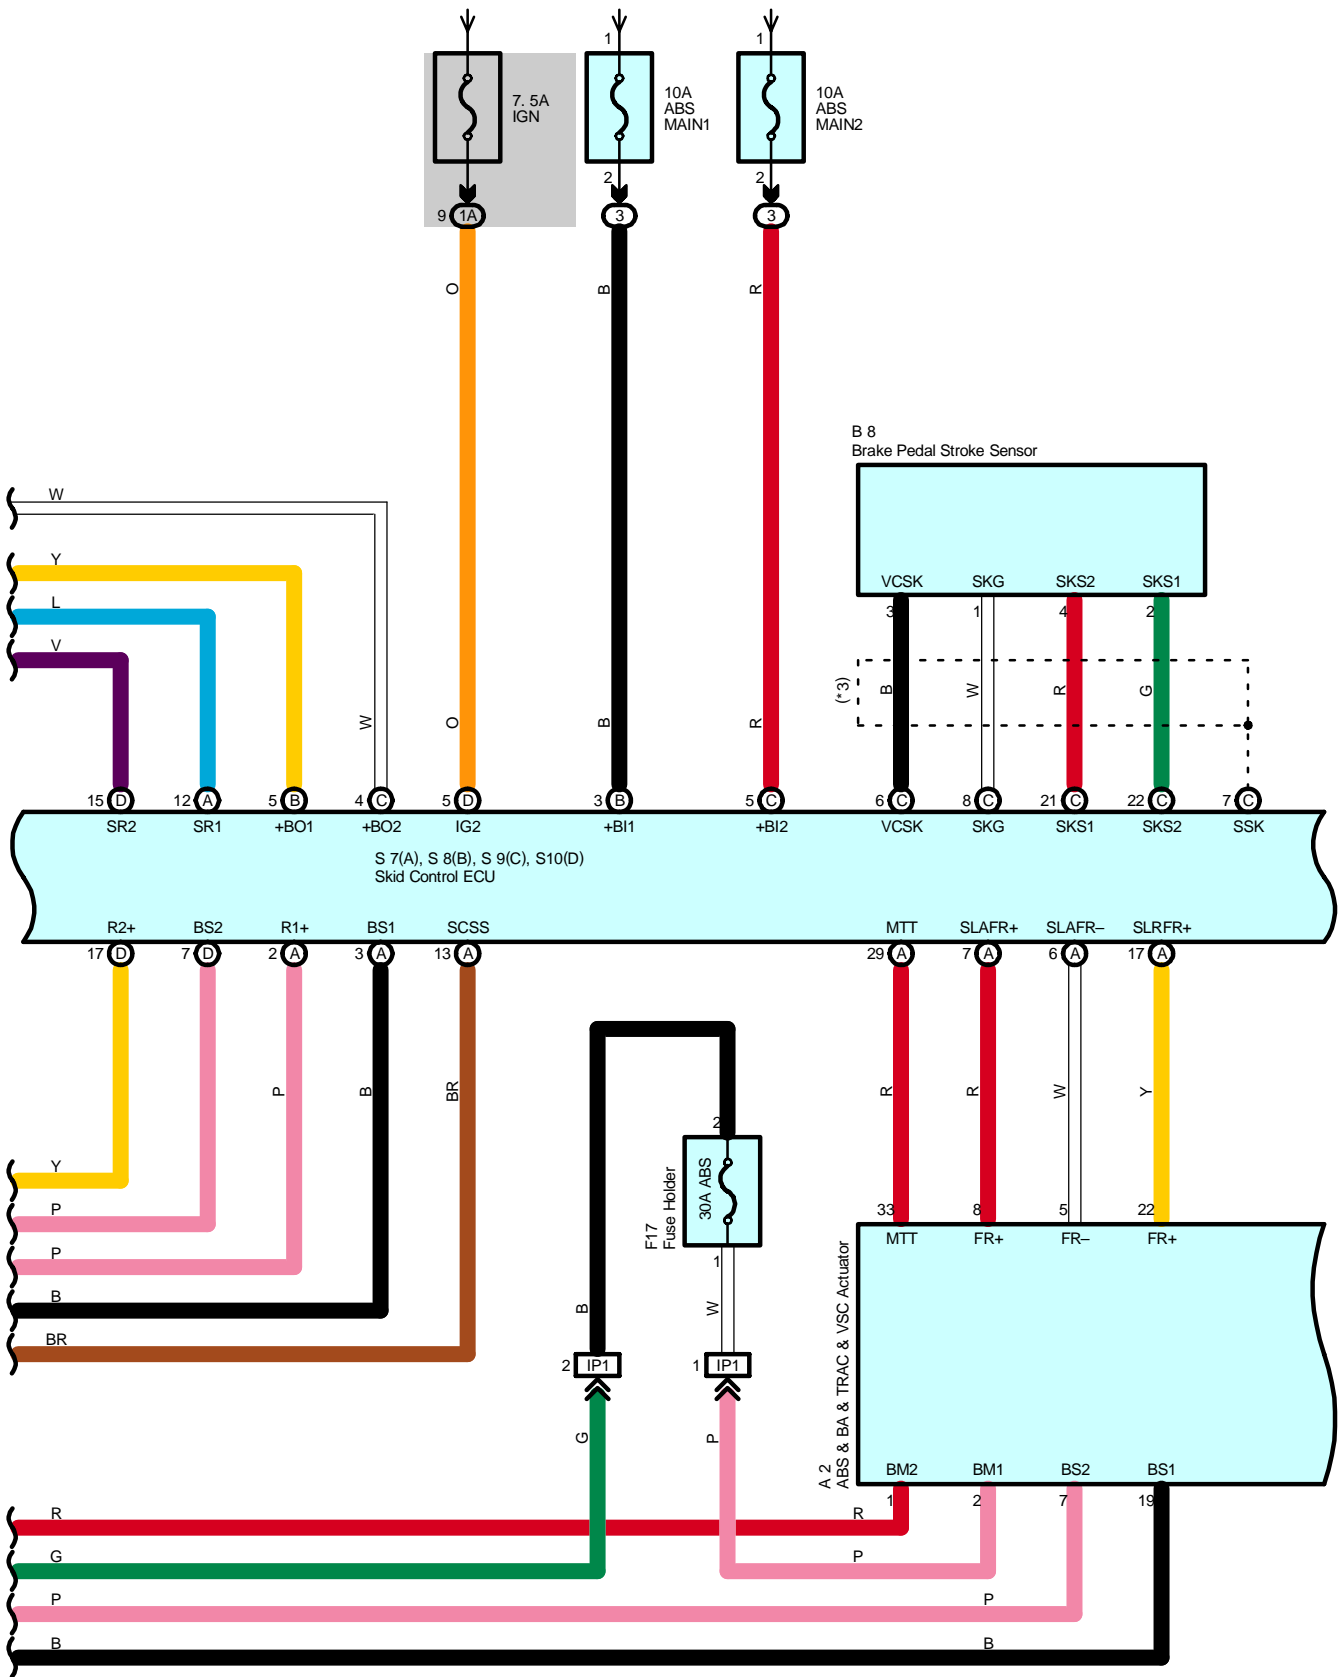


# TOYOTA Hybrid System

[Details of Skid Control ECU Section]

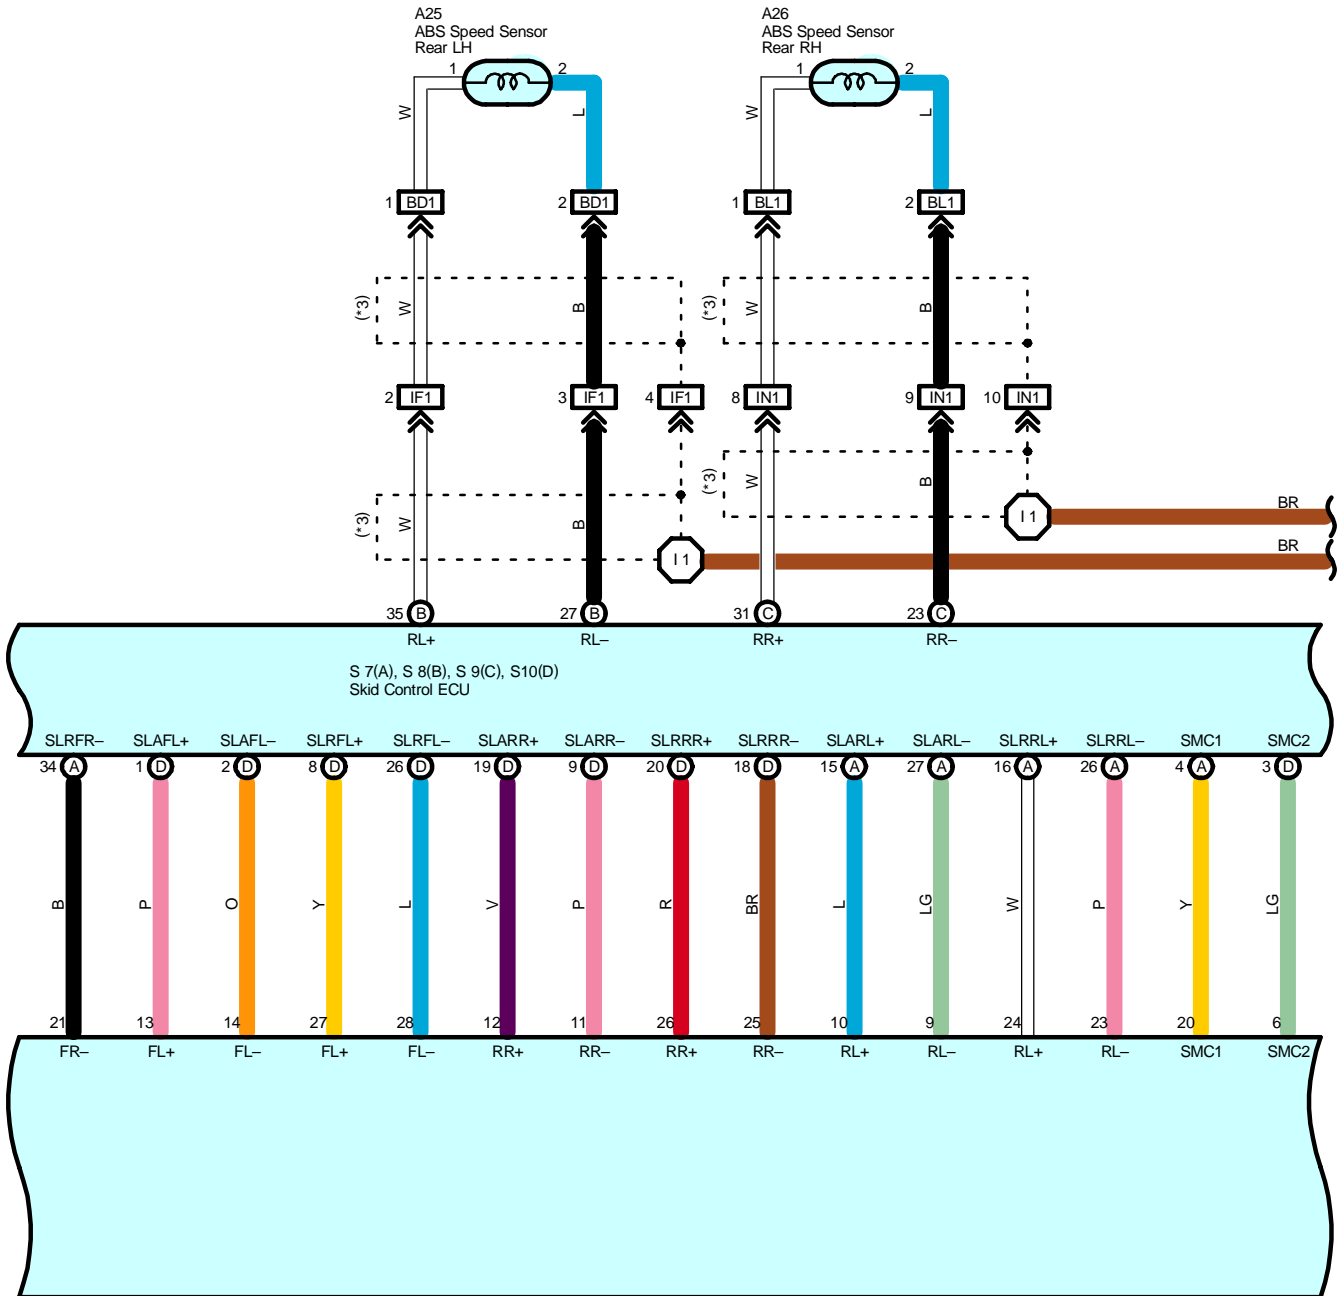

A 2  
ABS & BA & TRAC & VSC Actuator

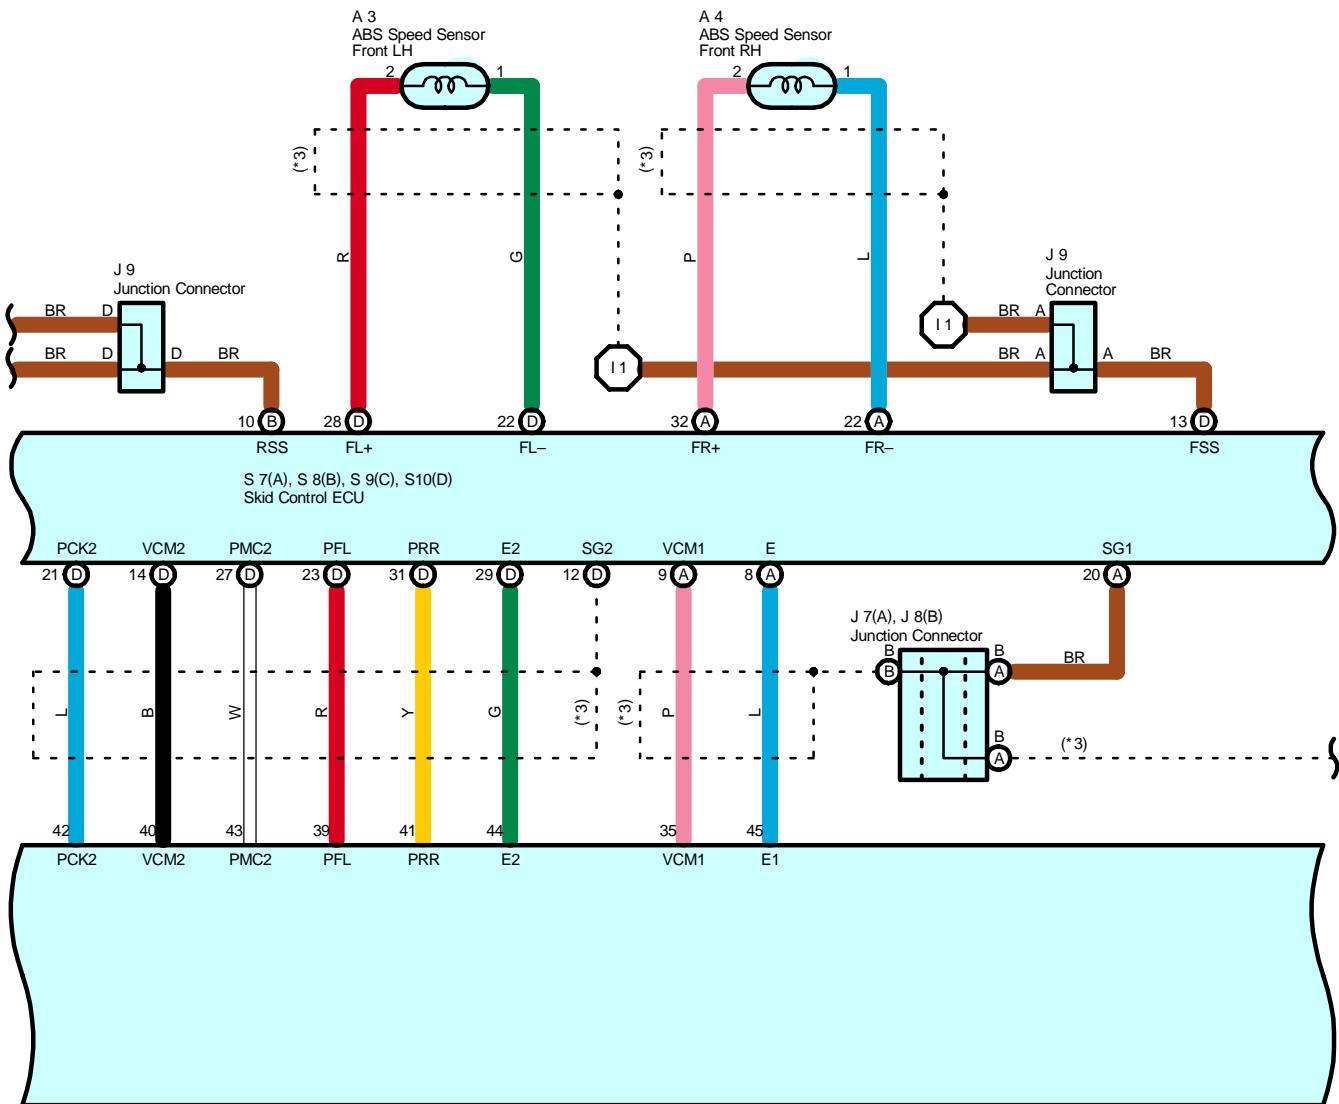


A 2  
ABS & BA & TRAC & VSC Actuator

# TOYOTA Hybrid System

[Details of Skid Control ECU Section]

From Power Source System (See Page 66)

\* 3 : Shielded

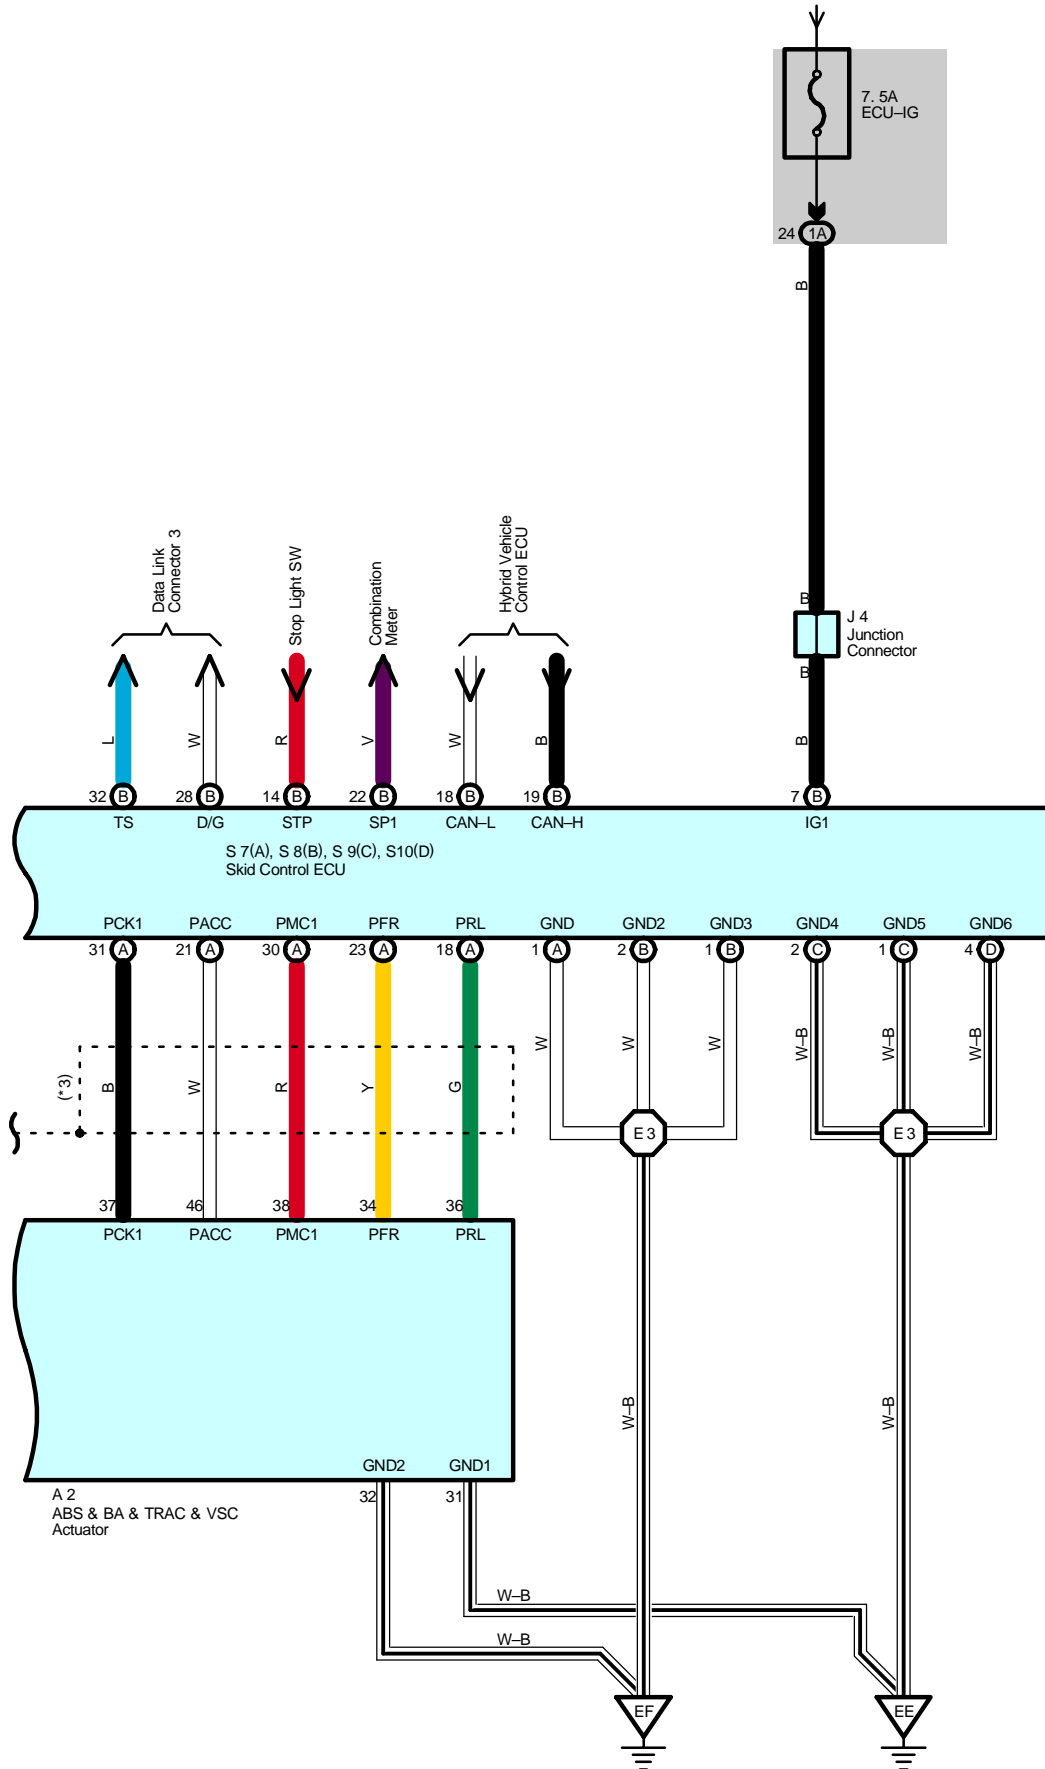

## System Outline

This system controls the following modes in order to achieve the most efficient operations to match the driving conditions.

### 1. Motor Generator Condition

- (1) Supply of electrical power from the HV battery to motor generator no.2 provides force to drive the wheels.
- (2) While the tires are driven by the engine via the planetary gears, motor generator no.1 activates to supply electricity via the planetary gears to motor generator no.2 to drive the wheels.
- (3) When the vehicle is decelerating, kinetic energy from the wheels is recovered into electrical energy and used to recharge the HV battery by motor generator no.2.

The hybrid vehicle control ECU switches between these modes (1, 2, 1+2, or 3) according to the driving conditions. However, when the state of charge of the HV battery is low, the HV battery is charged by the engine turning motor generator no.1.

### 2. Inverter

- \* The inverter converts high-voltage direct current of HV battery to three-phase alternating current for driving motor generator no.1 and motor generator no.2.
- \* The activation of the power transistors is controlled by the HV ECU. In addition, the inverter transmits necessary information for current control, such as the output amperage or voltage, to the HV ECU.
- \* Along with motor generator no.1 and motor generator no.2, the inverter is cooled by the exclusive radiator of the coolant system that is separated from that of the engine.
- \* In vehicle collision, circuit breaker sensor installed in the inverter outputs collision signal to stop the system.
- \* Boost converter has been adopted in the inverter, which increases rated voltage output from HV battery of DC 201.6V to DC 500V. After increasing voltage, the inverter converts direct current to alternating current.

### 3. Converter

The power source for auxiliary equipment of the vehicle such as the lights, audio system, and the air conditioning system, as well as the ECUs, is based on a rated voltage of DC 12V system. Because the generator outputs at DC 201.6V, the converter is used to transform the voltage from rated voltage of DC 201.6V to DC 12V in order to recharge the auxiliary battery. The converter is installed on the underside of the inverter.

### 4. HV Battery

- \* In Prius, the sealed nickel hydride (Ni-MH) battery has been adopted. This HV battery has high power density, lightweight and longevity to match characteristics of TOYOTA hybrid system. Because TOYOTA hybrid system controls charge/discharge to maintain charge/discharge control to maintain SOC (State of charge) at constant level while the vehicle is operating normally, it does not have to rely on the use of external recharges.
- \* The HV battery, battery ECU, system main relay and the cooling fan are put in a signal case which is placed in the luggage compartment behind the rear seat to make more effective use of vehicle space.
- \* A service plug that shuts off circuit is provided in the middle of the 28 modules (Rated battery capacity = 201.6V). Before servicing any portion of the high-voltage circuits, make sure to remove the service plug. Please do not READY ON when you remove the service plug. There is a possibility that battery ECU breaks down.
- \* To ensure the HV battery's performance, the battery ECU controls the operation of the cooling fan to avoid the heat that is generated in the HV battery during charging and discharging.

### 5. Regenerative System Operation

This system operates the motor as a generator to change the kinetic energy of the vehicle into the electricity when accel pedal is released or foot braking decelerates the vehicle speed, and store the electricity in the battery.

## Service Hints

### H14 (A), H15 (B), H16 (C) Hybrid Vehicle Control ECU

- (B) 6-Ground : Always approx. 12 volts
- (C) 6, (C) 7-Ground : Approx. 12 volts with the hybrid system at ON (READY) position
- (A) 7-Ground : Approx. 12 volts with the power SW at IG ON position
- (B) 3-Ground : Approx. 12 volts with the brake pedal depressed
- (A) 1, (A) 4-Ground : Always continuity



# TOYOTA Hybrid System

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A2	44	H15	B 47	J30	51
A3	44	H16	C 47	J32	51
A4	44	H17	D 47	M1	45
A6	44	H20	A 51	M2	A 45
A7	A 46	H21	B 51	M3	B 45
A8	B 46	I1	45	M4	C 45
A9	46	I2	45	M5	D 45
A13	46	I3	45	M6	A 45
A18	46	I4	45	M7	B 45
A25	50	I5	45	M8	C 45
A26	50	I6	45	M9	D 45
B5	A 46	I7	45	M10	E 45
B8	46	I8	45	M13	48
B9	50	I9	A 45	P6	49
B10	50	I10	B 45	P8	49
B11	A 50	I12	D 45	P11	49
B12	B 50	I13	E 45	S1	45
B13	C 50	I14	G 45	S2	A 45
B14	50	I15	H 45	S3	B 45
B17	44	I16	I 45	S4	A 49
C1	44	I17	51	S5	B 49
C3	44	J1	45	S7	A 49
C5	A 44	J2	45	S8	B 49
C6	B 44	J3	45	S9	C 49
C7	44	J4	45	S10	D 49
C10	47	J5	48	S11	49
D1	47	J6	48	S16	49
D7	50	J7	A 48	S22	A 53
E1	44	J8	B 48	S23	B 53
E4	A 47	J9	48	S24	C 53
E5	B 47	J12	A 48	S25	D 53
E6	C 47	J13	B 48	S26	E 53
E7	D 47	J14	48	S27	45
F14	51	J15	48	S28	45
F15	A 51	J16	48	T2	45
F16	B 51	J17	48	T3	45
F17	47	J18	48	T4	49
G1	47	J24	48	T5	49
H14	A 47	J25	48	W3	45

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	22	Engine Room R/B (Engine Compartment Left)



**: Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1B		
1C		
1D	28	Floor Wire and Driver Side J/B (Lower Finish Panel)
1E	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1F		
1G		
1J		
1L		
1M		
1N		
3B	22	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
3C		
3D		
3E		
3G		
3I		
3J		
3M	22	Frame Wire and Engine Room J/B (Engine Compartment Left)
4C	36	Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4D		
4E		
4F		
4G		
4H		
4I		
4J		
4K		
4L		
5C	40	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5D		
5E		
5F		
5G		
5H		
5I		
5J		
5K		
5L		
5M		
5N		

# TOYOTA Hybrid System

## : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB1	54	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B)
IA1	56	Engine Room Main Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)
IA2		
IA3		
IC1	56	Engine Room Main Wire and Floor Wire (Cowl Side Panel LH)
ID3	56	Instrument Panel Wire and Floor Wire (Left Kick Panel)
ID4		
IF1	56	Floor Wire and Engine Room Main Wire (Left Kick Panel)
IG1	58	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the Combination Meter)
IG2		
II1	58	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
IN1	58	Floor No.2 Wire and Engine Room Main Wire (Right Kick Panel)
IP1	58	Engine Room No.2 Wire and Engine Room Main Wire (Upper Parts of Front Body Pillar LH)
BD1	60	Skid Control Sensor No.1 Wire and Floor Wire (Front Side of Left Quarter Panel)
BE1	60	Frame Wire and Floor No.2 Wire (Front Side of Left Quarter Panel)
BL1	62	Skid Control Sensor No.2 Wire and Floor No.2 Wire (Front Side of Right Quarter Panel)
BM1	62	Floor No.2 Wire and Floor Wire (Rear Side of Right Quarter Panel)

## : Ground Points


Code	See Page	Ground Points Location
EC	54	Engine Block
ED		
EE	54	Left Side of the Suspension Tower
EF		
IH	56	Cowl Side Panel LH
II	56	Instrument Panel Brace LH
IK	56	Cowl Side Panel RH
BL	60	Rear Side of Left Quarter Panel
BQ	60	Rear Side of Right Quarter Panel

## : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E2	54	Engine Wire	I2	58	Instrument Panel Wire
E3	54	Engine Room Main Wire	I3	58	Engine Wire
I1	58	Instrument Panel Wire			





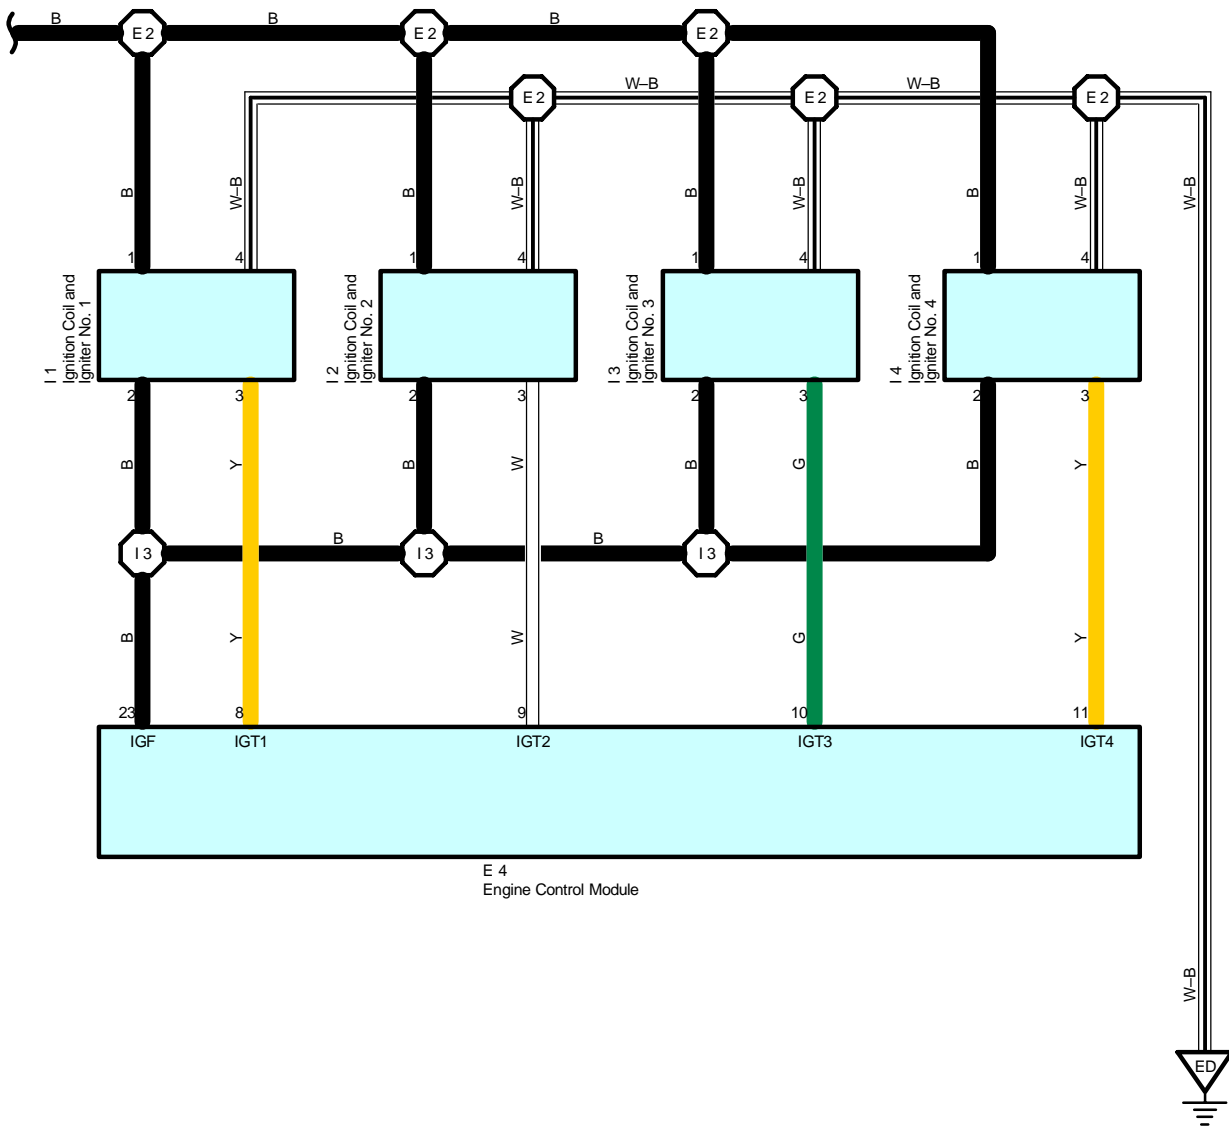

# Ignition

## Service Hints

### I1, I2, I3, I4 Ignition Coil and Igniter No.1, No.2, No.3, No.4

1-Ground : Approx. 12 volts with the power SW at IG ON position

4-Ground : Always continuity

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
E4	47	I2	45	J2	45
F15	51	I3	45	N1	45
I1	45	I4	45	P6	49

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3A	22	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
3I		
3K		
3M	22	Frame Wire and Engine Room J/B (Engine Compartment Left)
4I	36	Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4J		

## □ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB1	54	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B)
IA1	56	Engine Room Main Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)
IA3		
BE1	60	Frame Wire and Floor No.2 Wire (Front Side of Left Quarter Panel)

## ▽ : Ground Points

Code	See Page	Ground Points Location
ED	54	Engine Block
EF	54	Left Side of the Suspension Tower


## ○ : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E2	54	Engine Wire	I3	58	Engine Wire






# Engine Control

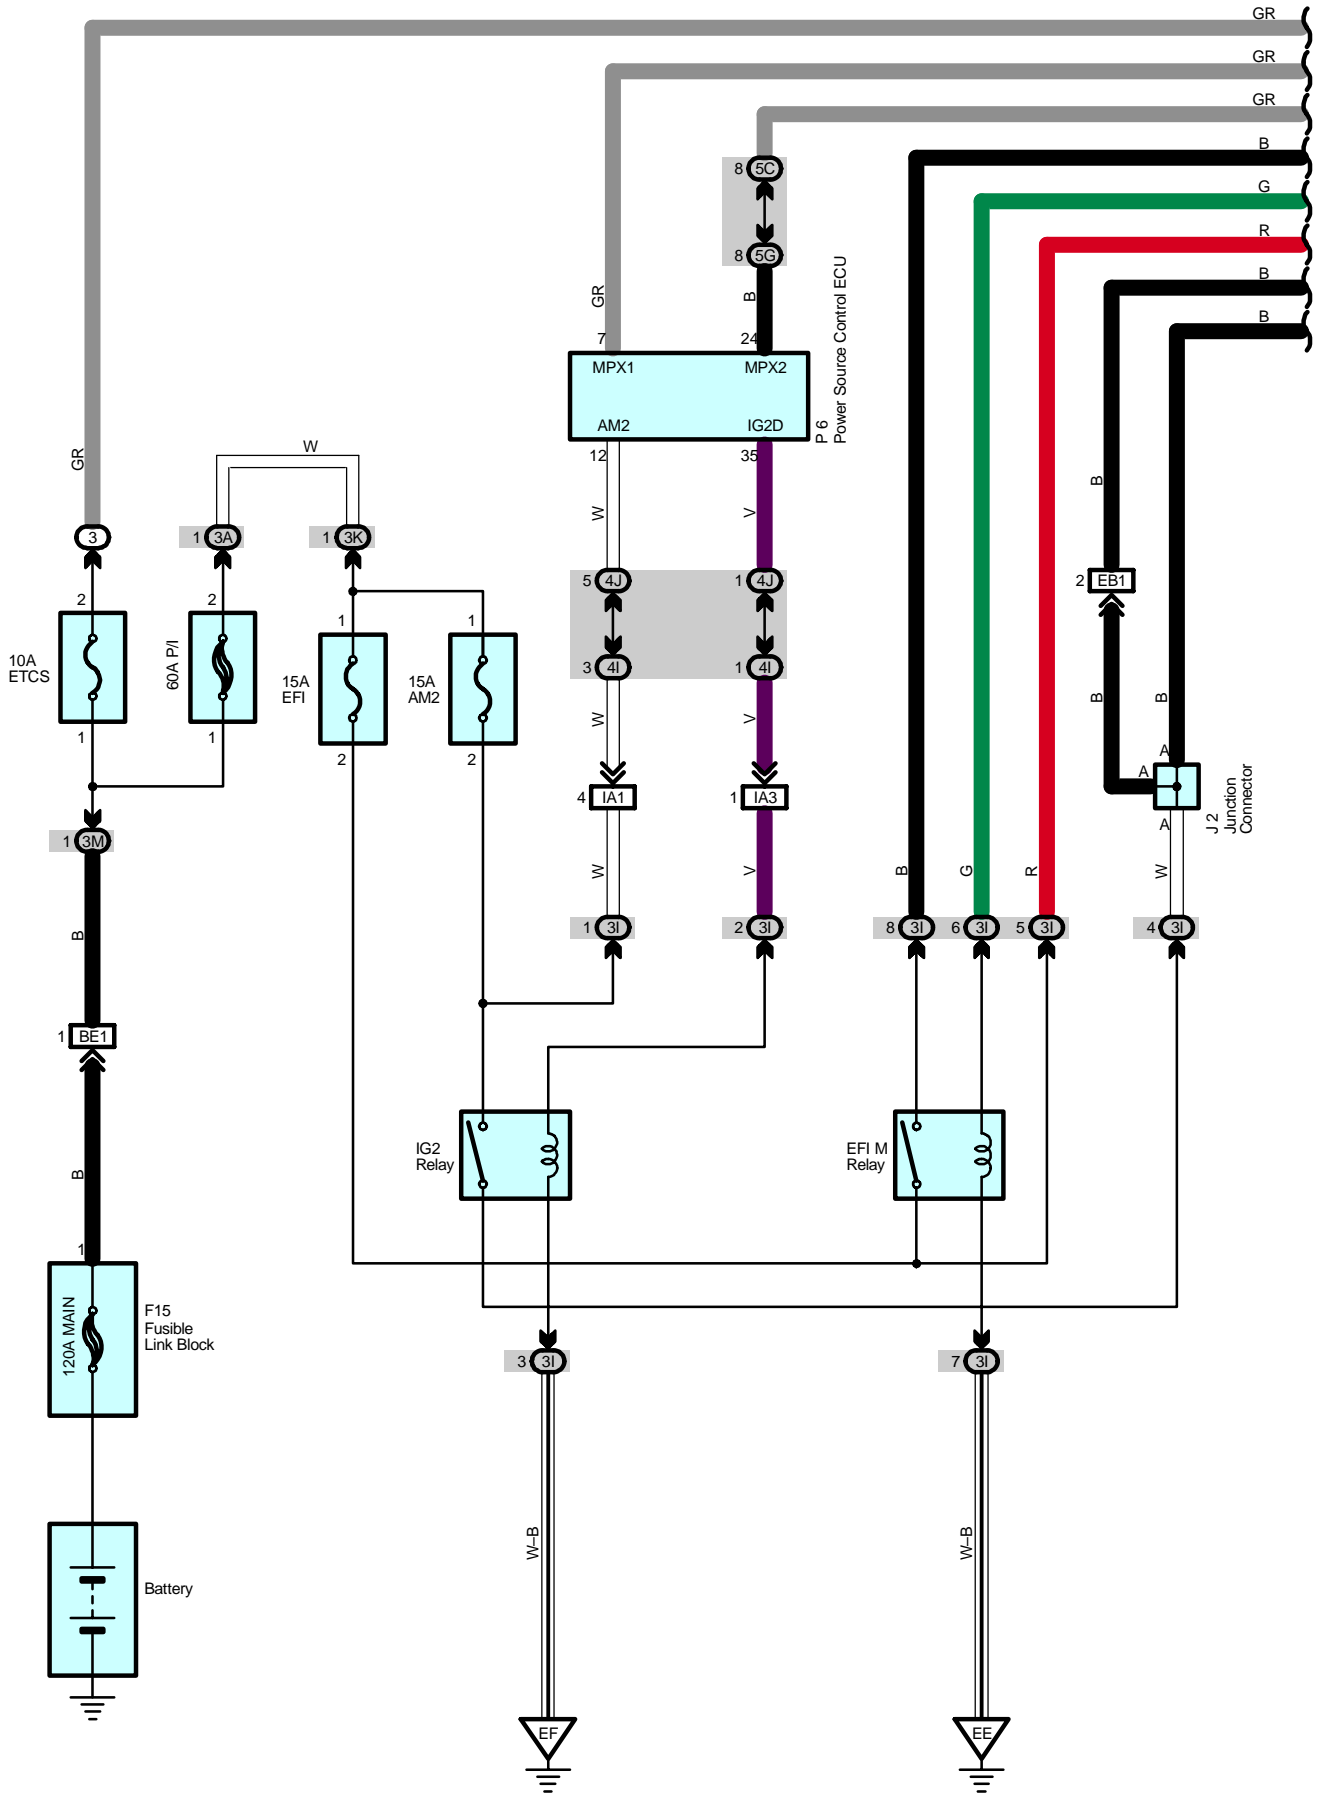






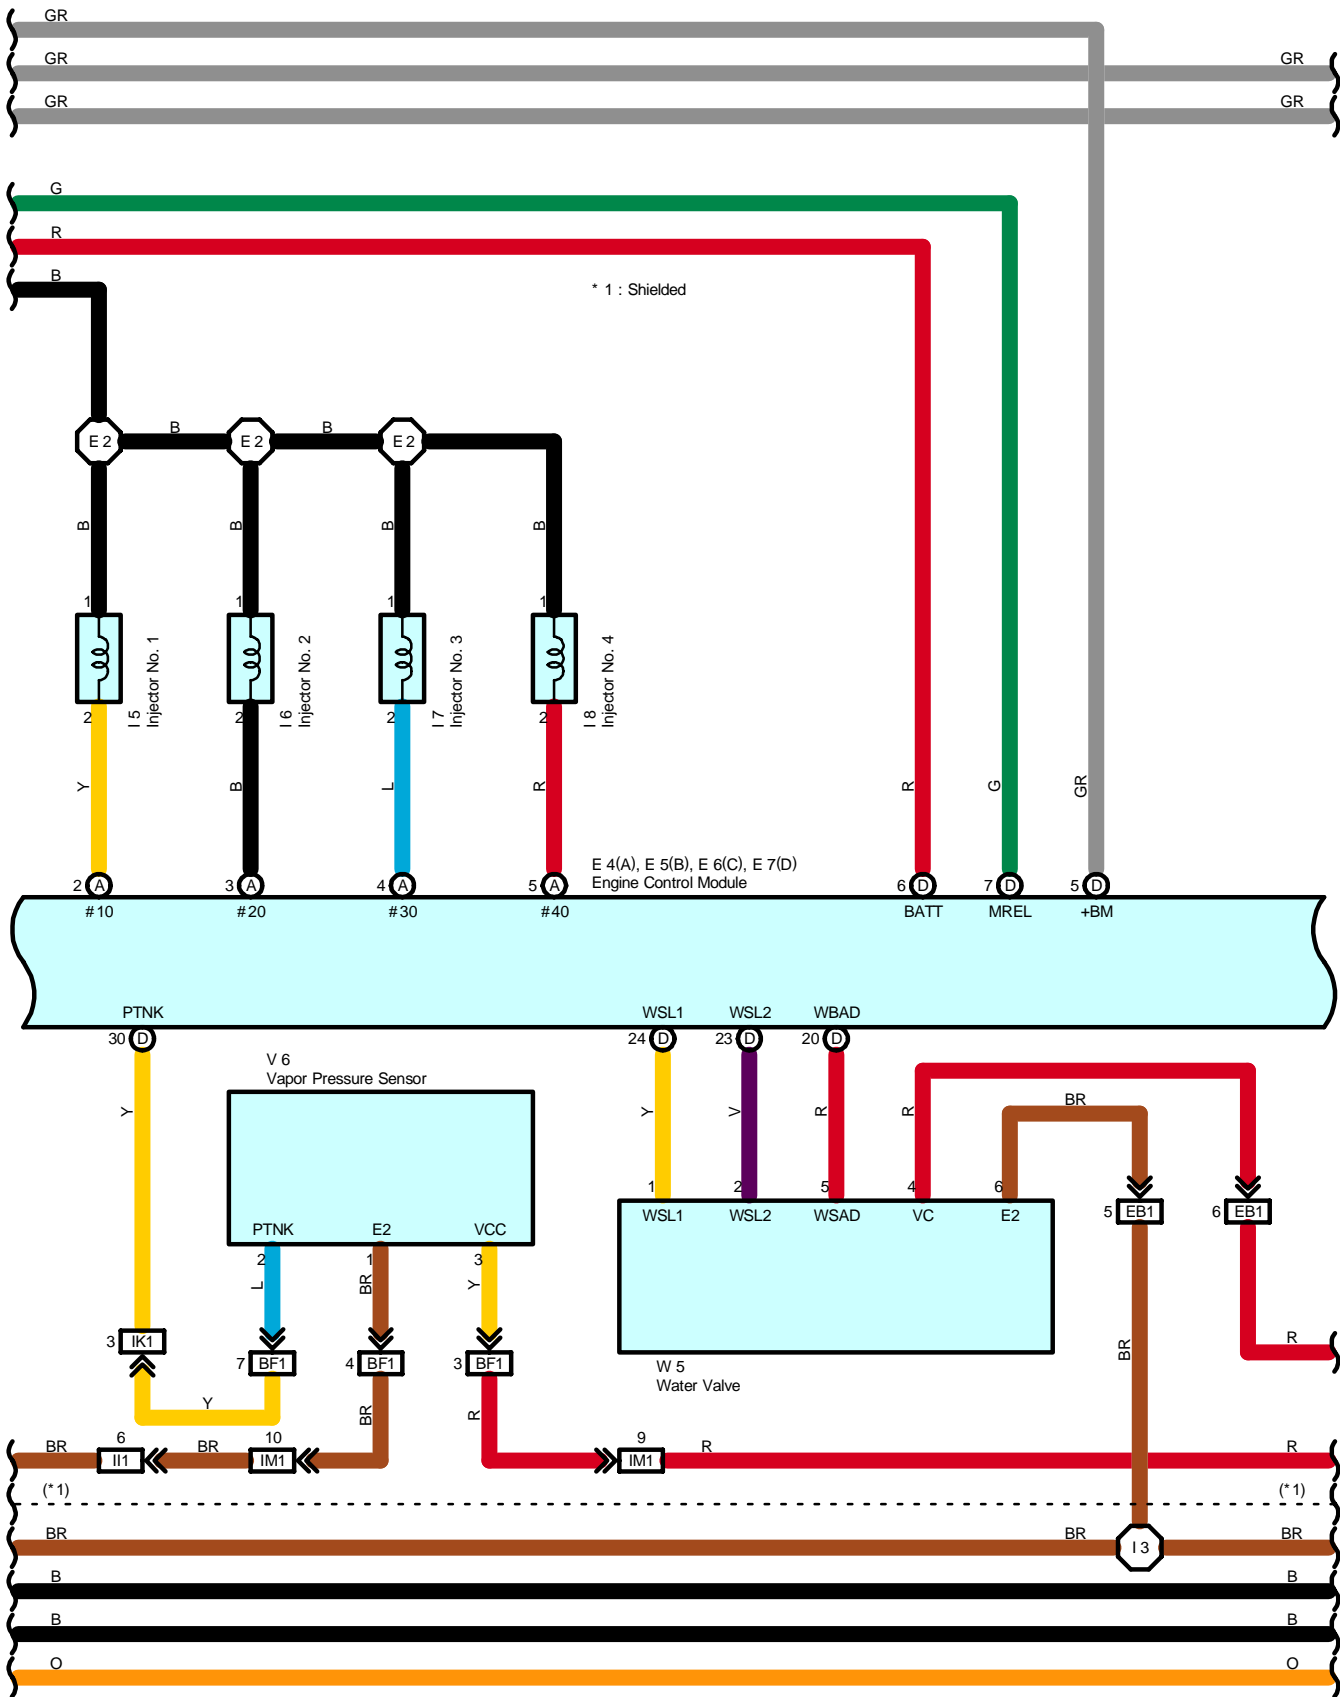


# Engine Control

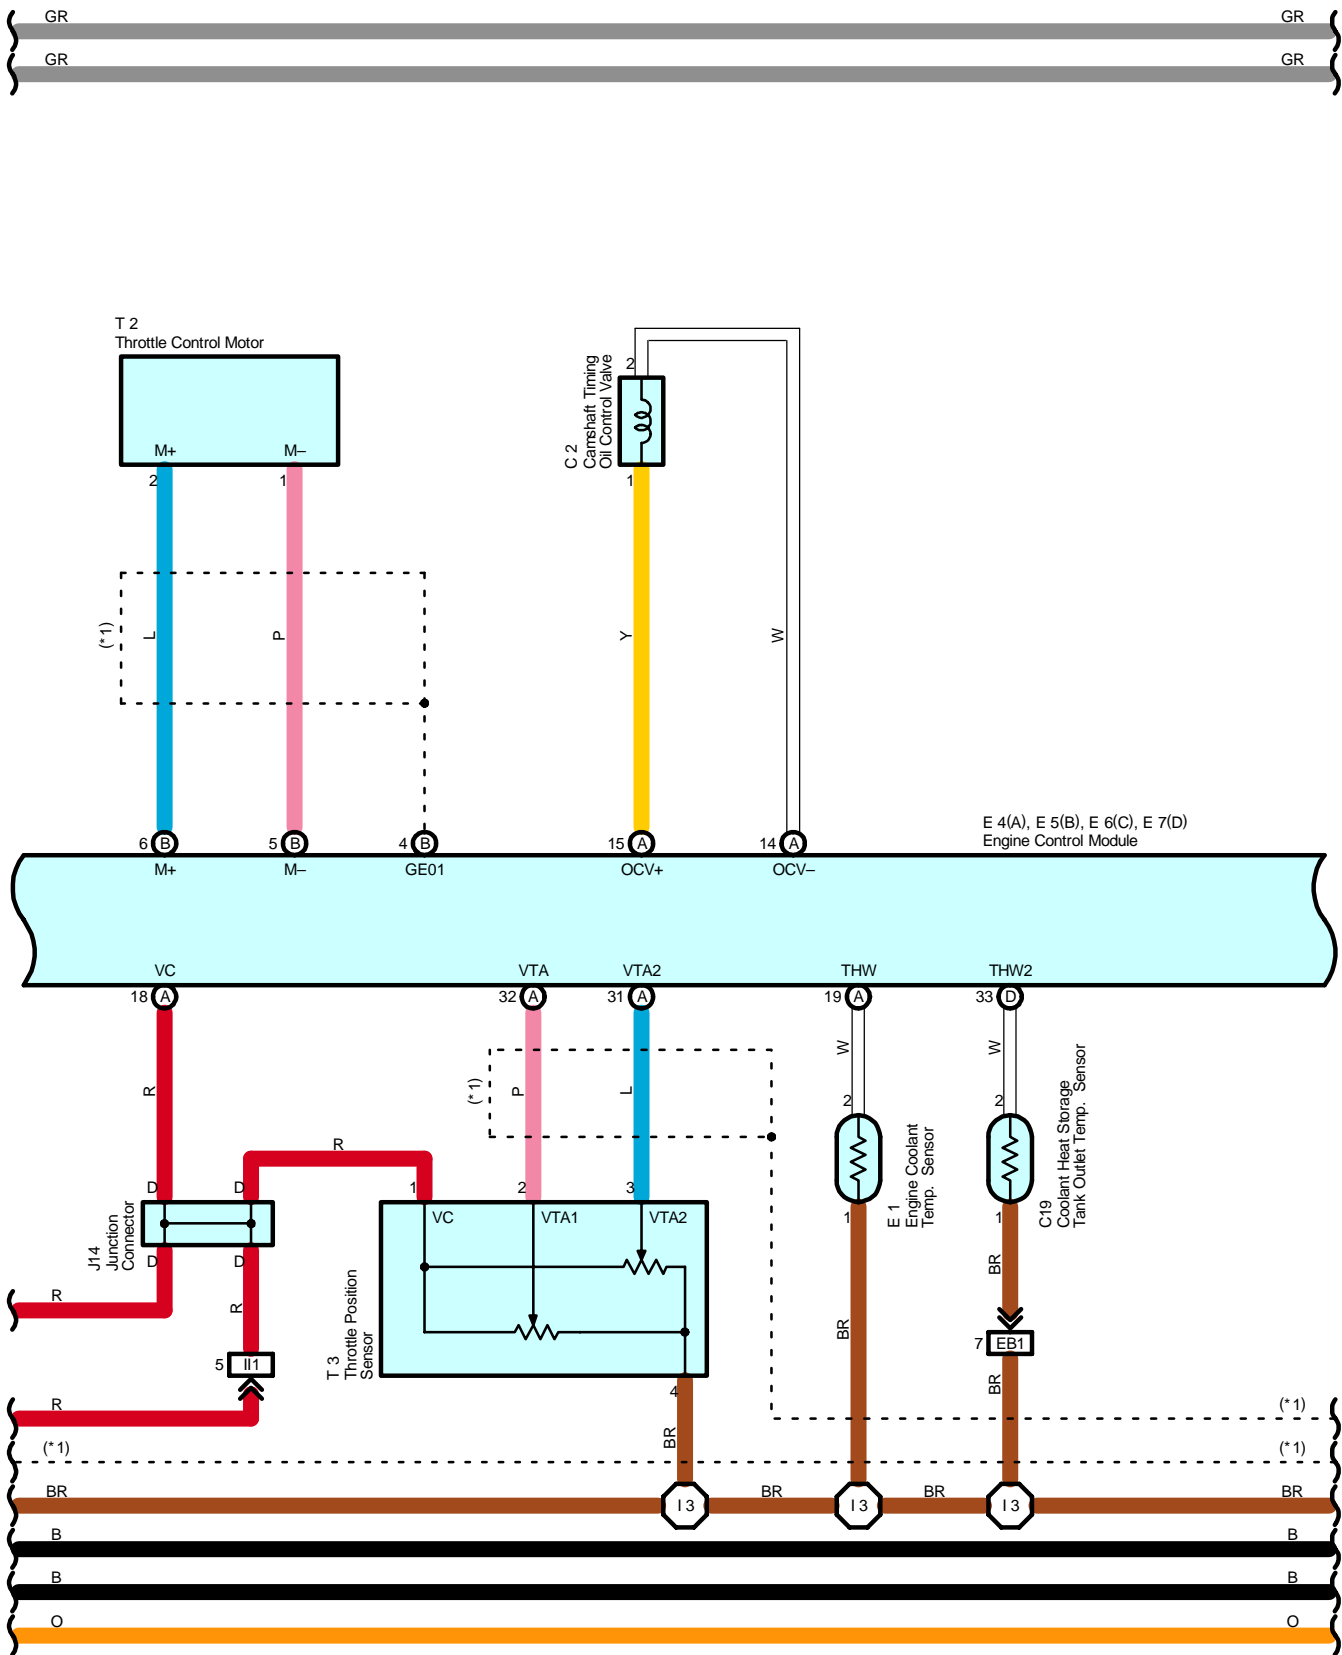




# Engine Control

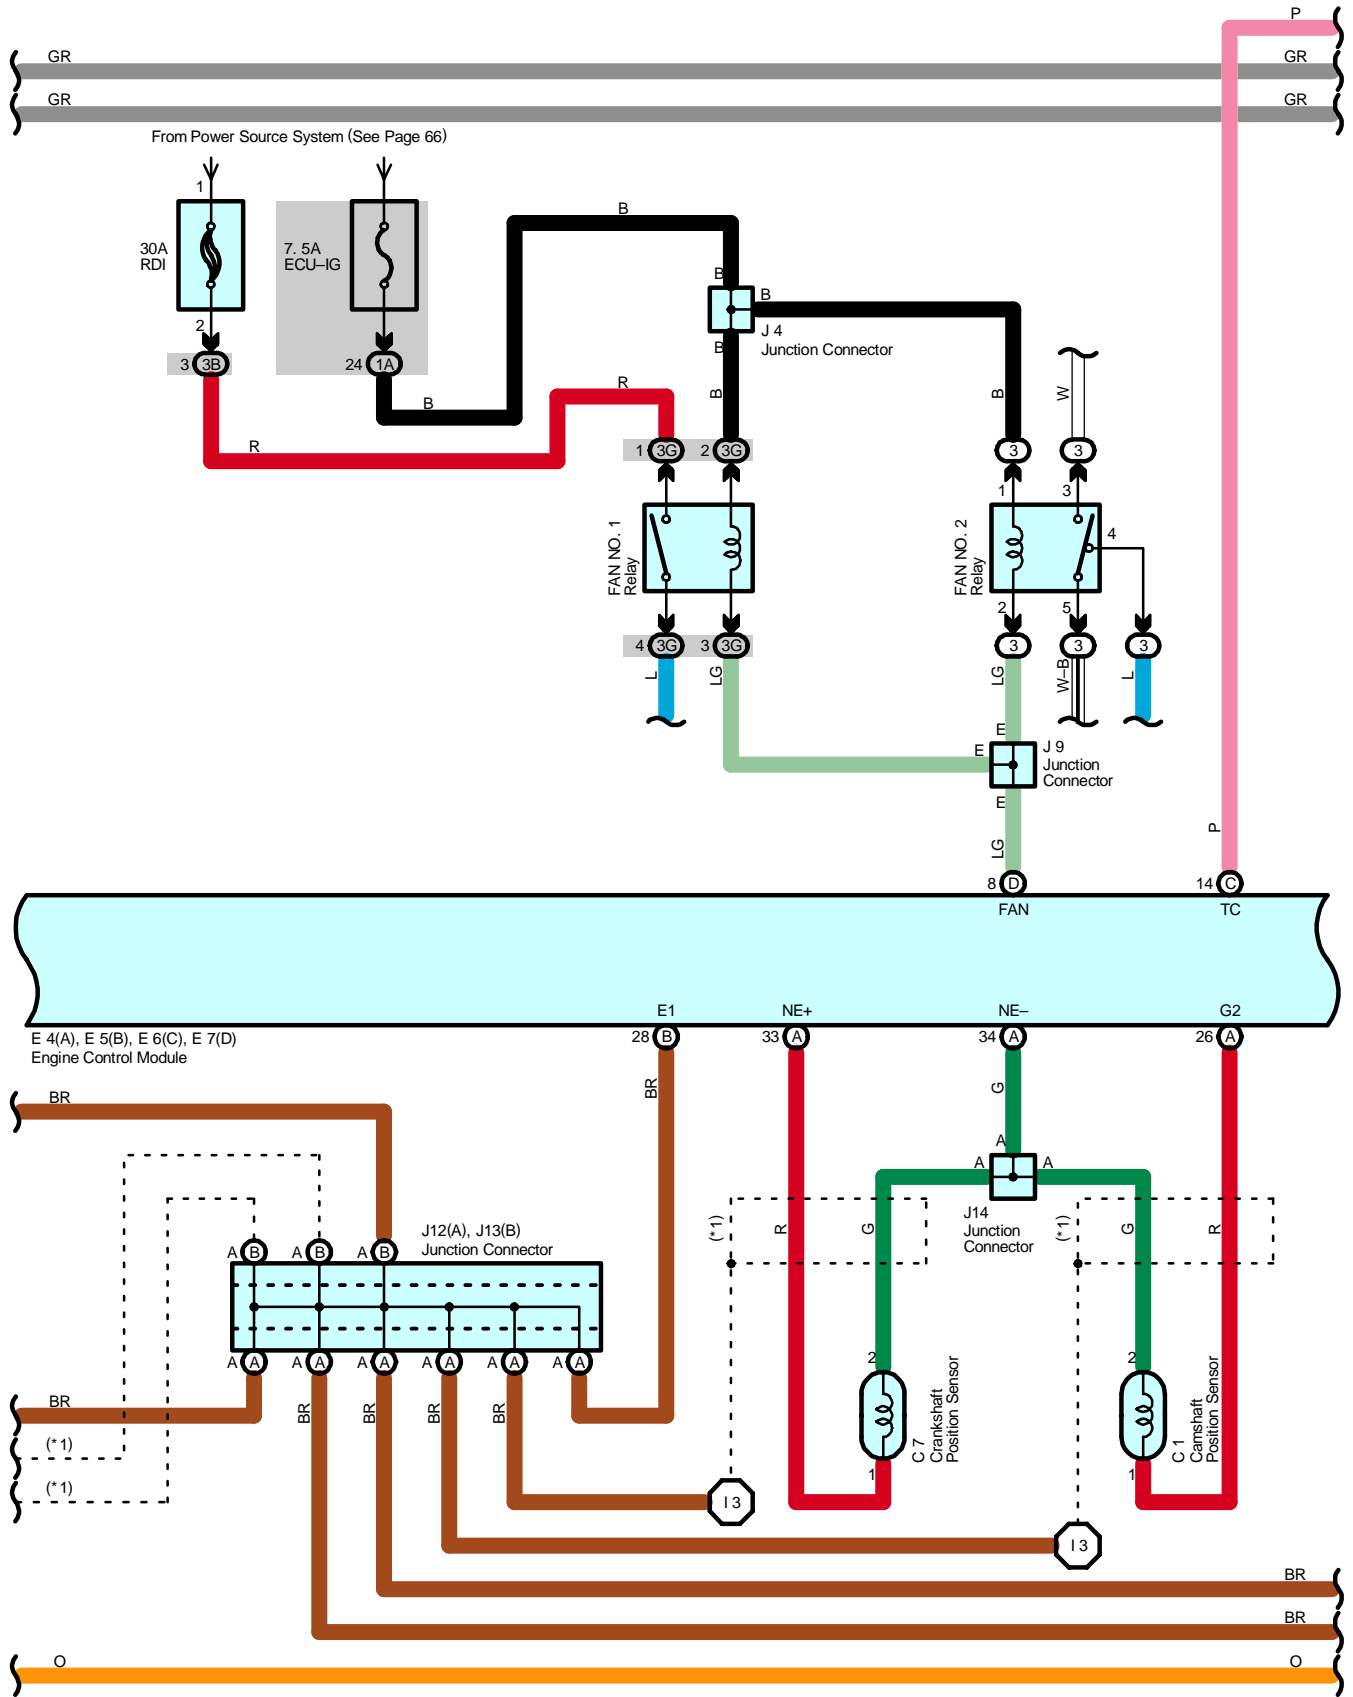




\* 1 : Shielded

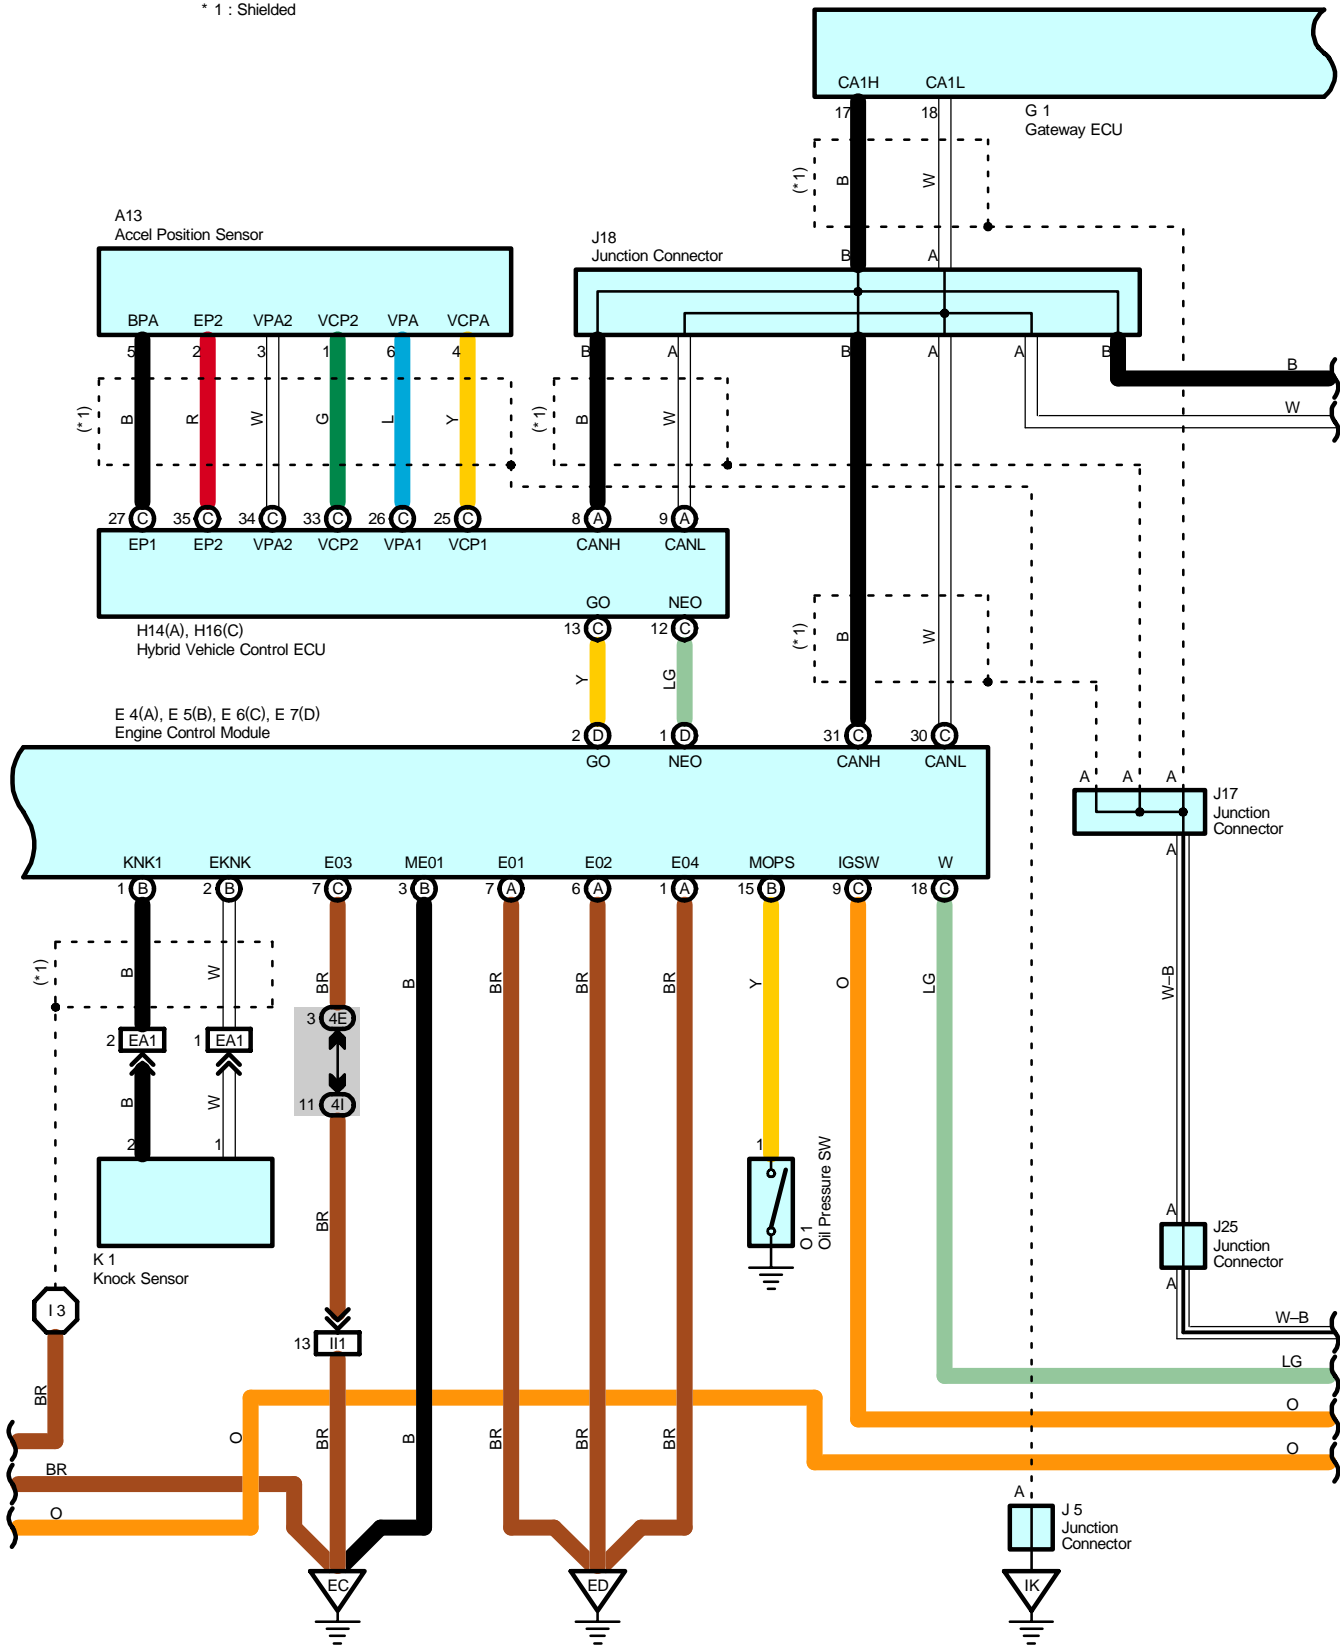



# Engine Control

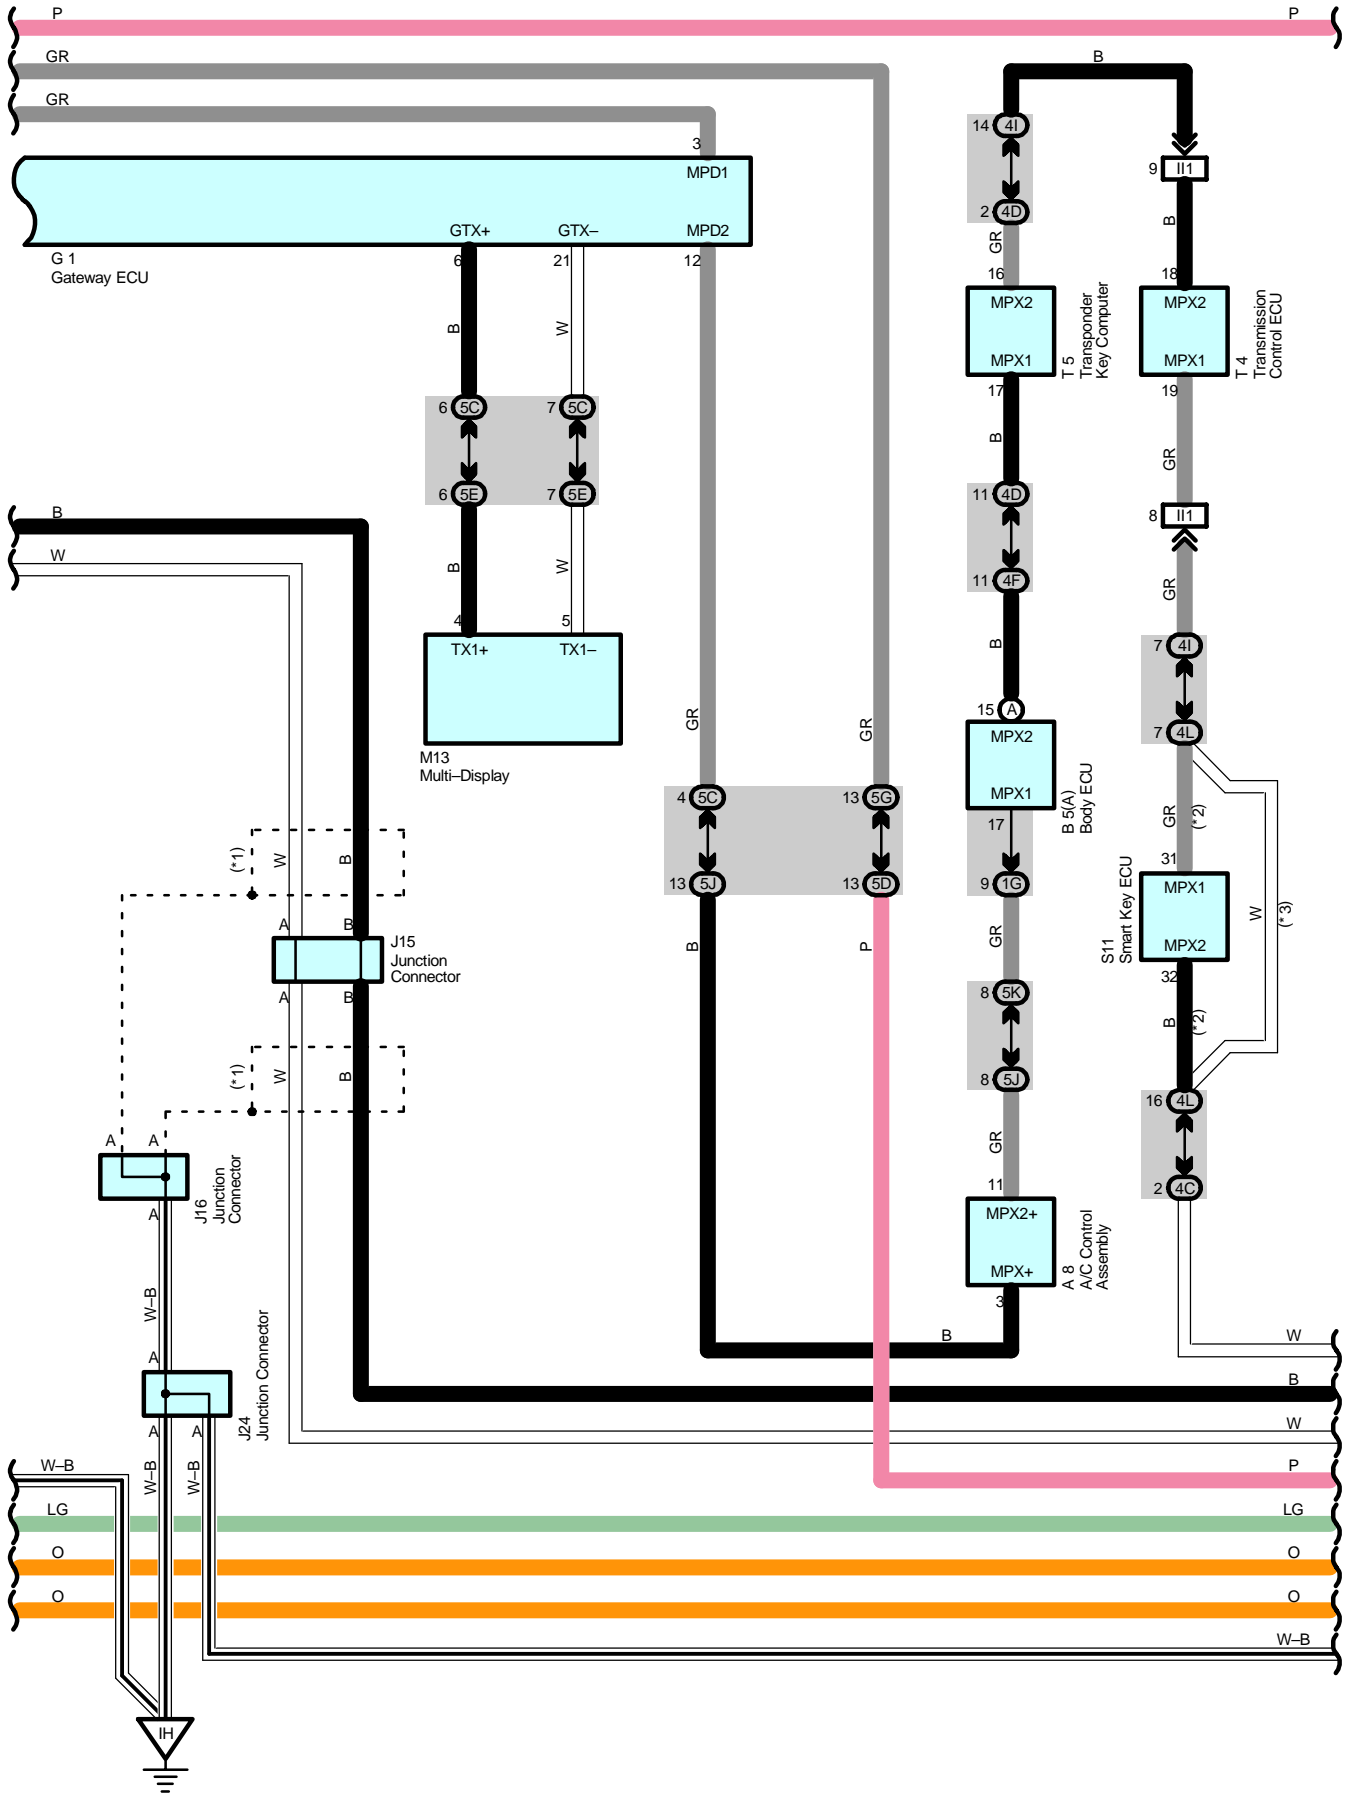



## System Outline

The engine control system utilizes a microcomputer and maintains overall control of the engine, transmission etc. An outline of the engine control is given here.

### 1. Input Signals

(1) Engine coolant temp. signal circuit

The engine coolant temp. sensor detects the engine coolant temp. and has a built-in thermistor with a resistance which varies according to the engine coolant temp. The engine coolant temp. is input into TERMINAL THW of the engine control module as a control signal.

(2) Intake air temp. signal circuit

The intake air temp. sensor is installed in the mass air flow meter and detects the intake air temp., which is input to TERMINAL THA of the engine control module as a control signal.

(3) Oxygen sensor signal circuit

The oxygen density in the exhaust emission is detected and is input from the heated oxygen sensors to TERMINAL OX1B of the engine control module as a control signal.

(4) RPM signal circuit

The camshaft position is detected by the camshaft position sensor, and is input into TERMINAL G2 of the engine control module as a control signal. Also, the engine RPM is detected by the crankshaft position sensor and the signal is input into TERMINAL NE+ of the engine control module.

(5) Throttle position sensor signal circuit

The throttle position sensor detects the throttle valve opening angle as a control signal, which is input into TERMINALS VTA and VTA2 of the engine control module.

(6) Vehicle speed signal circuit

ABS speed sensor detects vehicle speed and the speed signal is input from skid control ECU to engine control module.

(7) Battery signal circuit

Voltage is constantly applied to TERMINAL BATT of the engine control module. When the power SW is pushed on, the voltage for engine control module starts up power supply which is applied through the EFI M relay, to TERMINAL +B of the engine control module. The current from the IGN fuse flows to TERMINAL IGSW of the engine control module, and voltage is constantly applied to TERMINAL +BM.

(8) Intake air volume signal circuit

The intake air volume is detected by the mass air flow meter, and is input to TERMINAL VG of the engine control module as a control signal.

(9) Water temp. (CHS) signal circuit

The water temp. (CHS) sensor detects the water temp. (CHS) and has a built-in thermistor with a resistance which varies according to the water temp. (CHS). The water temp. (CHS) is input into TERMINAL THW2 of the engine control module as a control signal.

(10) Engine knock signal circuit

Engine knocking is detected by the knock sensor, and is input into TERMINAL KNK1 of the engine control module as a control signal.

(11) Air fuel ratio signal circuit

The air fuel ratio is detected and input into TERMINAL A1A+ of the engine control module as a control signal.

## **2. Control System**

### **\* SFI system**

The SFI system monitors the engine condition through the signals input from each sensors to the engine control module. The control signal is sent to the engine control module TERMINALS #10, #20, #30 and #40 to operate the injector (Fuel injection). The SFI system controls the fuel injection with the engine control module according to the driving conditions.

### **\* ESA system**

The ESA system monitors the engine condition through the signals input from each sensors to the engine control module. The best ignition timing is decided according to this data and the data stored in the engine control module. The control signal is output to TERMINALS IGT1, IGT2, IGT3 and IGT4, and these signals control the igniter to provide the best ignition timing.

### **\* Heater control system of heated oxygen sensor**

The heater control system of heated oxygen sensor turns the heater on when the intake air volume is low (Temp. of exhaust emission is low), and warms up the heated oxygen sensors to improve their detecting performance. The engine control module evaluates the signals from each sensors, and outputs current to TERMINAL HT1B to control the heater.

### **\* Heater control system of air fuel ratio sensor**

The heater control system of air fuel ratio sensor turns the heater on when the intake air volume is low (Temp. of exhaust emission is low), and warms up the air fuel ratio sensor to improve detecting performance of the sensor.

The engine control module evaluates the signals from each sensor, current is output to TERMINAL HA1A, controlling the heater.

### **\* Fuel pump control system**

The engine control module supplies current to TERMINAL FC, and controls the operation of the fuel pump with the C/OPN relay.

### **\* VVT-i**

VVT-i controls the intake camshaft to optimal valve timing in accordance with the engine condition.

### **\* CHS system**

Engine control module controls CHS W/P relay to run electric pump to supply heated water stored in CHS tank to engine head. The electric pump stops when the water reaches certain temperature or certain time goes by. Warming engine head optimizes combustion conditions at engine start to reduce emission of incomplete combustion gas.

## **3. Diagnosis System**

When there is malfunction in the engine control module signal system, the malfunctioning system is recorded in the memory. The system can be found by reading the code displayed on the malfunction indicator lamp.

## **4. Fail-Safe System**

When malfunction has occurred in any system, there is possibility of engine trouble due to continuous control based on that system. In such a case, the fail-safe system either controls the system using the data (Standard values) recorded in the engine control module memory, or stops the engine.

# Engine Control

## Service Hints

### E4 (A), E5 (B), E6 (C), E7 (D) Engine Control Module

BATT-E1 : Always approx. 9–14 volts  
 +B-E1 : 9–14 volts with the power SW at IG ON position  
 VC-E2 : 4.5–5.5 volts with the power SW at IG ON position  
 IGF-E1 : Pulse generation with the engine idling  
 THA-E2 : 0.5–3.4 volts with the engine idling and the intake air temp. 0~80°C (32~176°F)  
 THW-E2 : 0.2–1.0 volts with the engine idling and the engine coolant temp. 60~120°C (140~248°F)  
 W-E1 : 9–14 volts with the engine idling and malfunction indicator lamp off  
 FC-E1 : 9–14 volts with the power SW at IG ON position and the engine stopping  
           : 0–3 volts with the engine idling  
 +BM-E1 : Always approx. 9–14 volts  
 MREL-E1 : 9–14 volts with the power SW at IG ON position  
 EVP1-E1 : 9–14 volts with the power SW at IG ON position and the engine not running  
 TC-E1 : 9–14 volts with the power SW at IG ON position and the engine not running  
 KNK1-EKNK : Pulse generation with the engine idling  
 NE+, G2-NE- : Pulse generation with the engine idling  
 IGT1, IGT2, IGT3, IGT4-E1 : Pulse generation with the engine idling  
 E01, E02, E03, E04, E1, E2, ME01-Ground : Always continuity

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A5	44	I1	45	J25	48
A8	46	I2	45	J32	51
A13	46	I3	45	K1	45
B5   A	46	I4	45	M1	45
C1	44	I5	45	M13	48
C2	44	I6	45	O1	45
C7	44	I7	45	P6	49
C10	47	I8	45	S7   A	49
C19	44	J1	45	S8   B	49
C20	44	J2	45	S9   C	49
D1	47	J4	45	S10   D	49
E1	44	J5	48	S11	49
E4   A	47	J6	48	T2	45
E5   B	47	J9	48	T3	45
E6   C	47	J12   A	48	T4	49
E7   D	47	J13   B	48	T5	49
F14	51	J14	48	V1	45
F15	51	J15	48	V6	53
G1	47	J16	48	V7	53
H13	47	J17	48	V8	53
H14   A	47	J18	48	W5	45
H16   C	47	J24	48		

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	26	Engine Room R/B No.2 (Right Side of Reserve Tank)
3	22	Engine Room R/B (Engine Compartment Left)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1E	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1F		
1G		
1L		
1M		
3A	22	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
3B		
3G		
3I		
3K	22	Frame Wire and Engine Room J/B (Engine Compartment Left)
3M		
4C	36	Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4D		
4E		
4F		
4G		
4H		
4I		
4J		
4K		
4L		
5C	40	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5D		
5E		
5F		
5G		
5H		
5J		
5K		
5L		
5M		
5N		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	54	Engine Wire and Engine No.4 Wire (Near the Radiator Fan)
EB1	54	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B)
IA1	56	Engine Room Main Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)
IA3		
IF1	56	Floor Wire and Engine Room Main Wire (Left Kick Panel)
IG1	58	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the Combination Meter)
IG2		
II1	58	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
IJ1	58	Engine Room Main Wire and Instrument Panel Wire (Behind the Glove Box)
IK1	58	Engine Room Main Wire and Floor No.2 Wire (Cowl Side Panel RH)
IM1	58	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
IN1	58	Floor No.2 Wire and Engine Room Main Wire (Right Kick Panel)
BE1	60	Frame Wire and Floor No.2 Wire (Front Side of Left Quarter Panel)
BF1	60	Floor No.2 Wire and Fuel Tank Wire (Near the Fuel Tank)
BM1	62	Floor No.2 Wire and Floor Wire (Rear Side of Right Quarter Panel)

# Engine Control

---



## : Ground Points

Code	See Page	Ground Points Location
EC	54	Engine Block
ED		
EE	54	Left Side of the Suspension Tower
EF		
IH	56	Cowl Side Panel LH
II	56	Instrument Panel Brace LH
IK	56	Cowl Side Panel RH
BQ	60	Rear Side of Right Quarter Panel



## : Splice Points


Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E2	54	Engine Wire	I3	58	Engine Wire
I2	58	Instrument Panel Wire			






# Headlight

From Power Source System (See Page 66)

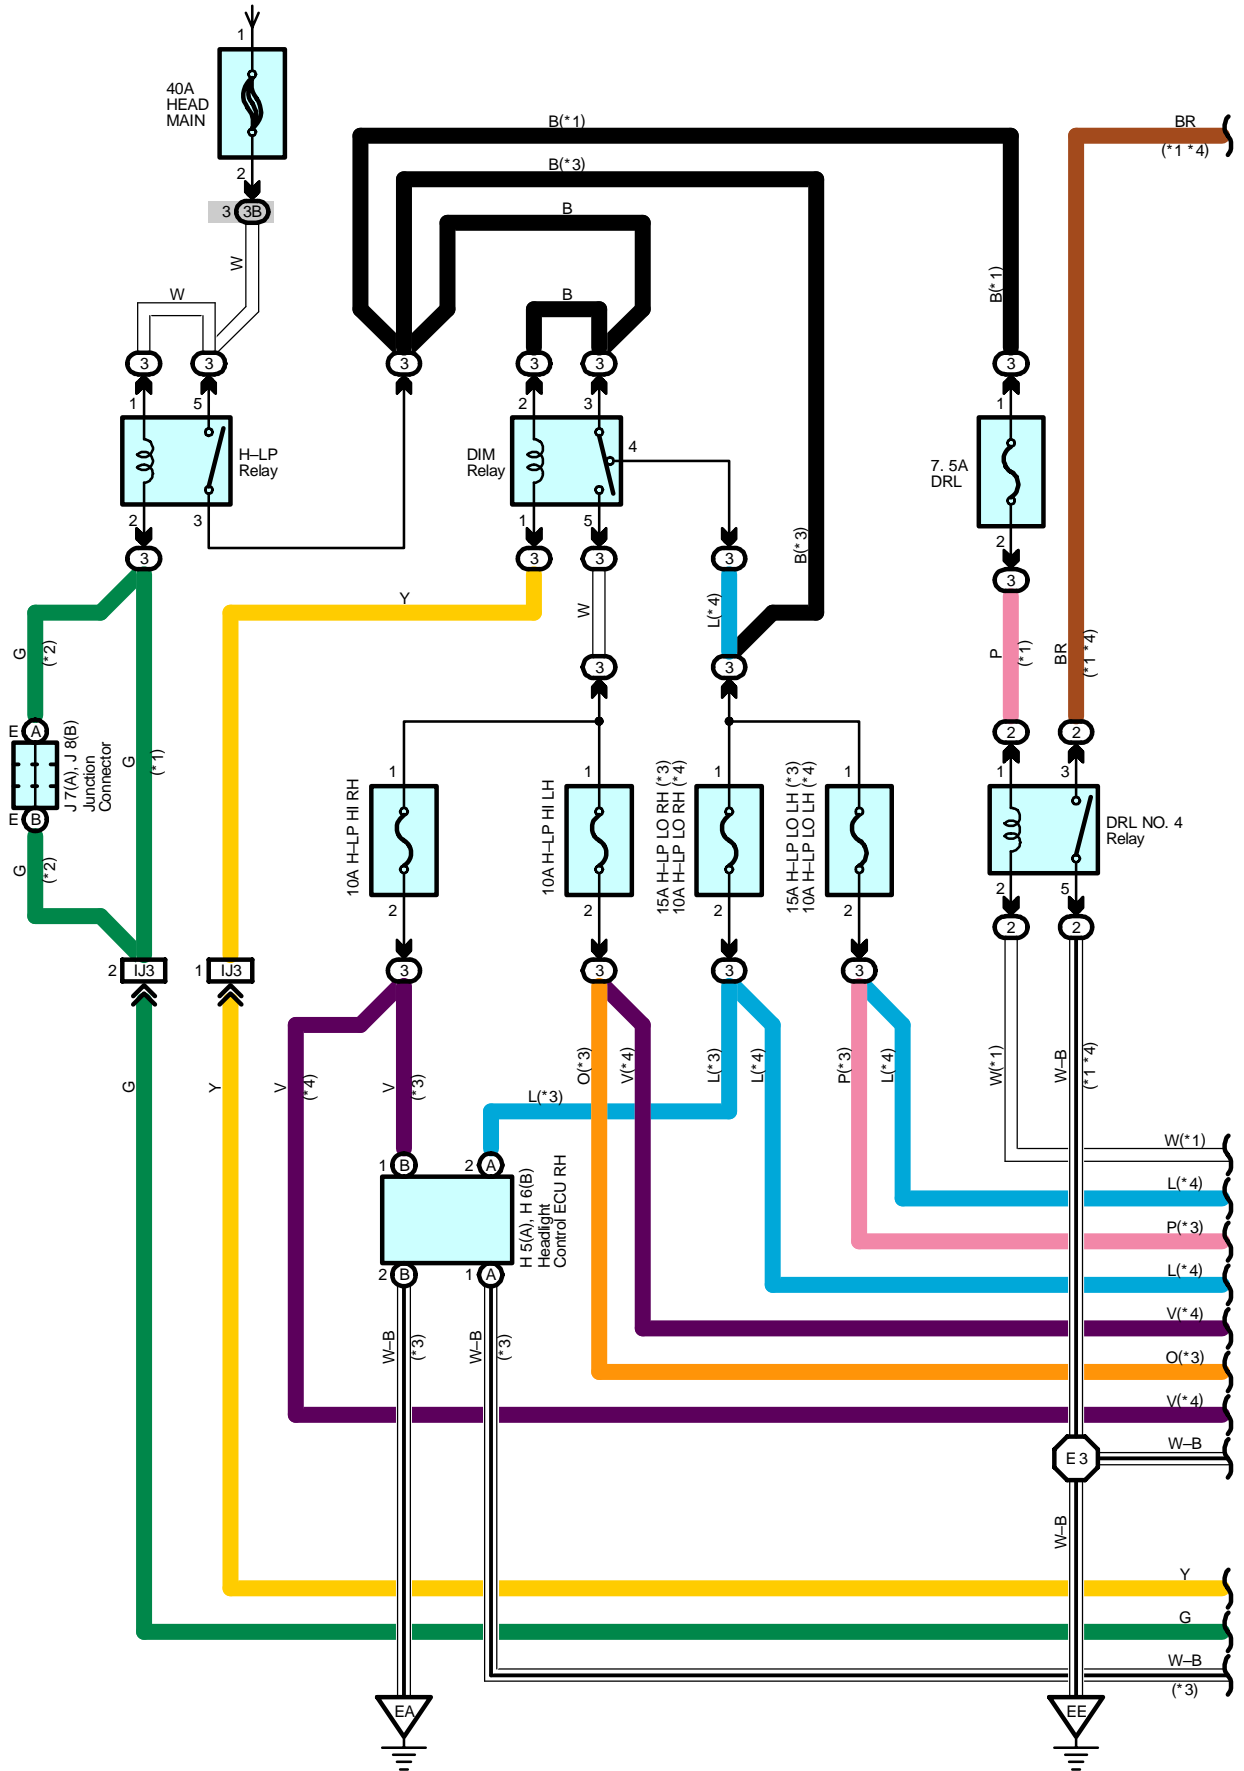


From Power Source System (See Page 66)

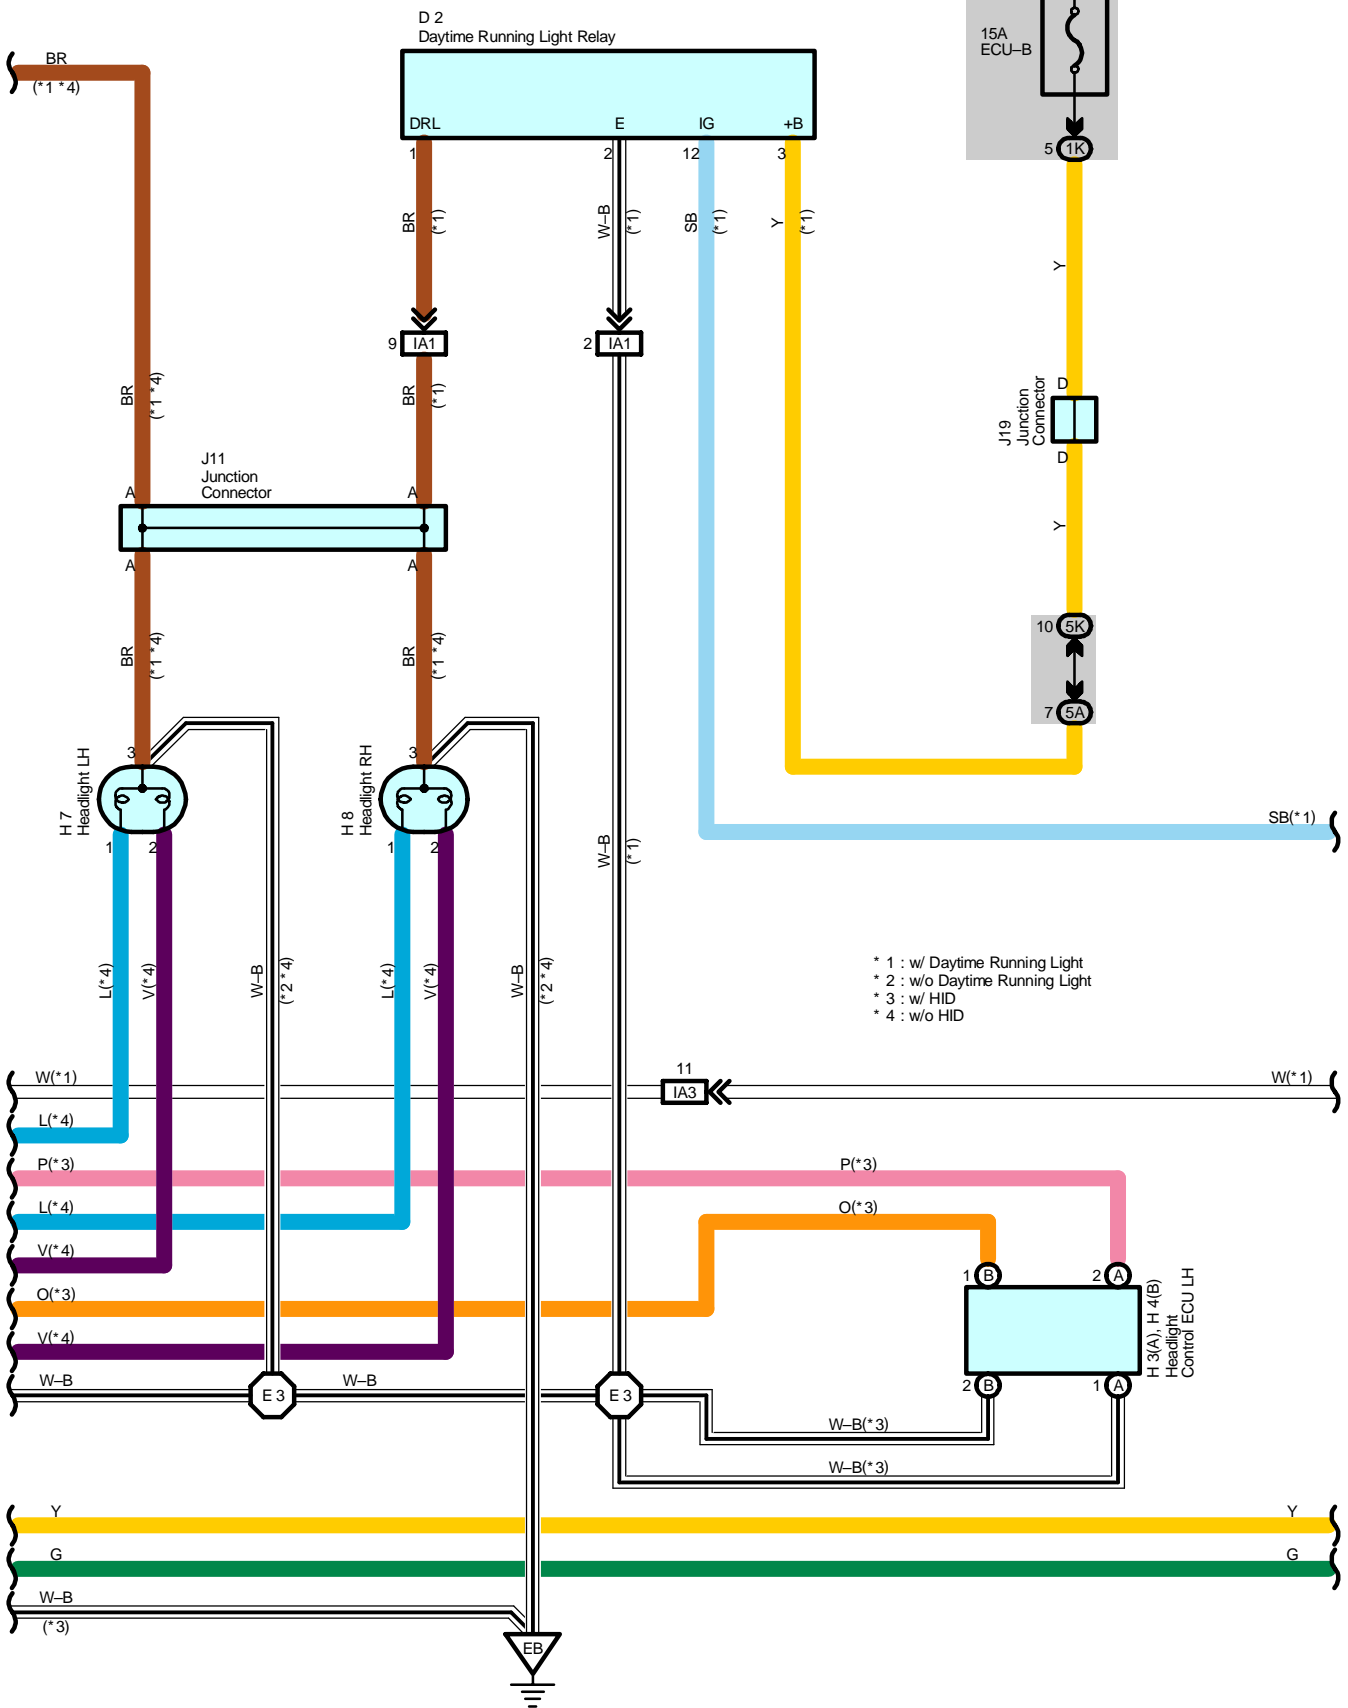


# Headlight

B 5(A), B 6(B), B 7(C)  
Body ECU

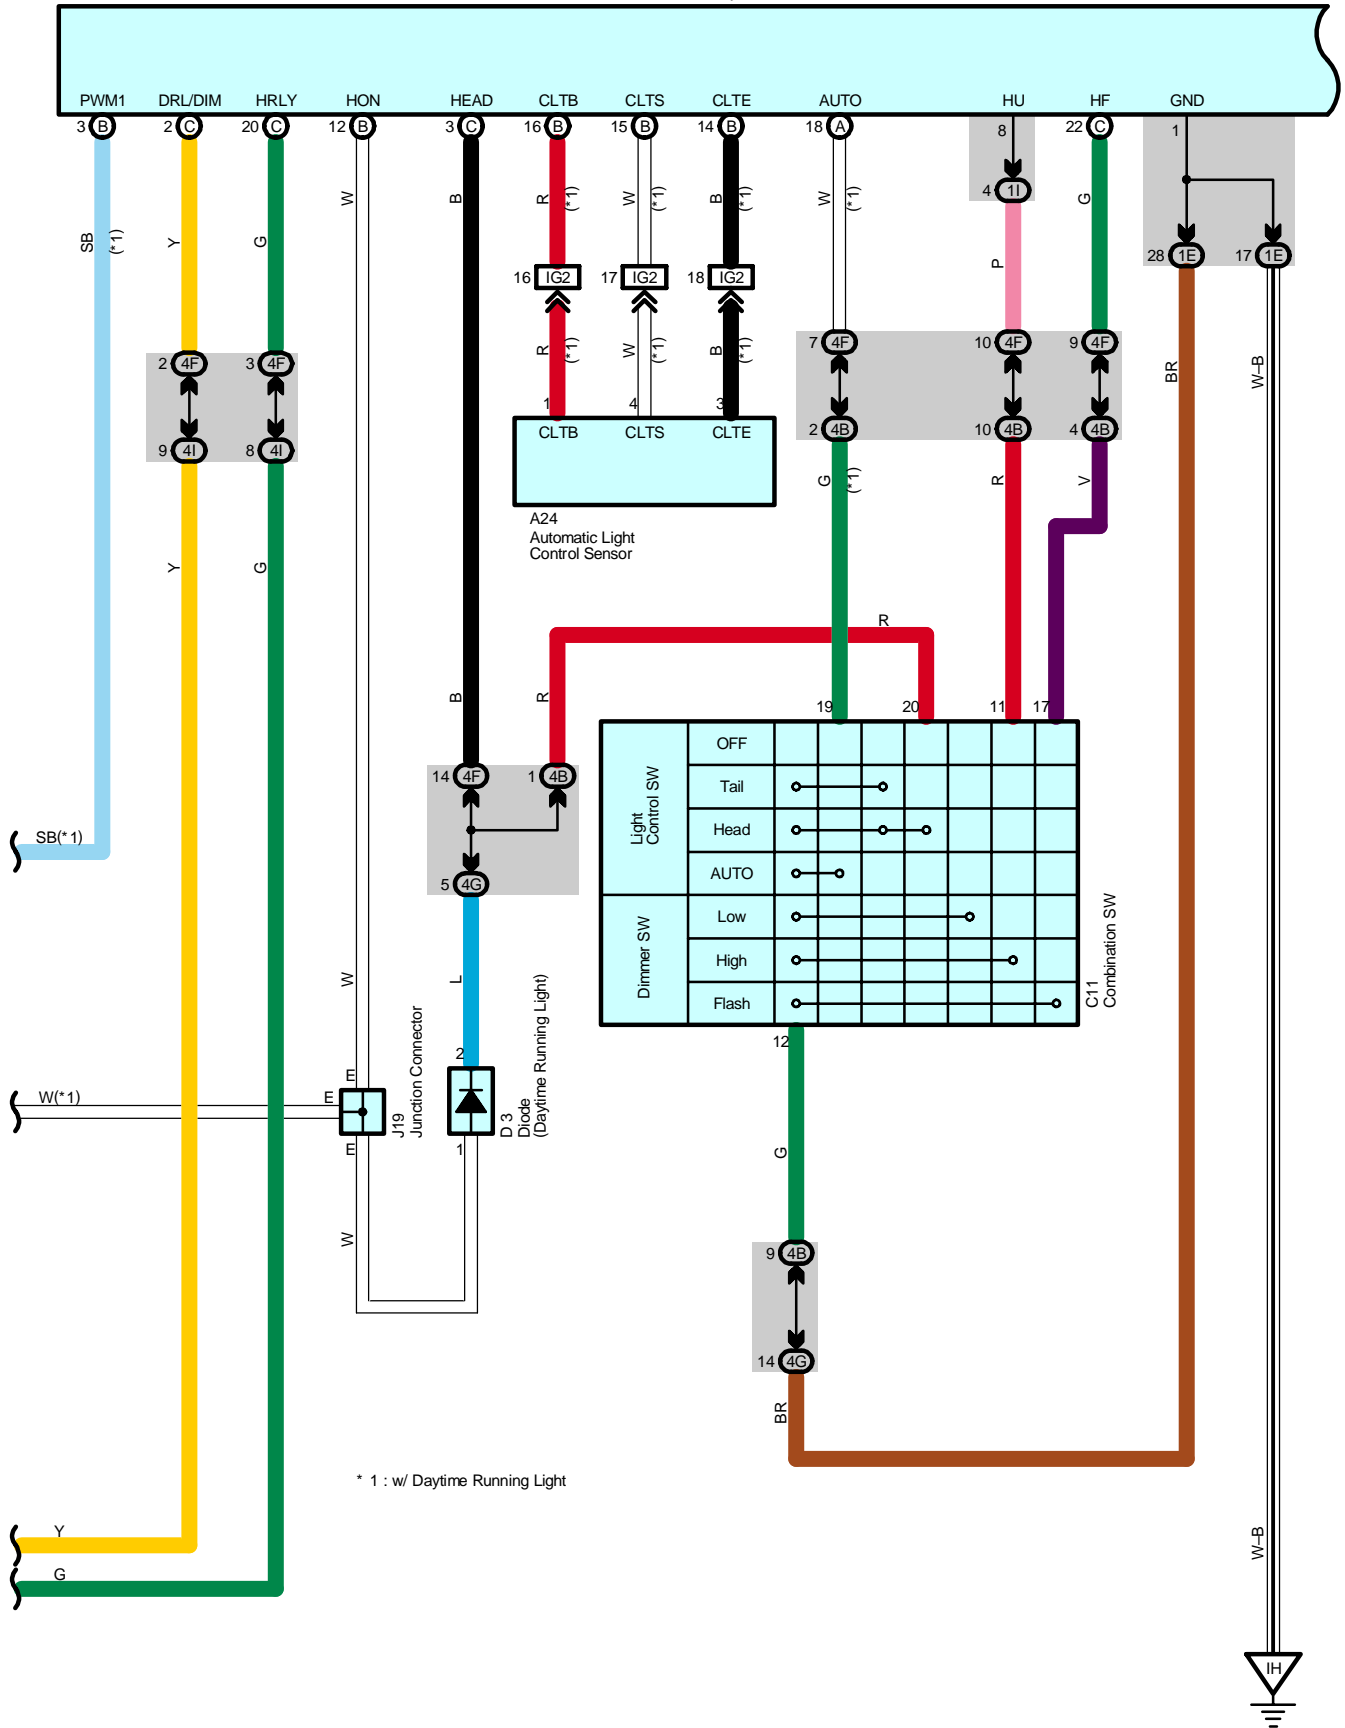


\* 1 : w/ Daytime Running Light

B 5(A), B 6(B), B 7(C)  
Body ECU

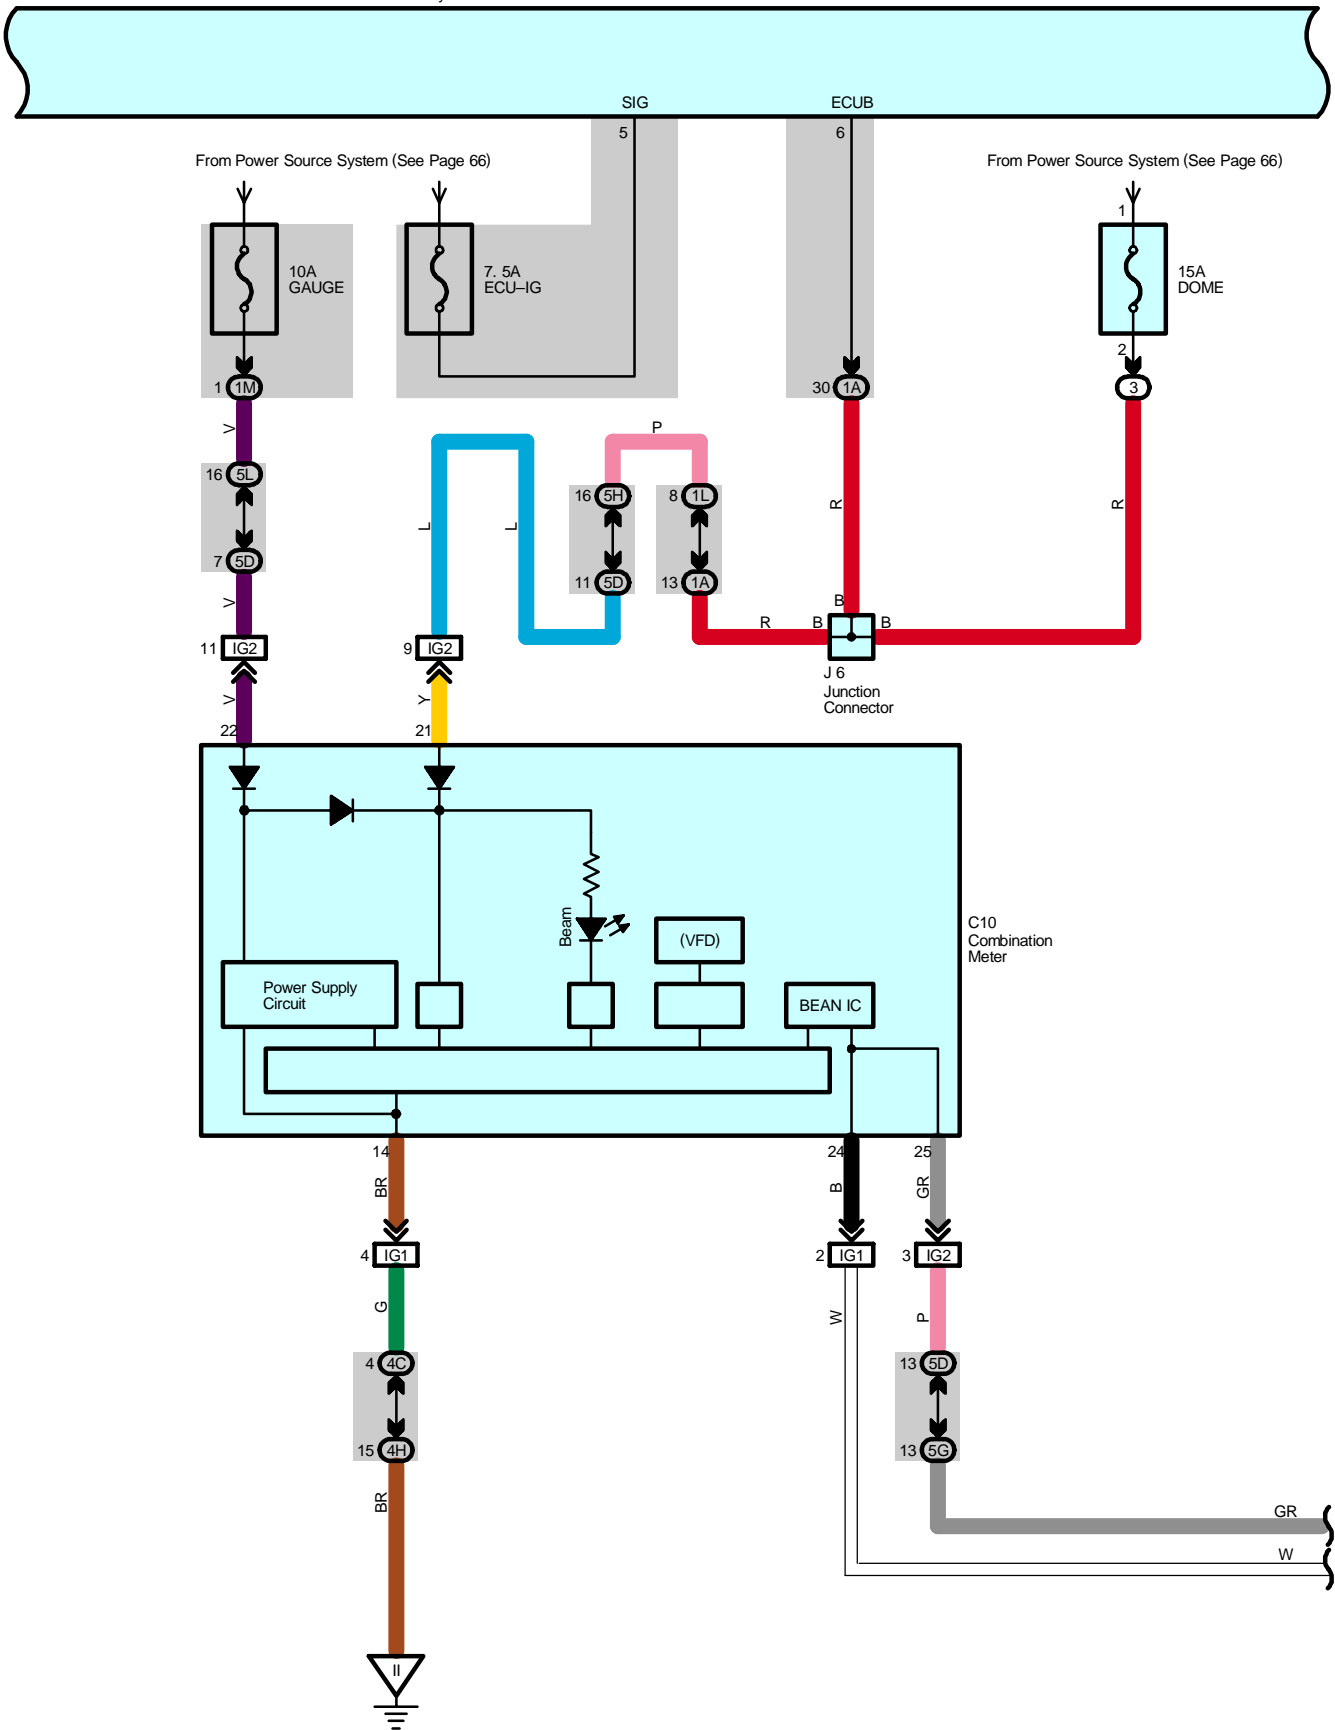

# Headlight

- \* 5 : w/ Smart Entry System
- \* 6 : w/o Smart Entry System

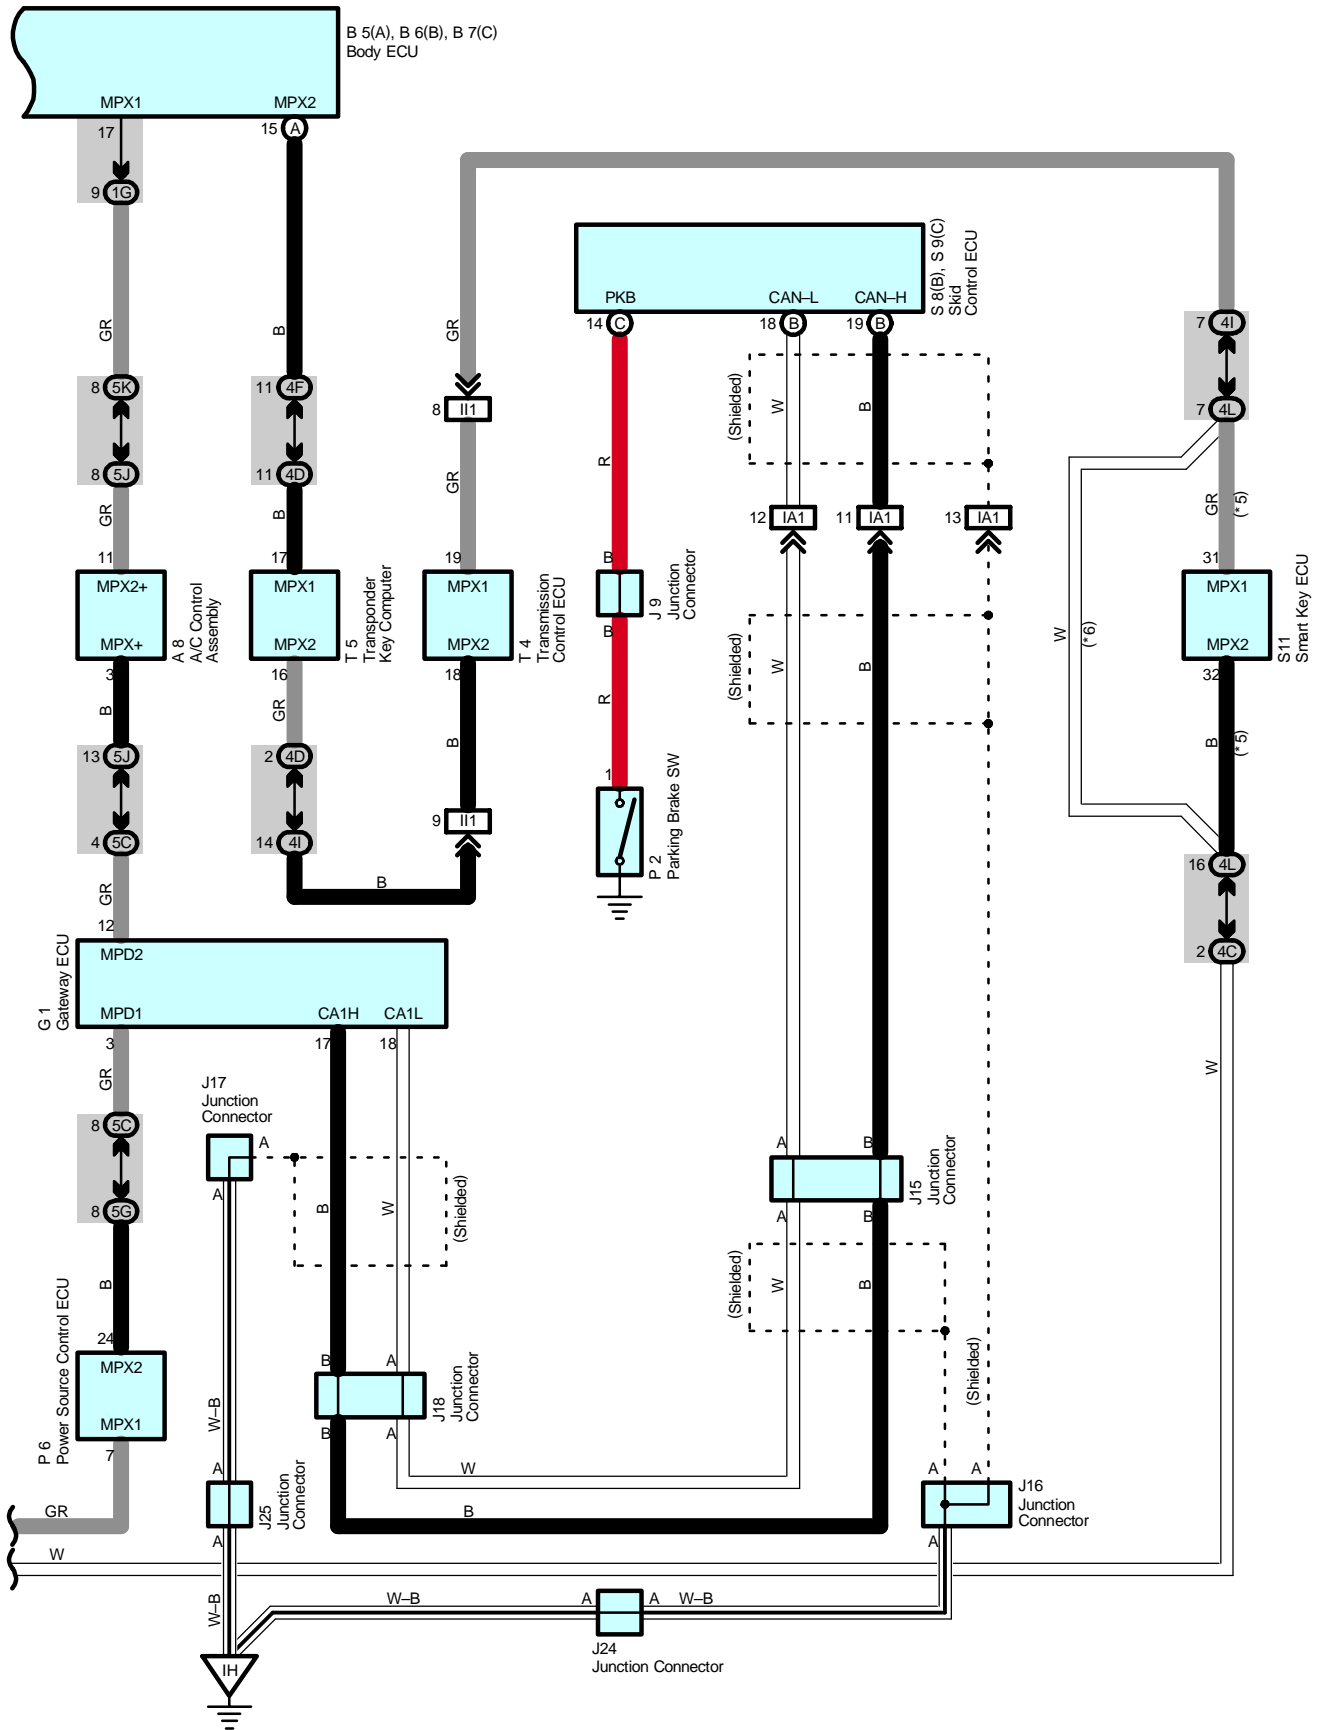

## System Outline

### Daytime Running Light Function

When power SW is at IG ON position and the vehicle is ready to drive (READY lamp on the display in combination meter is on), releasing parking brake makes signal go into TERMINAL PKB of body ECU. In this condition, when light control SW is at Off/Tail/AUTO position (Headlight is not lit), body ECU sends daytime operation request from TERMINAL DRL/DIM to daytime running light relay. As a result, daytime running light relay duty-operates headlights (Dimmer than regular lighting)

## Service Hints

### C11 Combination SW

20-12 : Continuity with the light control SW at HEAD position

17-12 : Continuity with the dimmer SW at FLASH position

11-12 : Continuity with the dimmer SW at HIGH position

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A8	46	H5   A	44	J18	48
A24	46	H6   B	44	J19	48
B5   A	46	H7	44	J24	48
B6   B	46	H8	44	J25	48
B7   C	46	J6	48	P2	49
C10	47	J7   A	48	P6	49
C11	47	J8   B	48	S8   B	49
D2	47	J9	48	S9   C	49
D3	47	J11	48	S11	49
G1	47	J15	48	T4	49
H3   A	44	J16	48	T5	49
H4   B	44	J17	48		

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	26	Engine Room R/B No.2 (Right Side of Reserve Tank)
3	22	Engine Room R/B (Engine Compartment Left)

# Headlight

## : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1E	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1G		
1I		
1K		
1L		
1M		
3B	22	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
4B	36	Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4C		
4D		
4F		
4G		
4H		
4I		
4L		
5A	40	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5C		
5D		
5G		
5H		
5J		
5K		
5L		

## : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	56	Engine Room Main Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)
IA3		
IG1	58	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the Combination Meter)
IG2		
II1	58	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
IJ3	58	Engine Room Main Wire and Instrument Panel Wire (Behind the Glove Box)

## : Ground Points

Code	See Page	Ground Points Location
EA	54	Right Side of the Fender Apron
EB		
EE	54	Left Side of the Suspension Tower
IH	56	Cowl Side Panel LH
II	56	Instrument Panel Brace LH


## : Splice Points


Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E3	54	Engine Room Main Wire			





# Headlight Beam Level Control

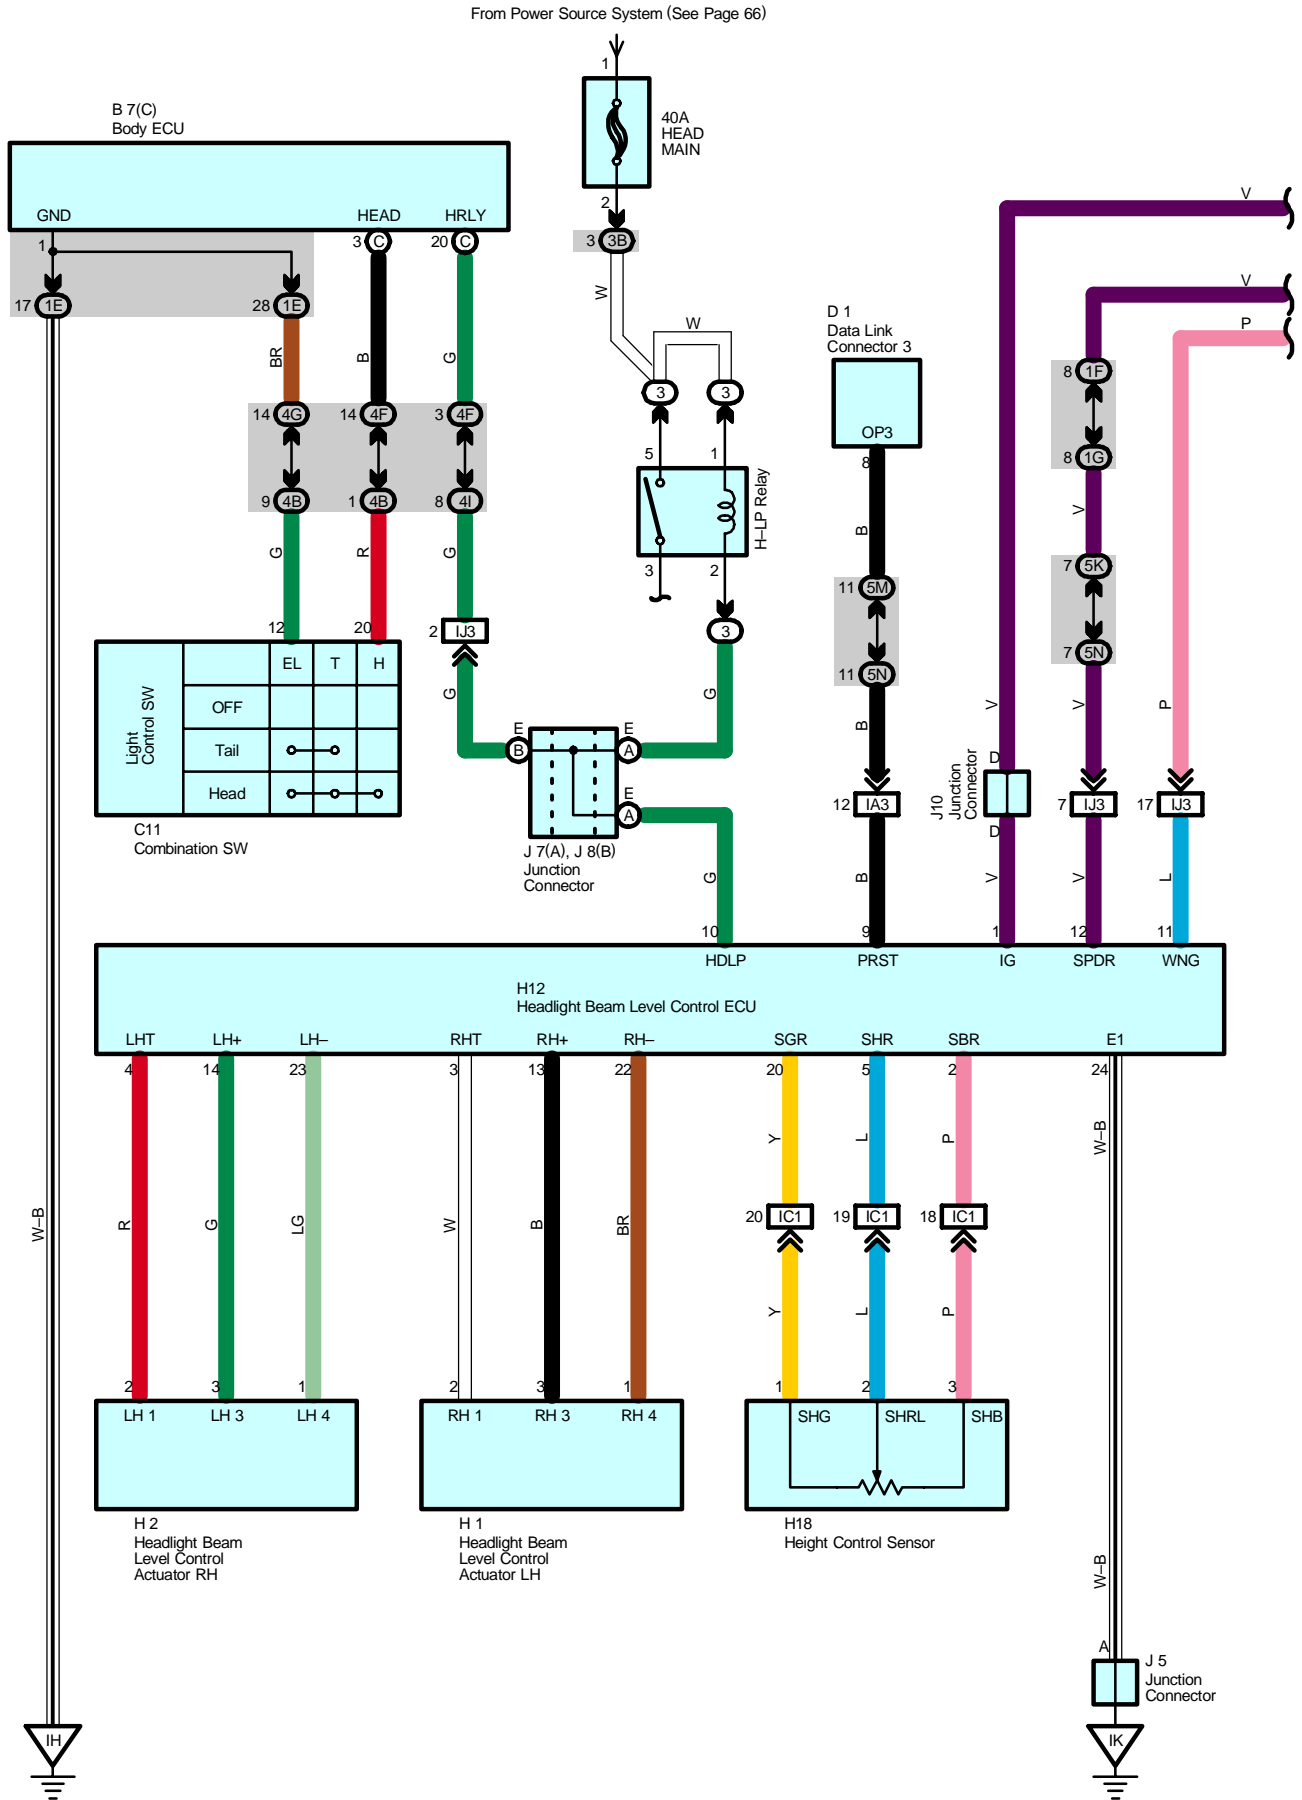

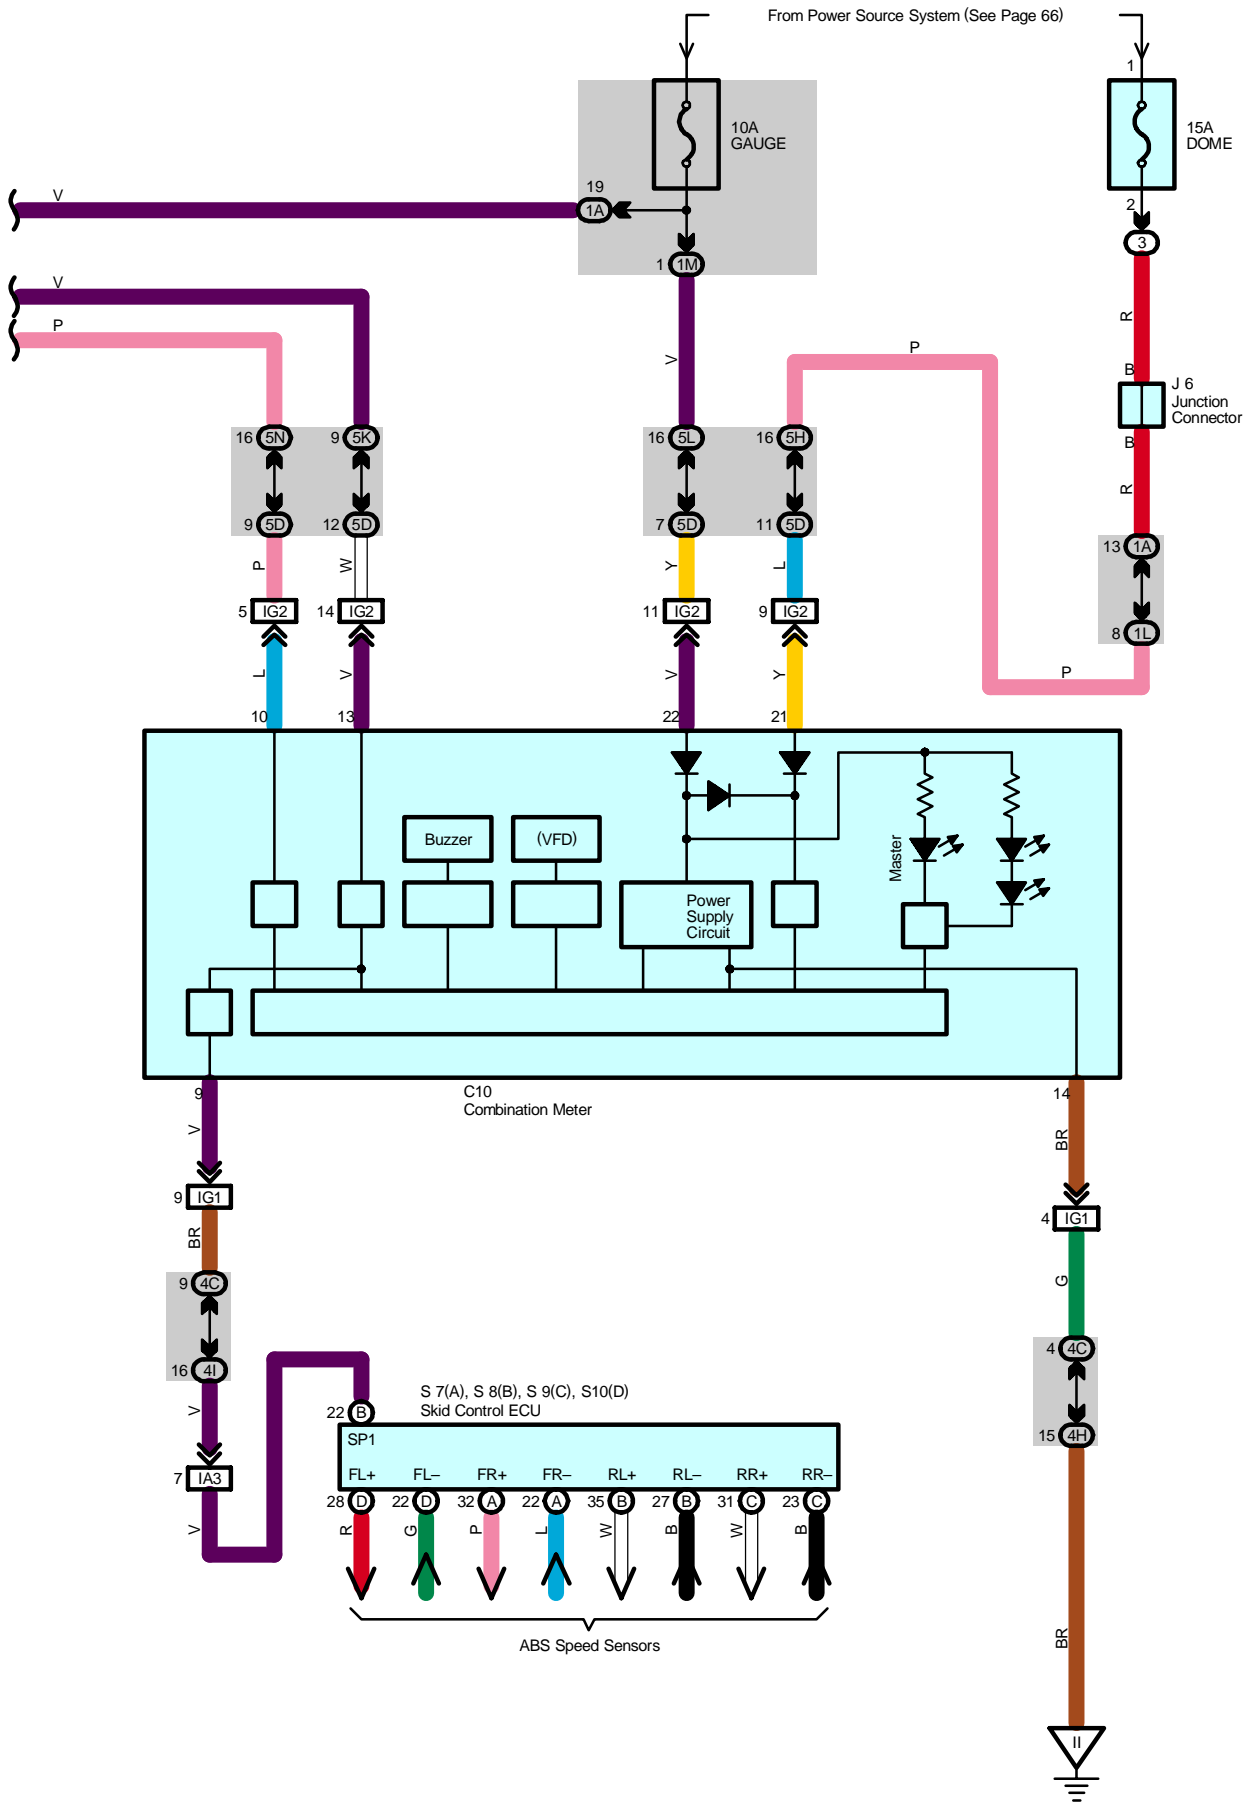

# Headlight Beam Level Control

## System Outline

This system adjusts the illuminating angle from changes in the vehicle height and axle distance, based on the information of the vehicle height detected by the height sensors installed at the rear of the vehicle and on information of the vehicle speed and acceleration output from the VSC system which operates the reflector with the obtained illuminating angle through actuators in order to always keep the beam axis constant.

If an error occurs in this system, the headlight beam level control warning light in the combination meter lights up and warning buzzer goes on to warn the driver.

## Service Hints

### H12 Headlight Beam Level Control ECU

1-Ground : Approx. 12 volts with the power SW at IG ON position

24-Ground : Always continuity

10-Ground : Always Approx. 12 volts

### C11 Combination SW

20-12 : Continuity with the light control SW at HEAD position

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
B7	C	46		H12	47
				J10	48
C10		47		H18	51
				S7	A
C11		47		J5	48
				S8	B
D1		47		J6	48
				S9	C
H1		44		J7	A
				S10	D
H2		44		J8	B

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	22	Engine Room R/B (Engine Compartment Left)

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1E	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1F		
1G		
1L		
1M		
3B	22	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
4B	36	Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4C		
4F		
4G		
4H		
4I		
5D	40	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5H		
5K		
5L		
5M		
5N		

---


 : **Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA3	<a href="#">56</a>	Engine Room Main Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)
IC1	<a href="#">56</a>	Engine Room Main Wire and Floor Wire (Cowl Side Panel LH)
IG1	<a href="#">58</a>	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the Combination Meter)
IG2		
IJ3	<a href="#">58</a>	Engine Room Main Wire and Instrument Panel Wire (Behind the Glove Box)

 : **Ground Points**

Code	See Page	Ground Points Location
IH	<a href="#">56</a>	Cowl Side Panel LH
II	<a href="#">56</a>	Instrument Panel Brace LH
IK	<a href="#">56</a>	Cowl Side Panel RH

# Automatic Light Control

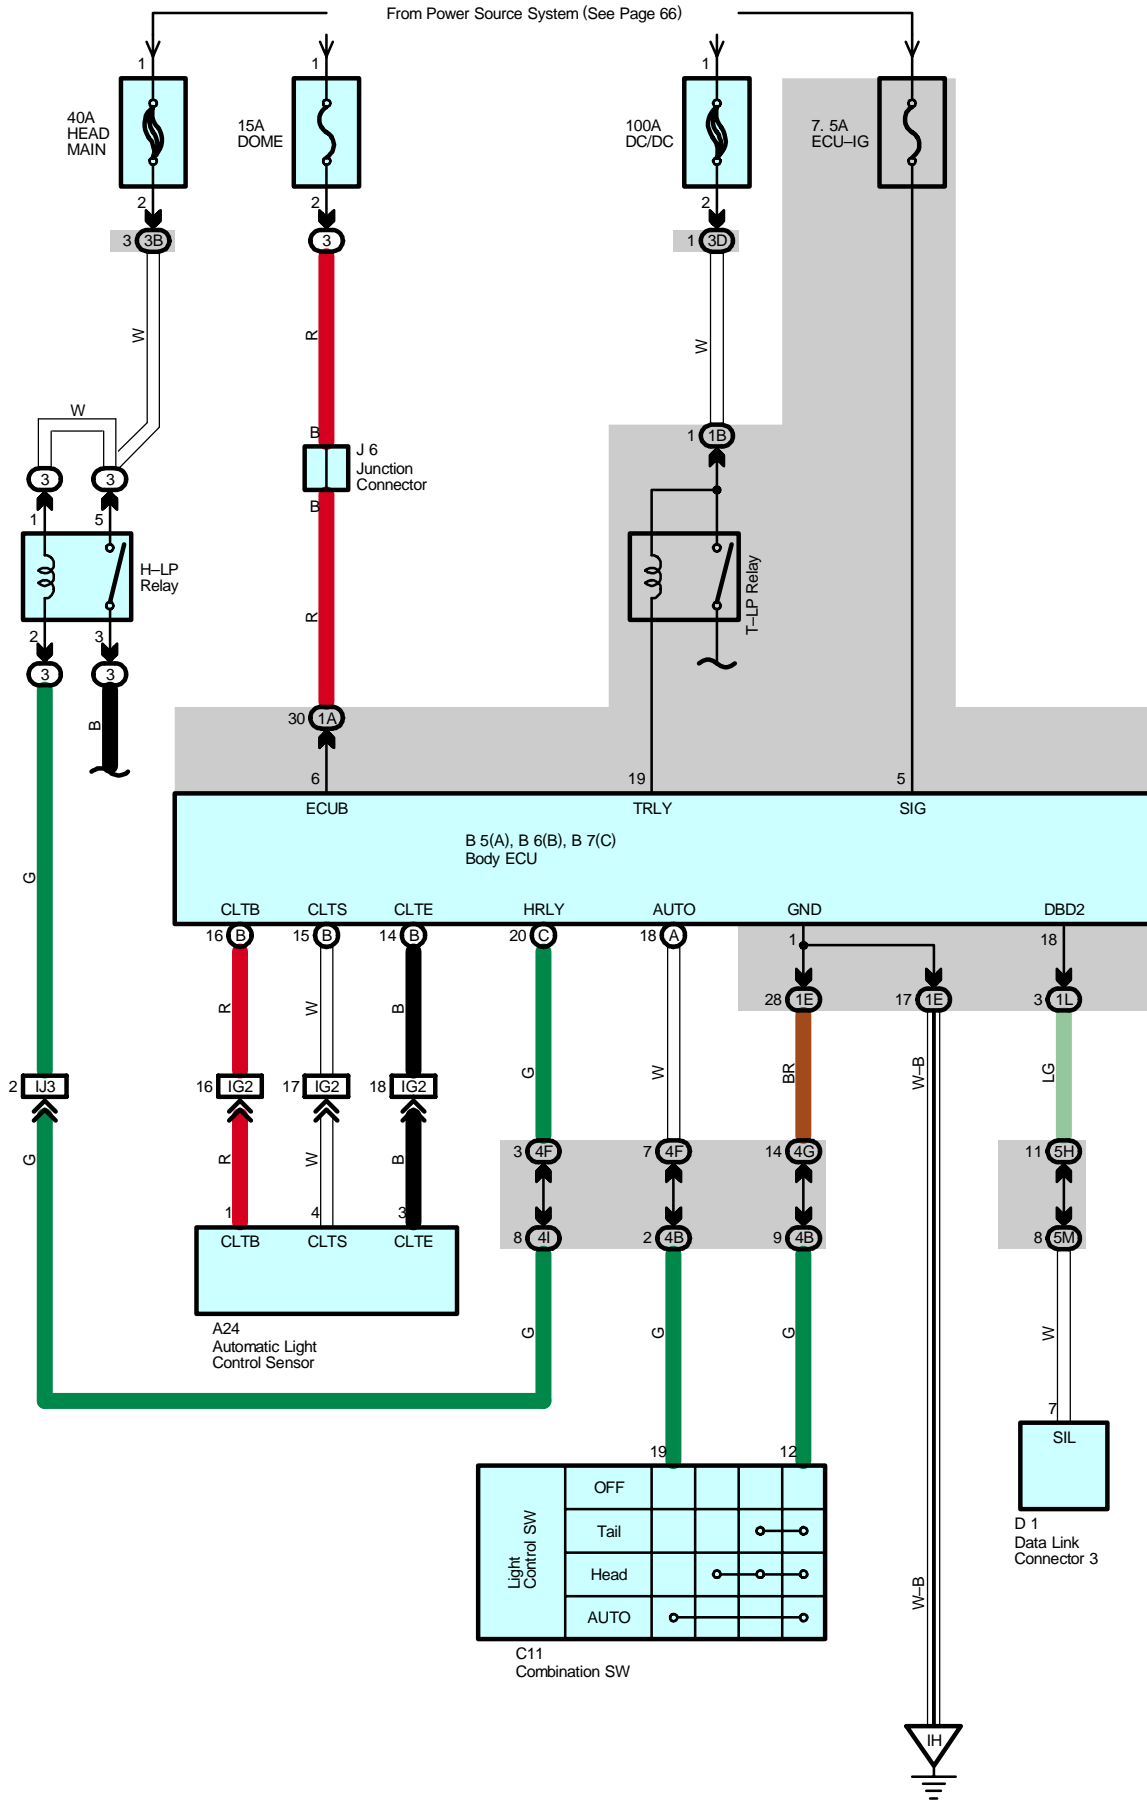

## System Outline

The automatic light control system works when the light control SW is turned to AUTO. The automatic light control sensor detects the brightness around the vehicle. By this function, the system automatically turns on the taillight and headlight if the brightness is below the certain level and turns off the taillight and headlight when the surroundings become brighter than the certain level.

## Service Hints

### C11 Combination SW

19-12 : Continuity with the light control SW at AUTO position

### Body ECU

5-Ground : Approx. 12 volts with the power SW at IG ON position

6-Ground : Always approx. 12 volts

1-Ground : Always continuity

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page	
A24	46	B7	C	46	J6	48
B5	A	46	C11	47		
B6	B	46	D1	47		

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	22	Engine Room R/B (Engine Compartment Left)

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1B		
1E	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1L		
3B	22	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
3D		
4B	36	Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4F		
4G		
4I		
5H	40	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5M		

## □ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IG2	58	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the Combination Meter)
IJ3	58	Engine Room Main Wire and Instrument Panel Wire (Behind the Glove Box)

## ▽ : Ground Points

Code	See Page	Ground Points Location
IH	56	Cowl Side Panel LH



**Service Hints****FR FOG Relay**

3-5 : Closed with the light control SW at TAIL position, dimmer SW at LOW position and fog light SW at ON position

 : **Parts Location**

Code	See Page	Code	See Page	Code	See Page
B5	46	F4	44	J11	48
C11	47	J7	A	48	
F3	44	J8	B	48	

 : **Relay Blocks**

Code	See Page	Relay Blocks (Relay Block Location)
2	26	Engine Room R/B No.2 (Right Side of Reserve Tank)
3	22	Engine Room R/B (Engine Compartment Left)

 : **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1E	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
4B	36	Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4F		
4G		

 : **Connector Joining Wire Harness and Wire Harness**


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA3	56	Engine Room Main Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)

 : **Ground Points**

Code	See Page	Ground Points Location
EA	54	Right Side of the Fender Apron
EE	54	Left Side of the Suspension Tower
IH	56	Cowl Side Panel LH



# Light Auto Turn Off System

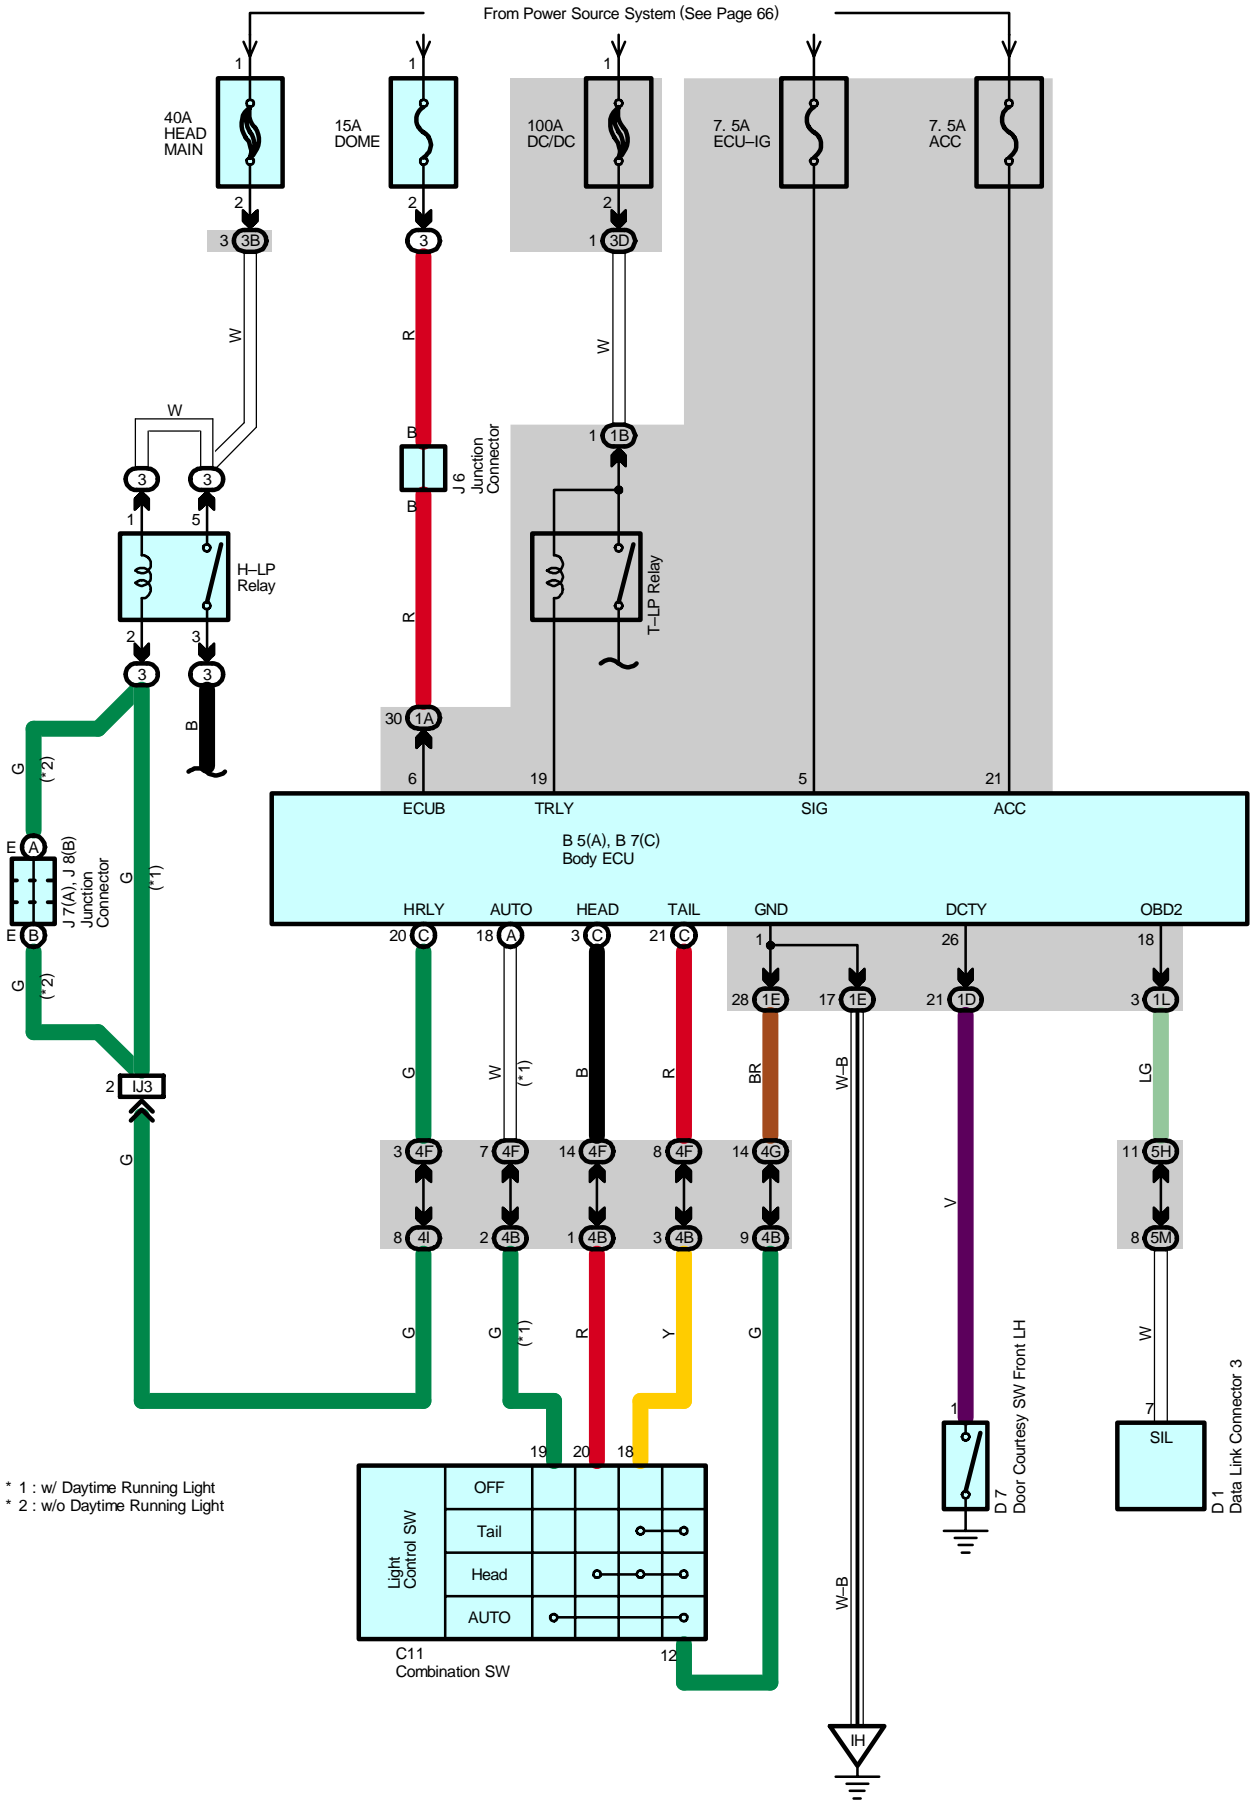

\* 1 : w/ Daytime Running Light  
\* 2 : w/o Daytime Running Light

## System Outline

"The light auto turn off system" automatically turns off the taillights or headlights when the driver's side door is opened, which prevents the lights from being left on.

If the power SW is pushed to OFF from IG ON with the headlights or taillights on, signal is input to the TERMINAL SIG of the body ECU. If the driver's side door is opened at that time, the signal from the door courtesy SW front LH is sent to the TERMINAL DCTY of the body ECU. The signal turns off the headlights, front fog lights or taillights.

## Service Hints

### Body ECU

6-Ground : Always approx. 12 volts

5-Ground : Approx. 12 volts with the power SW at IG ON position

1-Ground : Always continuity

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page		
B5	A	46	D1	47	J7	A	48
B7	C	46	D7	50	J8	B	48
C11	47	J6	48				

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	22	Engine Room R/B (Engine Compartment Left)

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1B		
1D	28	Floor Wire and Driver Side J/B (Lower Finish Panel)
1E	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1L		
3B	22	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
3D		
4B	36	Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4F		
4G		
4I		
5H	40	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5M		

## □ : Connector Joining Wire Harness and Wire Harness


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IJ3	58	Engine Room Main Wire and Instrument Panel Wire (Behind the Glove Box)


## ▽ : Ground Points

Code	See Page	Ground Points Location
IH	56	Cowl Side Panel LH

# Turn Signal and Hazard Warning Light

From Power Source System (See Page 66)

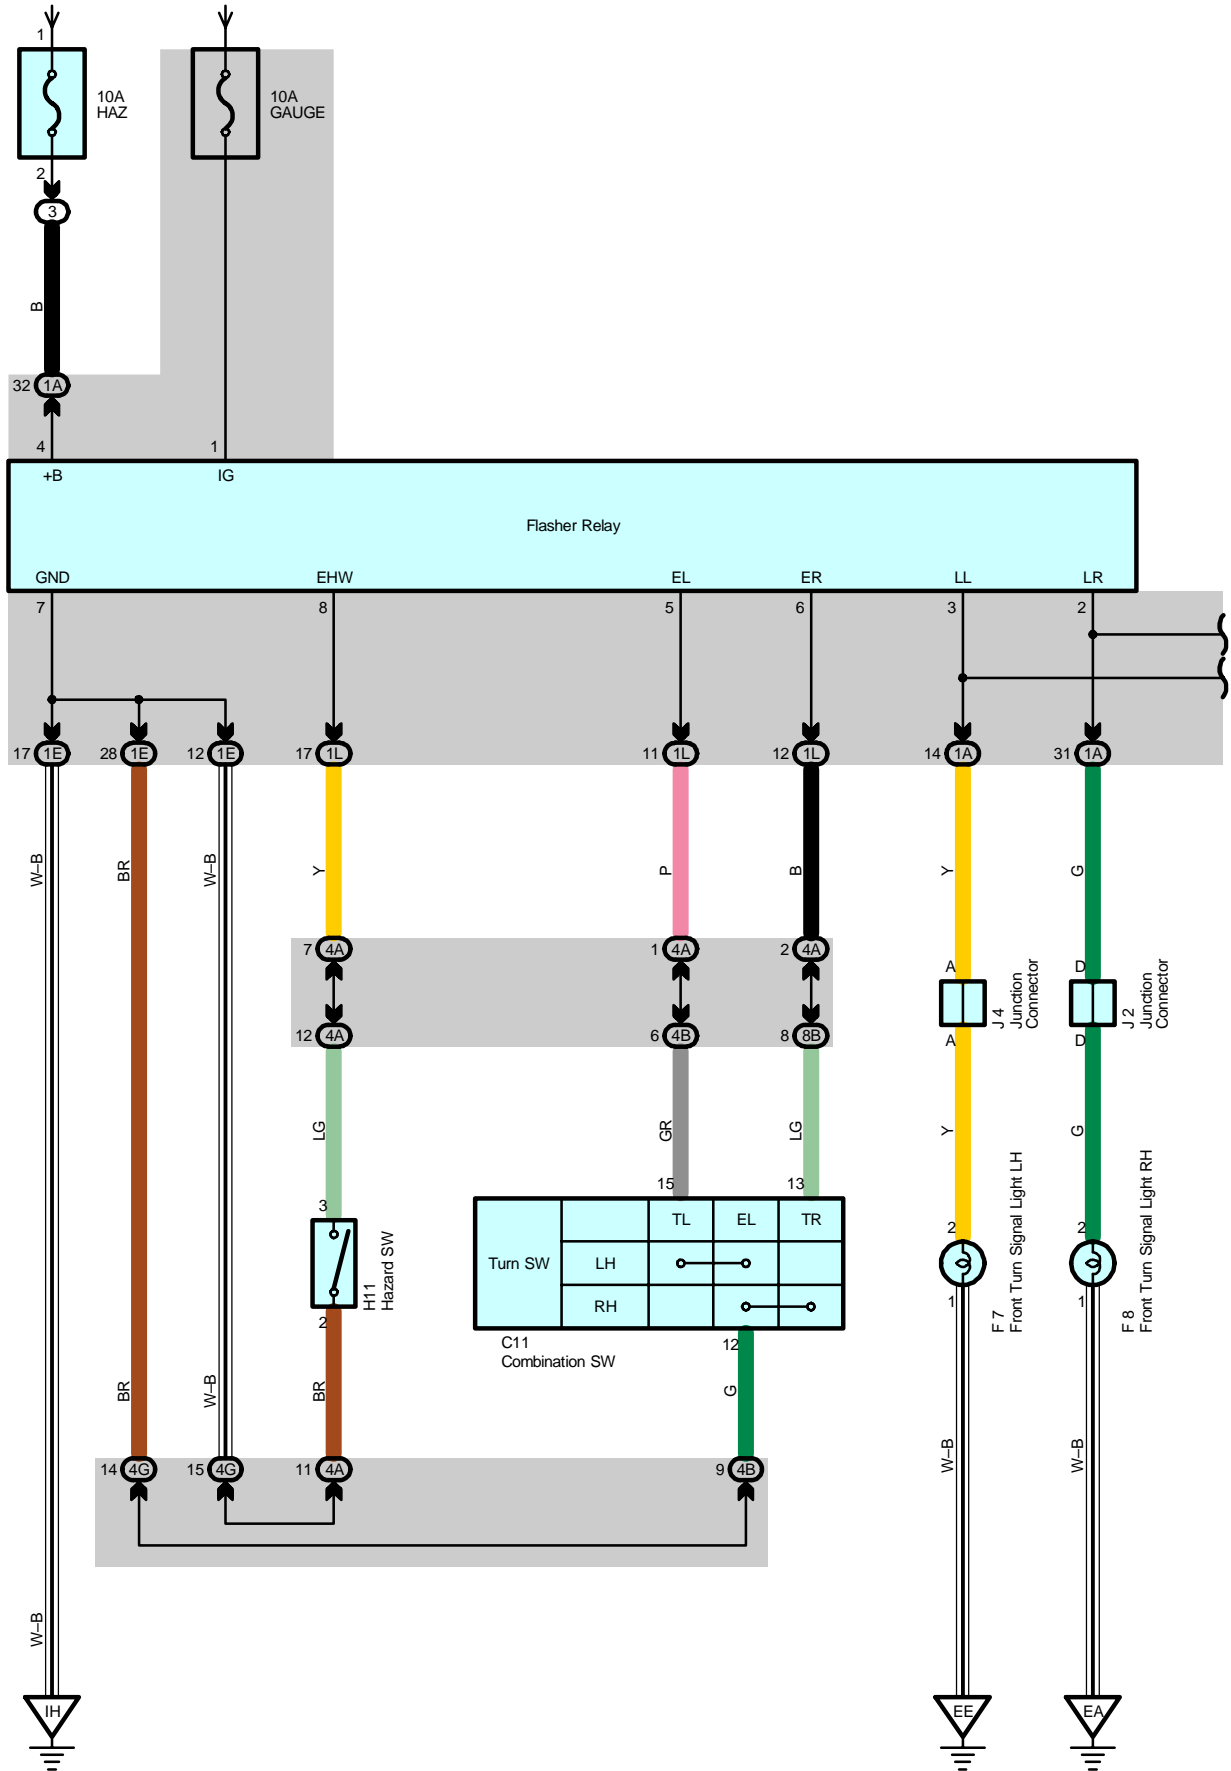

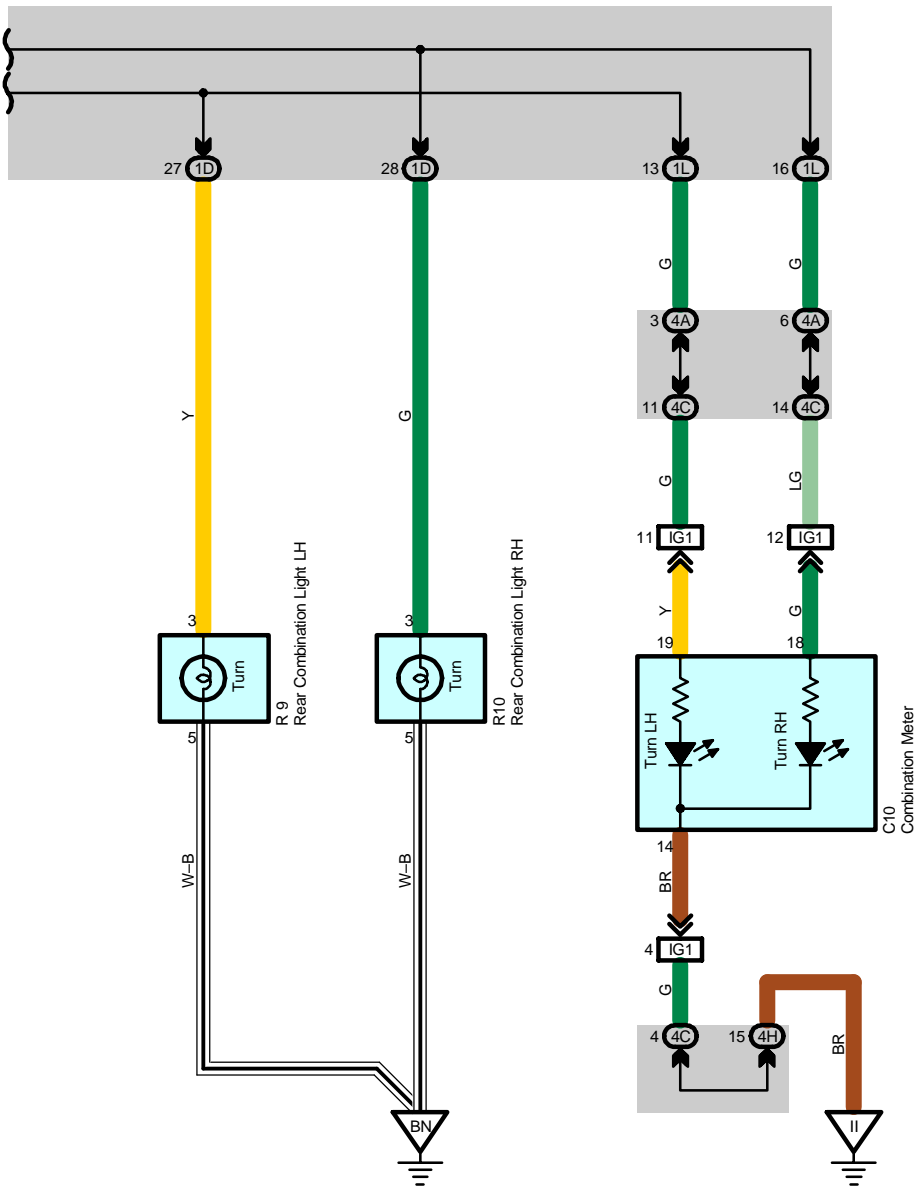

# Turn Signal and Hazard Warning Light

## Service Hints

### Flasher Relay

1-Ground : Approx. 12 volts with the power SW at IG ON position

7-Ground : Always continuity

4-Ground : Always approx. 12 volts

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
C10	47	F8	44	J4	45
C11	47	H11	47	R9	52
F7	44	J2	45	R10	52

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	22	Engine Room R/B (Engine Compartment Left)

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1D	28	Floor Wire and Driver Side J/B (Lower Finish Panel)
1E	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1L		
4A	36	Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4B		
4C		
4G		
4H		

## □ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IG1	58	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the Combination Meter)


## ▽ : Ground Points

Code	See Page	Ground Points Location
EA	54	Right Side of the Fender Apron
EE	54	Left Side of the Suspension Tower
IH	56	Cowl Side Panel LH
II	56	Instrument Panel Brace LH
BN	60	Lower Back Panel Center







B 5(A), B 7(C)  
Body ECU

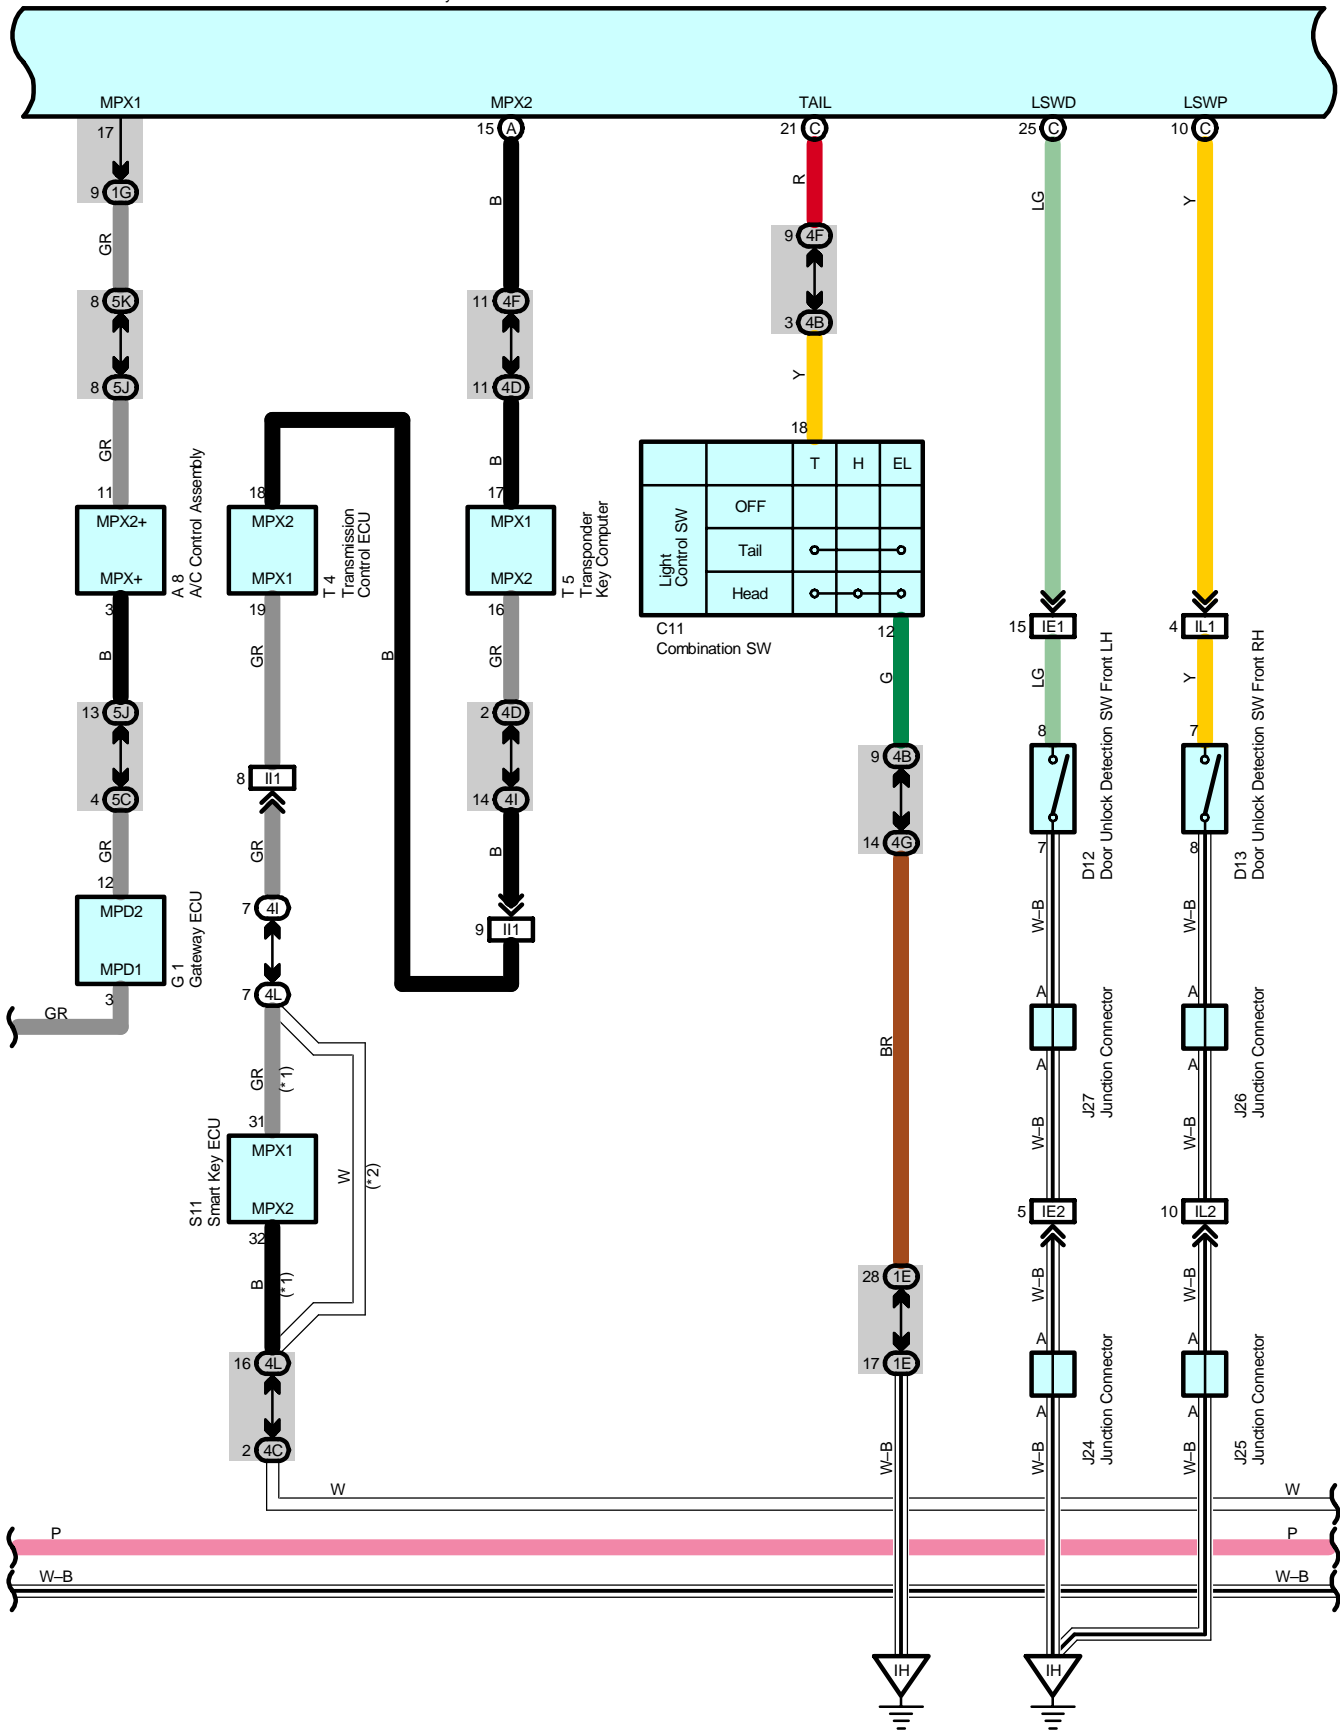



# Interior Light

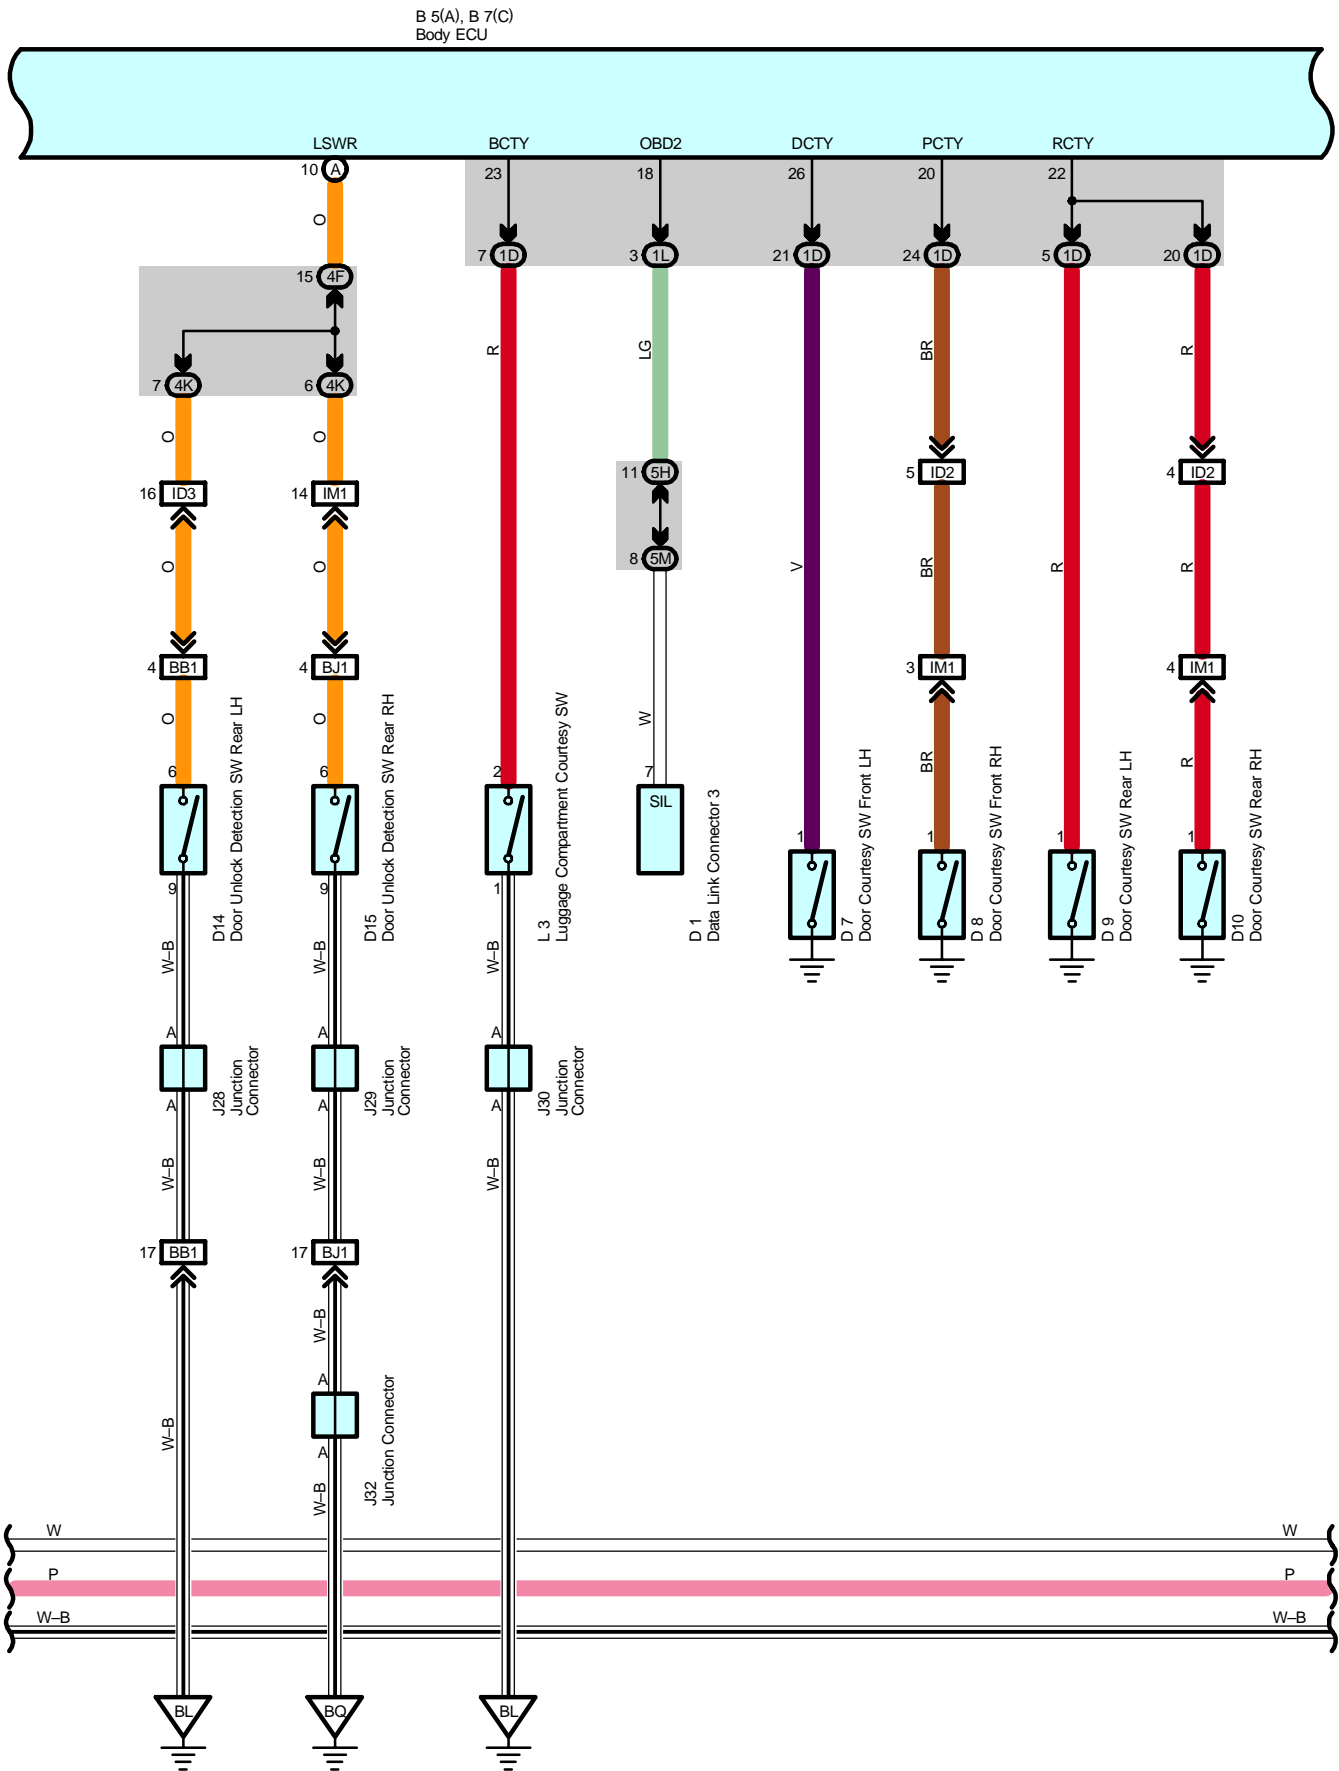

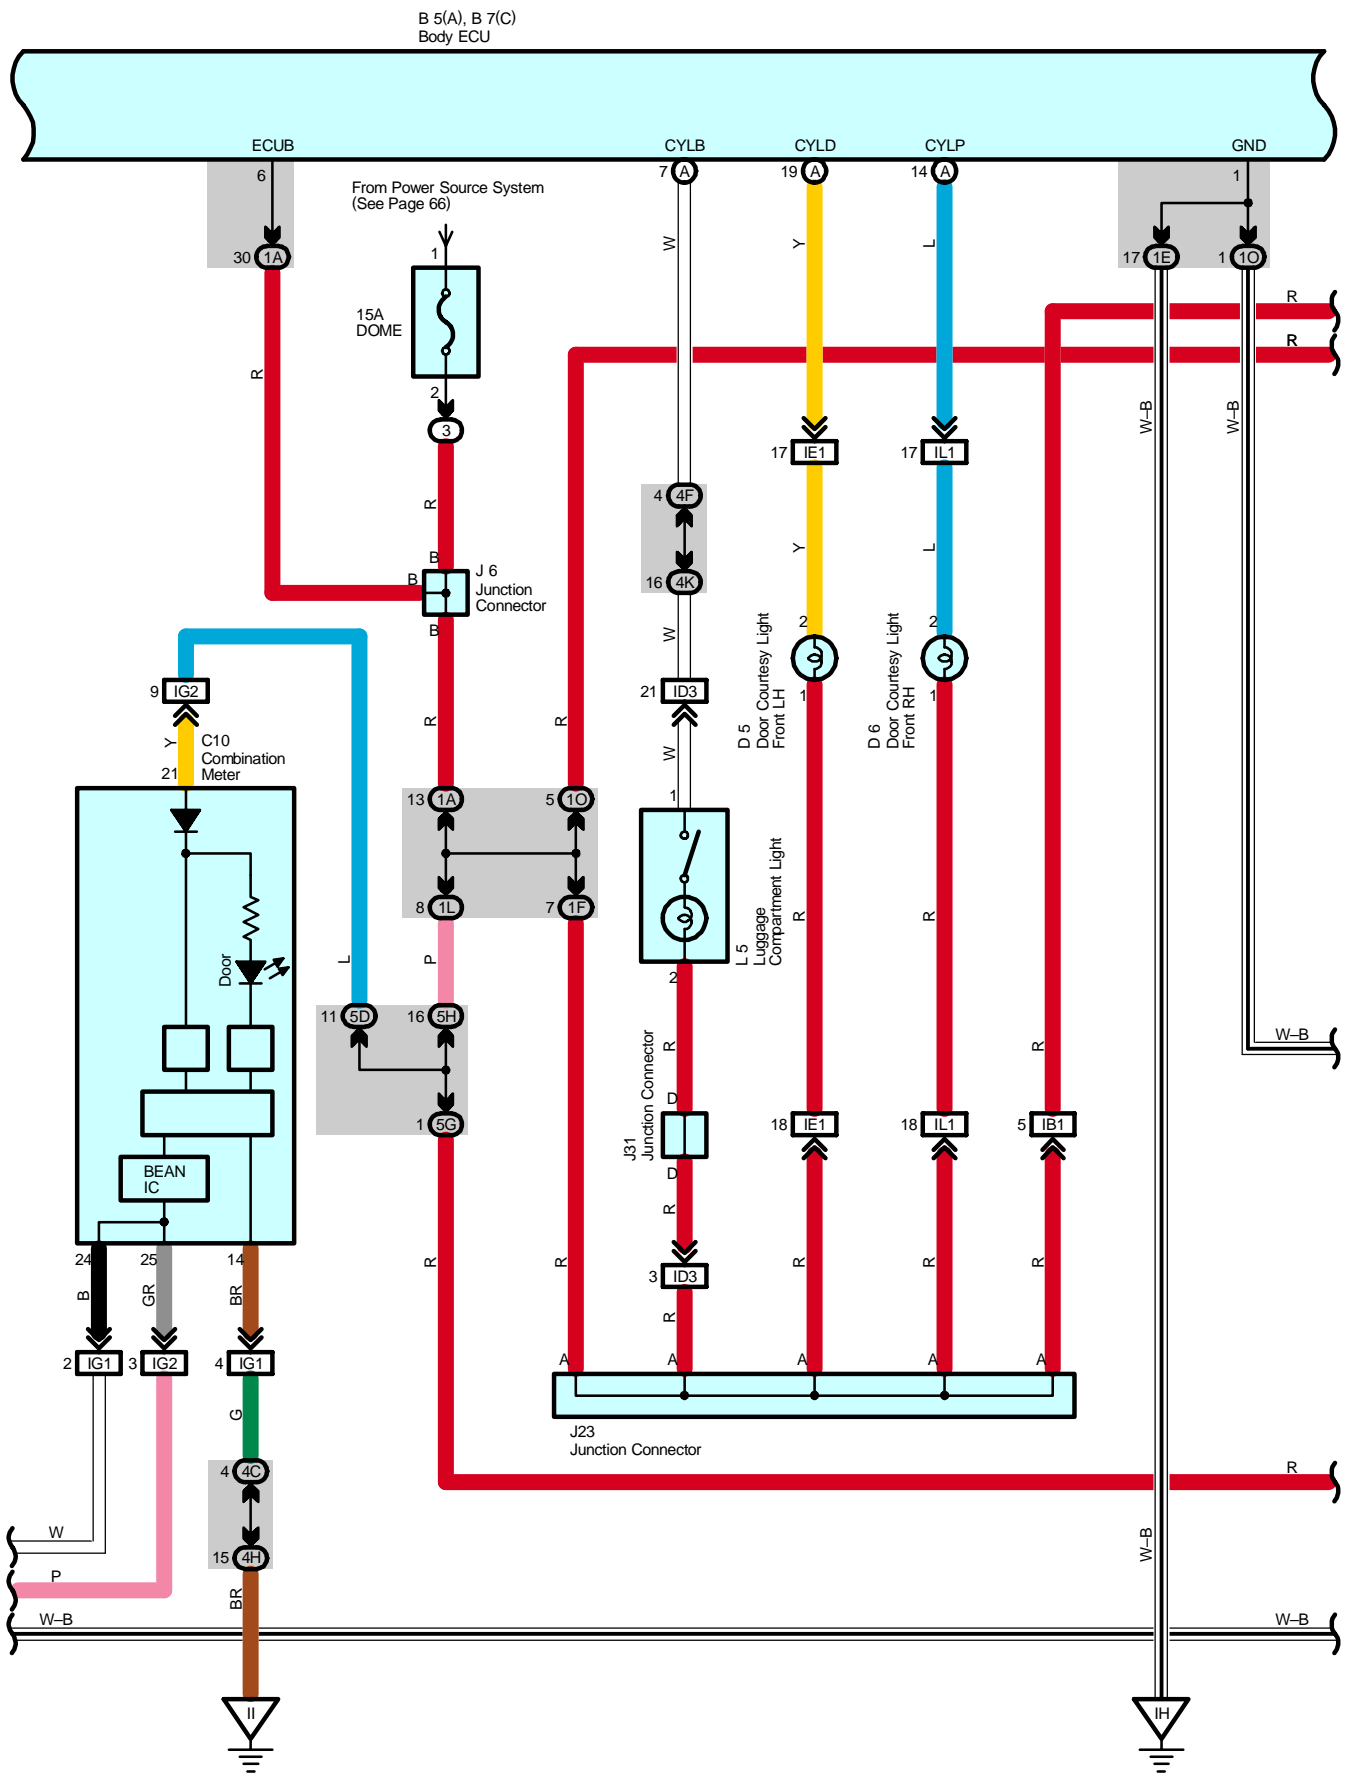



## System Outline

Interior light operates with control of body ECU.

### Illumination Control

Lighting function of interior light, overhead J/B, power SW, electrical key holder

When any door is opened, signal is sent from door courtesy SW to body ECU. Interior light, overhead J/B, power SW, and key slot light on gradually from unlit condition to fully lit condition within 1.5 seconds if lighting SW of interior light and overhead J/B is set for door.

After that, when all the doors are shut and any one of the door is unlocked, interior light, overhead J/B, power SW, and key slot are lit up for about 15 seconds (Timer lighting) and then are lit off gradually.

Under conditions that power SW is set at OFF position and all the doors are closed, when any one of the door is unlocked, interior light, overhead J/B, power SW, and key slot light on gradually from unlit condition to fully lit condition within 1.5 seconds, stay on for the certain time (Timer lighting) and then light off gradually. If power SW is turned from OFF position to ACC ON or IG ON position during timer lighting, the timer lighting function is cut off immediately and the light goes off gradually.

Even though timer lighting conditions are satisfied when power SW is at ACC ON or IG ON position, the light does not stay on for certain time (For 15 sec.) after lighting, but goes off gradually.

All the doors are locked during timer lighting, the timer lighting function is cut off immediately and the light goes off gradually.

## Service Hints

### Body ECU

5-Ground : Approx. 12 volts with the power SW at IG ON position

21-Ground : Approx. 12 volts with the power SW at ACC ON or IG ON position

6-Ground : Always approx. 12 volts

1-Ground : Always continuity

26-Ground : Continuity with the driver's door open

20-Ground : Continuity with the front passenger's door open

22-Ground : Continuity with the rear LH and/or RH door open

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A8	<a href="#">46</a>	D15	<a href="#">50</a>	J33	<a href="#">51</a>
B5	A <a href="#">46</a>	F15	<a href="#">51</a>	K3	<a href="#">48</a>
B7	C <a href="#">46</a>	G1	<a href="#">47</a>	L3	<a href="#">51</a>
C10	<a href="#">47</a>	I18	<a href="#">51</a>	L5	<a href="#">51</a>
C11	<a href="#">47</a>	J6	<a href="#">48</a>	O3	<a href="#">52</a>
D1	<a href="#">47</a>	J23	<a href="#">48</a>	P6	<a href="#">49</a>
D5	<a href="#">50</a>	J24	<a href="#">48</a>	P11	<a href="#">49</a>
D6	<a href="#">50</a>	J25	<a href="#">48</a>	S11	<a href="#">49</a>
D7	<a href="#">50</a>	J26	<a href="#">51</a>	T4	<a href="#">49</a>
D8	<a href="#">50</a>	J27	<a href="#">51</a>	T5	<a href="#">49</a>
D9	<a href="#">50</a>	J28	<a href="#">51</a>	V2	<a href="#">53</a>
D10	<a href="#">50</a>	J29	<a href="#">51</a>	V3	<a href="#">53</a>
D12	<a href="#">50</a>	J30	<a href="#">51</a>	V4	<a href="#">53</a>
D13	<a href="#">50</a>	J31	<a href="#">51</a>	V5	<a href="#">53</a>
D14	<a href="#">50</a>	J32	<a href="#">51</a>		

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	<a href="#">22</a>	Engine Room R/B (Engine Compartment Left)

# Interior Light

## : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1B		
1D	28	Floor Wire and Driver Side J/B (Lower Finish Panel)
1E	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1F		
1G		
1J		
1L		
1O	28	Roof Wire and Driver Side J/B (Lower Finish Panel)
3A	22	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
3D		
3I		
3K		
3M	22	Frame Wire and Engine Room J/B (Engine Compartment Left)
4B	36	Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4C		
4D		
4F		
4G		
4H		
4I		
4J		
4K		
4L		
5C	40	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5D		
5G		
5H		
5J		
5K		
5M		

## : Connector Joining Wire Harness and Wire Harness


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	56	Engine Room Main Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)
IB1	56	Roof Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)
ID2	56	Instrument Panel Wire and Floor Wire (Left Kick Panel)
ID3		
IE1	56	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IE2		
IG1	58	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the Combination Meter)
IG2		
II1	58	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
IL1	58	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IL2		
IM1	58	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
BB1	60	Rear Door No.2 Wire and Floor Wire (Left Center Pillar)
BE1	60	Frame Wire and Floor No.2 Wire (Front Side of Left Quarter Panel)
BJ1	62	Rear Door No.1 Wire and Floor No.2 Wire (Right Center Pillar)




**: Ground Points**

Code	See Page	Ground Points Location
IH	<a href="#">56</a>	Cowl Side Panel LH
II	<a href="#">56</a>	Instrument Panel Brace LH
BL	<a href="#">60</a>	Rear Side of Left Quarter Panel
BQ	<a href="#">60</a>	Rear Side of Right Quarter Panel

# Taillight and Illumination

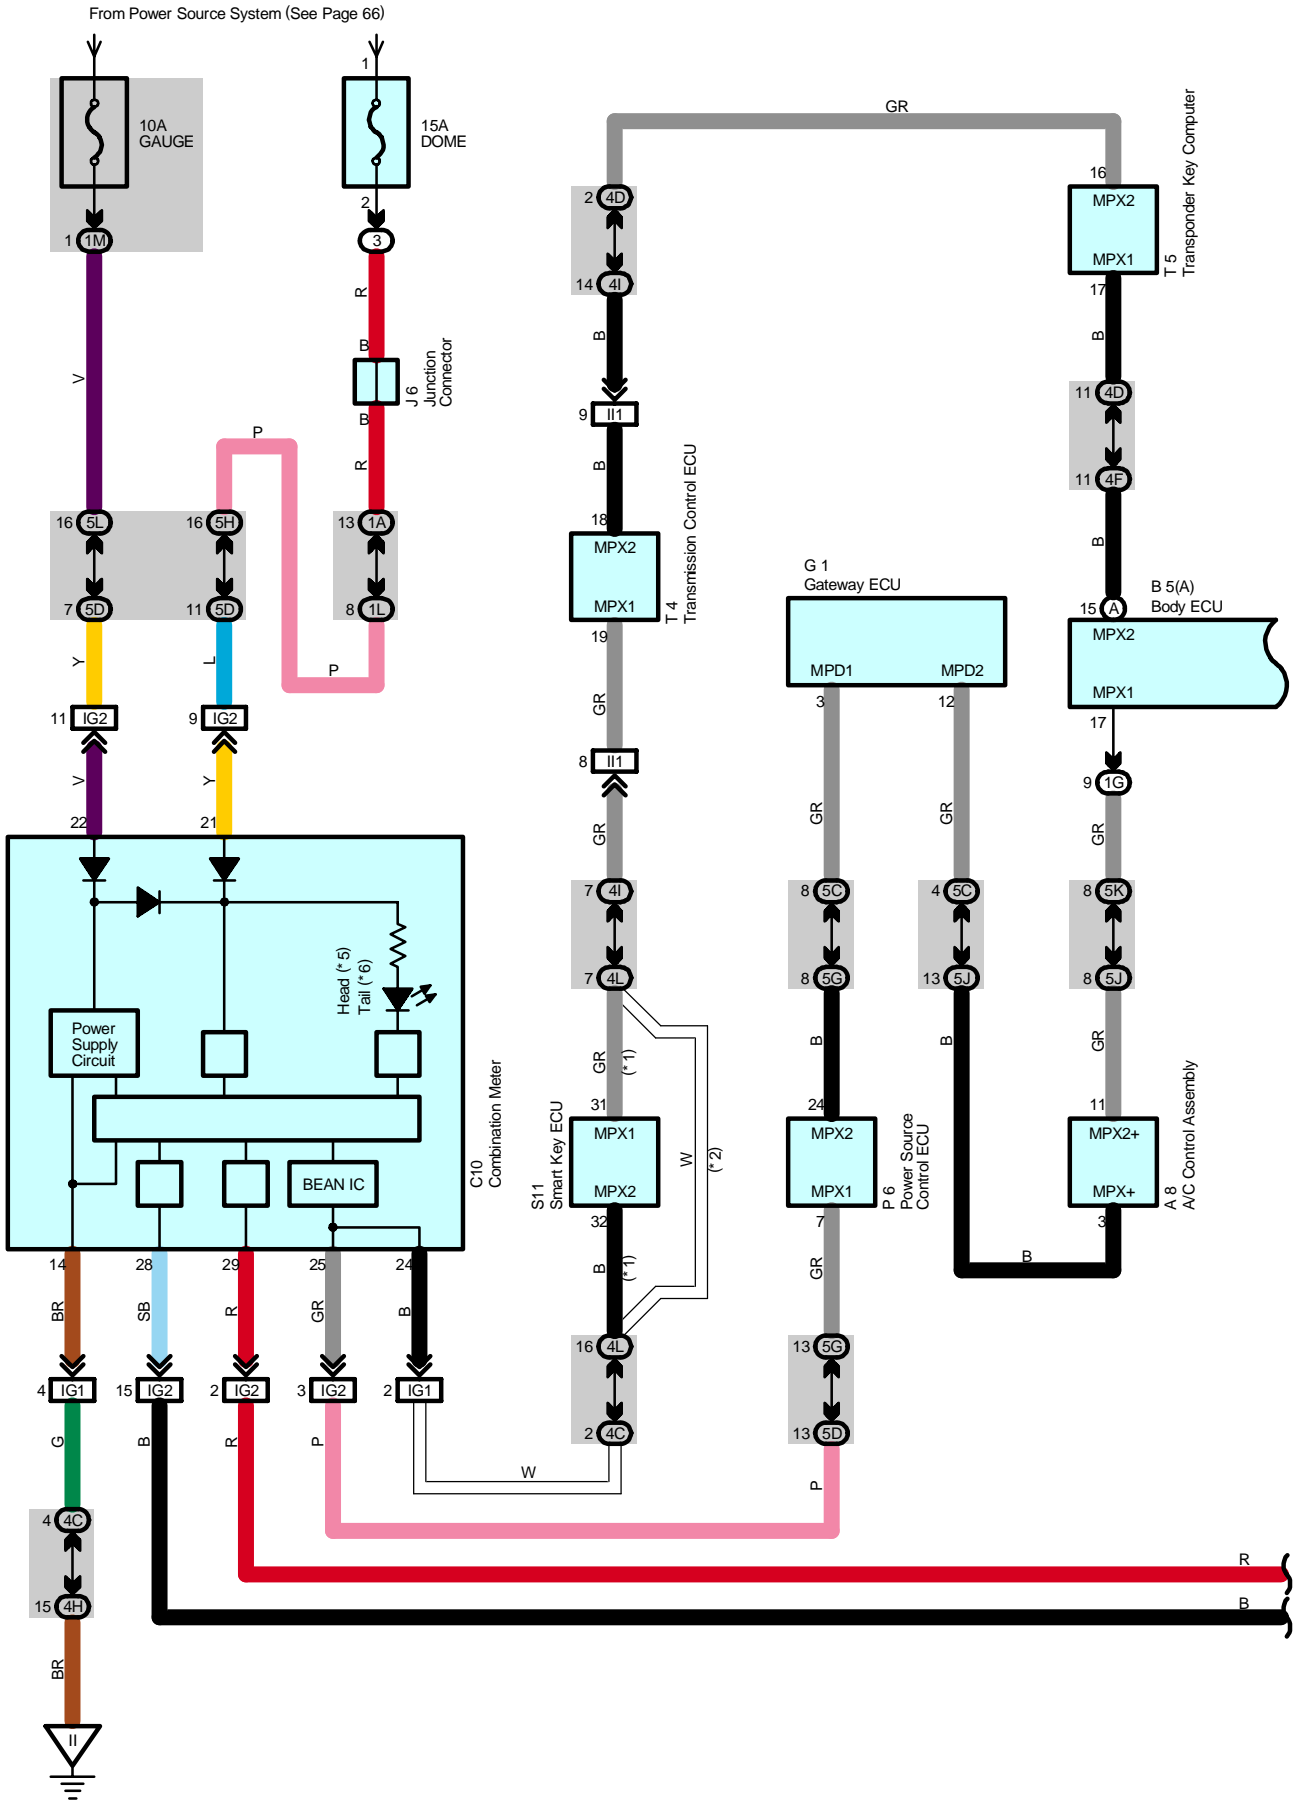


From Power Source System (See Page 66)

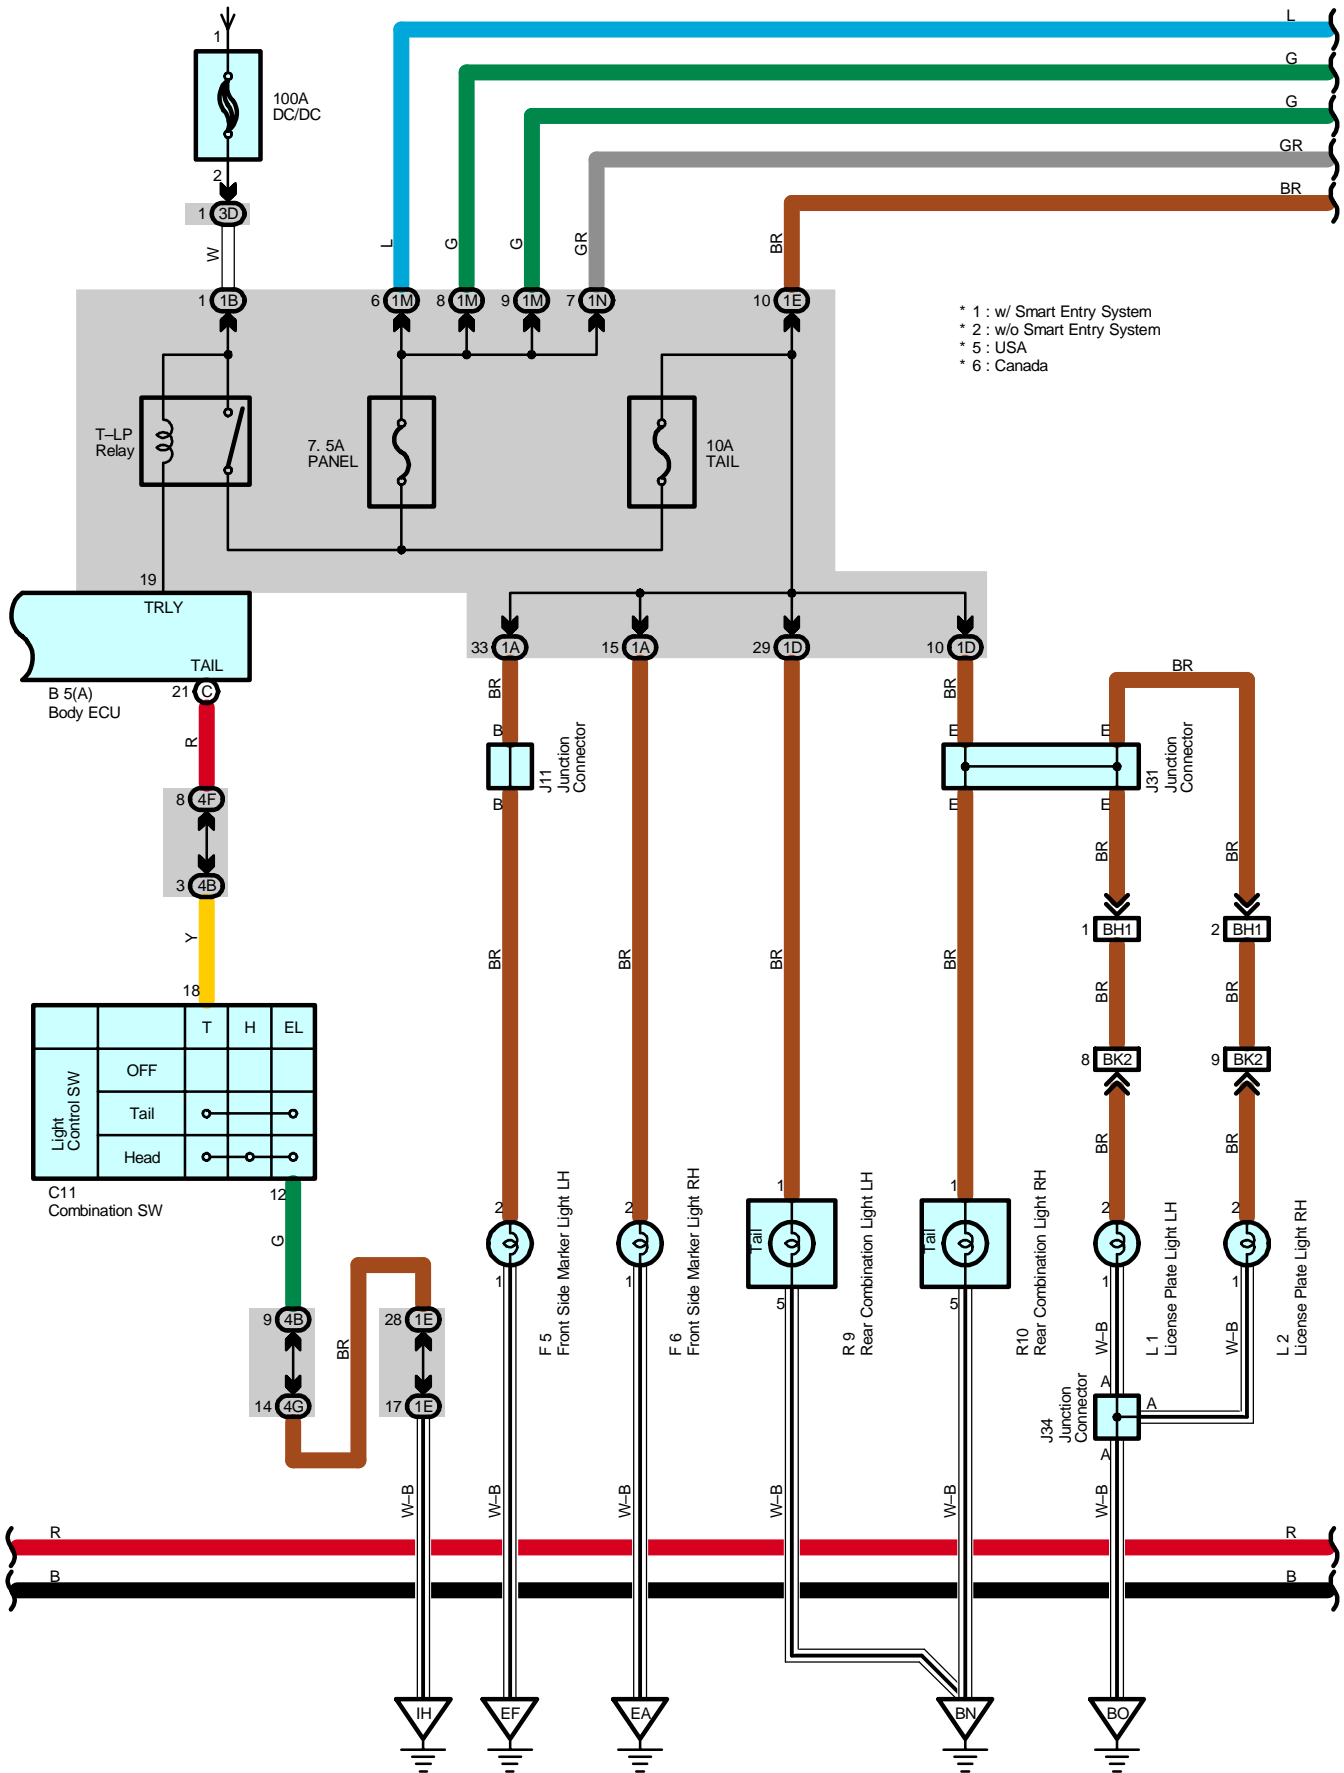



# Taillight and Illumination

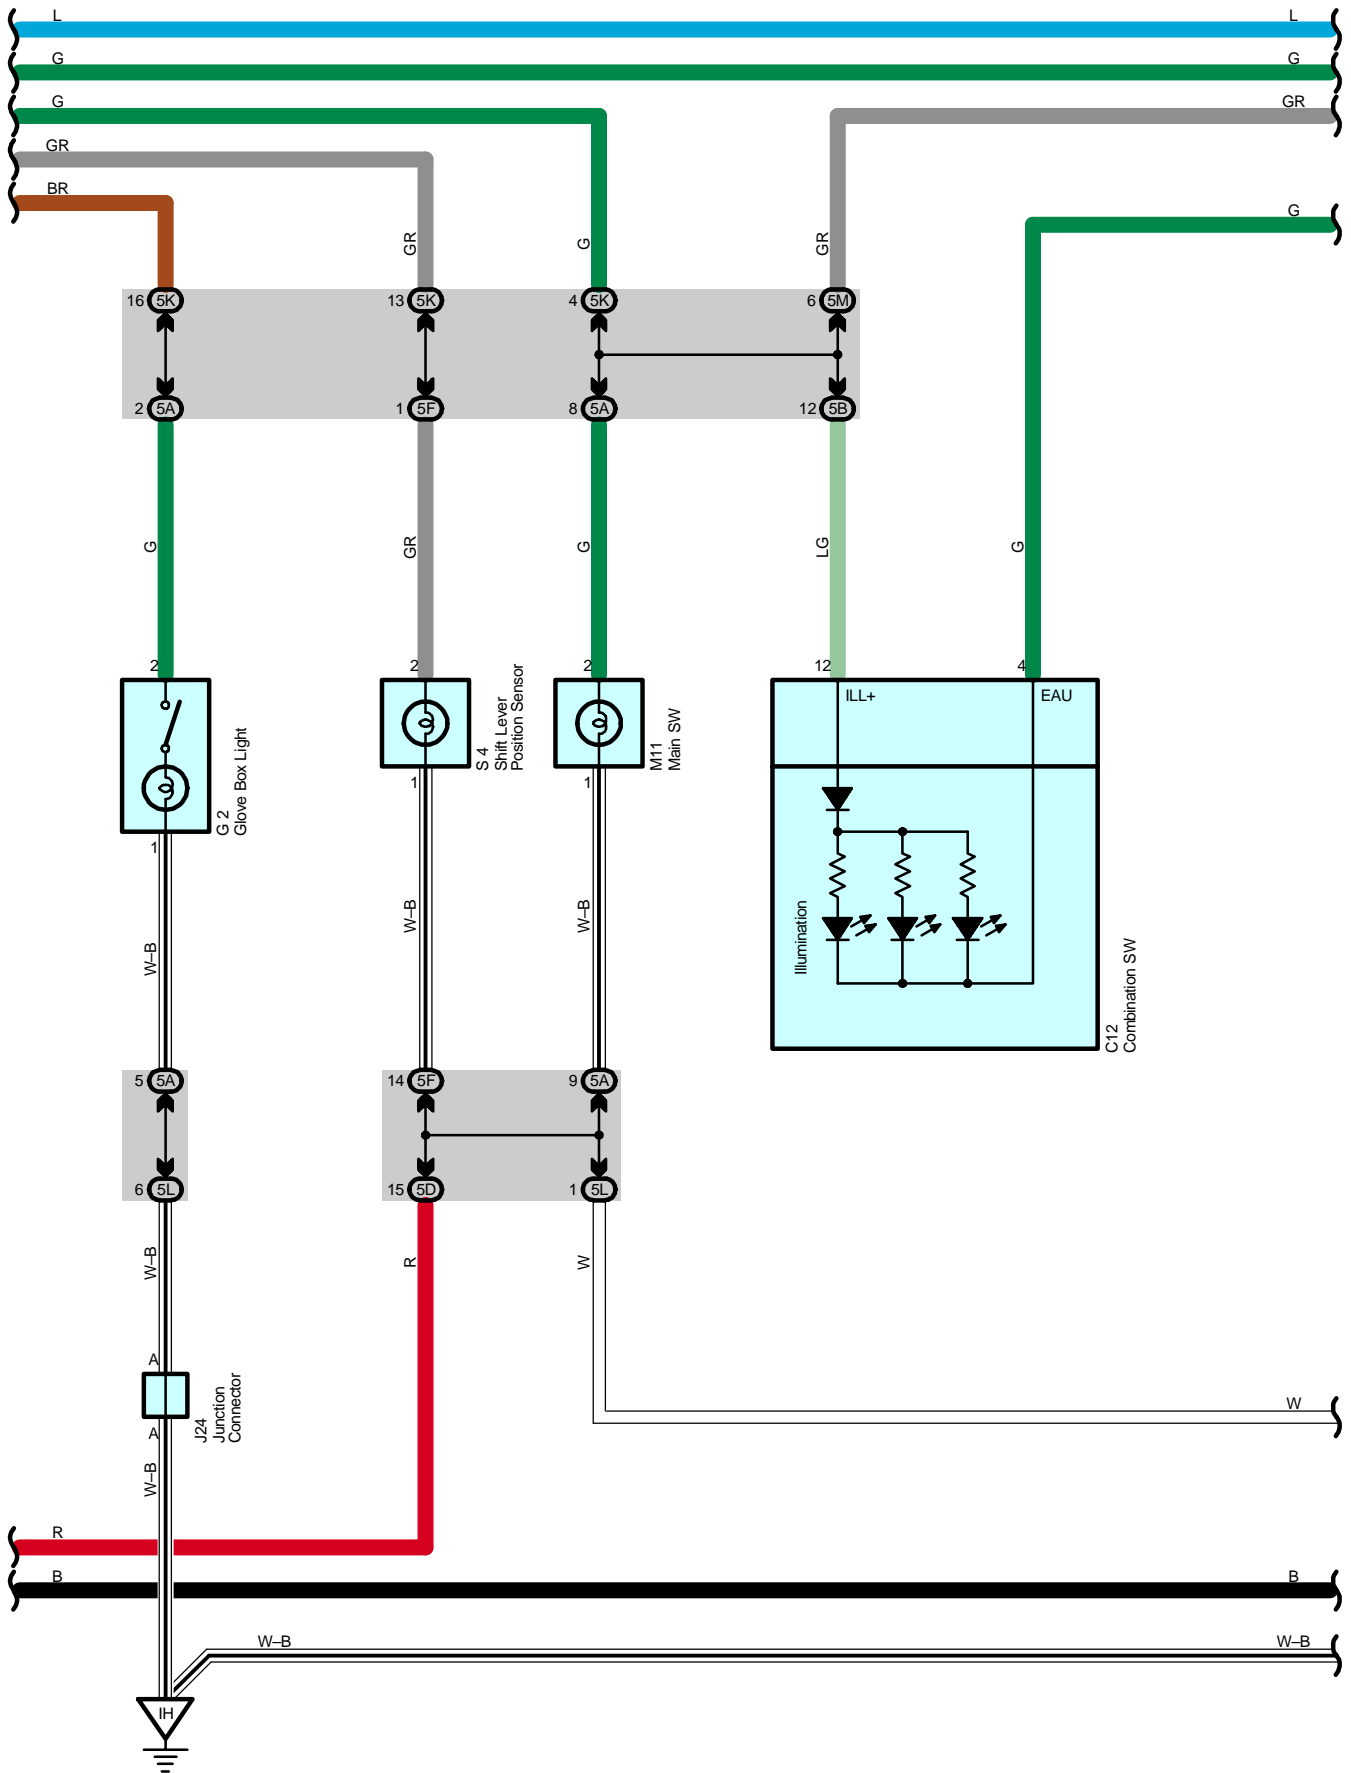



# Taillight and Illumination

## Service Hints

### C11 Combination SW

18-12 : Continuity with the light control SW at TAIL or HEAD position

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A8	<a href="#">46</a>	J19	<a href="#">48</a>	R4	B <a href="#">49</a>
B5	A <a href="#">46</a>	J20	<a href="#">48</a>	R5	C <a href="#">49</a>
C10	<a href="#">47</a>	J24	<a href="#">48</a>	R6	A <a href="#">49</a>
C11	<a href="#">47</a>	J25	<a href="#">48</a>	R7	<a href="#">49</a>
C12	<a href="#">47</a>	J31	<a href="#">51</a>	R9	<a href="#">52</a>
F5	<a href="#">44</a>	J34	<a href="#">51</a>	R10	<a href="#">52</a>
F6	<a href="#">44</a>	L1	<a href="#">51</a>	S4	<a href="#">49</a>
G1	<a href="#">47</a>	L2	<a href="#">51</a>	S11	<a href="#">49</a>
G2	<a href="#">47</a>	M11	<a href="#">48</a>	T4	<a href="#">49</a>
H11	<a href="#">47</a>	M13	<a href="#">48</a>	T5	<a href="#">49</a>
J6	<a href="#">48</a>	P6	<a href="#">49</a>		
J11	<a href="#">48</a>	R3	A <a href="#">49</a>		

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	<a href="#">22</a>	Engine Room R/B (Engine Compartment Left)

 : **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1B		
1D		
1E	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1G		
1L		
1M		
1N		
3D	22	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
4A	36	Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4B		
4C		
4D		
4F		
4G		
4H		
4I		
4L		
5A	40	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5B		
5C		
5D		
5E		
5F		
5G		
5H		
5J		
5K		
5L		
5M		

 : **Connector Joining Wire Harness and Wire Harness**


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IG1	58	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the Combination Meter)
IG2		
II1	58	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
BH1	62	Back Door No.1 Wire and Floor Wire (Rear Side of Roof Panel)
BK2	62	Back Door No.1 Wire and Back Door No.2 Wire (Rear Side of Roof Panel)

 : **Ground Points**

Code	See Page	Ground Points Location
EA	54	Right Side of the Fender Apron
EF	54	Left Side of the Suspension Tower
IH	56	Cowl Side Panel LH
II	56	Instrument Panel Brace LH
BN	60	Lower Back Panel Center
BO	60	Center of the Back Door Panel

# Stop Light

From Power Source System (See Page 66)

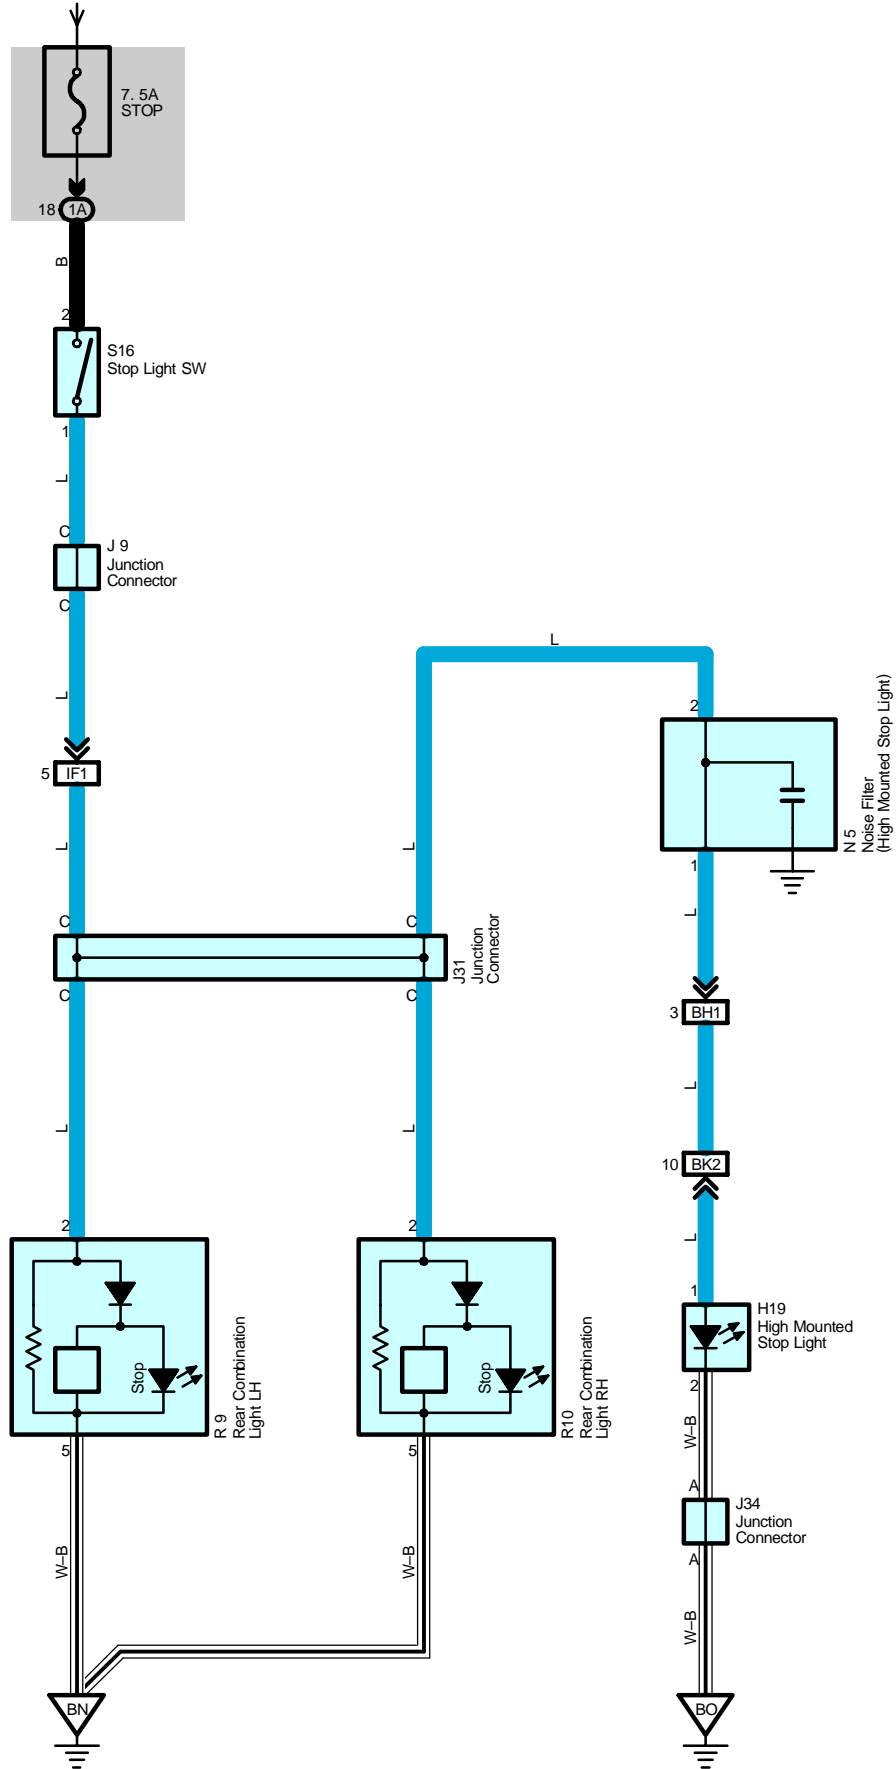

**Service Hints****S16 Stop Light SW**

2-1 : Closed with the brake pedal depressed

 : **Parts Location**

Code	See Page	Code	See Page	Code	See Page
H19	<a href="#">51</a>	J34	<a href="#">51</a>	R10	<a href="#">52</a>
J9	<a href="#">48</a>	N5	<a href="#">52</a>	S16	<a href="#">49</a>
J31	<a href="#">51</a>	R9	<a href="#">52</a>		

 : **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	<a href="#">28</a>	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)


 : **Connector Joining Wire Harness and Wire Harness**


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF1	<a href="#">56</a>	Floor Wire and Engine Room Main Wire (Left Kick Panel)
BH1	<a href="#">62</a>	Back Door No.1 Wire and Floor Wire (Rear Side of Roof Panel)
BK2	<a href="#">62</a>	Back Door No.1 Wire and Back Door No.2 Wire (Rear Side of Roof Panel)

 : **Ground Points**

Code	See Page	Ground Points Location
BN	<a href="#">60</a>	Lower Back Panel Center
BO	<a href="#">60</a>	Center of the Back Door Panel

# Back-Up Light

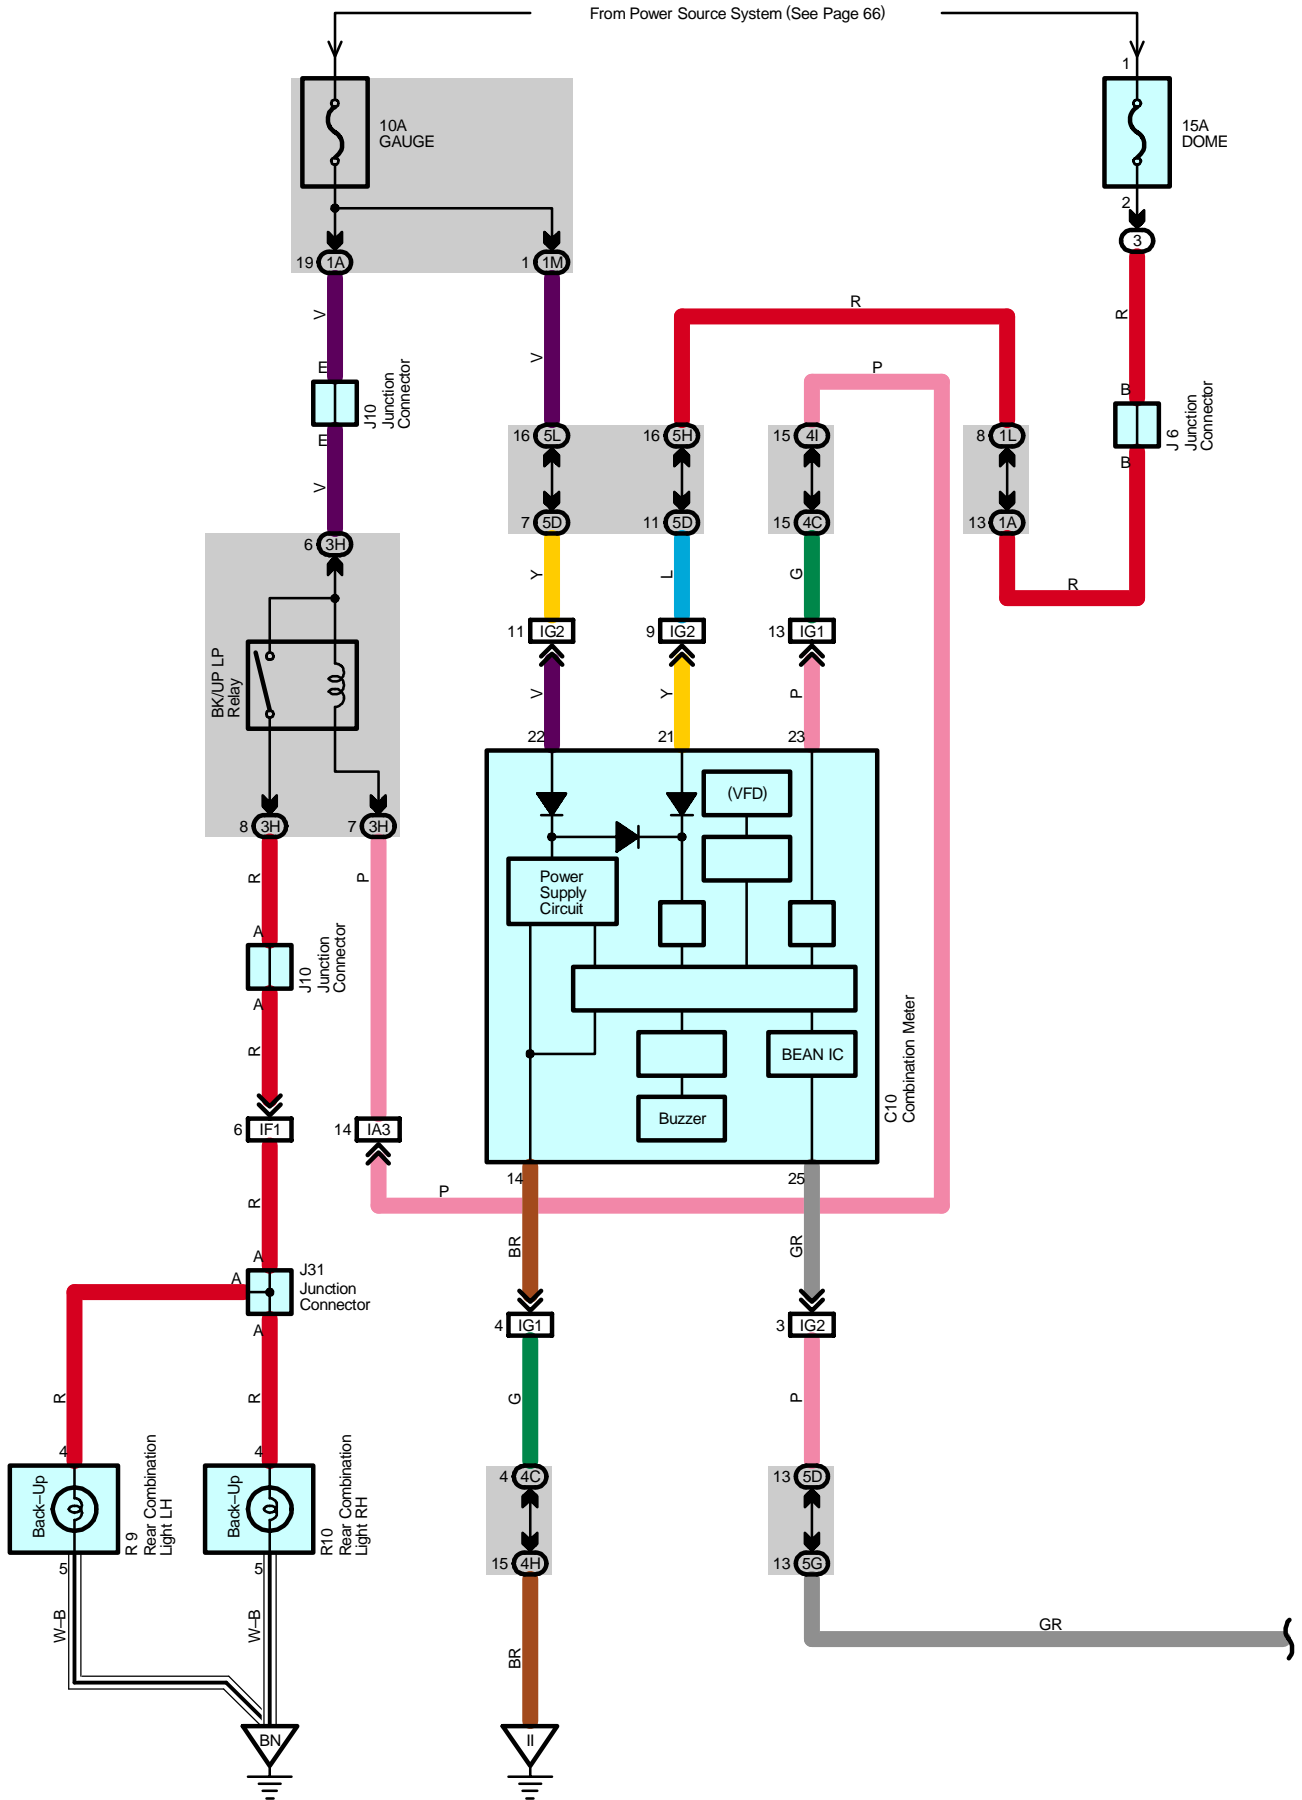

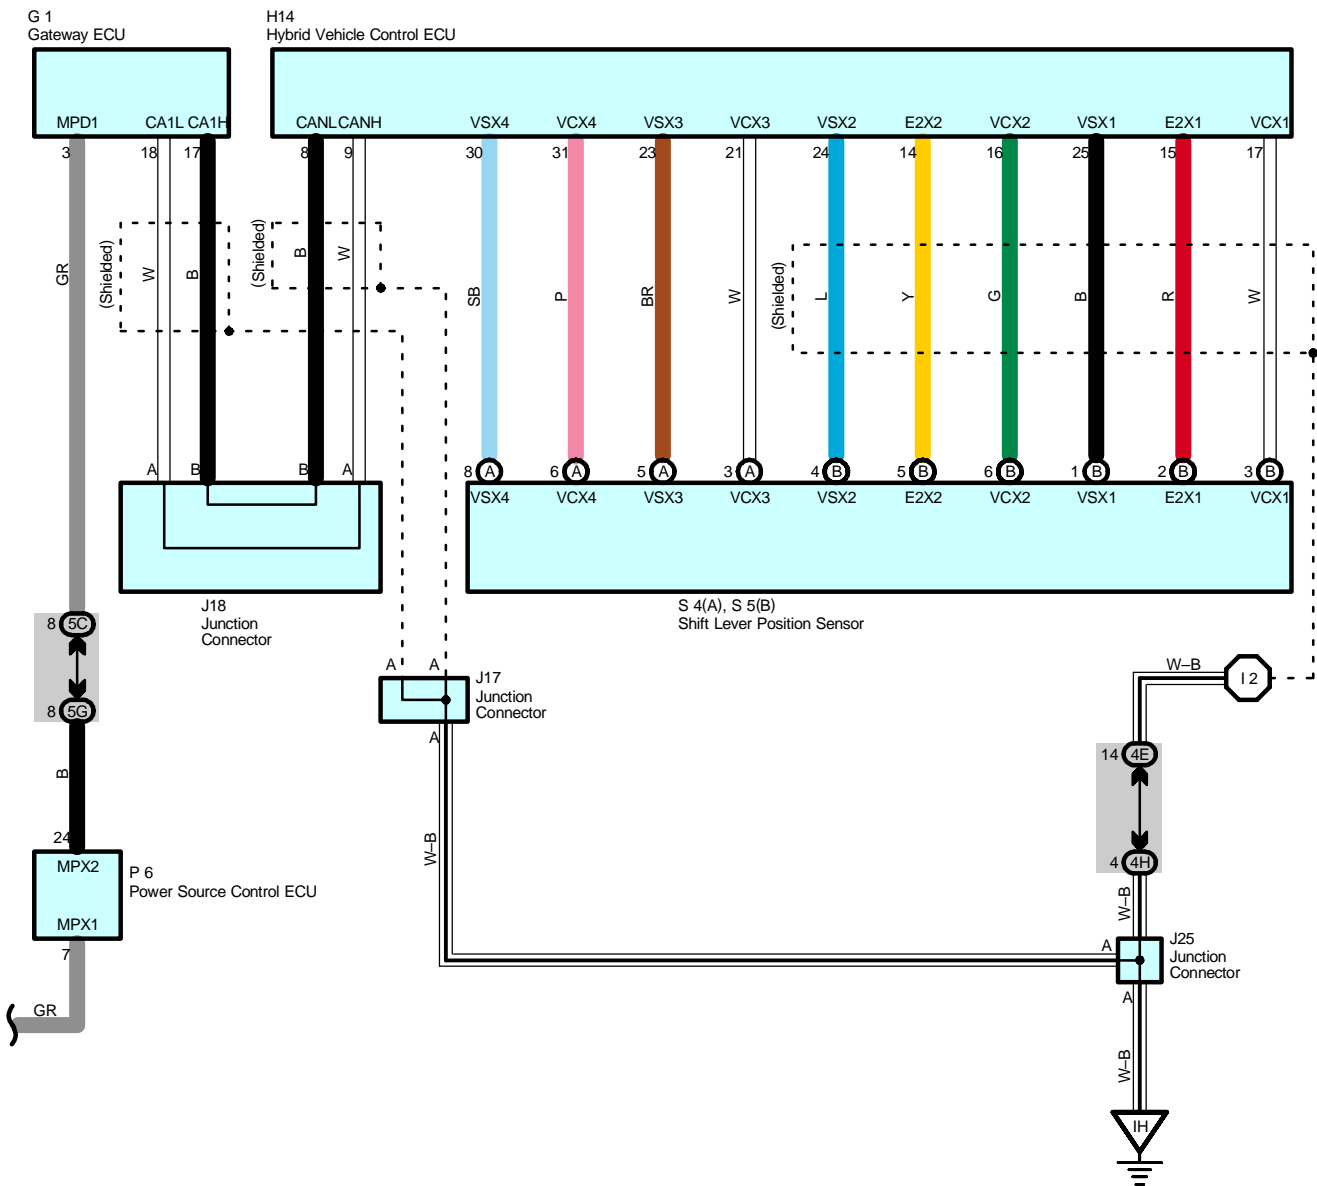



# Back-Up Light

## Service Hints

### C10 Combination Meter

22-Ground : Approx. 12 volts with the power SW at IG ON position

21-Ground : Always approx. 12 volts

14-Ground : Always continuity

### ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
C10	47	J17	48	R9	52
G1	47	J18	48	R10	52
H14	47	J25	48	S4	A 49
J6	48	J31	51	S5	B 49
J10	48	P6	49		

### ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	22	Engine Room R/B (Engine Compartment Left)

### ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1L	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1M		
3H		
4C	36	Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4E		
4H		
4I		
5C		
5D	40	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5G		
5H		
5L		

### □ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA3	56	Engine Room Main Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)
IF1	56	Floor Wire and Engine Room Main Wire (Left Kick Panel)
IG1	58	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the Combination Meter)
IG2		

### ▽ : Ground Points


Code	See Page	Ground Points Location
IH	56	Cowl Side Panel LH
II	56	Instrument Panel Brace LH
BN	60	Lower Back Panel Center

### ○ : Splice Points


Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I2	58	Instrument Panel Wire			



# Key Reminder

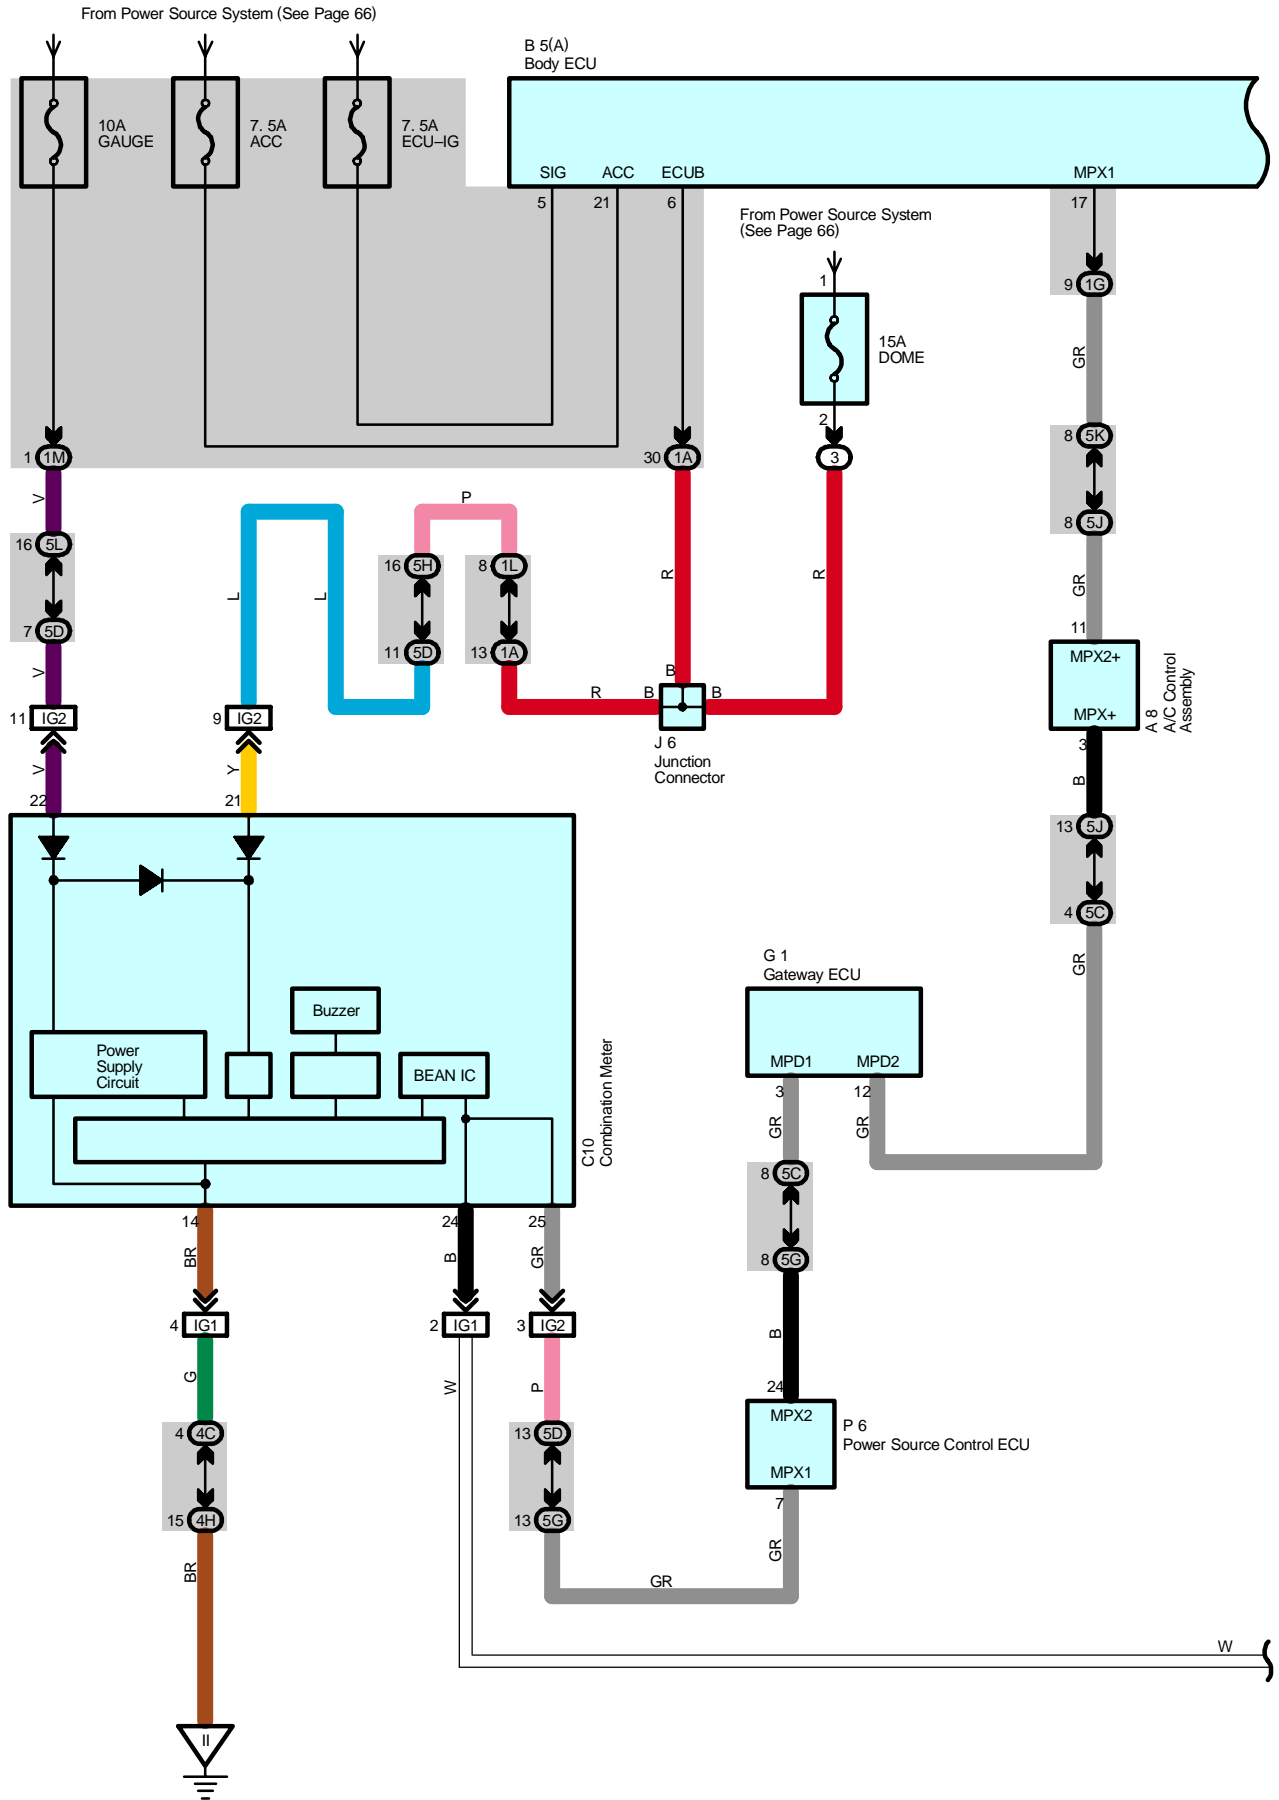

B 5(A)  
Body ECU

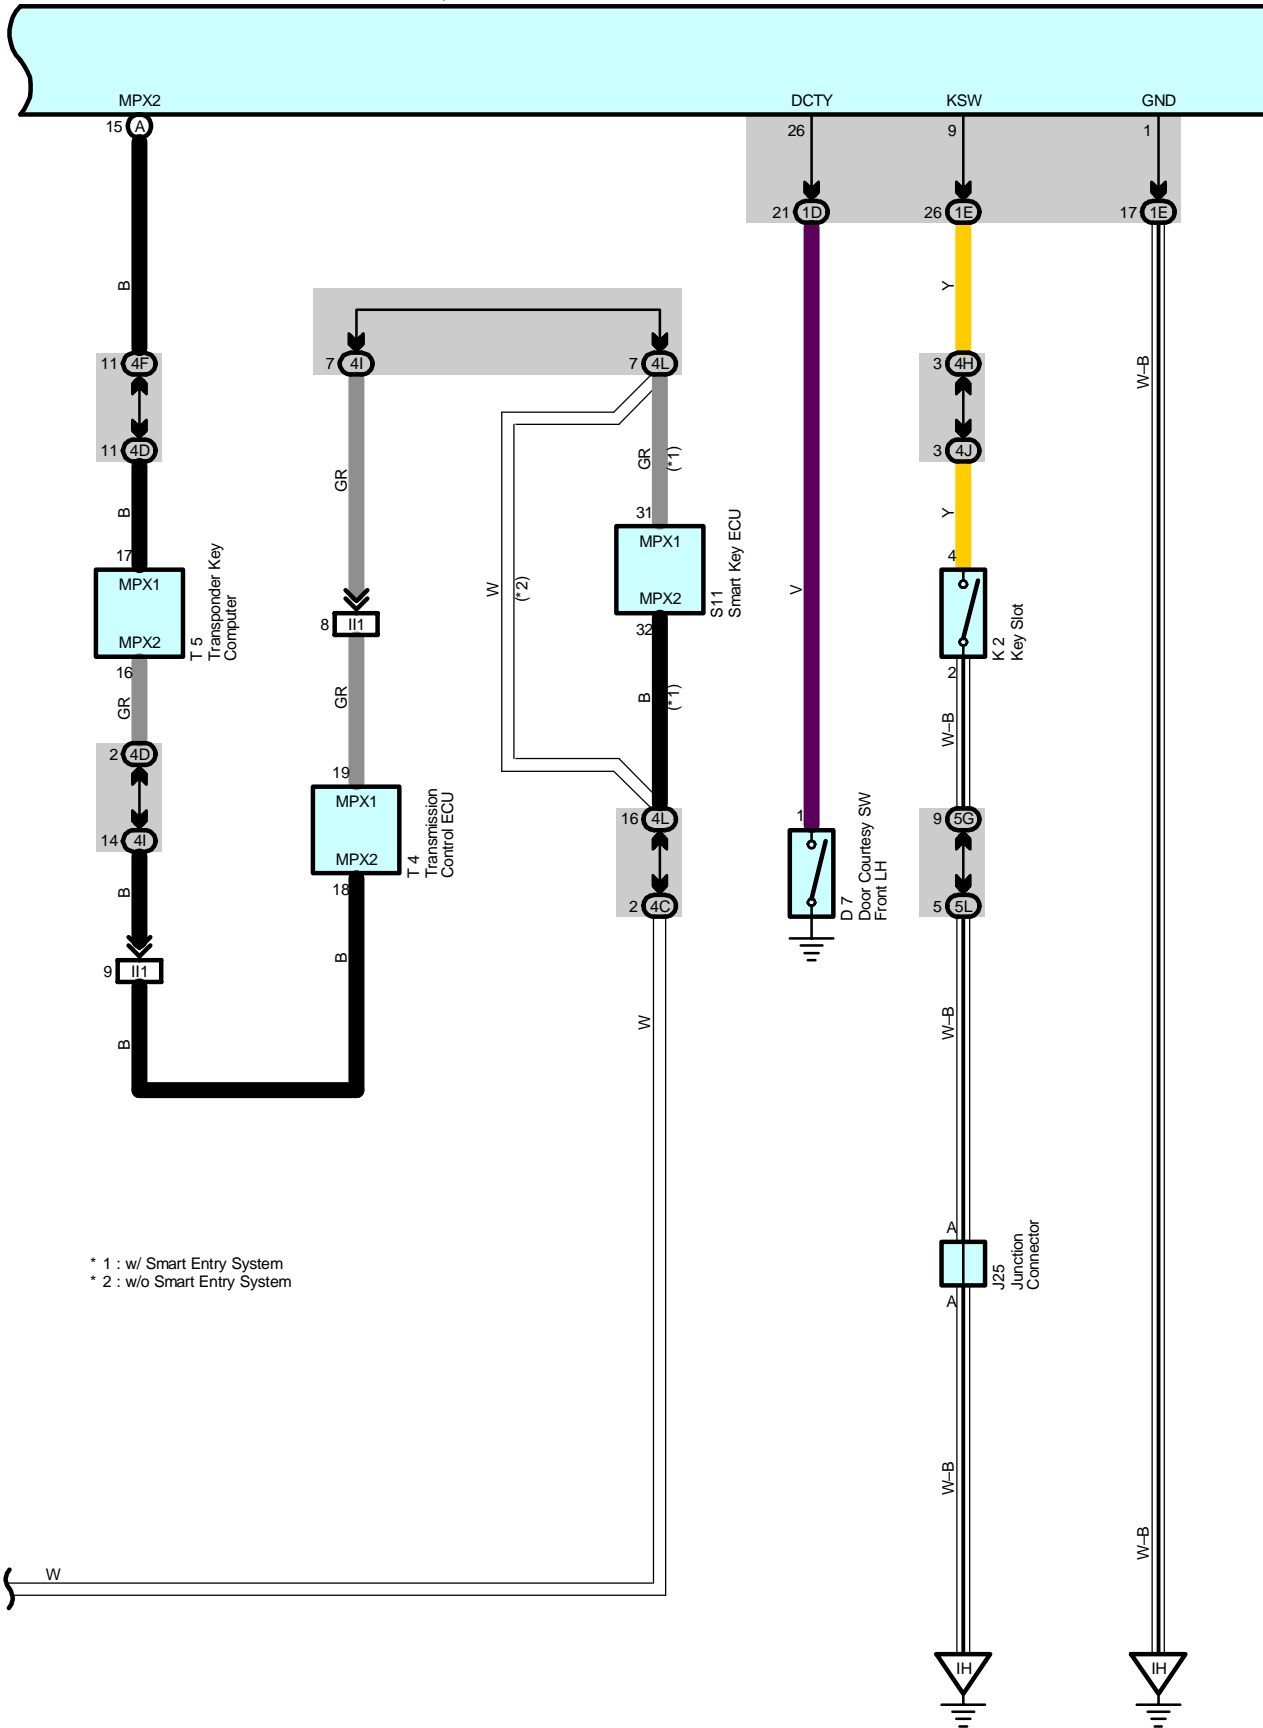

# Key Reminder

## System Outline

### Key Reminder System

If the driver's side door is opened with the power supply set at ACC or OFF position and with the electrical key remained in the key slot, signal from key slot is input to TERMINAL KSW of body ECU and that from courtesy SW at driver's side is input to TERMINAL DCTY of body ECU. The signal from body ECU to combination meter activates warning buzzer to send a message to the driver that electrical key remains in the key slot.

## Service Hints

### Body ECU

- 21-Ground : Approx. 12 volts with the power SW at ACC ON or IG ON position
- 5-Ground : Approx. 12 volts with the power SW at IG ON position
- 6-Ground : Always approx. 12 volts
- 1-Ground : Always continuity
- 26-Ground : Continuity with the driver's door open

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A8	46	G1	47	P6	49
B5	A 46	J6	48	S11	49
C10	47	J25	48	T4	49
D7	50	K2	48	T5	49

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	22	Engine Room R/B (Engine Compartment Left)

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1D	28	Floor Wire and Driver Side J/B (Lower Finish Panel)
1E	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1G		
1L		
1M		
4C	36	Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4D		
4F		
4H		
4I		
4J		
4L		
5C	40	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5D		
5G		
5H		
5J		
5K		
5L		

## □ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IG1	58	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the Combination Meter)
IG2		
II1	58	Engine Wire and Instrument Panel Wire (Behind the Glove Box)




**: Ground Points**

Code	See Page	Ground Points Location
IH	<a href="#">56</a>	Cowl Side Panel LH
II	<a href="#">56</a>	Instrument Panel Brace LH

# Seat Belt Warning

From Power Source System (See Page 66)

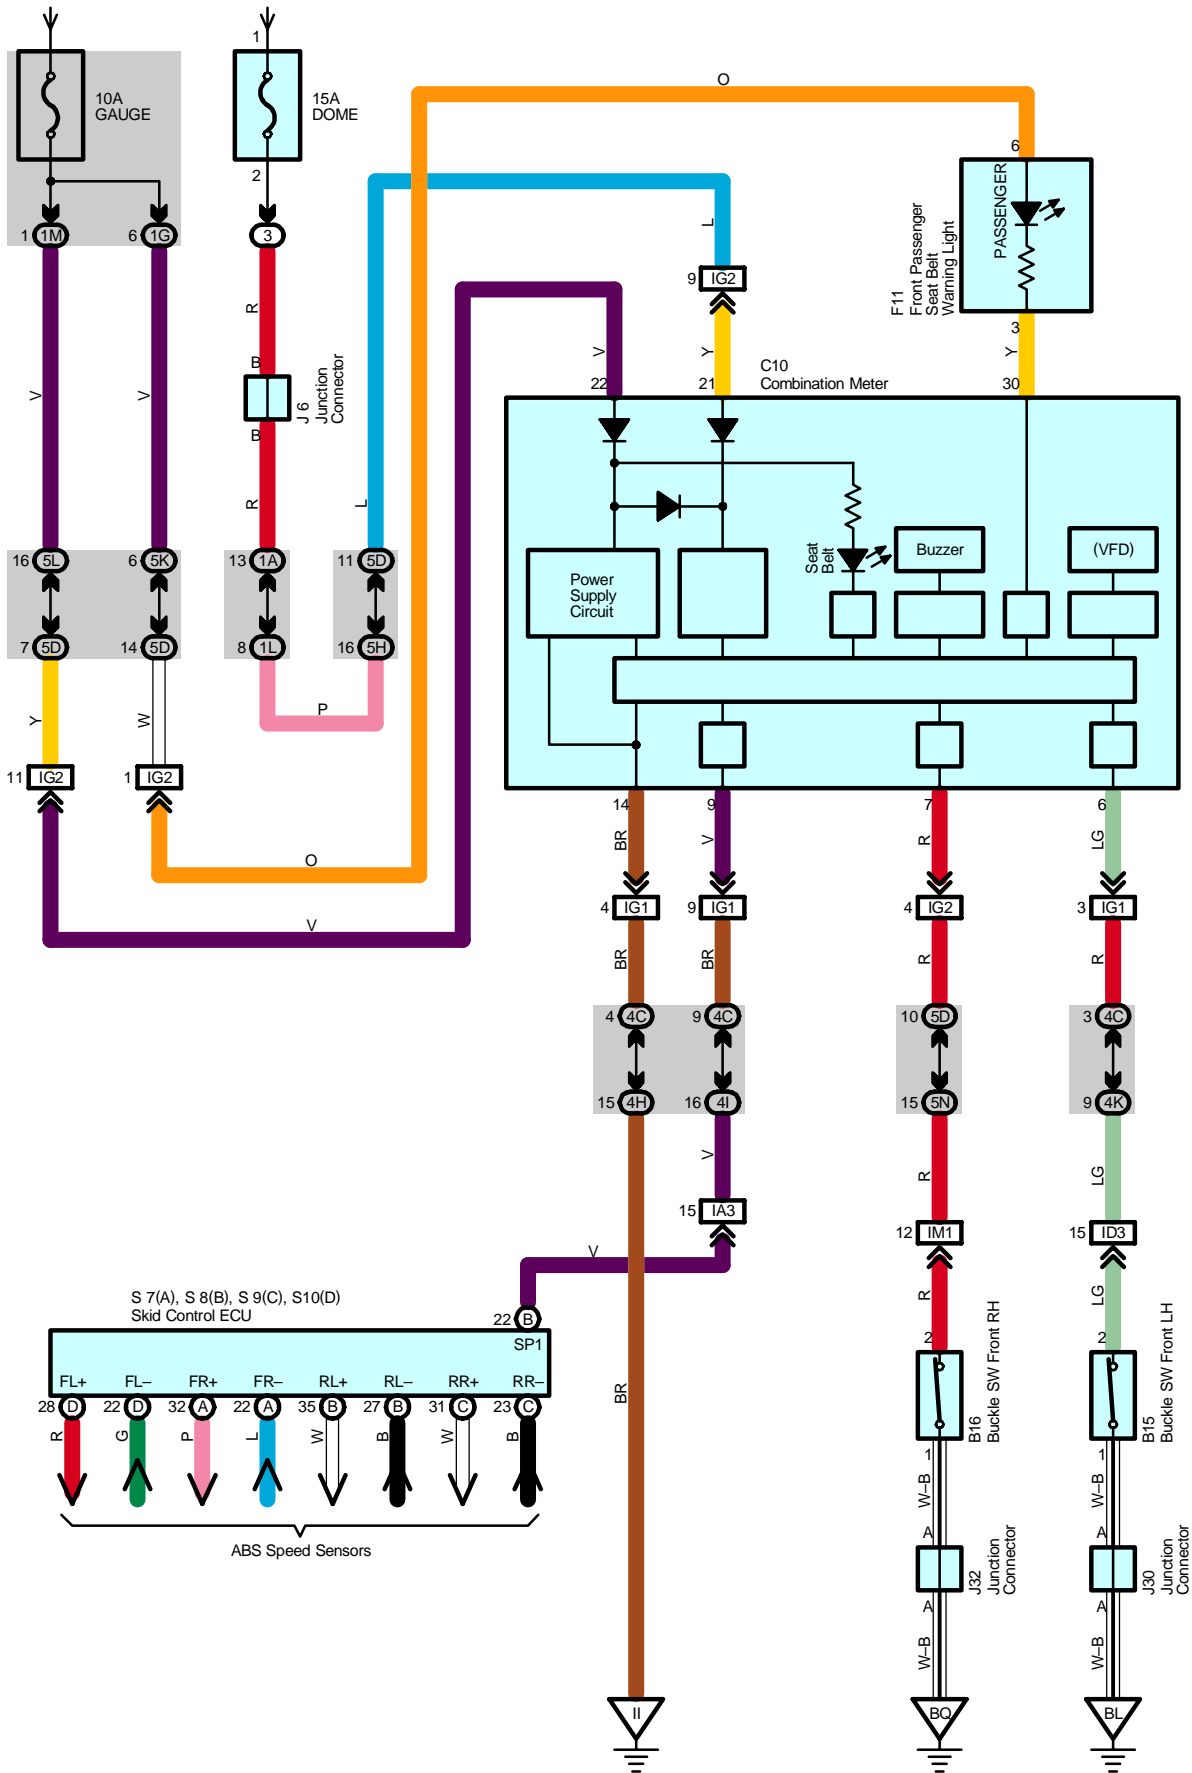

## System Outline

If the driver does not have seat belt fastened when power SW is turned to IG ON position, the indicator in combination meter lights up. Buzzer sound for 6 seconds reminds the driver of seat belt fastening. After that, if seat belt has not been fastened yet, another buzzer sound goes on for 30 seconds when vehicle speed is 15 km/h or more. The buzzer sound also goes on when the driver unfastens seat belt from fastening condition with vehicle speed over 15 km/h.

Sensor installed in front passenger seat detects whether passenger(s) is(are) seated on front passenger seat(s). If a passenger does not have seat belt fastened in front seat, passenger seat belt warning light blinks.

## Service Hints

### C10 Combination Meter

22-Ground : Approx. 12 volts with the power SW at IG ON position

21-Ground : Always approx. 12 volts

14-Ground : Always continuity

6-Ground : Continuity with the driver's seat belt not in use

7-Ground : Continuity with front passenger sitting on front passenger seat and front passenger's seat belt not in use

## : Parts Location

Code	See Page	Code	See Page	Code	See Page
B15	<a href="#">50</a>	J6	<a href="#">48</a>	S8	B <a href="#">49</a>
B16	<a href="#">50</a>	J30	<a href="#">51</a>	S9	C <a href="#">49</a>
C10	<a href="#">47</a>	J32	<a href="#">51</a>	S10	D <a href="#">49</a>
F11	<a href="#">47</a>	S7	A <a href="#">49</a>		

## : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	<a href="#">22</a>	Engine Room R/B (Engine Compartment Left)

## : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	<a href="#">28</a>	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1G	<a href="#">28</a>	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1L		
1M		
4C		
4H	<a href="#">36</a>	Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4I		
4K		
5D	<a href="#">40</a>	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5H		
5K		
5L		
5N		

## : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA3	<a href="#">56</a>	Engine Room Main Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)
ID3	<a href="#">56</a>	Instrument Panel Wire and Floor Wire (Left Kick Panel)
IG1	<a href="#">58</a>	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the Combination Meter)
IG2		
IM1	<a href="#">58</a>	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)



# Seat Belt Warning

---



: **Ground Points**


Code	See Page	Ground Points Location
II	<a href="#">56</a>	Instrument Panel Brace LH
BL	<a href="#">60</a>	Rear Side of Left Quarter Panel
BQ	<a href="#">60</a>	Rear Side of Right Quarter Panel



# Front Wiper and Washer

From Power Source System (See Page 66)

C13(A), C14(B)  
Combination SW

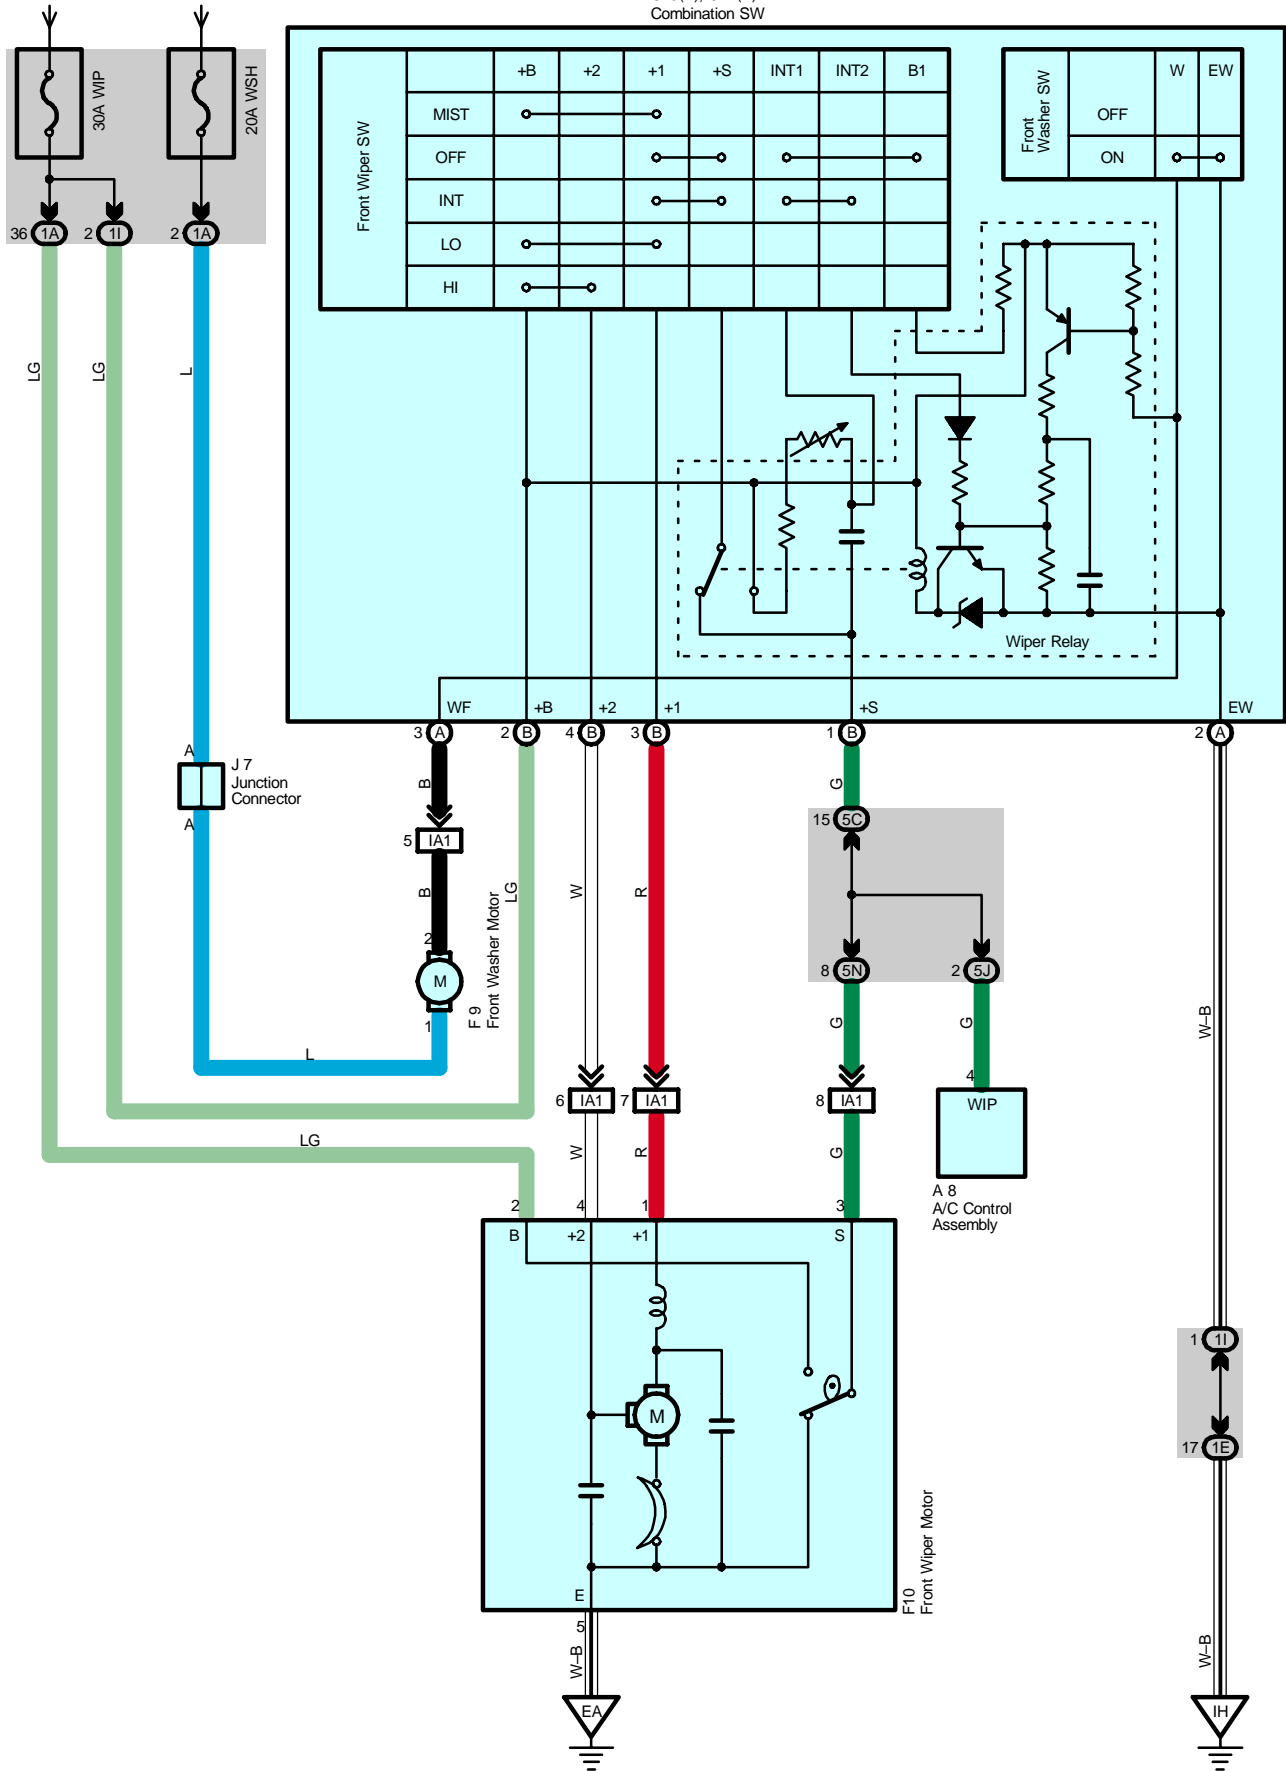

## System Outline

With the power SW pushed to IG ON position, the current flows to TERMINAL (B) 2 of the wiper and washer SW, and TERMINAL 2 of the front wiper motor through the WIP fuse.

### 1. Low Speed Position

With the wiper and washer SW turned to LO position, the current flows from TERMINAL (B) 2 of the wiper and washer SW to TERMINAL (B) 3 to TERMINAL 5 of the front wiper motor to TERMINAL 4 to GROUND, which runs the front wiper motor at low speed.

### 2. High Speed Position

With the wiper and washer SW turned to HI position, the current flows from TERMINAL (B) 2 of the wiper and washer SW to TERMINAL (B) 4 to TERMINAL 3 of the front wiper motor to TERMINAL 4 to GROUND, which runs the front wiper motor at high speed.

### 3. INT Position

With the wiper and washer SW turned to INT position, the wiper relay operates and current flows from TERMINAL (B) 2 of the wiper and washer SW to TERMINAL (A) 2 to GROUND. This activates the intermittent circuit and the current flows from TERMINAL (B) 2 of the wiper and washer SW to TERMINAL (B) 3 to TERMINAL 5 of the front wiper motor to TERMINAL 4 to GROUND and then the wiper operates. Intermittent operation is controlled by a condenser's charge and discharge function in the relay.

### 4. Washer Interlocking Operation

With the wiper and washer SW pulled to washer position (Washer SW ON position), the current flows from the WSH fuse to TERMINAL 1 of the front washer motor to TERMINAL 2 to TERMINAL (A) 3 of the wiper and washer SW to TERMINAL (A) 2 to GROUND and runs the washer motor and the window washer to spray. Simultaneously, current flows from the WIP fuse to TERMINAL (B) 2 of the wiper and washer SW to TERMINAL (B) 3 to TERMINAL 5 of the front wiper motor to TERMINAL 4 to GROUND, which activates the wiper.

## Service Hints

### C13 (A), C14 (B) Combination SW

(A) 2-Ground : Always continuity

(B) 2-Ground : Approx. 12 volts with the power SW at IG ON position

(B) 3-Ground : Approx. 12 volts with the power SW at IG ON position and the wiper and washer SW at LO position  
Approx. 12 volts every 1 to 10 seconds intermittently with the power SW at IG ON position  
and the wiper and washer SW at INT position

(B) 1-Ground : Approx. 12 volts with the power SW at IG ON position and unless the front wiper motor at STOP position

(B) 4-Ground : Approx. 12 volts with the power SW at IG ON position and the wiper and washer SW at HI position

### F10 Front Wiper Motor

2-1 : Closed unless the front wiper motor at STOP position

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A8	46	C14	B	F10	44
C13	A	F9		J7	48

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1E	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1I		
5C	40	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5J		
5N		

## □ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	56	Engine Room Main Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)

# Front Wiper and Washer

---




## : Ground Points

Code	See Page	Ground Points Location
EA	<a href="#">54</a>	Right Side of the Fender Apron
IH	<a href="#">56</a>	Cowl Side Panel LH



# Rear Wiper and Washer

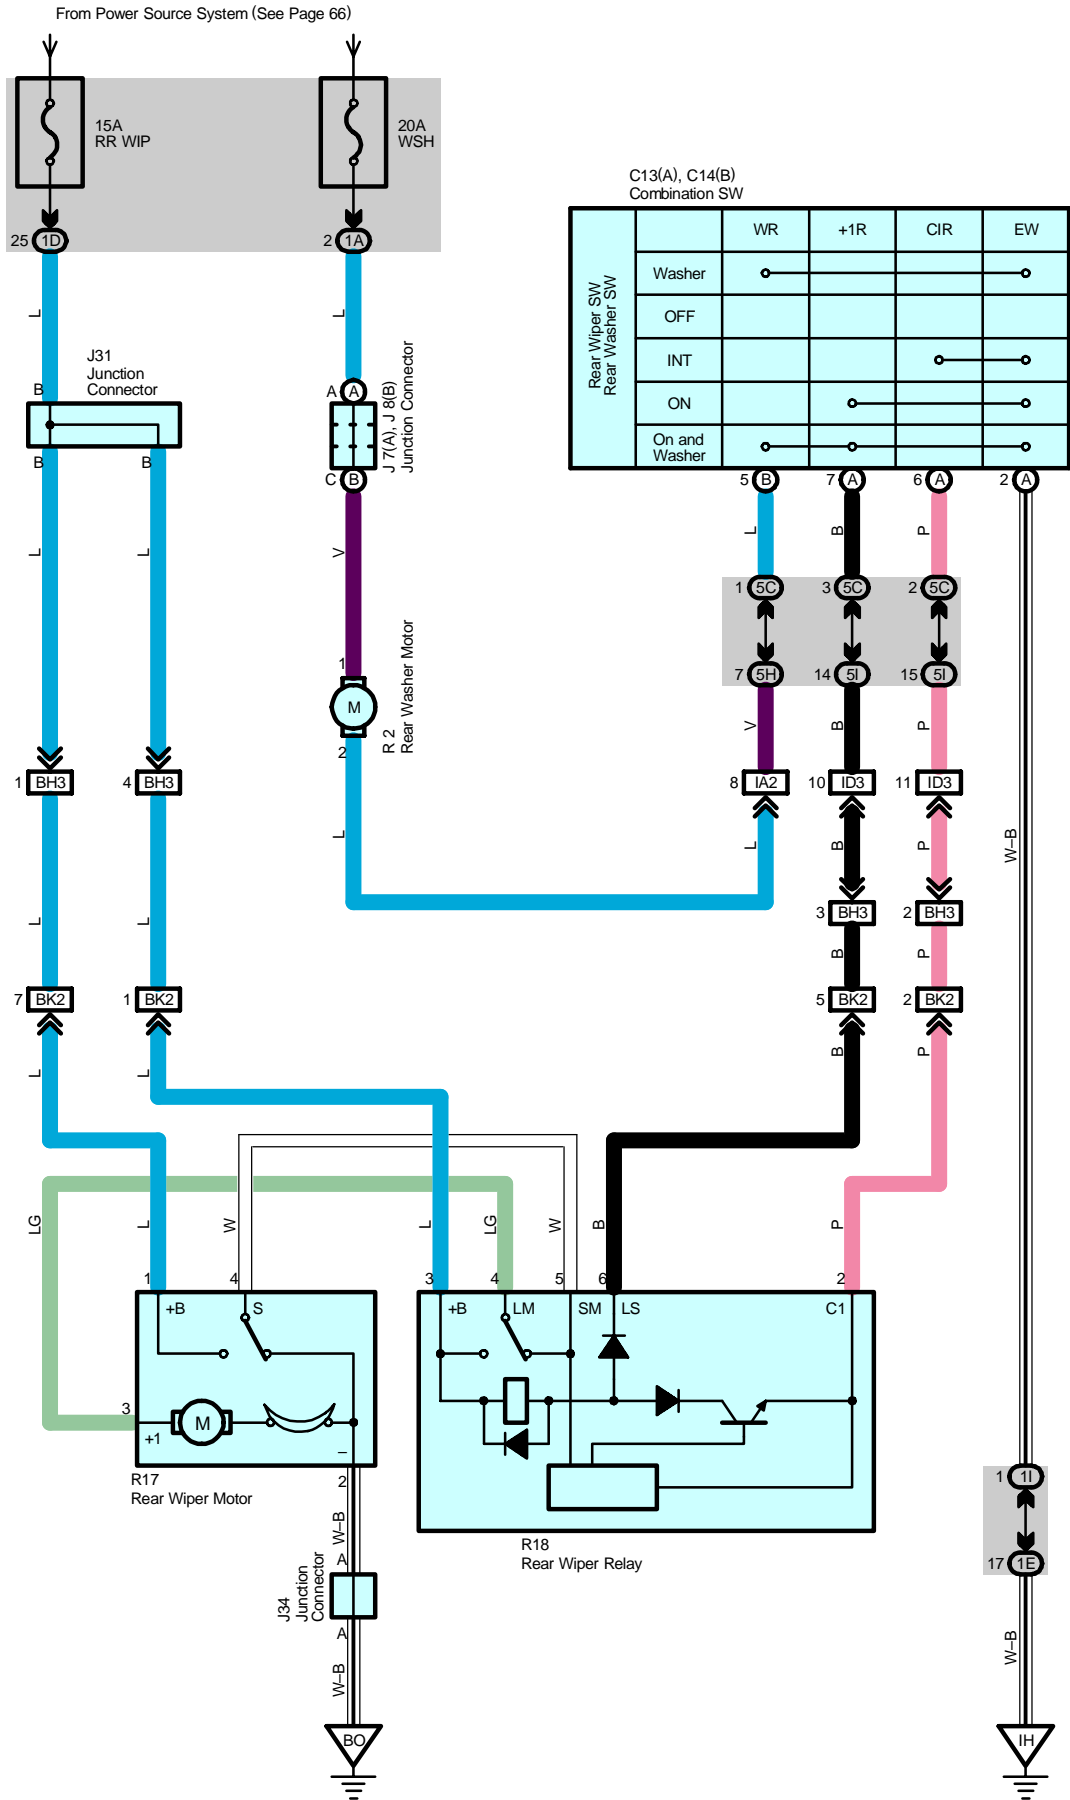

## System Outline

When the power SW is pushed to IG ON position, the current flows from the WSH fuse to rear washer motor TERMINAL 1, and the current flows from the RR WIP fuse to rear wiper relay TERMINAL 3, and to the rear wiper motor TERMINAL 1 respectively.

### 1. Rear Wiper Normal Operation

When the power SW is pushed to IG ON position, and the rear wiper and washer SW is turned to ON position, the current flows from the rear wiper relay TERMINAL 3 to TERMINAL 6 to the rear wiper and washer SW TERMINAL (A) 7 to TERMINAL (A) 2 to GROUND, and turns on the rear wiper relay. As a result, the current flows from the rear wiper relay TERMINAL 3 to TERMINAL 4 to the rear wiper motor TERMINAL 3 to TERMINAL 2 to GROUND, and operates the rear wiper.

### 2. Rear Wiper Intermittent Operation

When the power SW is pushed to IG ON position, and the rear wiper and washer SW is turned to INT position, the current flows from the rear wiper relay TERMINAL 3 to TERMINAL 2 to the rear wiper and washer SW TERMINAL (A) 6 to TERMINAL (A) 2 to GROUND, and the intermittent circuit in the rear wiper relay is controlled to operate the wiper intermittently.

### 3. Washer Operation

When the power SW is pushed to IG ON position, and the rear wiper and washer SW is turned from OFF to WASHER position, the current flows from the WSH fuse to the rear washer motor TERMINAL 1 to TERMINAL 2 to the rear wiper and washer SW TERMINAL (B) 5 to TERMINAL (A) 2 to GROUND. This activates the rear washer motor, and the window washer sprays washer liquid. When the rear wiper and washer SW is turned to ON position, the window washer sprays washer liquid during normal operation of rear wiper.

## Service Hints

### R2 Rear Washer Motor

- 1-Ground : Approx. 12 volts with the power SW at IG ON position
- 2-Ground : Continuity with the rear wiper and washer SW at WASHER position

### R17 Rear Wiper Motor

- 1-Ground : Approx. 12 volts with the power SW at IG ON position
- 2-Ground : Always continuity

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
C13	A 47	J8	B 48	R2	45
C14	B 47	J31	51	R17	52
J7	A 48	J34	51	R18	52

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1D	28	Floor Wire and Driver Side J/B (Lower Finish Panel)
1E	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1I		
5C	40	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5H		
5I		

## □ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA2	56	Engine Room Main Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)
ID3	56	Instrument Panel Wire and Floor Wire (Left Kick Panel)
BH3	62	Back Door No.1 Wire and Floor Wire (Rear Side of Roof Panel)
BK2	62	Back Door No.1 Wire and Back Door No.2 Wire (Rear Side of Roof Panel)



## Rear Wiper and Washer


---

 : **Ground Points**

Code	See Page	Ground Points Location
IH	<a href="#">56</a>	Cowl Side Panel LH
BO	<a href="#">60</a>	Center of the Back Door Panel



# Power Window

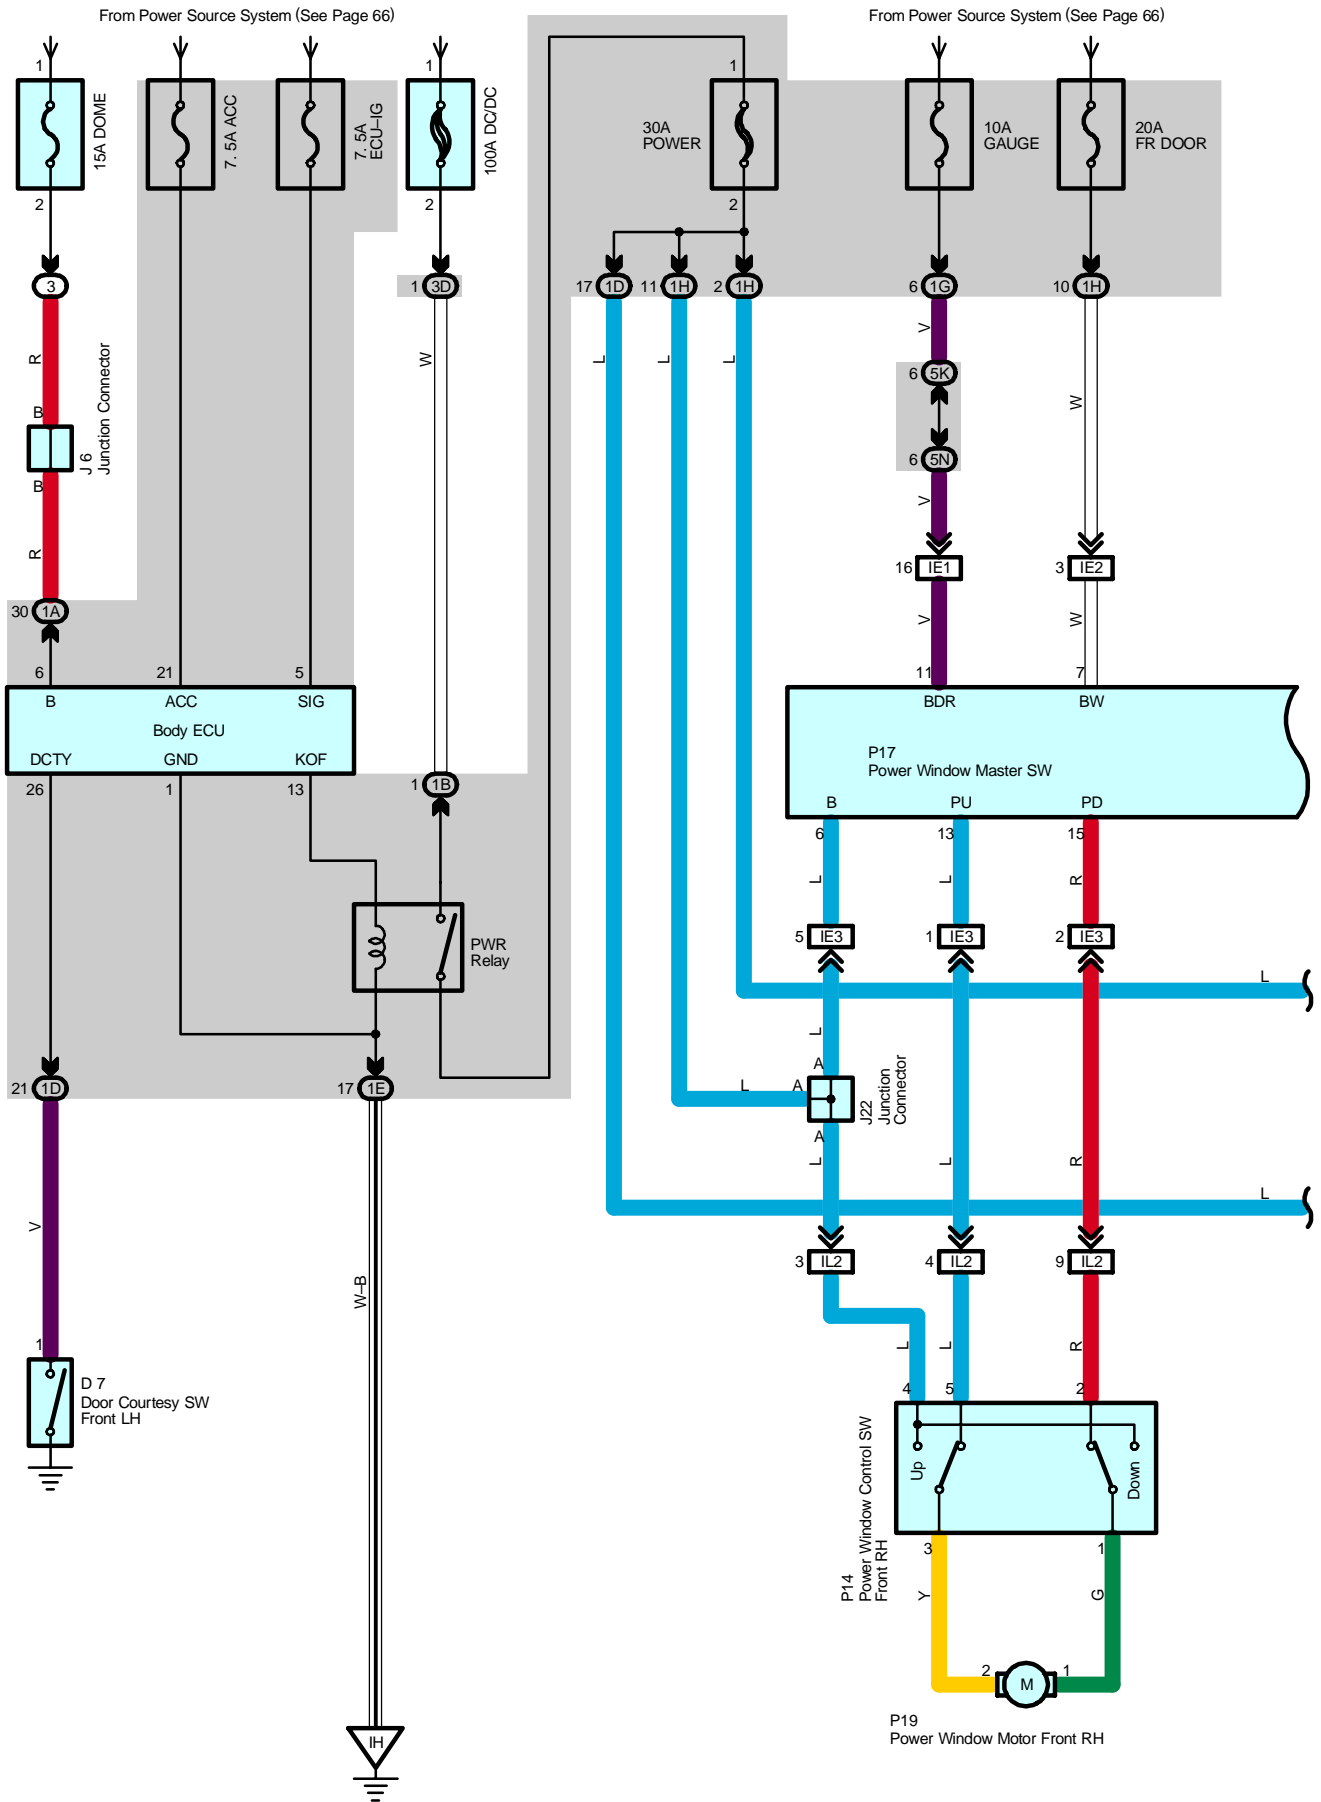



# Power Window

## System Outline

### 1. Manual Up and Down Function

This function operates the window to open or close while the power window switch is being pulled up or pushed down (Driver's SW should be pulled up and down halfway for manual operation.). The window stops as soon as the switch is released.

### 2. Driver's Door One-Touch Auto Up and Down Function

"The driver's door one-touch auto up and down function" enables the window of front doors to be fully opened or closed with a touch of the power window switch.

### 3. Jam Protection Function (Driver's Door)

The jam protection function automatically stops the power window and moves it downward if a foreign object gets jammed in the course of the window during one-touch auto-up operation.

### 4. Remote Control Function

The up and down operation of the front passenger door windows and the rear door windows can be controlled by operating the power window master switch.

### 5. Key-Off Operation Function

For about 45 seconds after pushing OFF the power SW or opening the driver's side door, this function enables the power window master switch to operate all the door windows and enables the switch of each passenger's door to operate each window manually. Please note that the function becomes unavailable if the driver's side door is shut. (The one-touch auto up and down operation of the driver's side door is included as well)

\* When the battery terminal or fuse is disconnected, the glass position of all door windows have to be reset to the initial positions, one by one, with the power window control switch by following the procedure below:

- A) Reconnect the battery terminal or fuse.
- B) Push the power SW to IG ON position
- C) Lower the window of each door halfway or more with the power window switch.
- D) Then close the window fully with the power window switch.  
Do not release the switch for at least one second after the window is fully closed.

## Service Hints

### P17 Power Window Master SW

- 7-Ground : Always approx. 12 volts
- 11-Ground : Approx. 12 volts with the push start SW at IG ON position
- 1-Ground : Always continuity

### Body ECU

- 6-Ground : Always approx. 12 volts
- 5-Ground : Approx. 12 volts with the push start SW at IG ON position
- 21-Ground : Approx. 12 volts with the push start SW at ACC ON or IG ON position
- 26-Ground : Continuity with the driver's door open
- 1-Ground : Always continuity
- 13-Ground : Approx. 12 volts with the key off operation

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
D7	<a href="#">50</a>	P14	<a href="#">52</a>	P19	<a href="#">52</a>
J6	<a href="#">48</a>	P15	<a href="#">52</a>	P20	<a href="#">52</a>
J22	<a href="#">48</a>	P16	<a href="#">52</a>	P21	<a href="#">52</a>
J24	<a href="#">48</a>	P17	<a href="#">52</a>		
J27	<a href="#">51</a>	P18	<a href="#">52</a>		

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	<a href="#">22</a>	Engine Room R/B (Engine Compartment Left)

 : **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1B		
1D	28	Floor Wire and Driver Side J/B (Lower Finish Panel)
1E	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1G		
1H		
3D	22	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
5K	40	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5N		


 : **Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID4	56	Instrument Panel Wire and Floor Wire (Left Kick Panel)
IE1	56	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IE2		
IE3		
IL2	58	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IM2	58	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
BB1	60	Rear Door No.2 Wire and Floor Wire (Left Center Pillar)
BJ1	62	Rear Door No.1 Wire and Floor No.2 Wire (Right Center Pillar)


 : **Ground Points**

Code	See Page	Ground Points Location
IH	56	Cowl Side Panel LH

# Door Lock Control

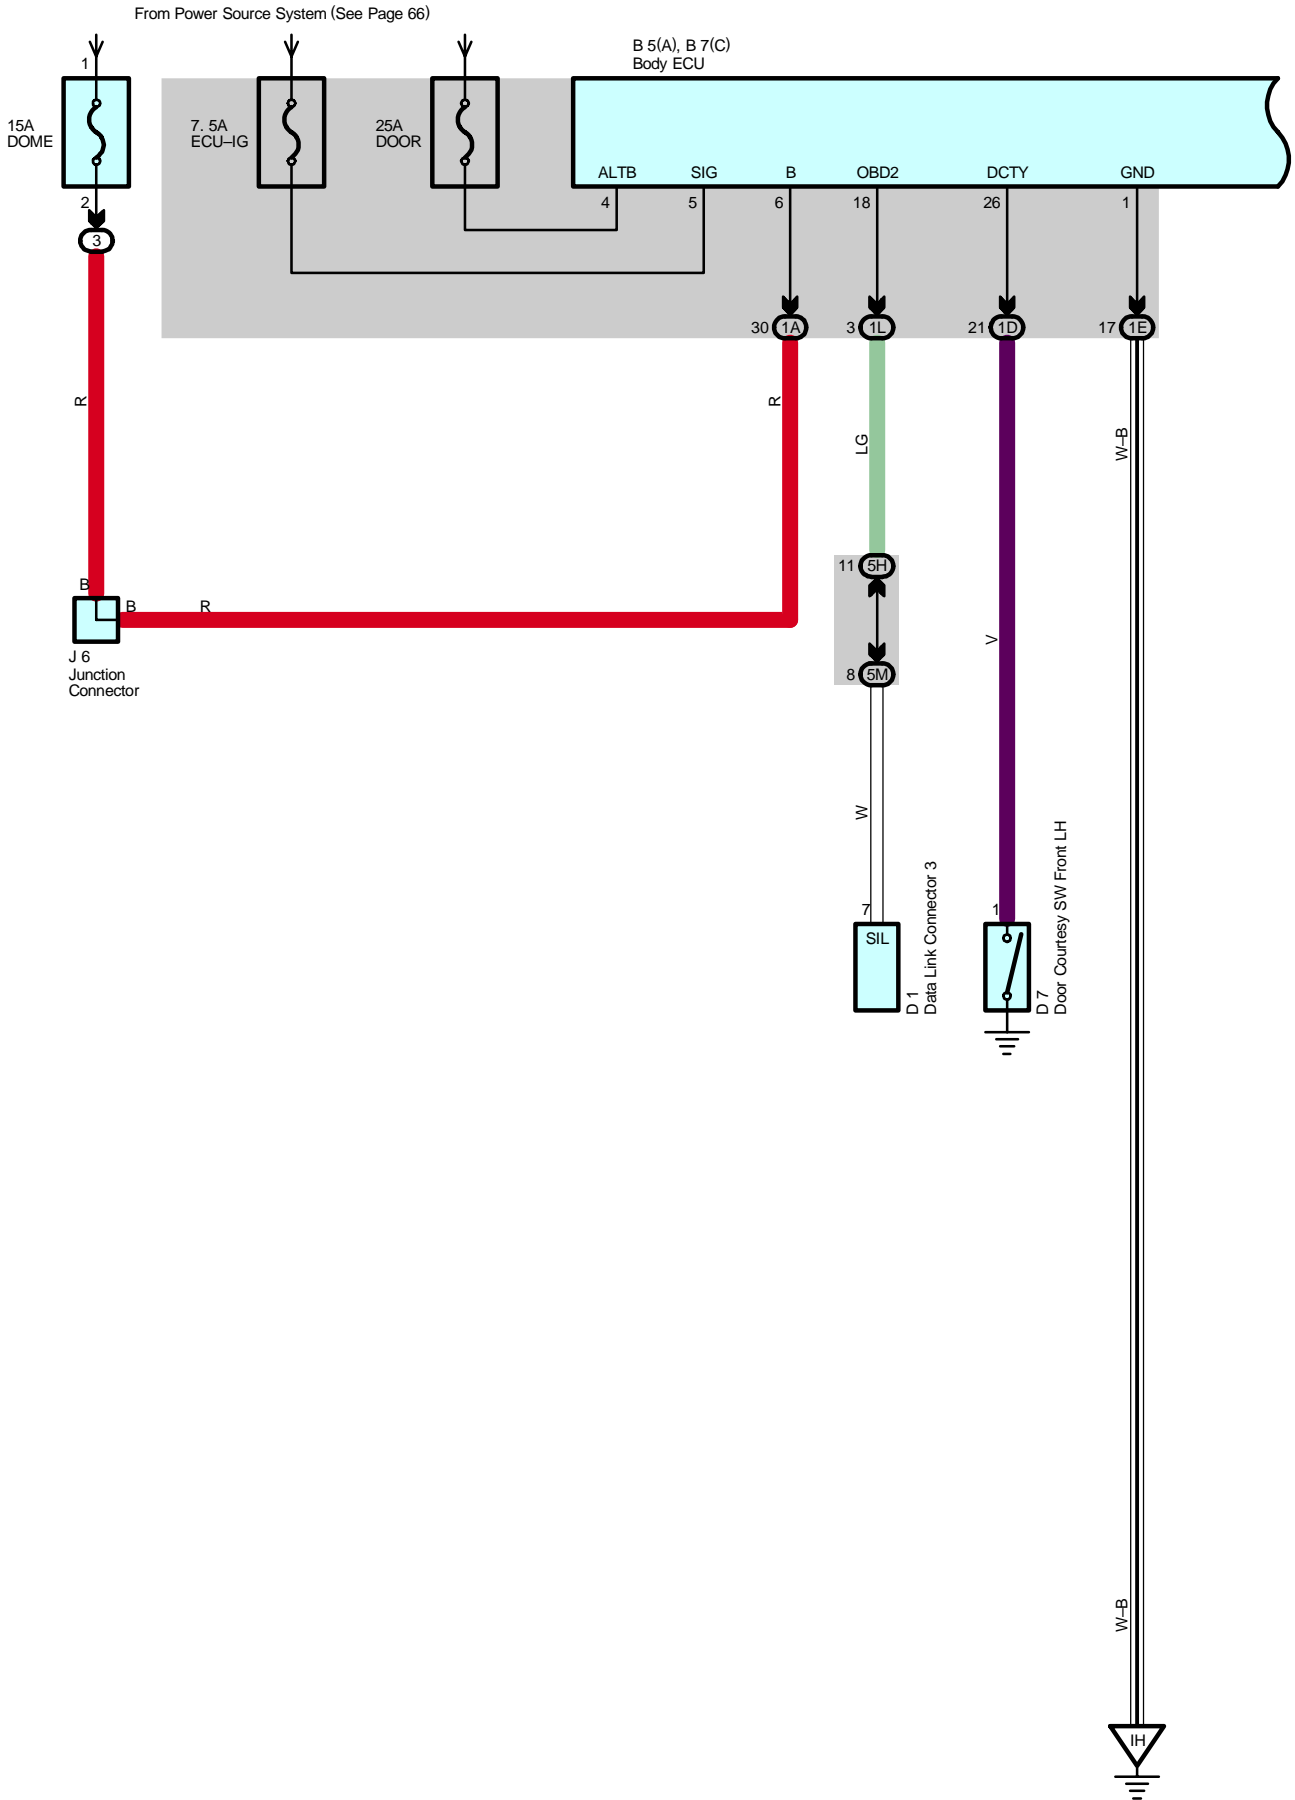



B 5(A), B 7(C)  
Body ECU

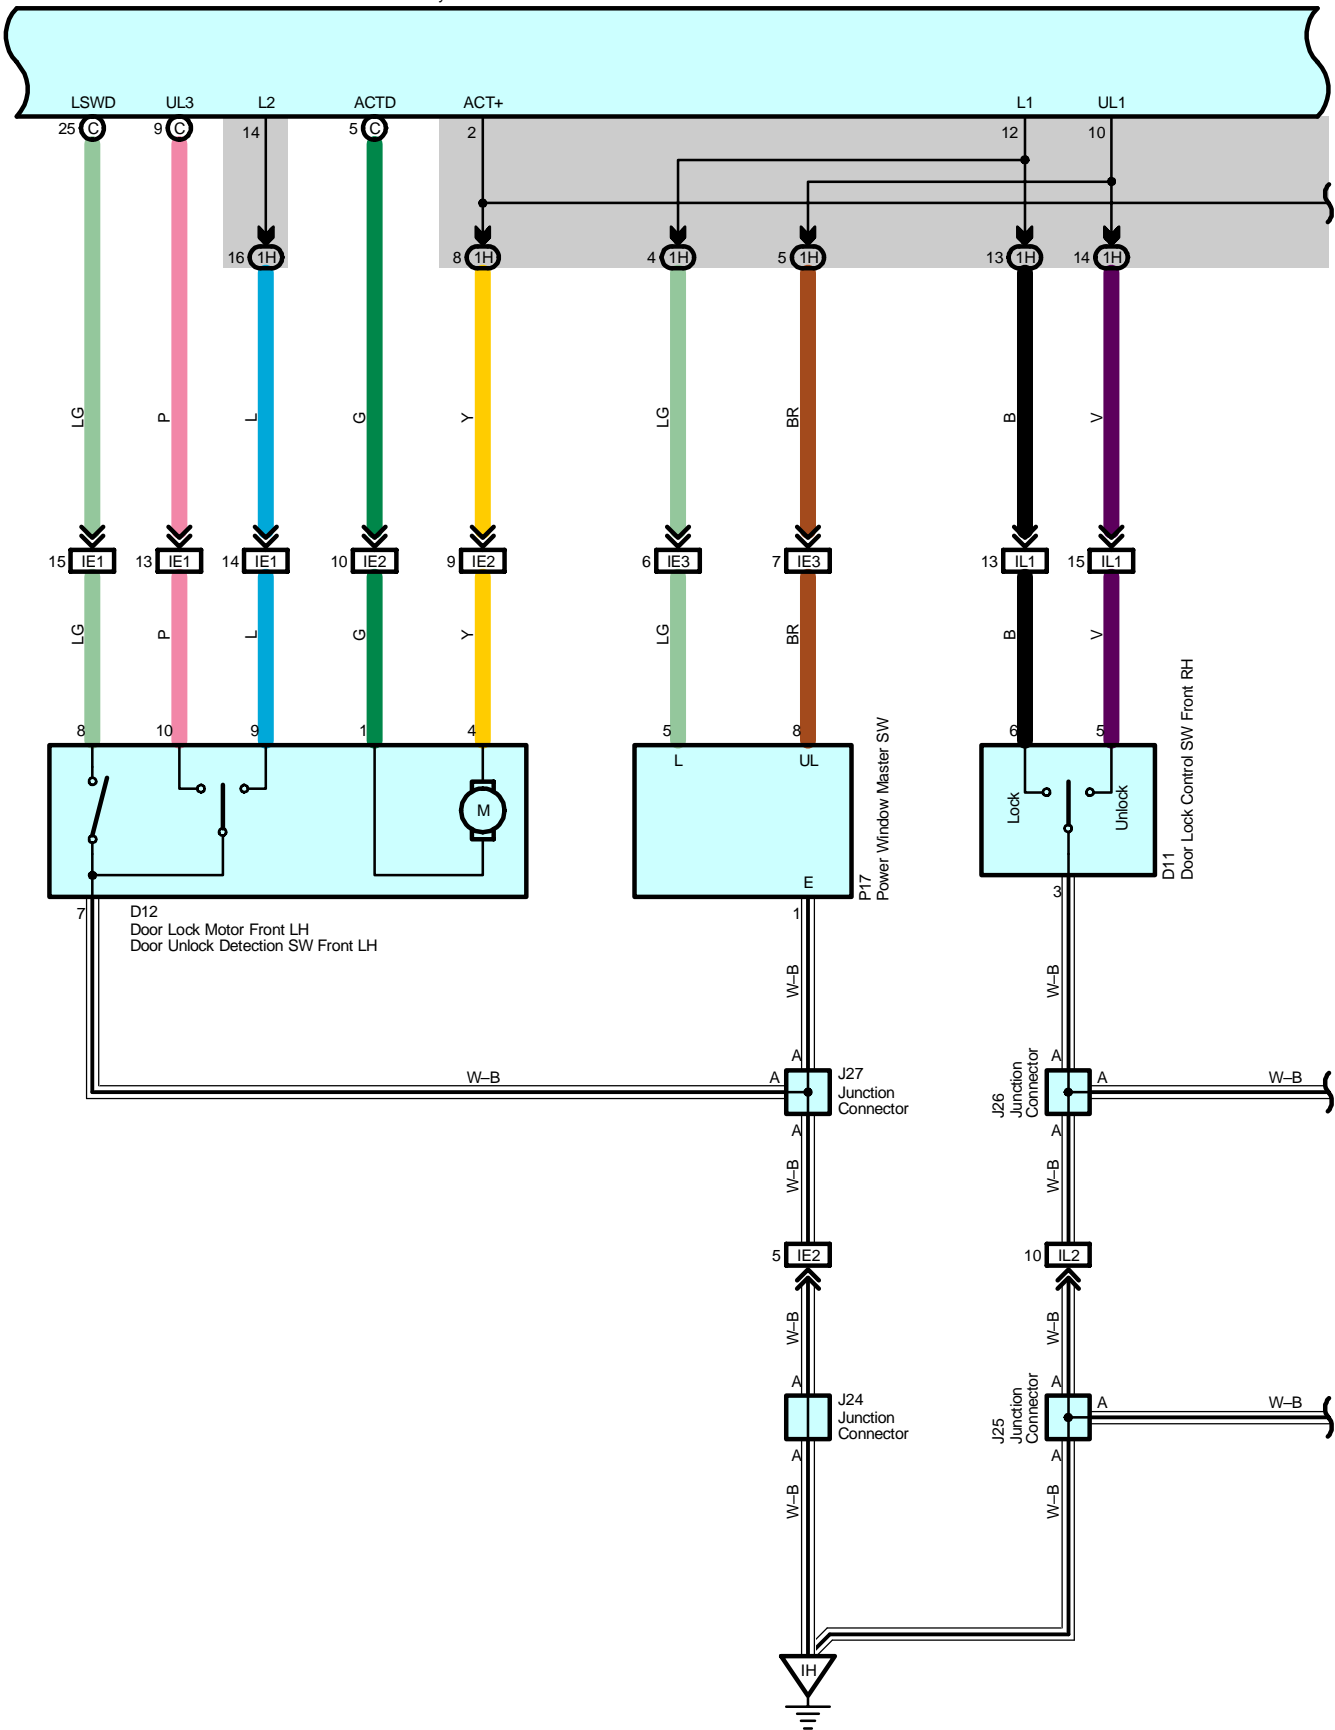



# Door Lock Control

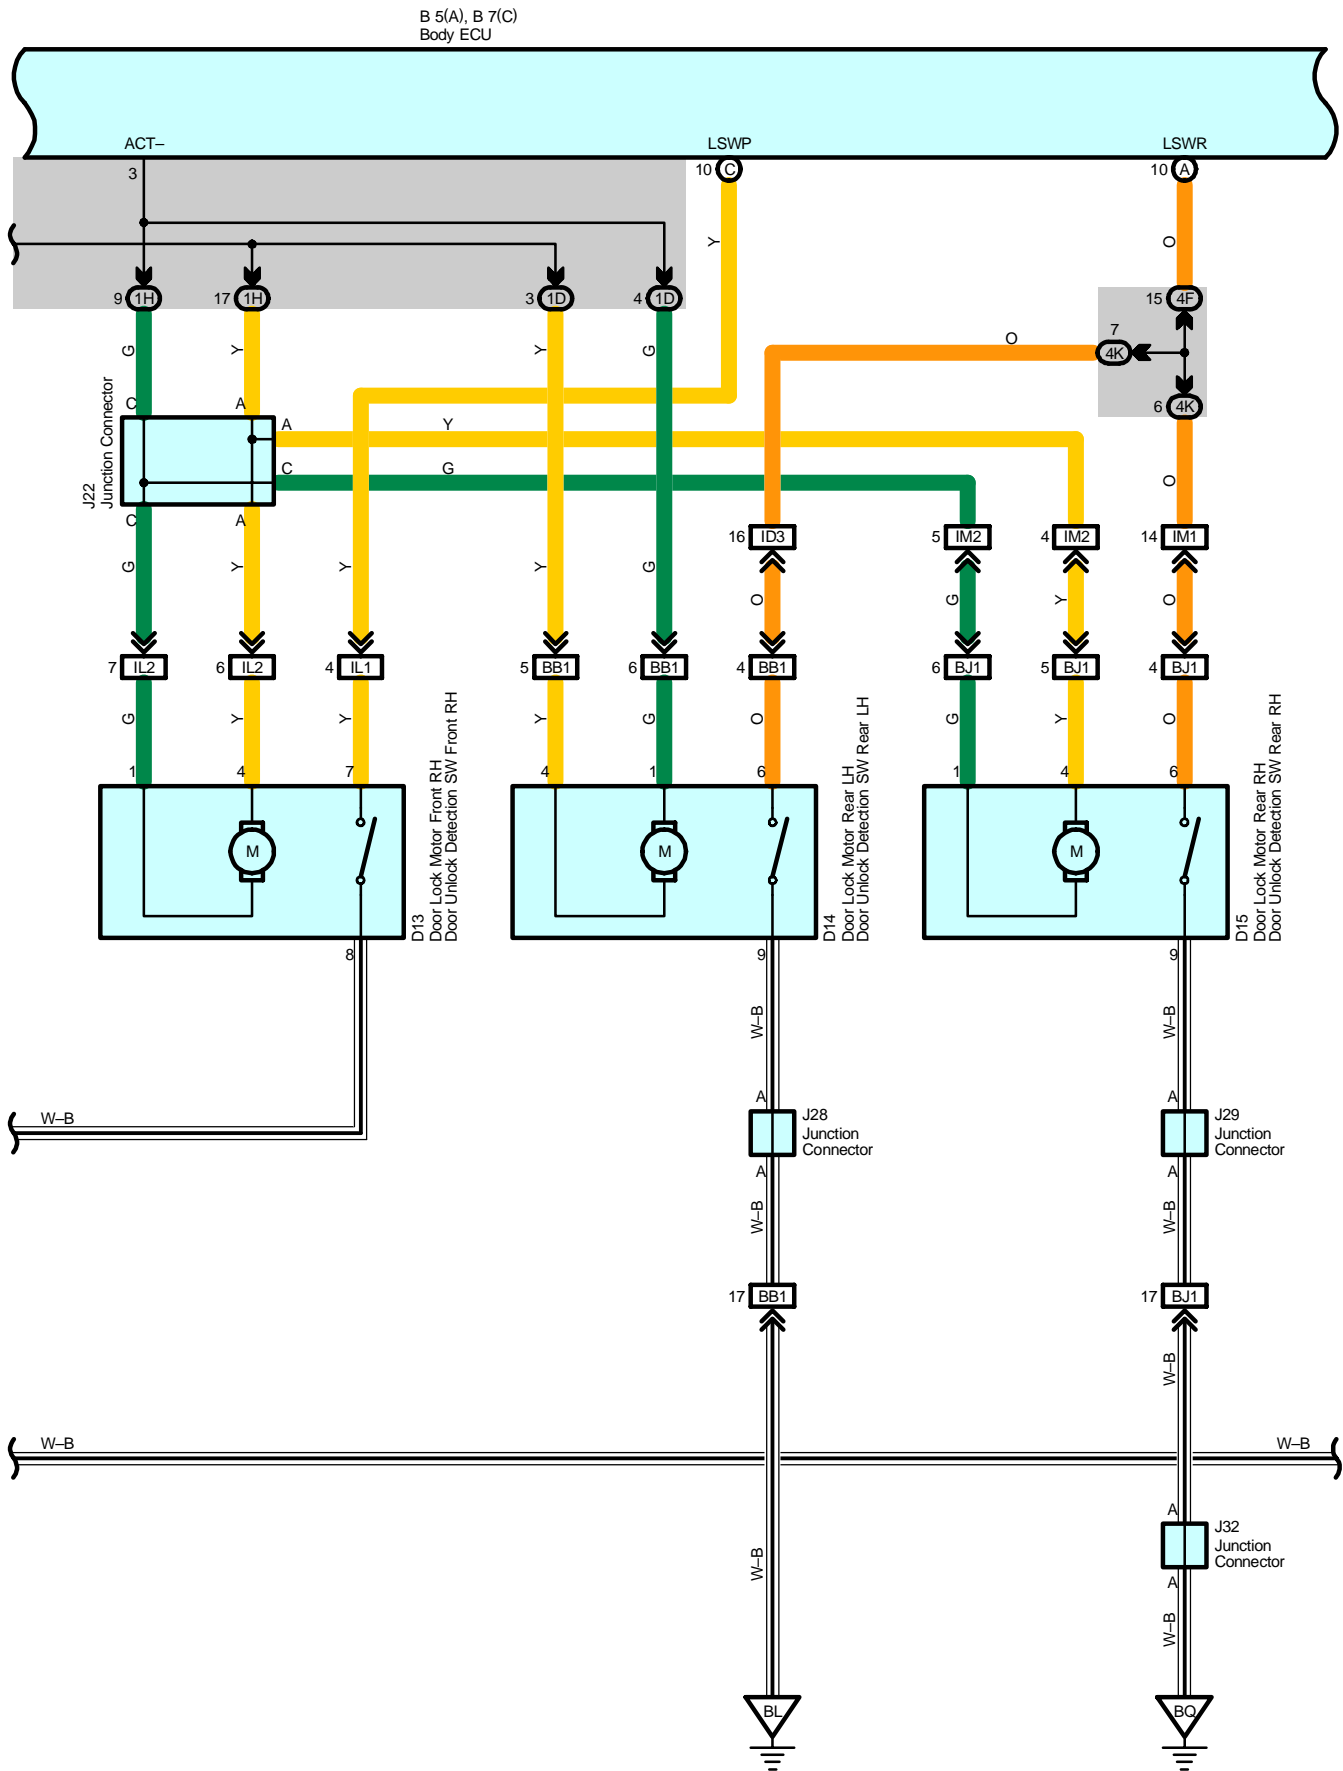

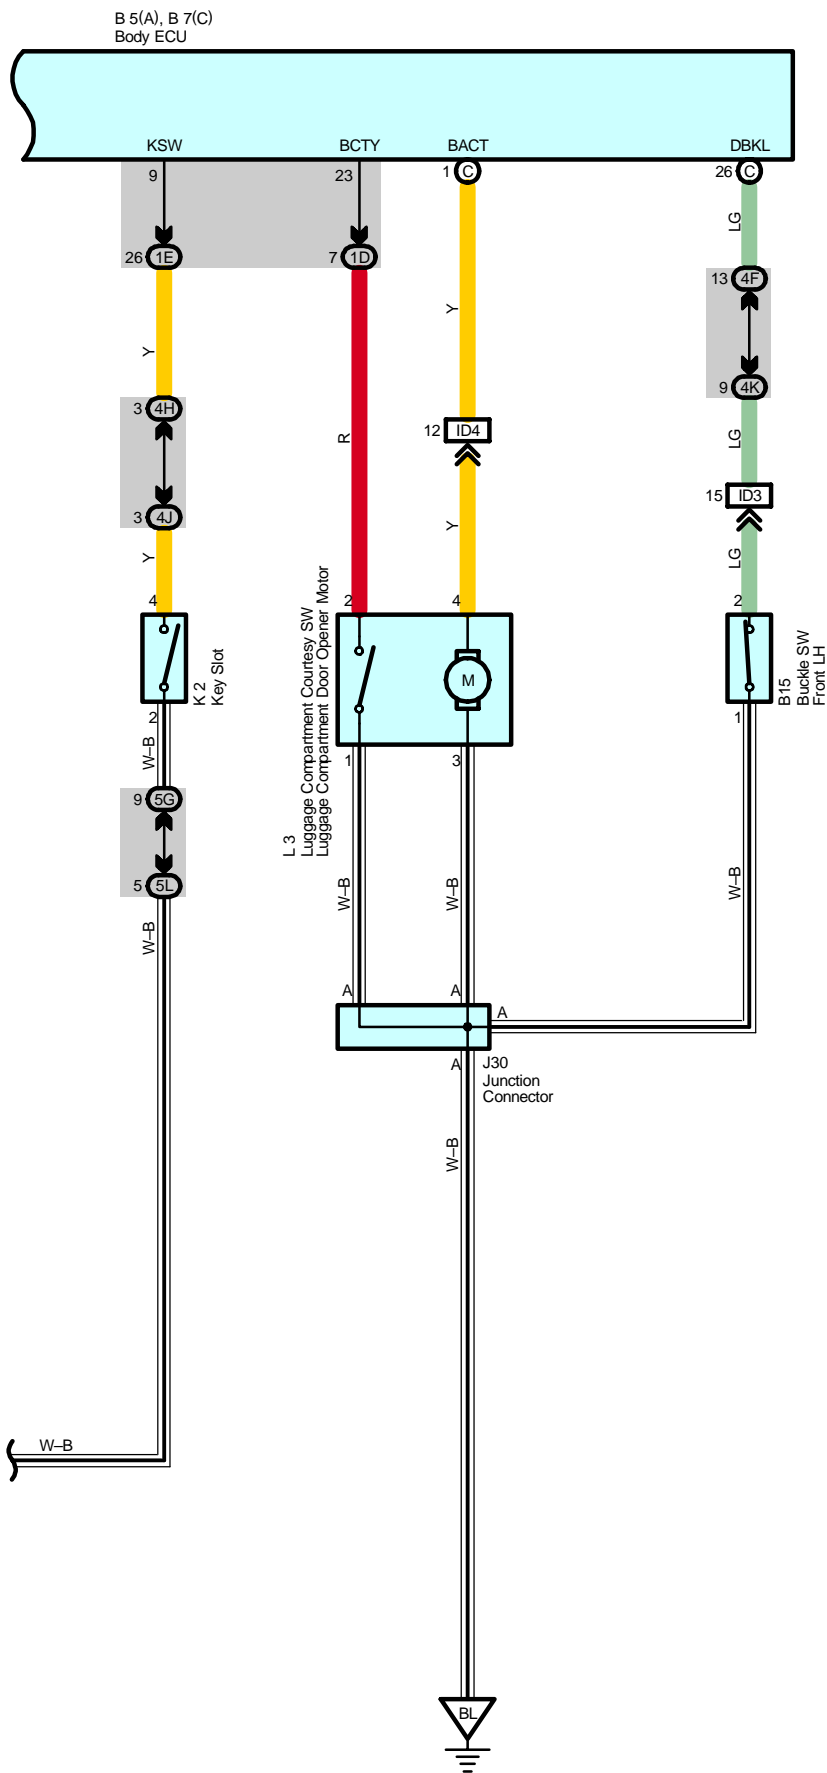

# Door Lock Control

## System Outline

The door lock control is a system controlled by various signals input into the body ECU through communication control of the body ECU etc.

### 1. Manual Unlock Operation

When the door lock control SW of the driver's or passenger's side door is pushed to UNLOCK, the door unlocks.

### 2. Manual Lock Operation

When the door lock control SW of the driver's or passenger's side door is pushed to LOCK, the door locks.

### 3. Door Key Unlock Operation

\* Unlock operation from driver's side door

When the driver's side door is unlocked once using the mechanical key, only the driver's side door unlocks. If this operation is repeated within 3 seconds, all the other doors also unlock.

### 4. Ignition Key Reminder Operation

Under condition that the electrical key remains inserted in the key slot and driver's side door is open, locking operation with door knob of driver's door is not effective but automatically unlocks the door. When the door is locked with the manual door lock SW of driver's door or door key SW of driver's door, the door locks once but right after that, the door unlocks automatically.

## Service Hints

### Body ECU

4, 6-Ground : Always approx. 12 volts

5-Ground : Approx. 12 volts with the power SW at IG ON position

1-Ground : Always continuity

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page	
B5	A	46	D14	50	J28	51
B7	C	46	D15	50	J29	51
B15		50	J6	48	J30	51
D1		47	J22	48	J32	51
D7		50	J24	48	K2	48
D11		50	J25	48	L3	51
D12		50	J26	51	P17	52
D13		50	J27	51		

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	22	Engine Room R/B (Engine Compartment Left)

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1D	28	Floor Wire and Driver Side J/B (Lower Finish Panel)
1E	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1H		
1L		
4F	36	Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4H		
4J		
4K		
5G	40	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5H		
5L		
5M		

 : Connector Joining Wire Harness and Wire Harness


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID3	56	Instrument Panel Wire and Floor Wire (Left Kick Panel)
ID4		
IE1	56	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IE2		
IE3		
IL1	58	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IL2		
IM1	58	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
IM2		
BB1	60	Rear Door No.2 Wire and Floor Wire (Left Center Pillar)
BJ1	62	Rear Door No.1 Wire and Floor No.2 Wire (Right Center Pillar)

 : Ground Points

Code	See Page	Ground Points Location
IH	56	Cowl Side Panel LH
BL	60	Rear Side of Left Quarter Panel
BQ	60	Rear Side of Right Quarter Panel




B 5(A), B 6(B), B 7(C)  
Body ECU

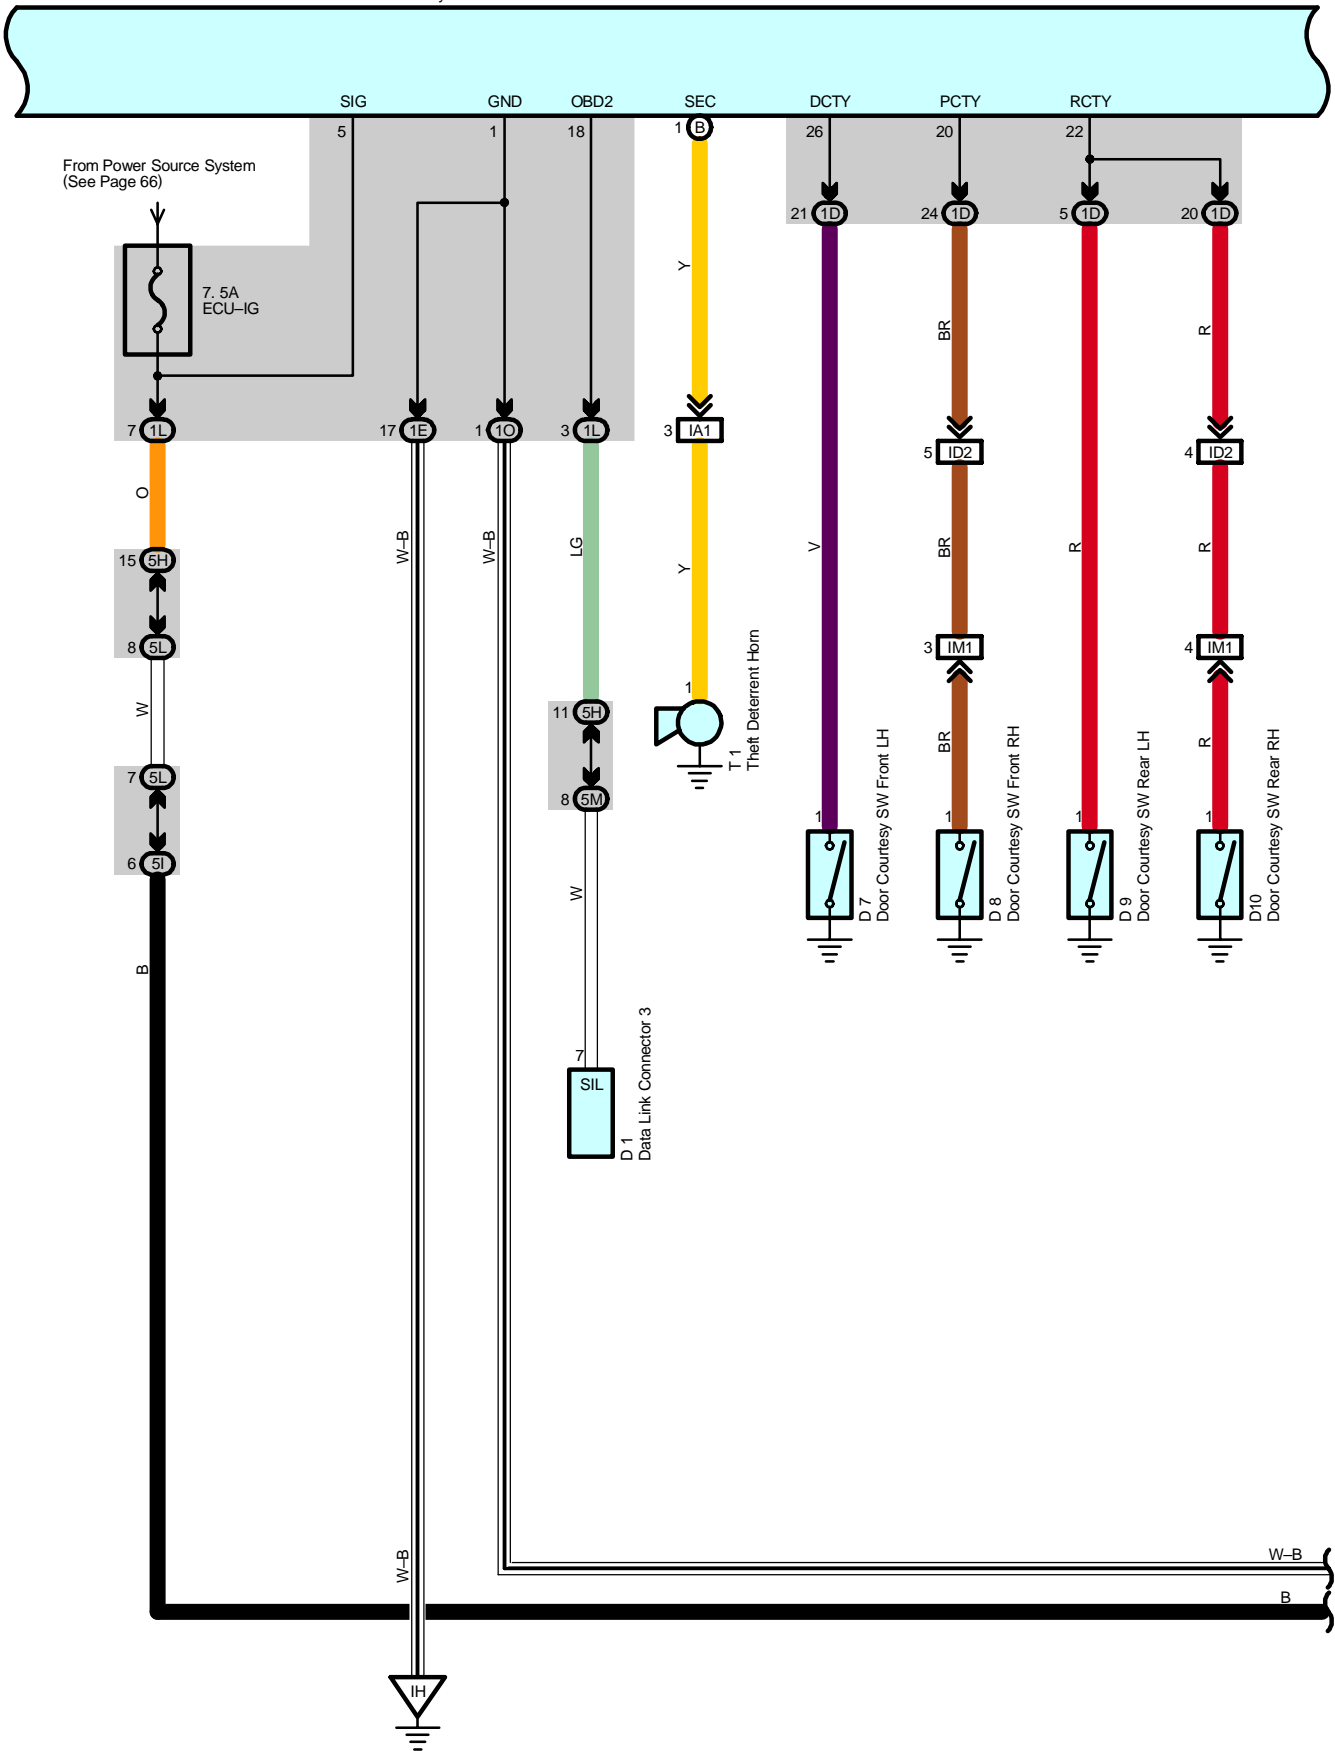


# Smart Entry System and Wireless Door Lock Control

B 5(A), B 6(B), B 7(C)  
Body ECU

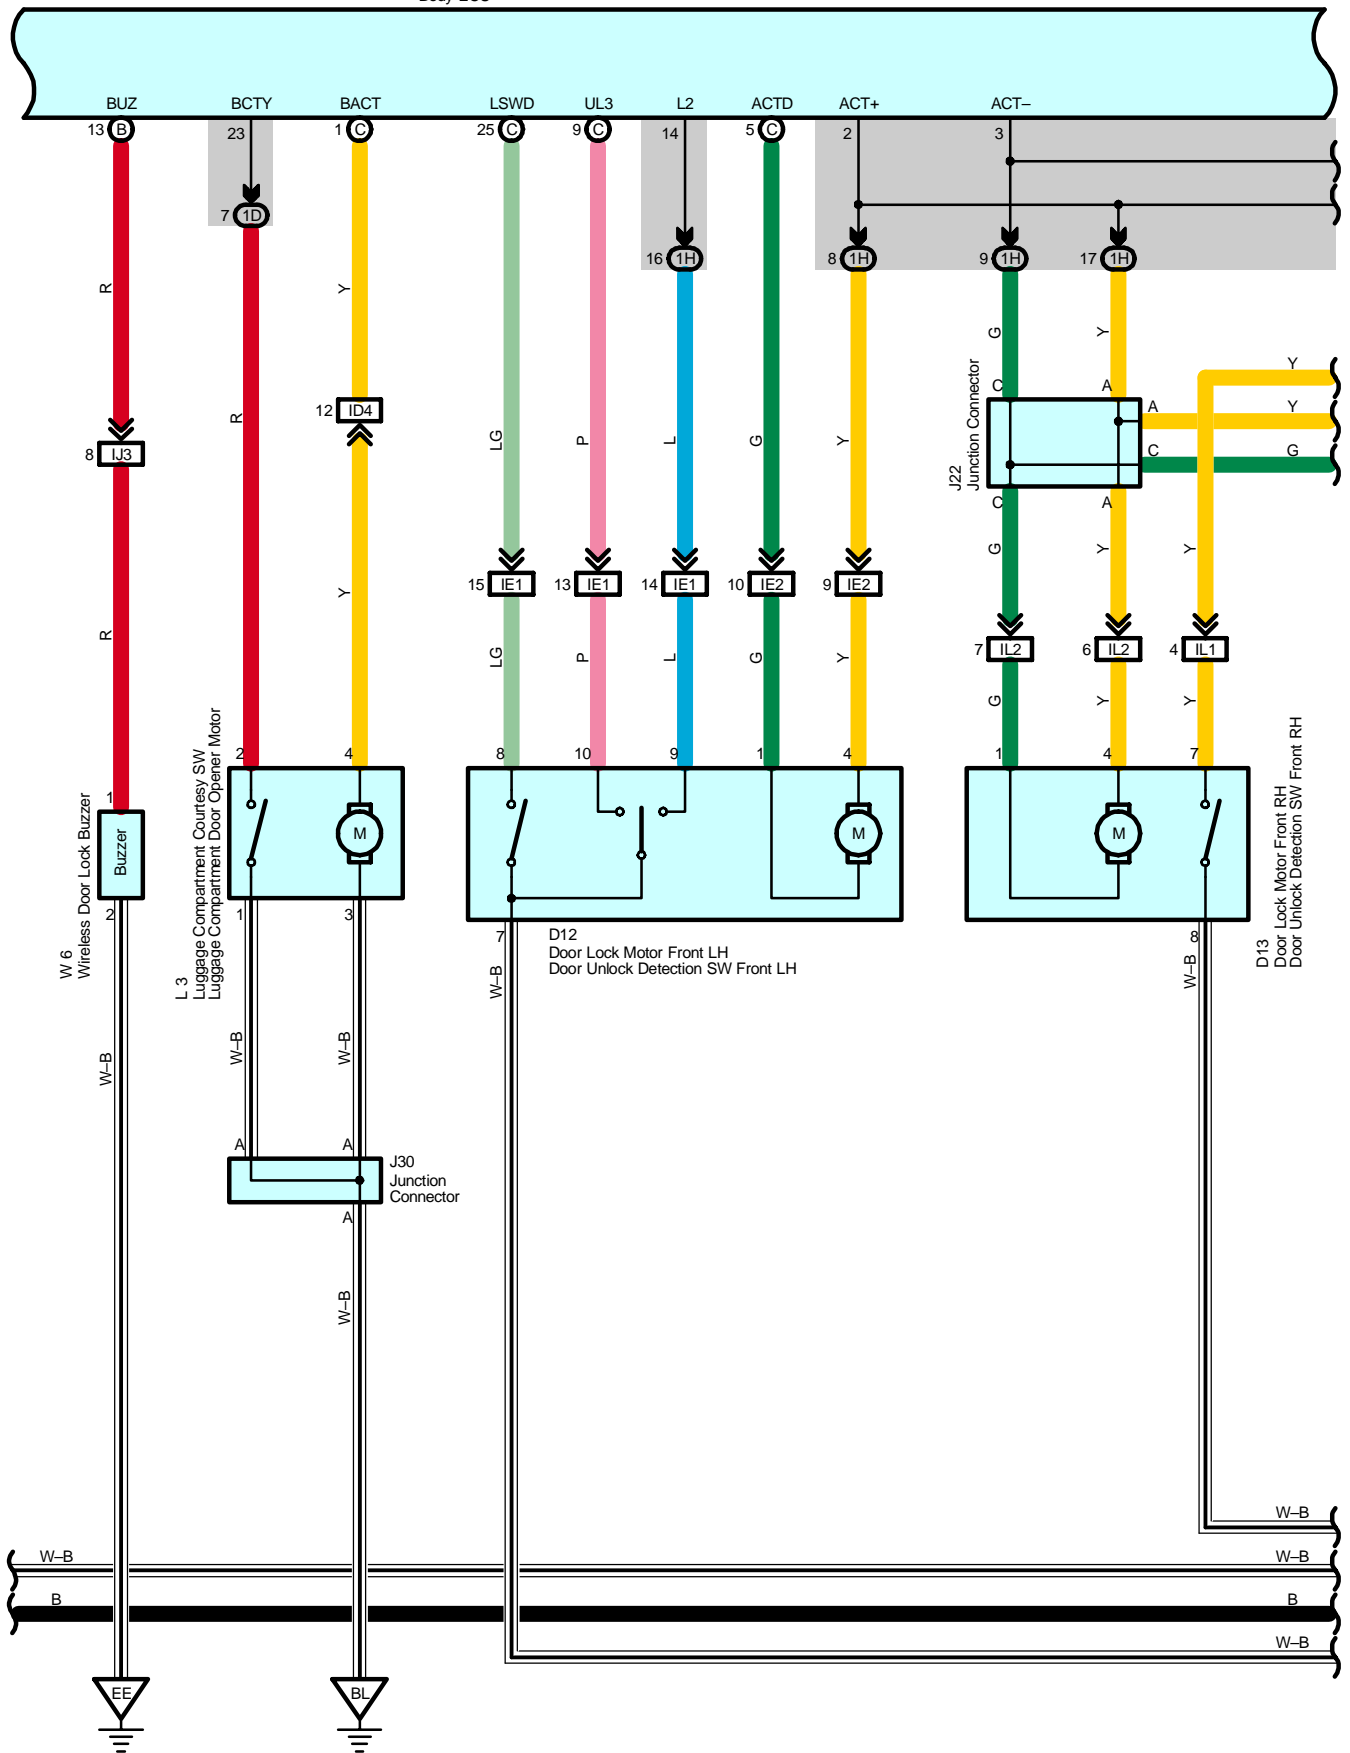


B 5(A), B 6(B), B 7(C)  
Body ECU

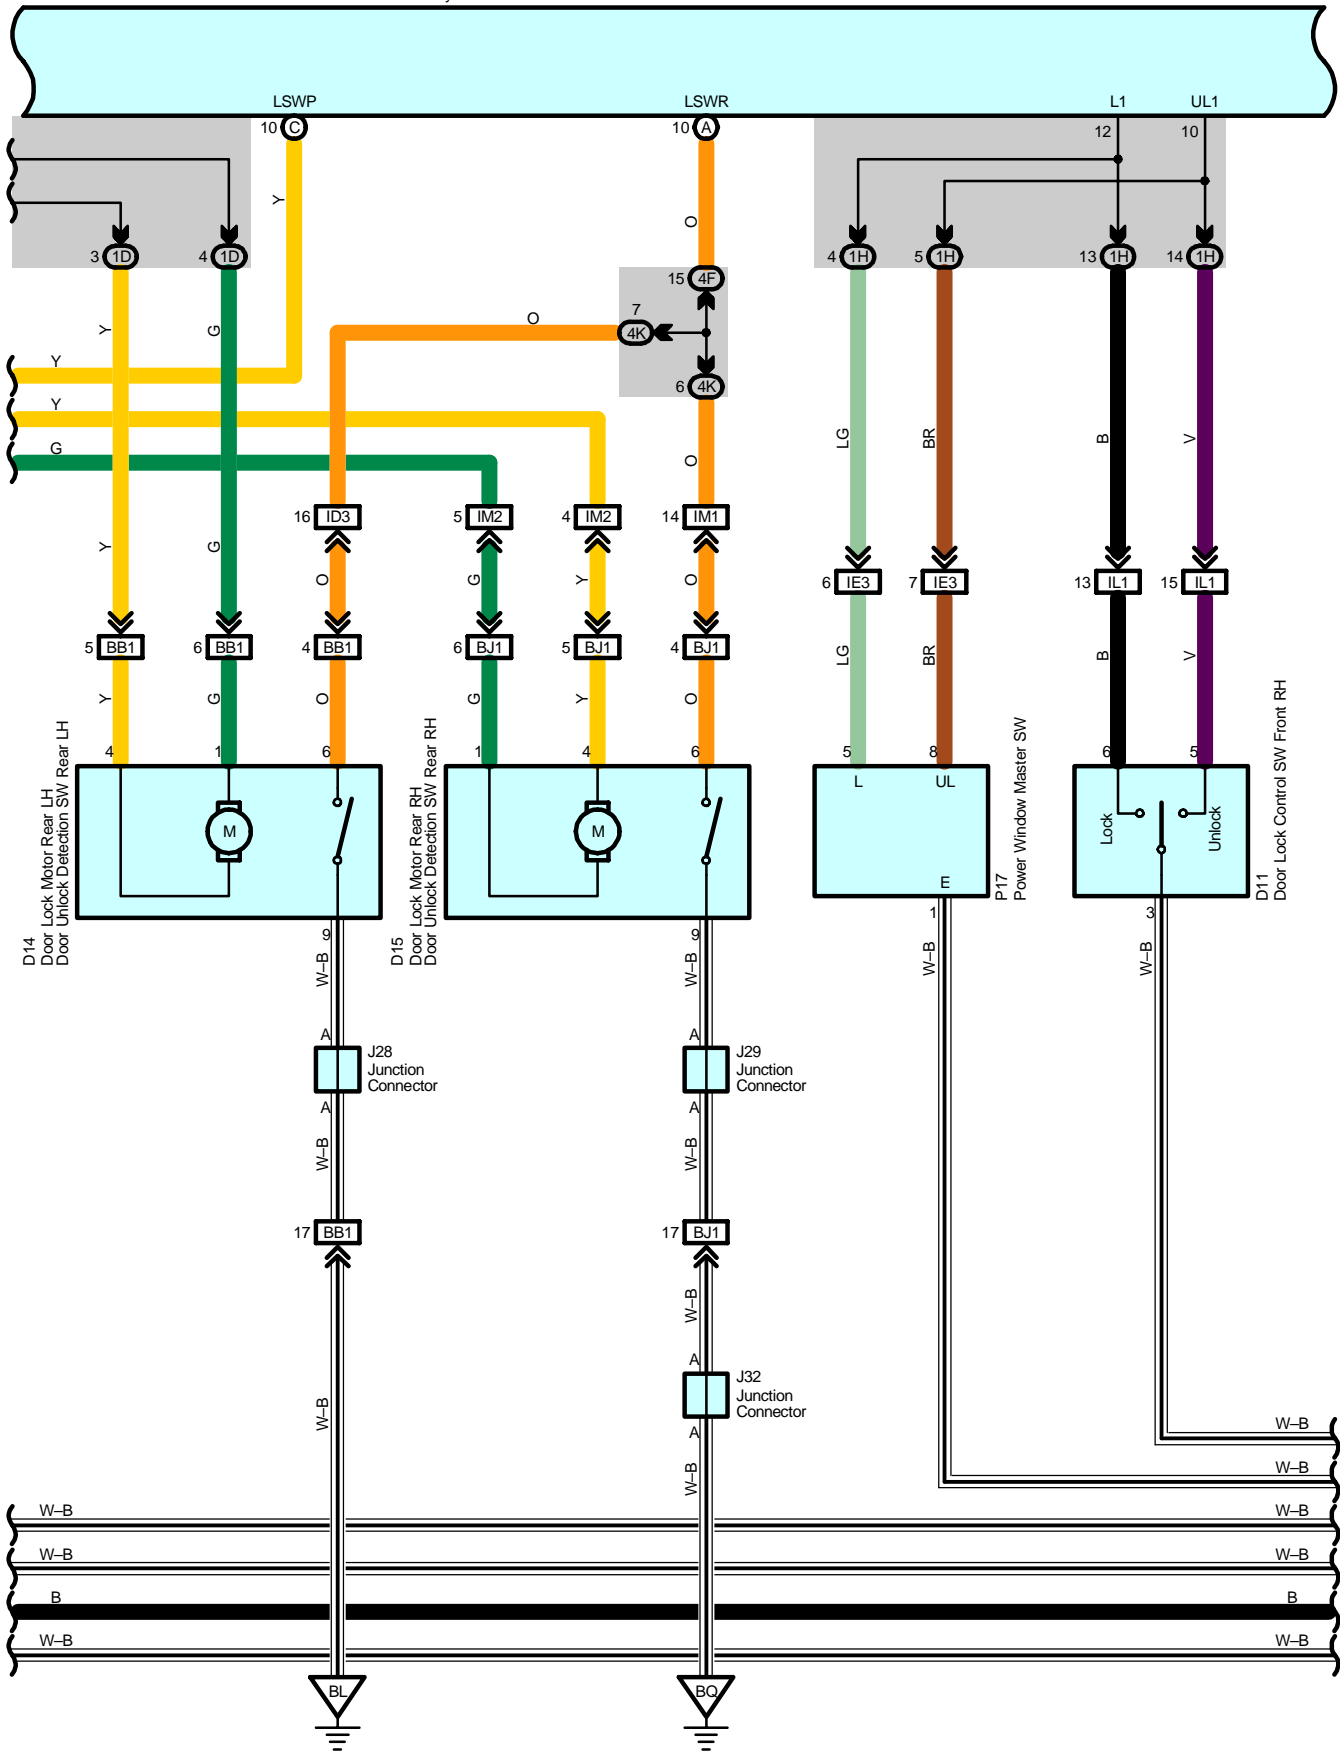




# Smart Entry System and Wireless Door Lock Control

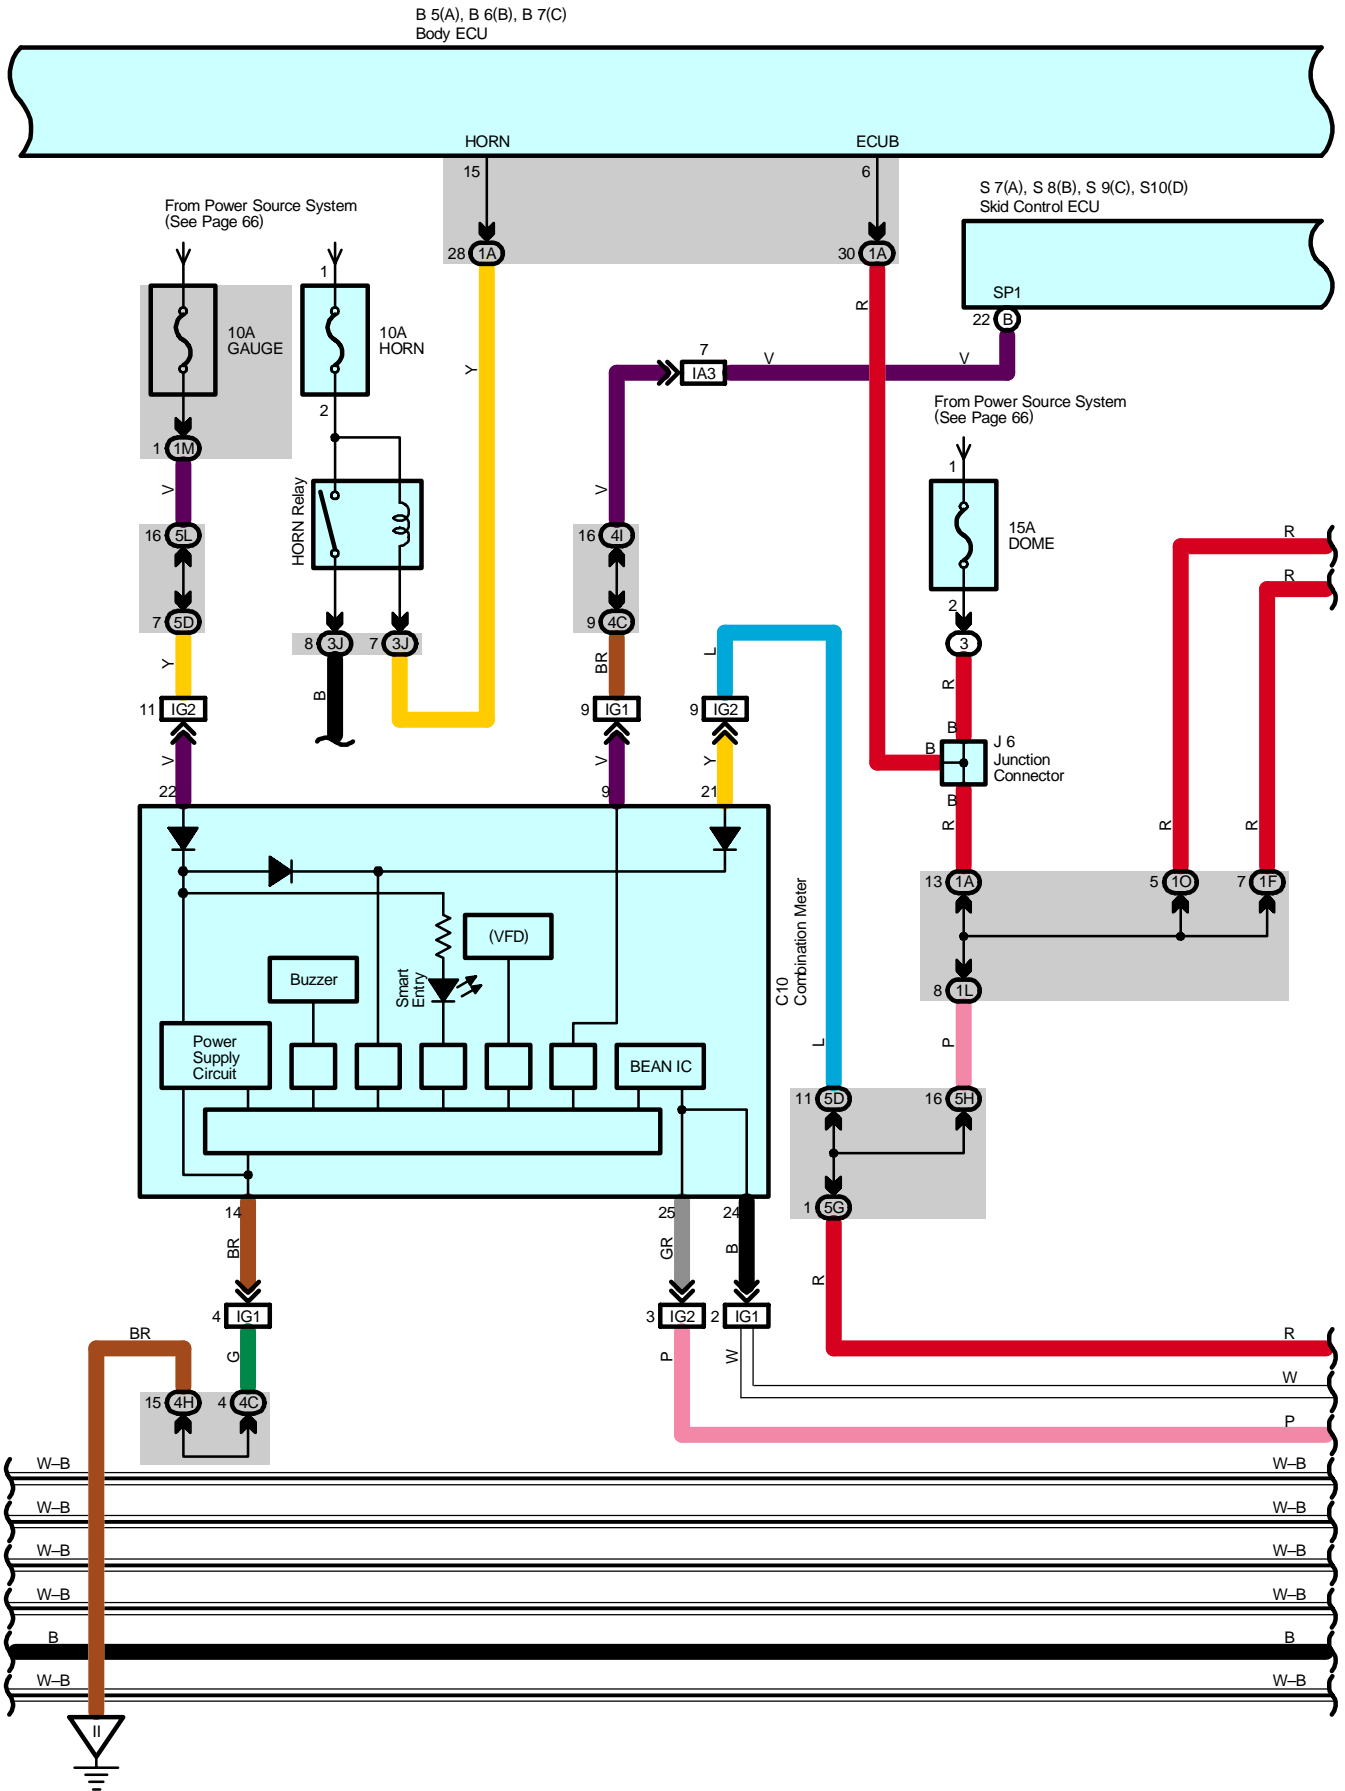


B 5(A), B 6(B), B 7(C)  
Body ECU


S 7(A), S 8(B), S 9(C), S10(D)  
Skid Control ECU

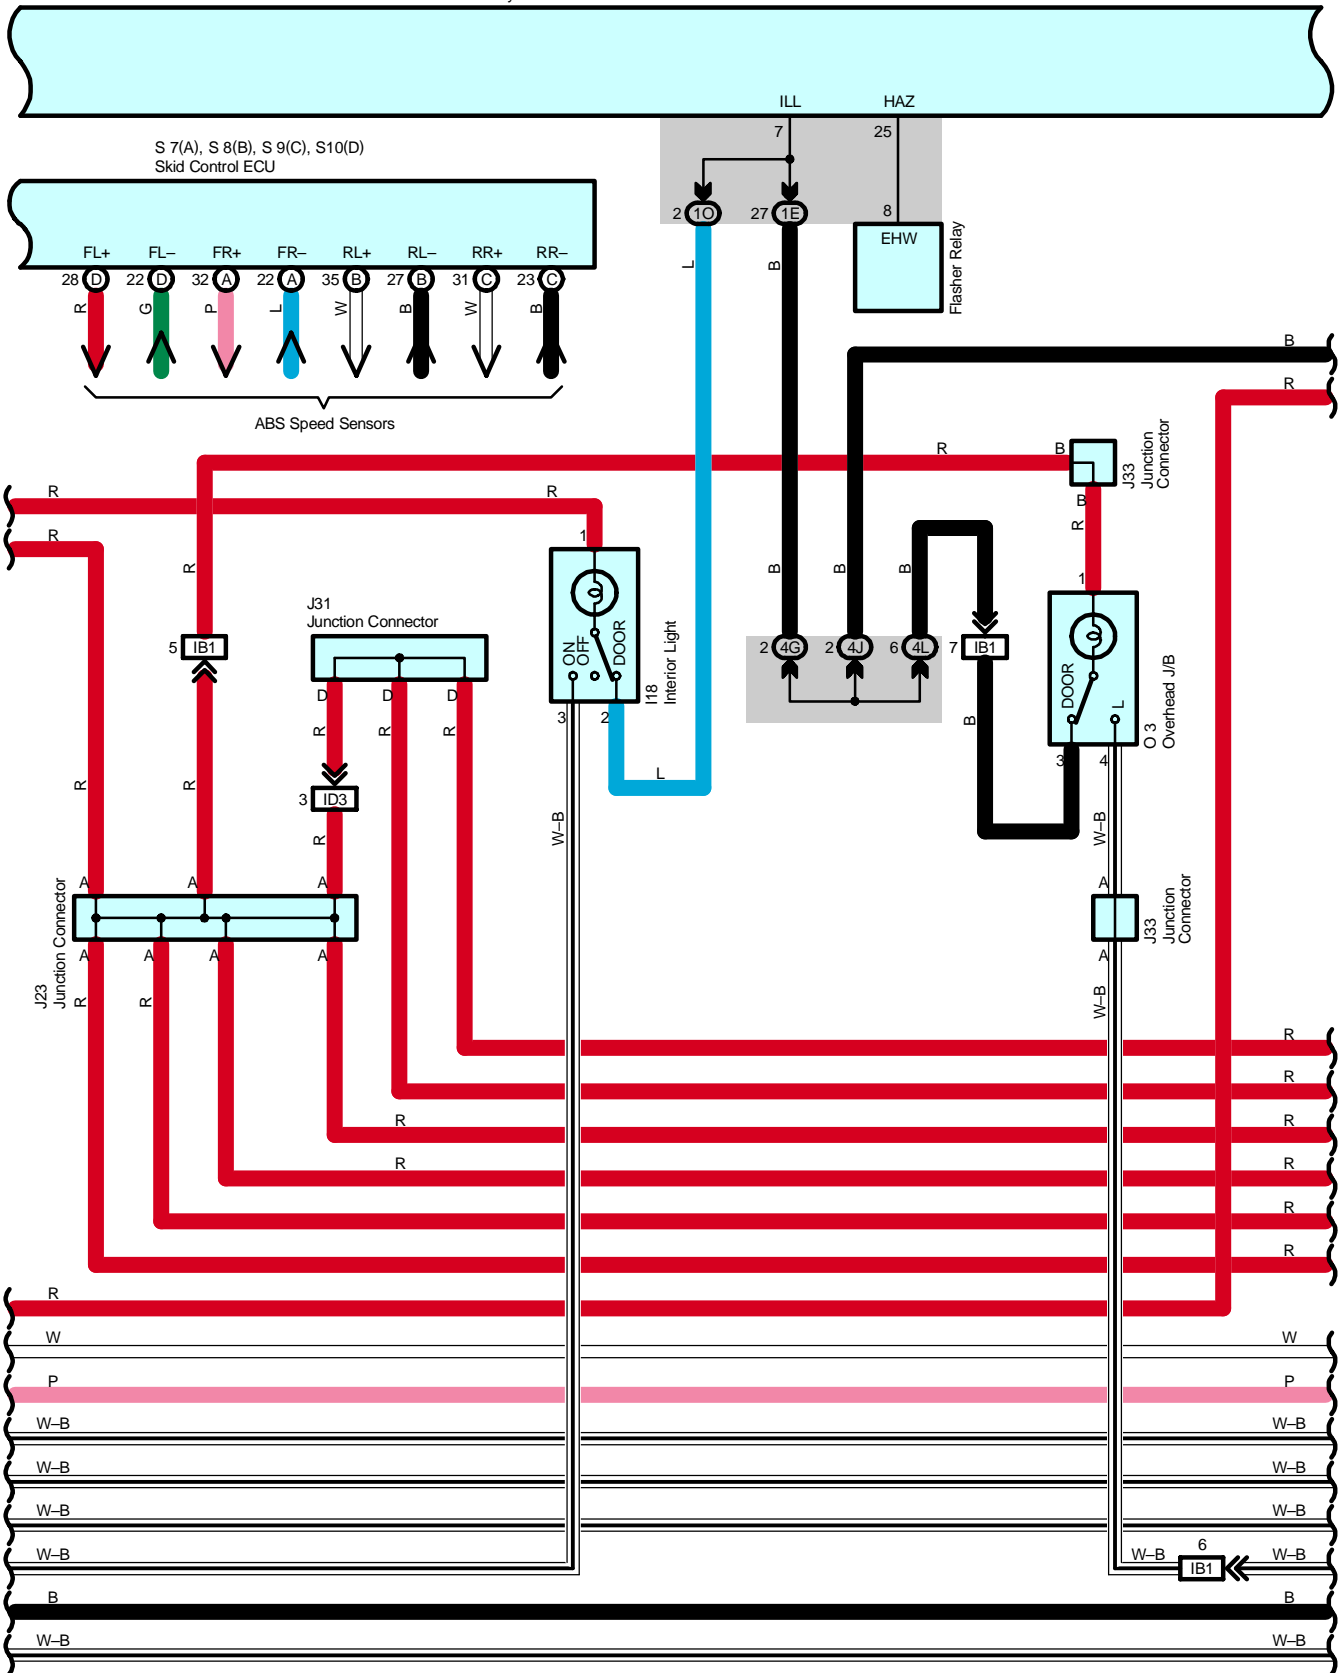


# Smart Entry System and Wireless Door Lock Control


B 5(A), B 6(B), B 7(C)  
Body ECU

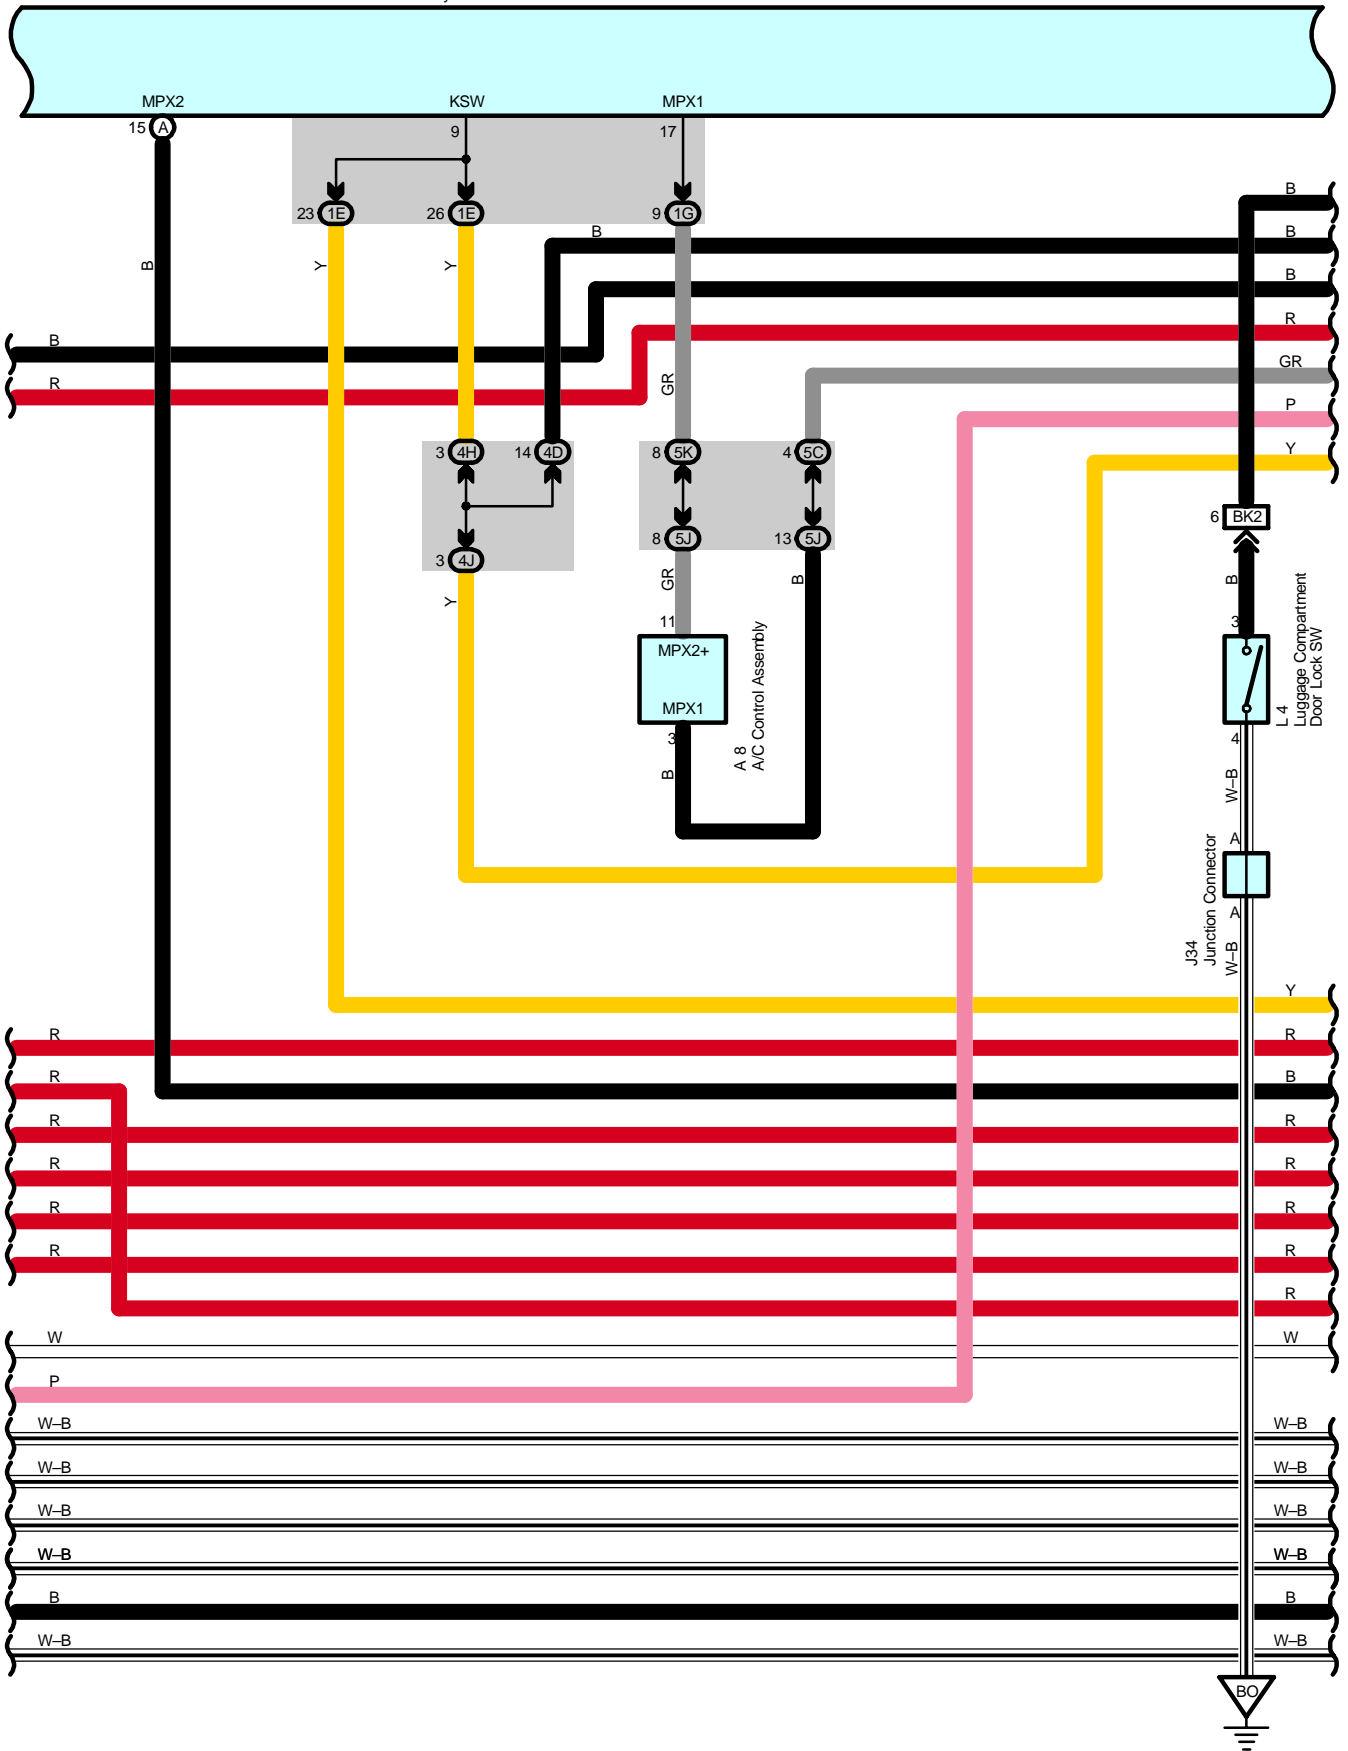

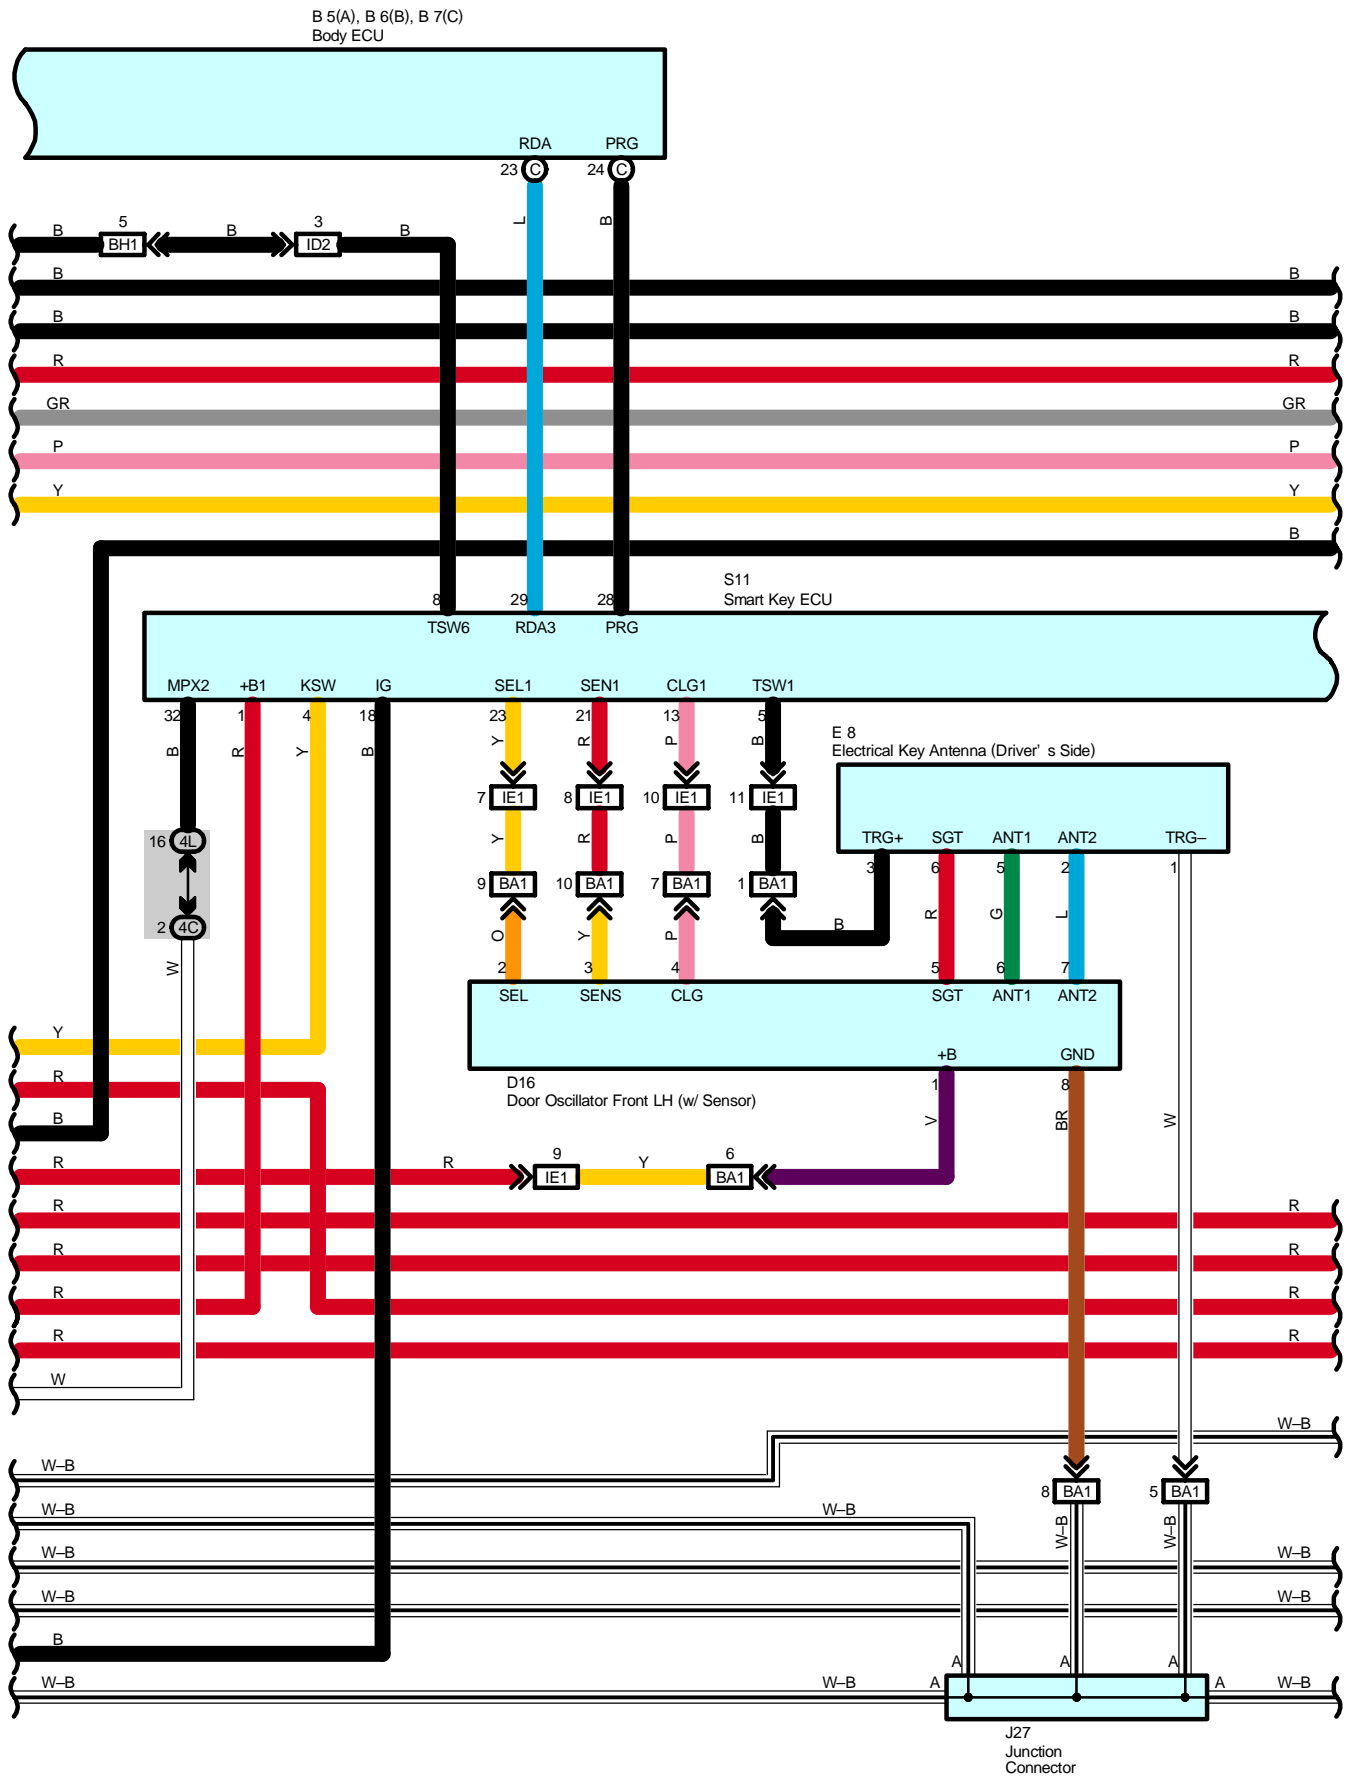



# Smart Entry System and Wireless Door Lock Control

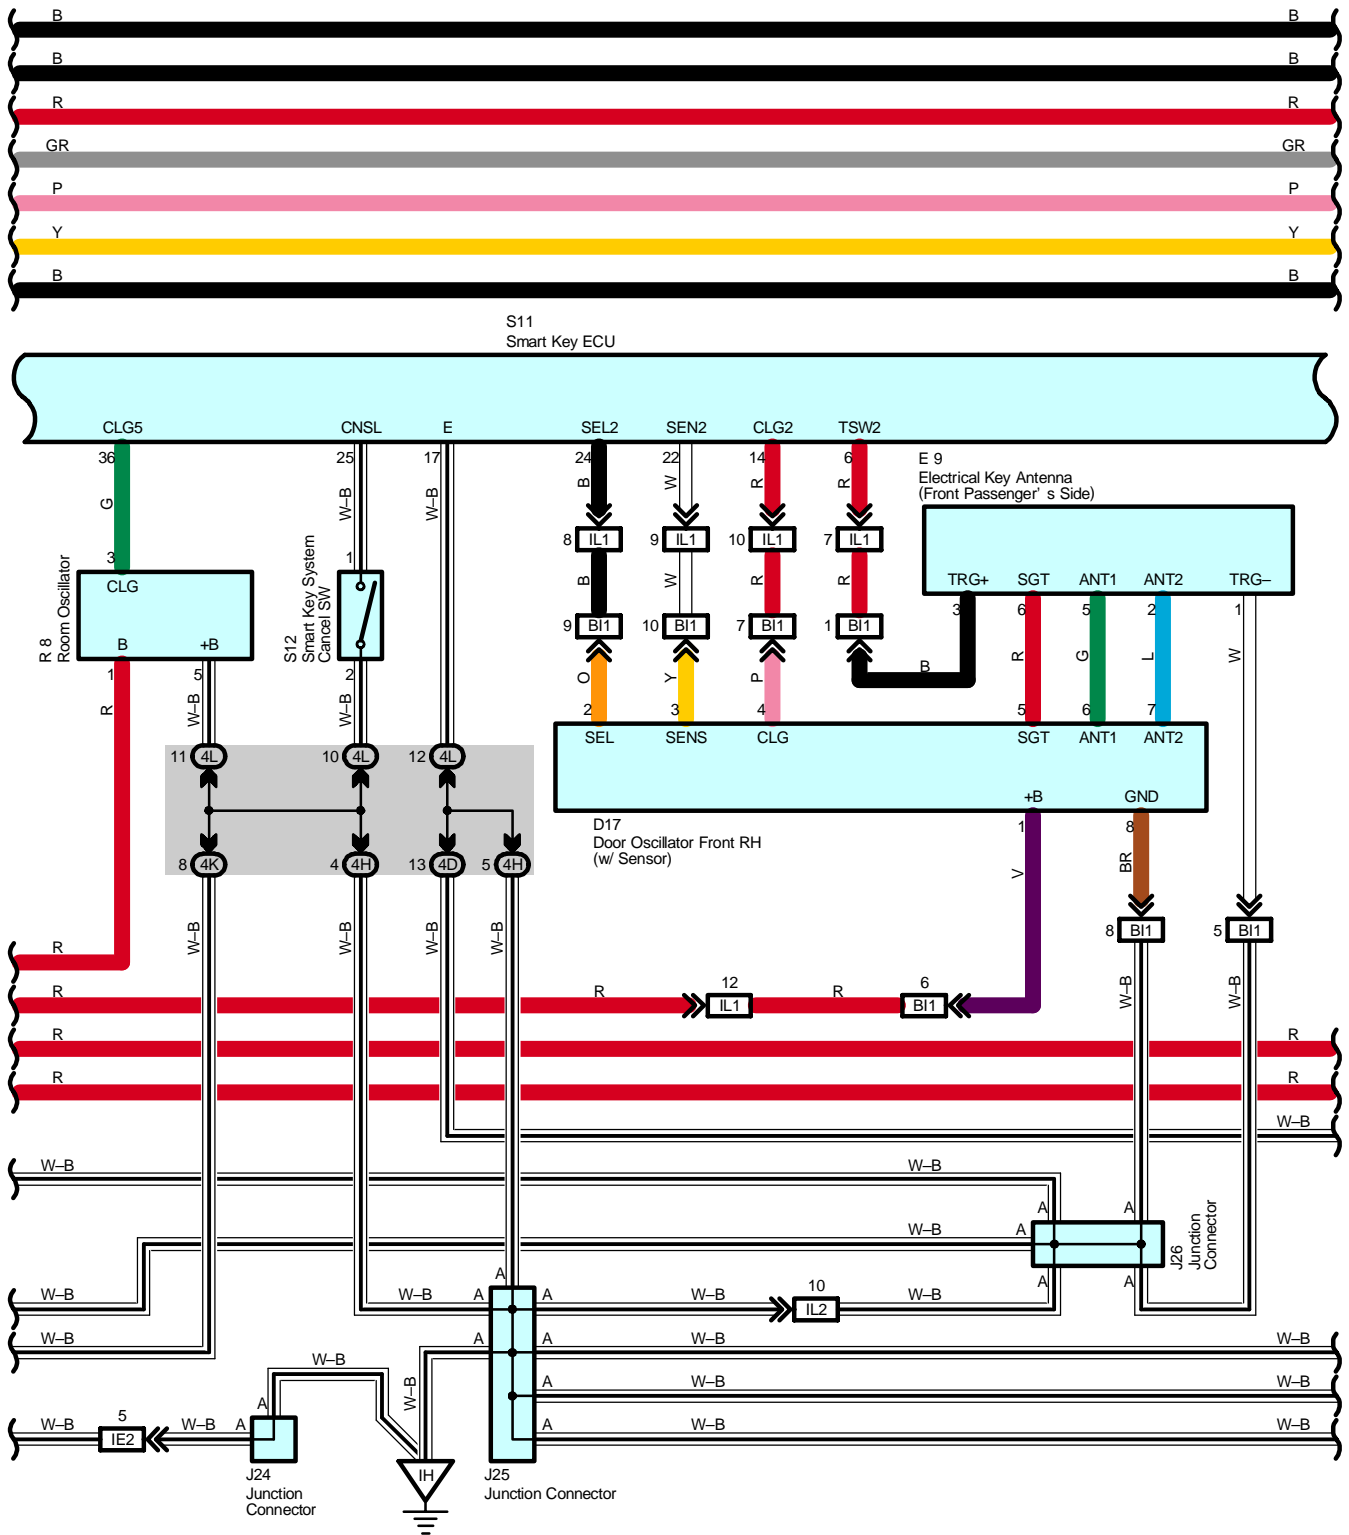

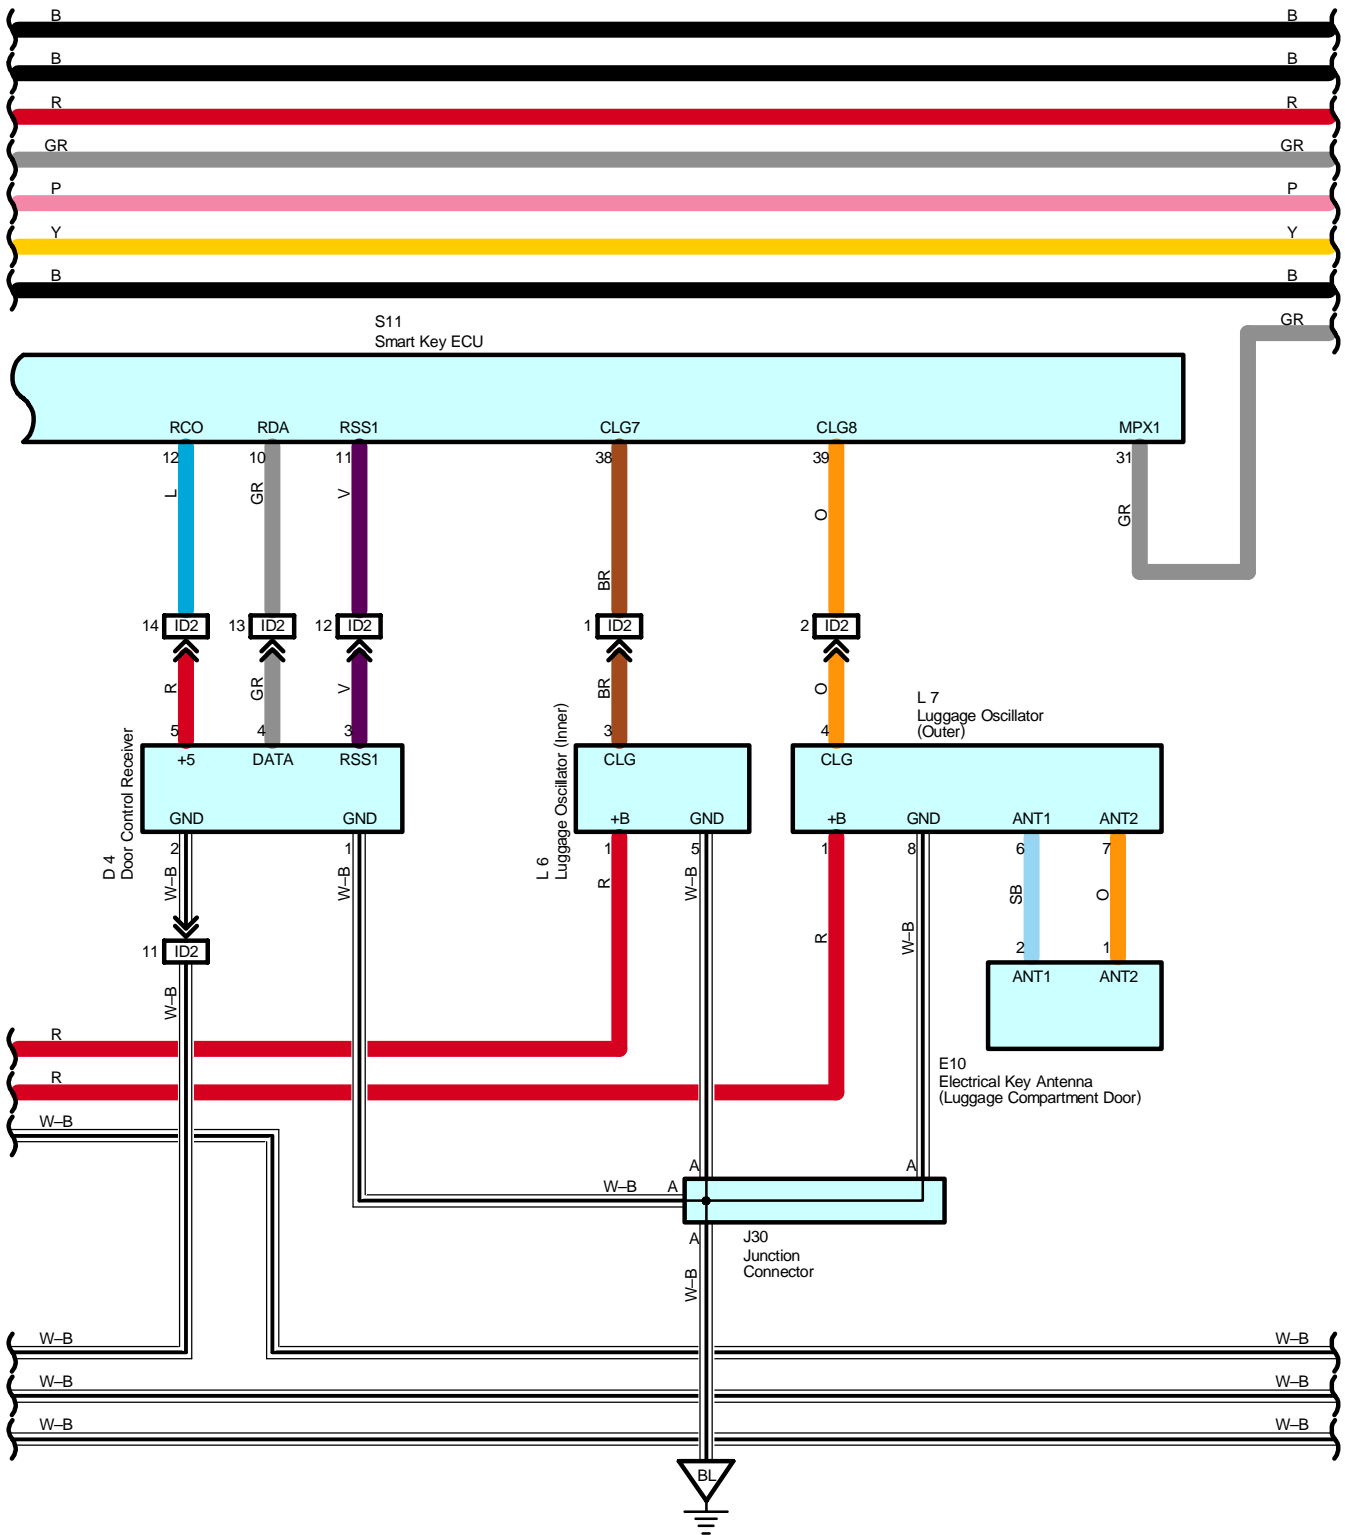


# Smart Entry System and Wireless Door Lock Control

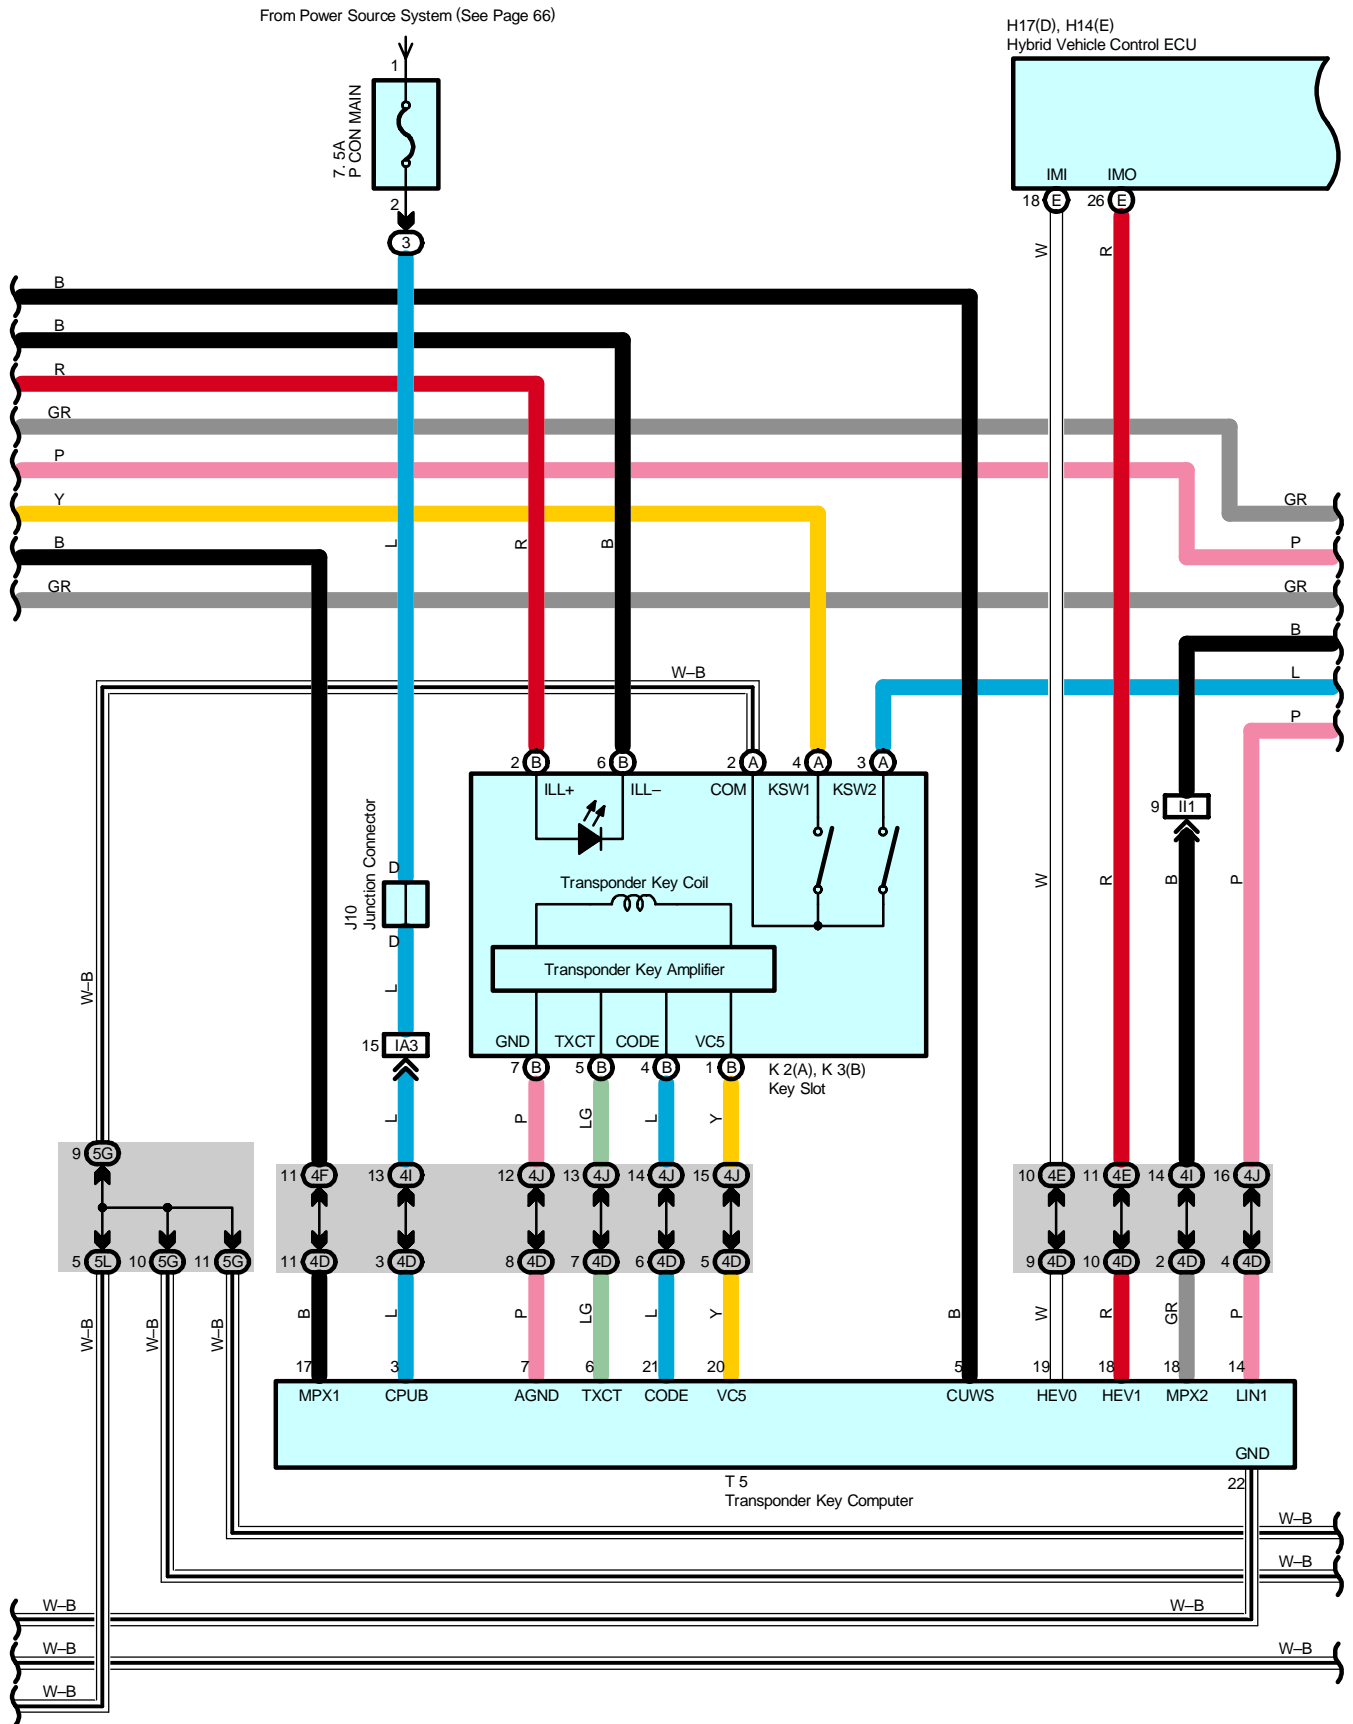

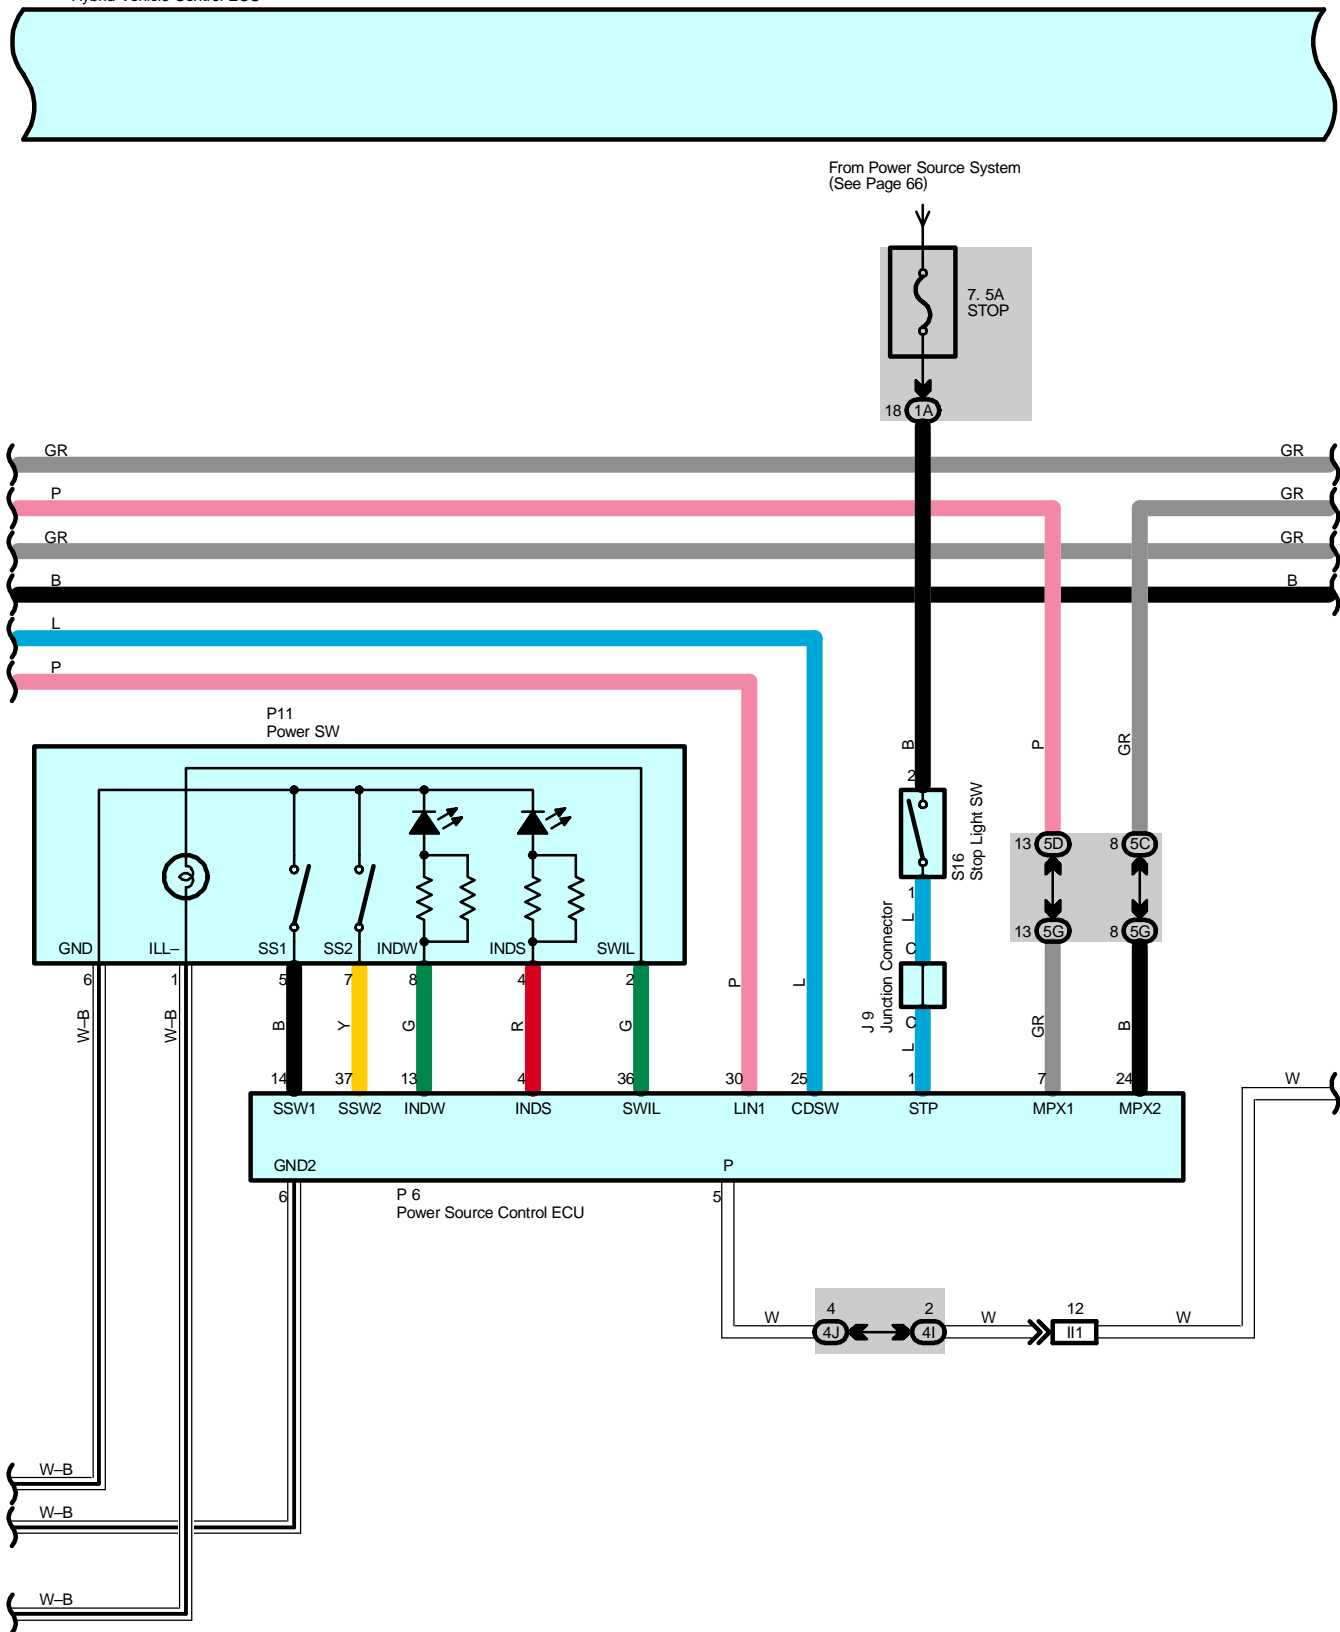



# Smart Entry System and Wireless Door Lock Control

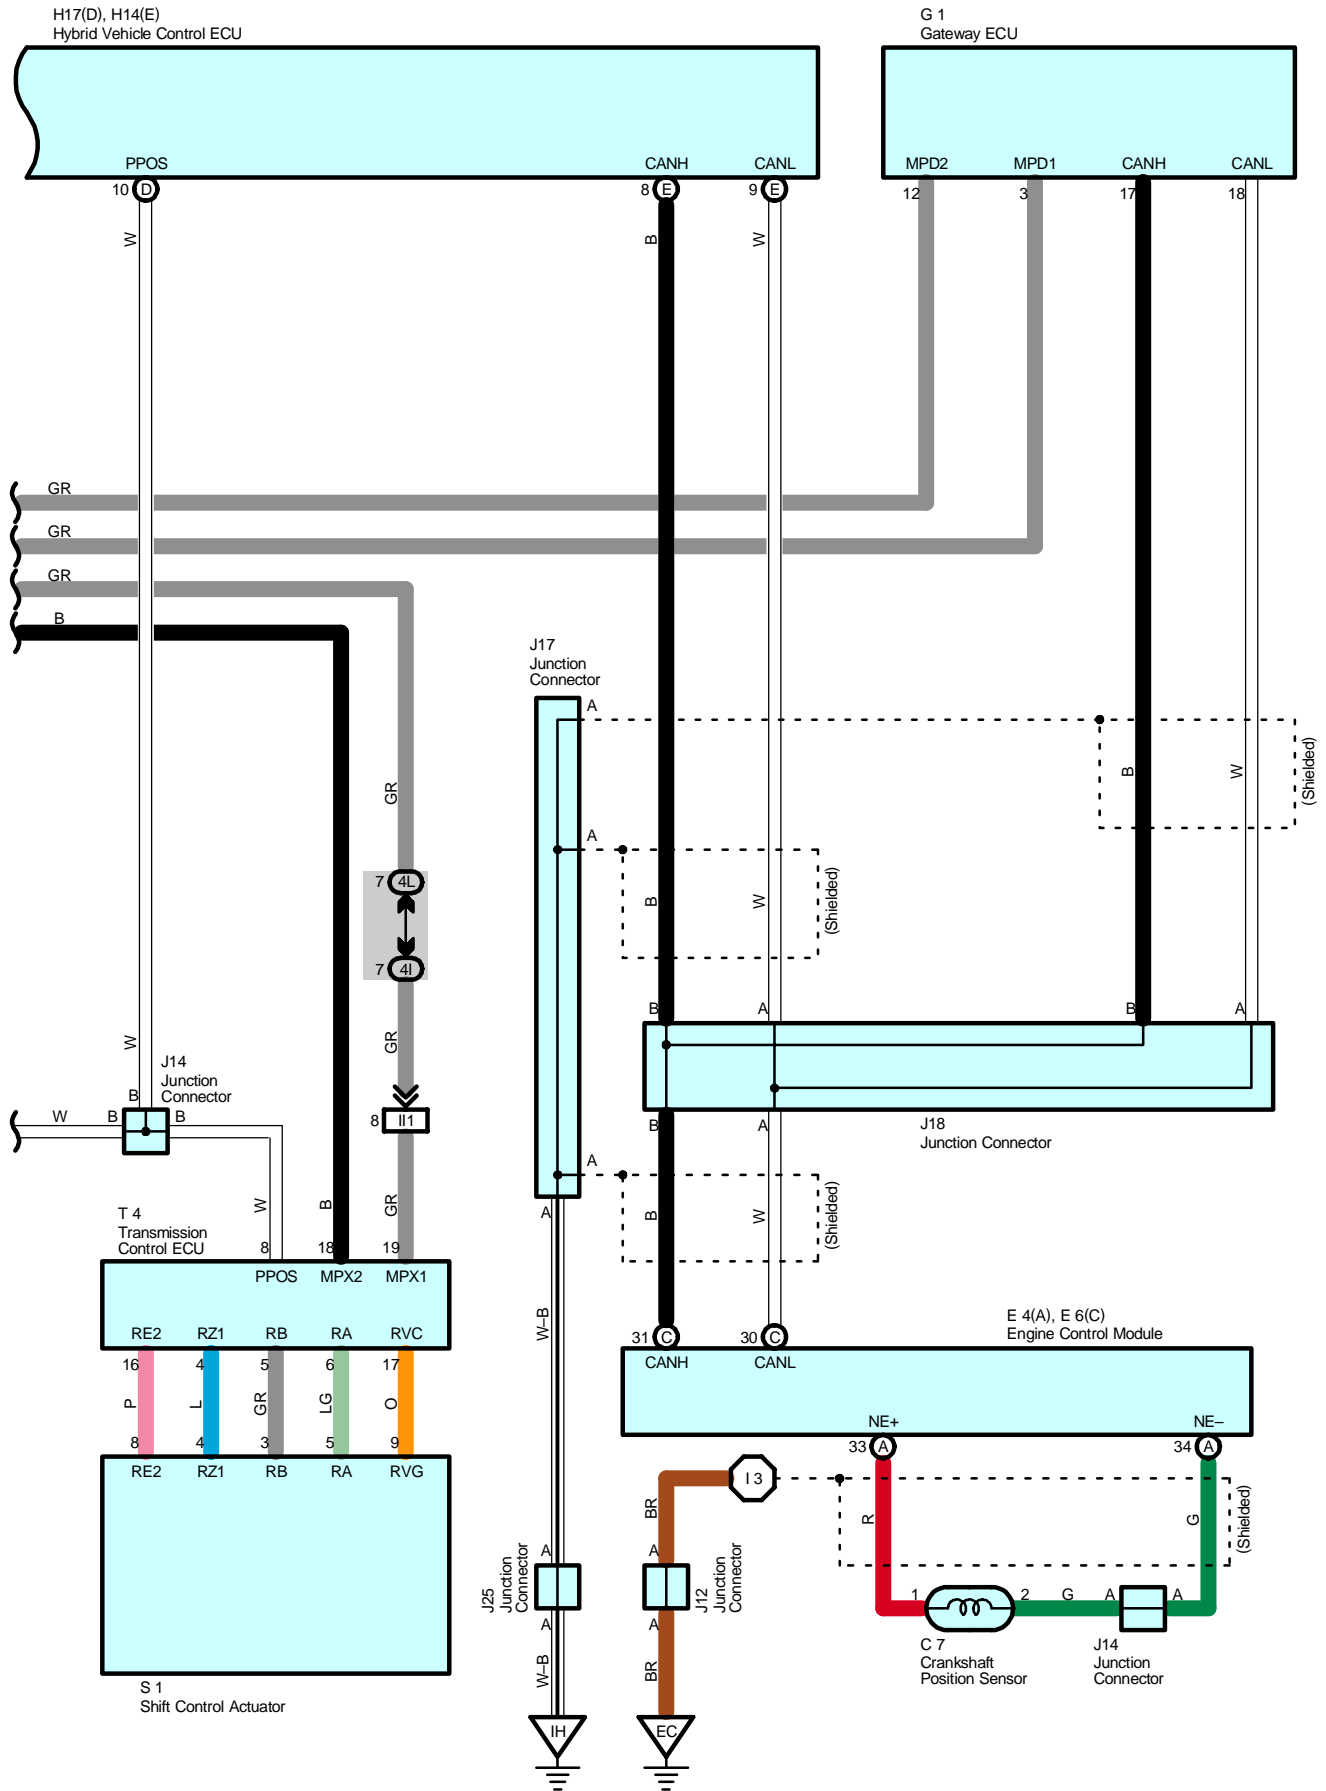

## System Outline

Smart entry system is a system to enable, without operating the key, to lock/unlock doors, to unlatch luggage compartment door, to start engine (Motor). It owes interactive communication function of electrical key, which makes the vehicle to recognize where the key is. All that driver has to do is to have the key with him or her. If the electrical key runs out of dry battery, the key operates as normal key without the smart key system.

### 1. Smart Door Unlock Function

When all the doors are locked, oscillator of each door sends signal regularly and forms detecting area outside of passenger room around 0.7 to 1m from each door handle. After forming the area, driver goes in the area with the electrical key, the key sends ID code signal. Smart key ECU receives the signal through electrical key antenna and identifies ID code. After identifying ID code, doors in the area get into unlock stand-by condition. At this time, sensors installed in door handles activate. Touching back of door handles unlocks the door locks, lights up hazard lamp and sounds wireless door lock buzzer (Except European vehicles). If any door is not opened within 30 seconds after unlocking the door lock, the doors lock again.

### 2. Smart Door Lock Function

If driver gets off the vehicle with the electrical key and pushes lock SW of door handles when all doors are locked, smart key ECU sends signal to inside and outside of passenger room to identify the electrical key. In case identification with inside of the passenger room is NG and that with outside of it is OK, doors lock. Door ajar alarm sounds to tell a door is not shut properly when lock SW of door handle is pushed with any door opened.

### 3. Smart Luggage Compartment Door Unlatch Function

If the driver stands in front of luggage compartment door with the electrical key and pushes unlock SW of luggage compartment door, ID code of the electrical key is identified with smart key ECU through luggage oscillator (Outer). After the ID code is identified, luggage compartment door is unlocked. To keep pushing luggage compartment door opener SW unlatches luggage compartment door.

### 4. Smart Ignition (READY) Function

When the driver pushes the power SW with the electrical key with him or her, ID code of the electrical key is identified with smart key ECU by room oscillator in passenger room. After the ID code is identified, hybrid vehicle immobilizer is released and electric power is set at ACC ON to enable to start engine. Then pushing the power SW sets power supply at IG ON and another pushing sets it at OFF. Condition circulates from ACC ON to/from IG ON to/from OFF and to ACC ON. The vehicle gets READY to drive when the driver pushes power SW with applying brake pedal at any power supply condition.

### 5. Smart Alarm Function

- \* If any door is opened and then shut with shift at P range and the power SW at other than OFF position, smart key ECU identifies ID code with inside of passenger room twice. In case the identification result is NG, buzzer in combination meter alarms (Once) and wireless door lock buzzer alarms (Three times), and smart warning light in combination meter lights up. If power supply is pushed OFF with power SW or identification of the electrical key with inside of passenger room is confirmed at the second time, the warning stops.
- \* If all the doors are closed with shift at P range and power SW at other than OFF position, pushing lock SW of door handle starts smart key ECU to identify ID code with inside and outside of passenger room. In case result of identification with inside is NG and that with outside is confirmed, wireless door lock buzzer alarms (For two seconds) and doors do not lock.
- \* If driver's side door is opened and then shut with shift at other than P range and power SW at other than OFF position, smart key ECU identifies ID code with inside of passenger room twice. In case the identification result is NG, buzzer in combination meter and wireless door lock buzzer alarm continuously as well as smart warning light in combination meter lights up. Then, if shift is put into P range or the identification with inside is confirmed at the second time, the continuous alarming stops. If the driver turns electric power OFF with power SW or the identification with inside is confirmed at the second time, smart warning light goes off.
- \* If other doors than driver's side door is opened and then shut with shift at other than P range and power SW at other than OFF position, smart key ECU identifies ID code with inside of passenger room twice. In case the identification result is NG, buzzer in combination meter alarms (Once) and wireless door lock buzzer alarms (Three times), and smart warning light in combination meter lights up. If power supply is pushed OFF with power SW or identification with inside of passenger room is confirmed at the second time, the warning stops.
- \* If lock SW of door handle is pushed with all the doors shut and power SW at OFF position, smart key ECU identifies ID code with inside of passenger room twice. In case the identification is confirmed then, wireless door lock buzzer alarms (For two seconds) but doors do not lock.
- \* If power supply is turned OFF with power SW after "READY to drive" condition are kept for about 20 minutes, smart key ECU identifies ID code of the electrical key with inside of passenger room. In case the ECU recognizes code of battery voltage decrease, buzzer in combination meter alarms once.
- \* If power SW is pushed ON, smart key ECU identifies ID code with inside of passenger room twice. In case the identification result is NG, buzzer in combination meter alarms once and smart warning light lights up for about five seconds. Then, driver's operation of power SW is cancelled.

# Smart Entry System and Wireless Door Lock Control

## 6. Smart Door Unlock Mode Change Function

If lock button and PANIC button of electrical key are pushed simultaneously for about five seconds with power SW at off position and electrical key not in key holder, smart door unlock mode changes to all door unlock mode or to each door unlock mode (At front passenger door, it changes only to all door unlock condition). The unlock modes circulate. Wireless door lock buzzer and buzzer in combination meter sound to inform mode change.

## 7. Power Saving Function for Battery

In case the electrical key does not send signal for five days or longer, interval between identification time is extended from about 300 ms to 600 ms.

In case the electrical key does not send signal for 14 days or longer, or the key is in detected area outside of vehicle for ten minutes or longer, smart function stops its operation. Smart function resumes under following conditions.

- \* When lock and unlock signal of wireless function of the key is input and its ID code is identified.
- \* When doors are locked with lock SW ON.
- \* When doors are locked or unlocked with door key SW operation.

## 8. Manual Operation Function

Electrical key has lock, unlock, and PANIC buttons. It can operate wireless door locking manually. Its operation is the same as one without smart key system.

## 9. Smart Illumination Function

When driver goes in detected area outside of passenger room with electrical key with him or her and its ID code is identified, interior light, overhead J/B, power SW and key slot light up for about 15 seconds by timer.

## 10. Smart Entry System Cancelled

Smart key system is cancelled under following conditions.

- \* When smart key system cancel SW is turned on.
- \* When electrical key is inserted in key slot.
- \* When battery of electrical key is dead.

### Service Hints

#### S11 Smart Key ECU

- 1-Ground : Always approx. 12 volts
- 18-Ground : Approx. 12 volts with the power SW at IG ON position
- 17-Ground : Always continuity
- 25-Ground : Continuity with the smart key system cancel SW at ON position

**○ : Parts Location**

Code	See Page	Code	See Page	Code	See Page
A8	46	H14   E	47	K2   A	48
B5   A	46	H17   D	47	K3   B	48
B6   B	46	I18	51	L3	51
B7   C	46	J6	48	L4	51
C7	44	J7   A	48	L6	51
C10	47	J8   B	48	L7	51
D1	47	J9	48	O3	52
D4	50	J10	48	P6	49
D7	50	J12	48	P11	49
D8	50	J14	48	P17	52
D9	50	J17	48	R8	49
D10	50	J18	48	S1	45
D11	50	J22	48	S7   A	49
D12	50	J23	48	S8   B	49
D13	50	J24	48	S9   C	49
D14	50	J25	48	S10   D	49
D15	50	J26	51	S11	49
D16	50	J27	51	S12	49
D17	50	J28	51	S16	49
E4   A	47	J29	51	T1	45
E6   C	47	J30	51	T4	49
E8	51	J31	51	T5	49
E9	51	J32	51	W6	45
E10	51	J33	51		
G1	47	J34	51		

**○ : Relay Blocks**

Code	See Page	Relay Blocks (Relay Block Location)
3	22	Engine Room R/B (Engine Compartment Left)

# Smart Entry System and Wireless Door Lock Control

## : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1B		
1D	28	Floor Wire and Driver Side J/B (Lower Finish Panel)
1E	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1F		
1G		
1H		
1L		
1M		
1O	28	Roof Wire and Driver Side J/B (Lower Finish Panel)
3B	22	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
3D		
3J		
4C	36	Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4D		
4E		
4F		
4G		
4H		
4I		
4J		
4K		
4L		
5C	40	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5D		
5G		
5H		
5I		
5J		
5K		
5L		
5M		

 : **Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	56	Engine Room Main Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)
IA3		
IB1	56	Roof Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)
ID2	56	Instrument Panel Wire and Floor Wire (Left Kick Panel)
ID3		
ID4		
IE1	56	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IE2		
IE3		
IG1	58	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the Combination Meter)
IG2		
II1	58	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
IJ3	58	Engine Room Main Wire and Instrument Panel Wire (Behind the Glove Box)
IL1	58	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IL2		
IM1	58	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
IM2		
BA1	60	Front Door LH Wire and Electrical Key LH Wire (Near the Front Door Outside Handle LH)
BB1	60	Rear Door No.2 Wire and Floor Wire (Left Center Pillar)
BH1	62	Back Door No.1 Wire and Floor Wire (Rear Side of Roof Panel)
BI1	62	Front Door RH Wire and Electrical Key RH Wire (Near the Front Door Outside Handle RH)
BJ1	62	Rear Door No.1 Wire and Floor No.2 Wire (Right Center Pillar)
BK2	62	Back Door No.1 Wire and Back Door No.2 Wire (Rear Side of Roof Panel)


 : **Ground Points**

Code	See Page	Ground Points Location
EC	54	Engine Block
EE	54	Left Side of the Suspension Tower
IH	56	Cowl Side Panel LH
II	56	Instrument Panel Brace LH
BL	60	Rear Side of Left Quarter Panel
BO	60	Center of the Back Door Panel
BQ	60	Rear Side of Right Quarter Panel

 : **Splice Points**


Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I3	58	Engine Wire			

# Wireless Door Lock Control without Smart Entry System

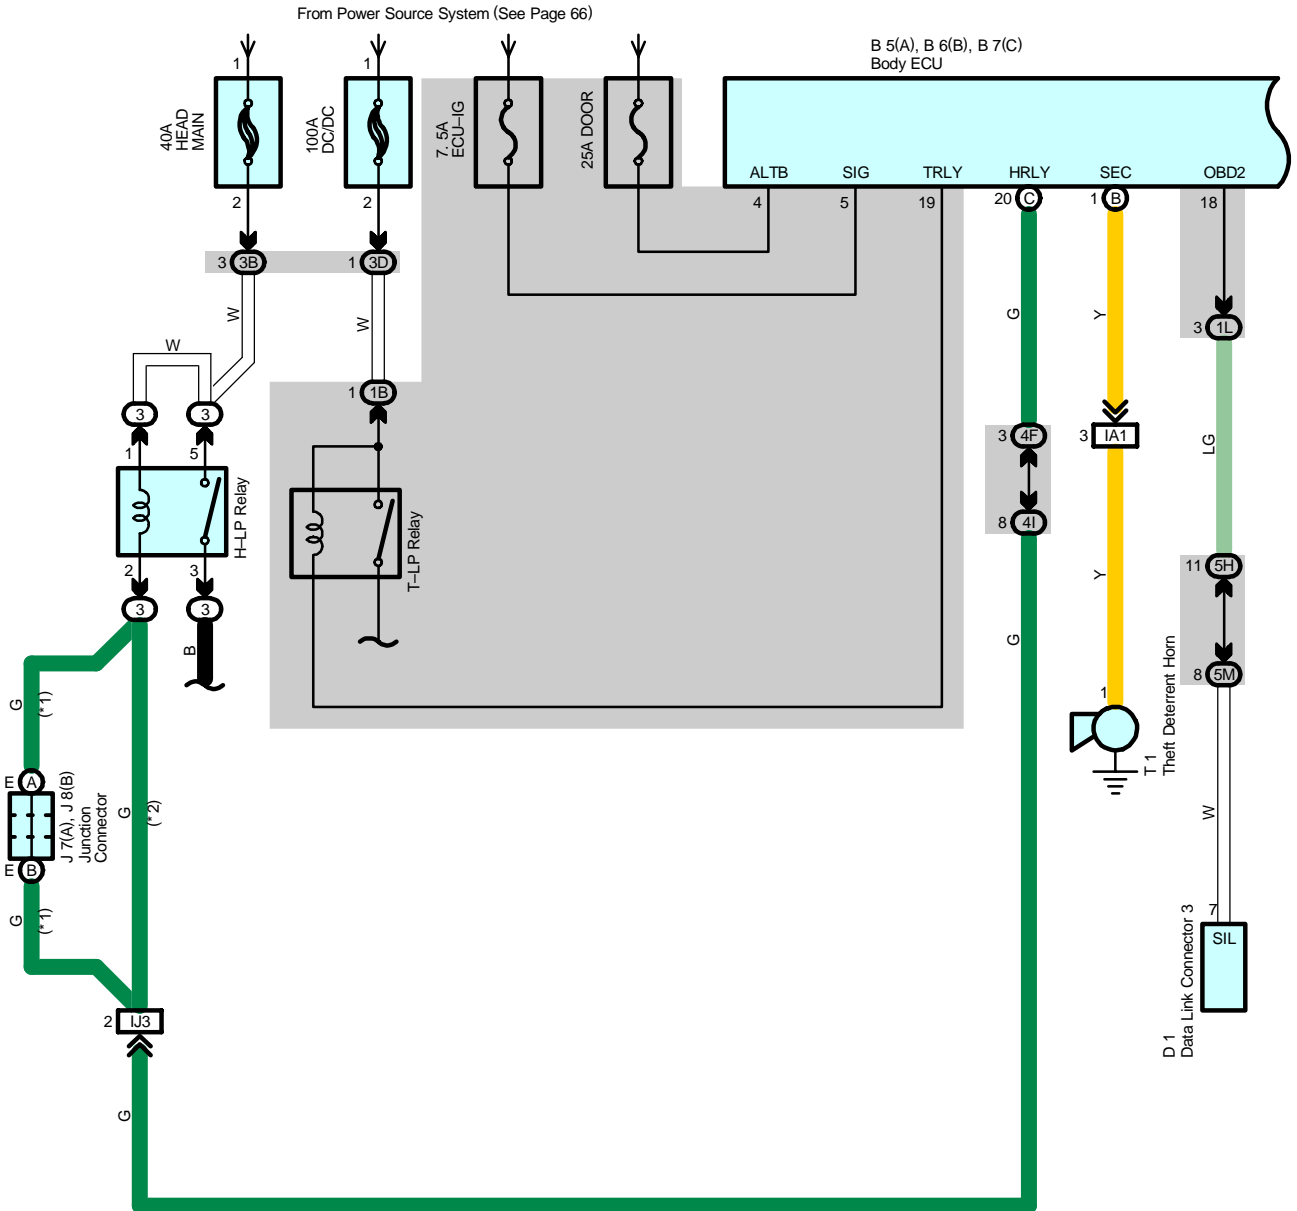


\* 1 : w/ HID  
 \* 2 : w/o HID

B 5(A), B 6(B), B 7(C)  
Body ECU

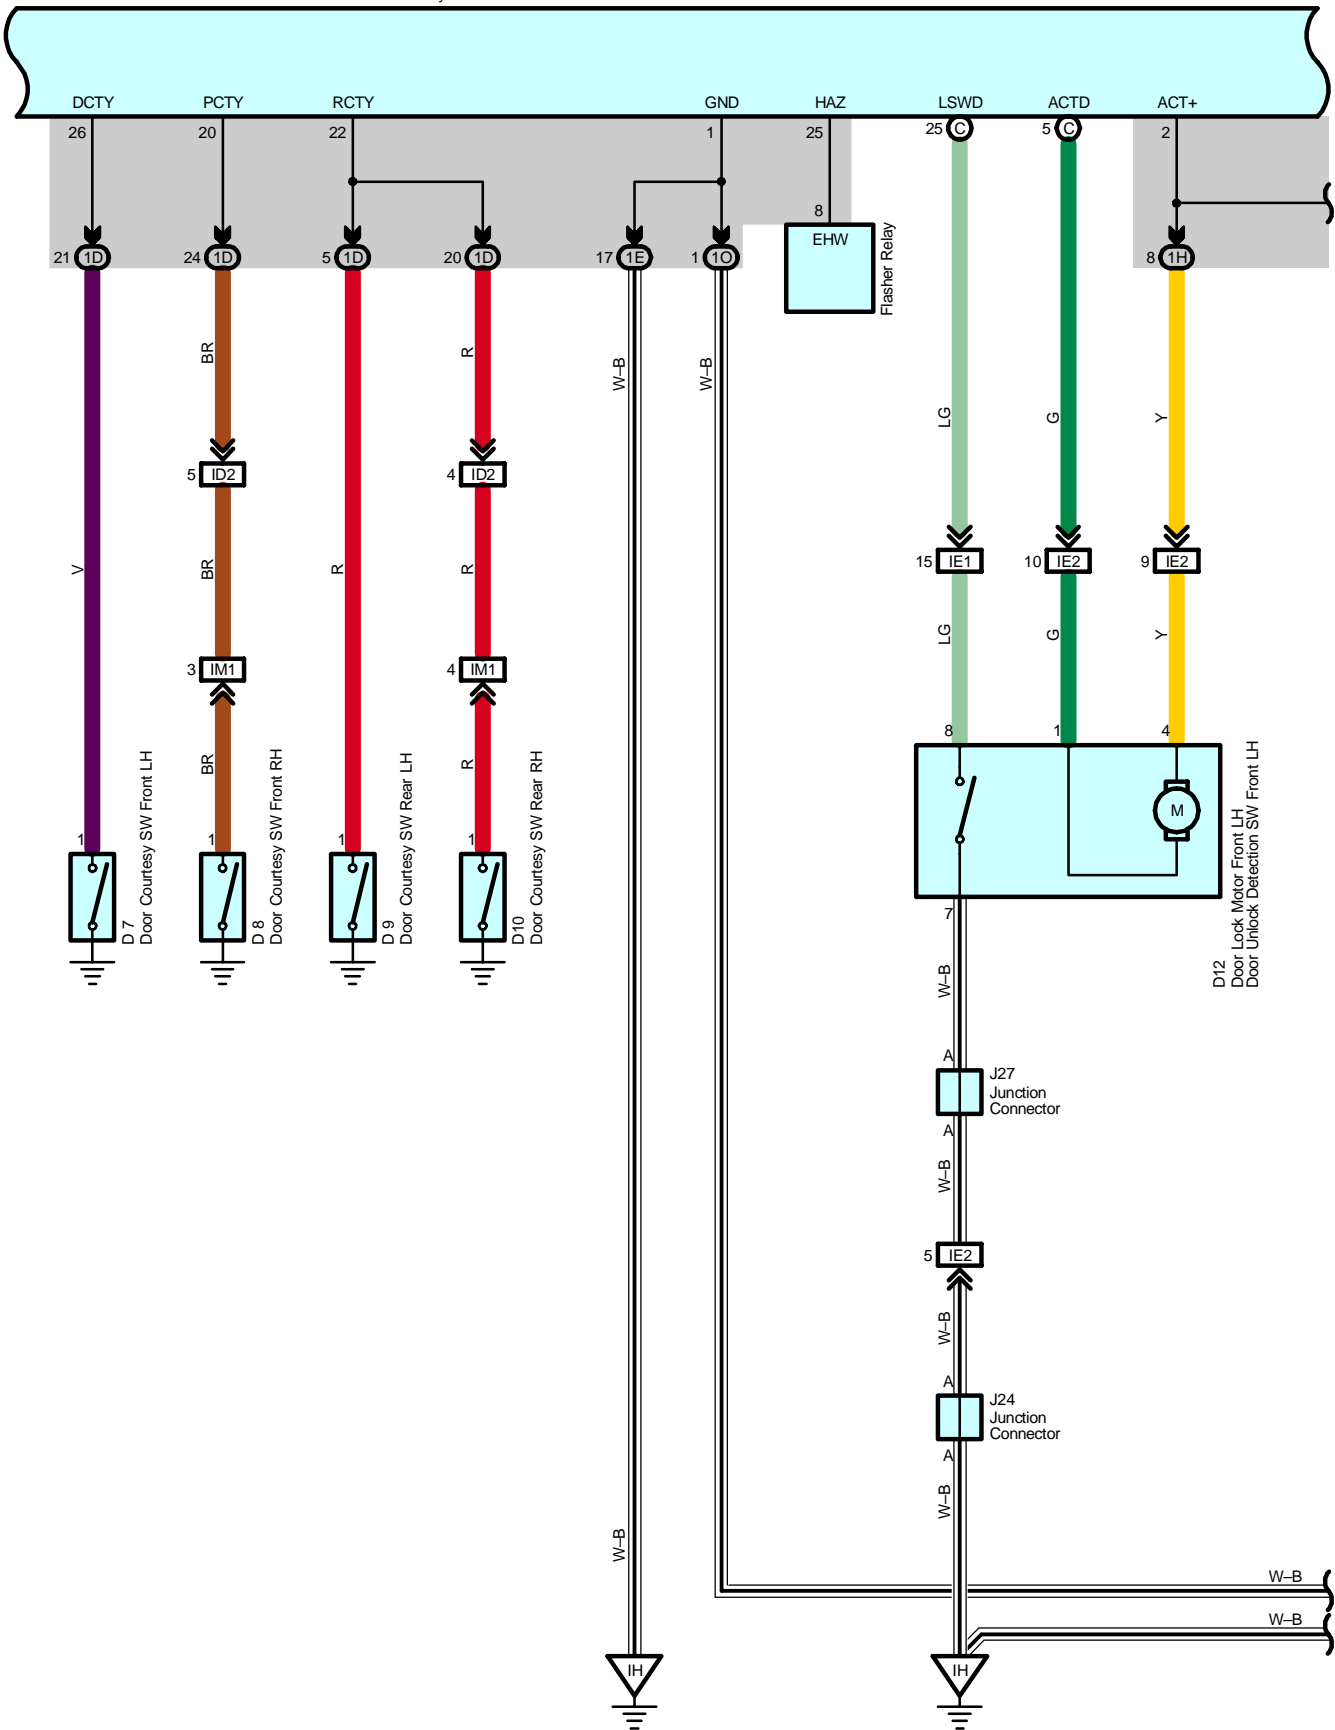




# Wireless Door Lock Control without Smart Entry System

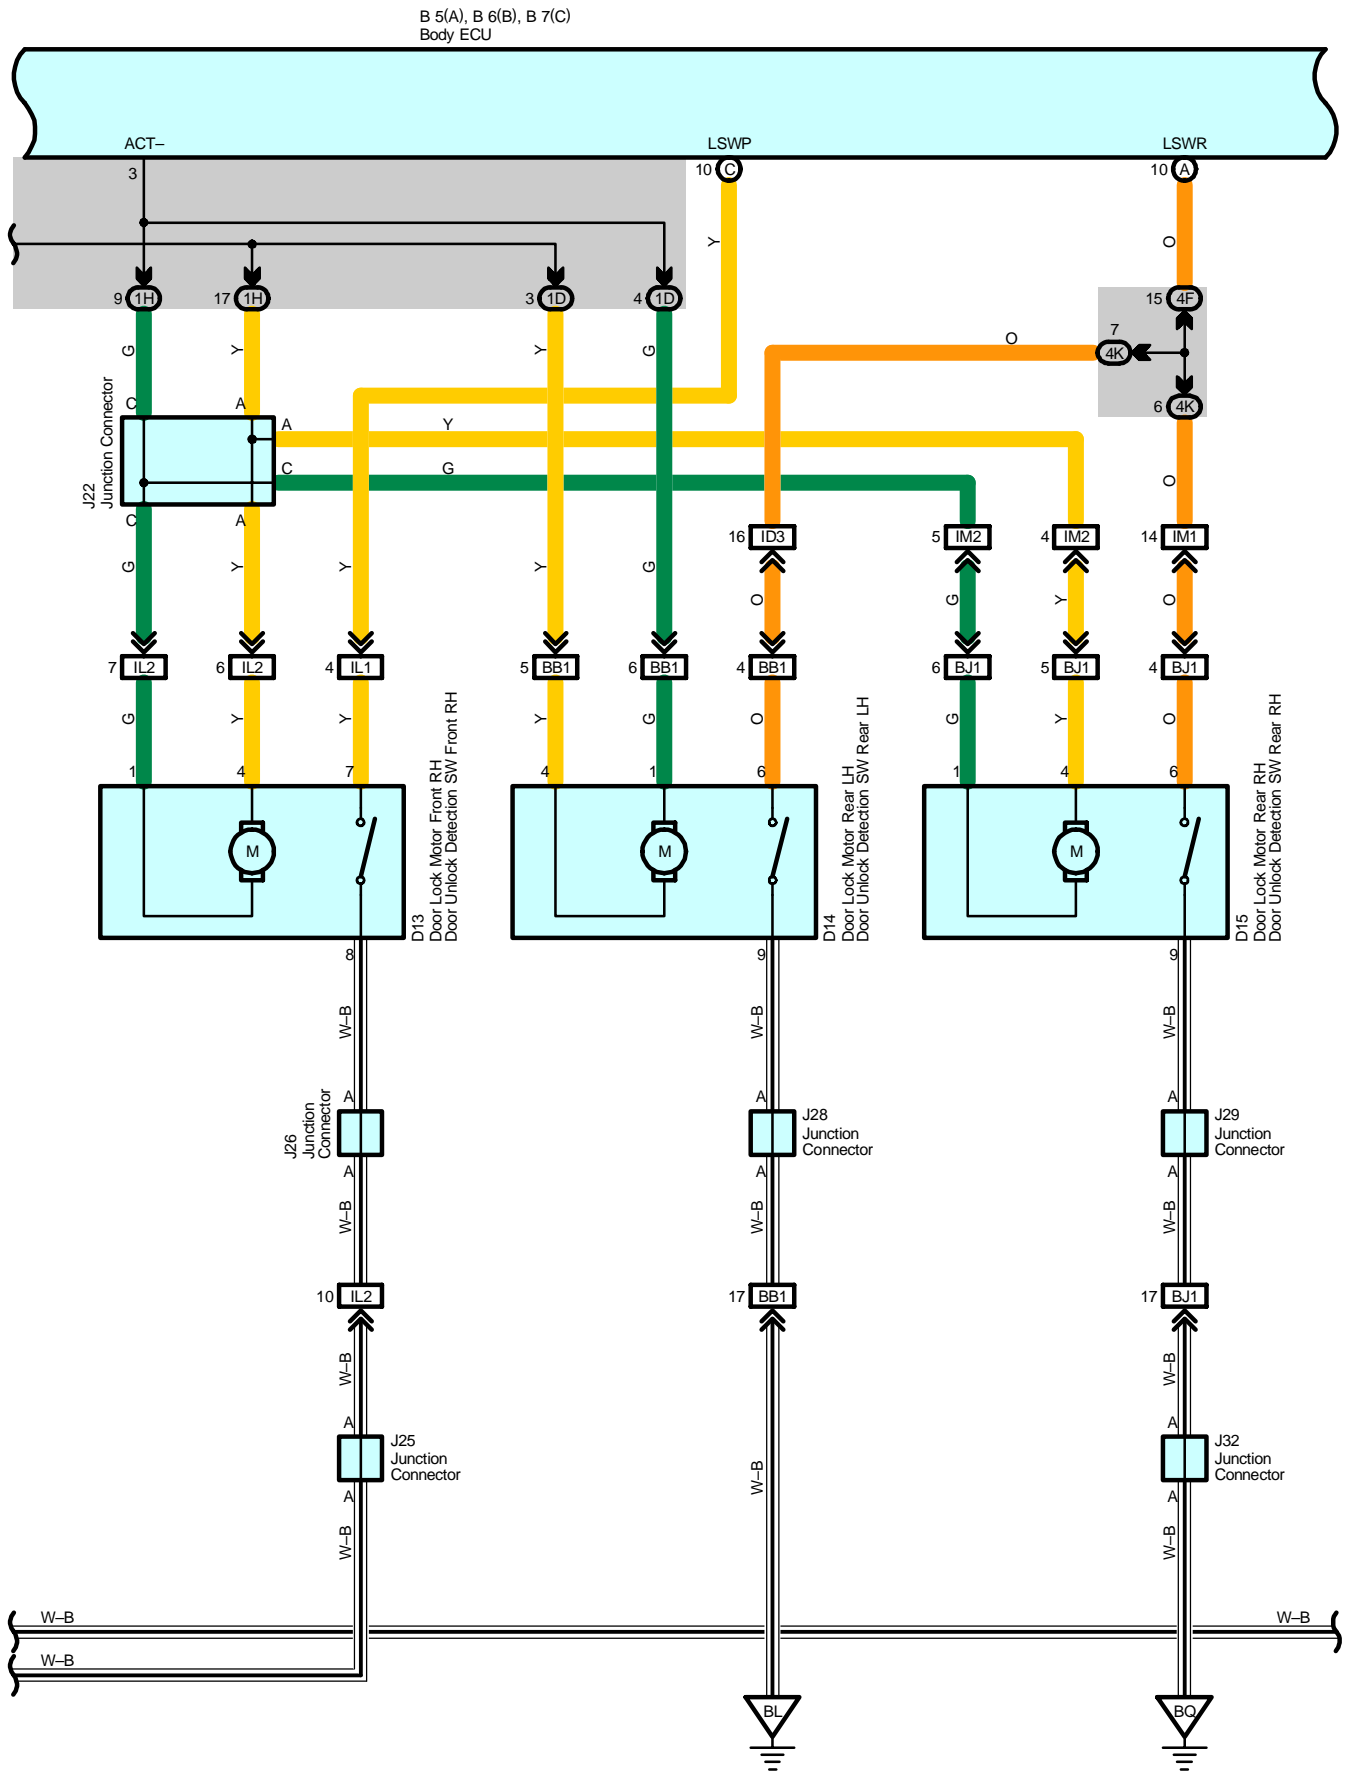


B 5(A), B 6(B), B 7(C)  
Body ECU

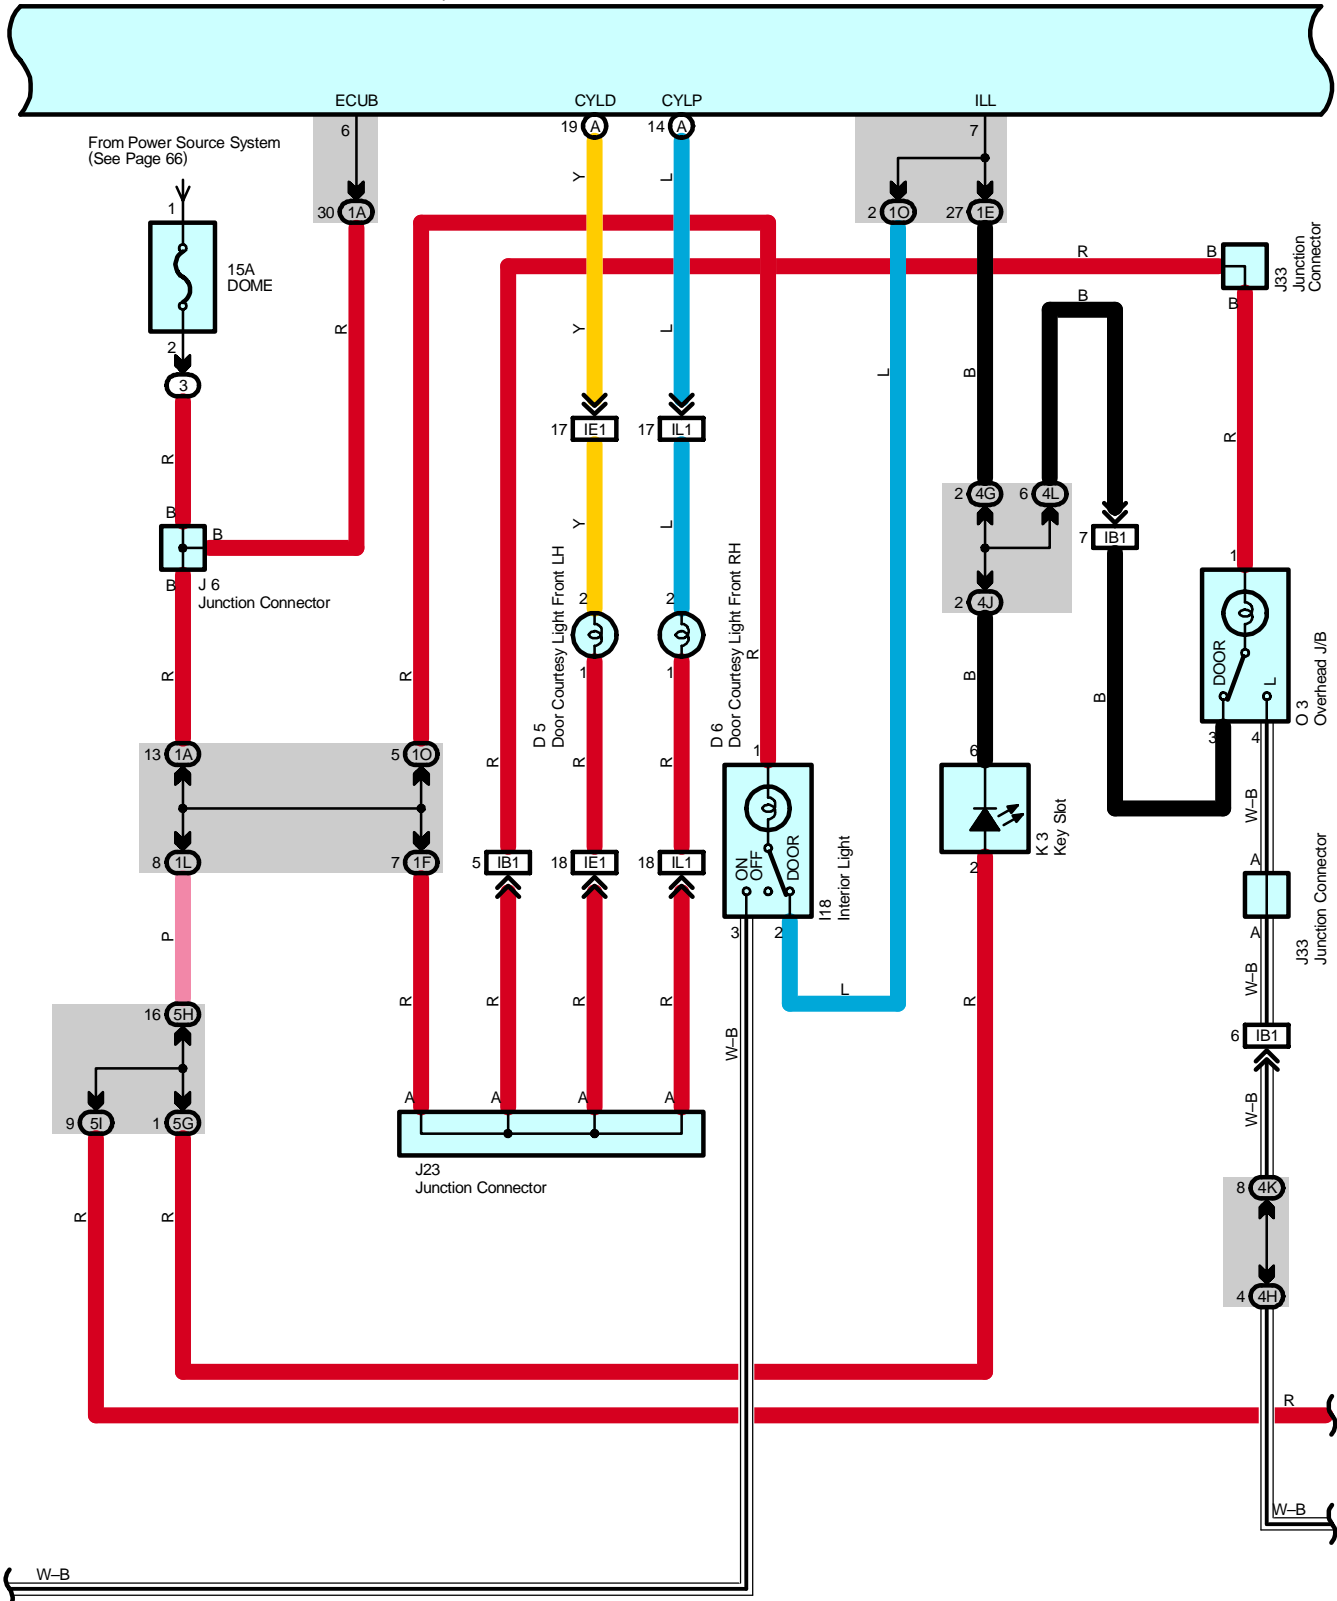

# Wireless Door Lock Control without Smart Entry System

B 5(A), B 6(B), B 7(C)  
Body ECU

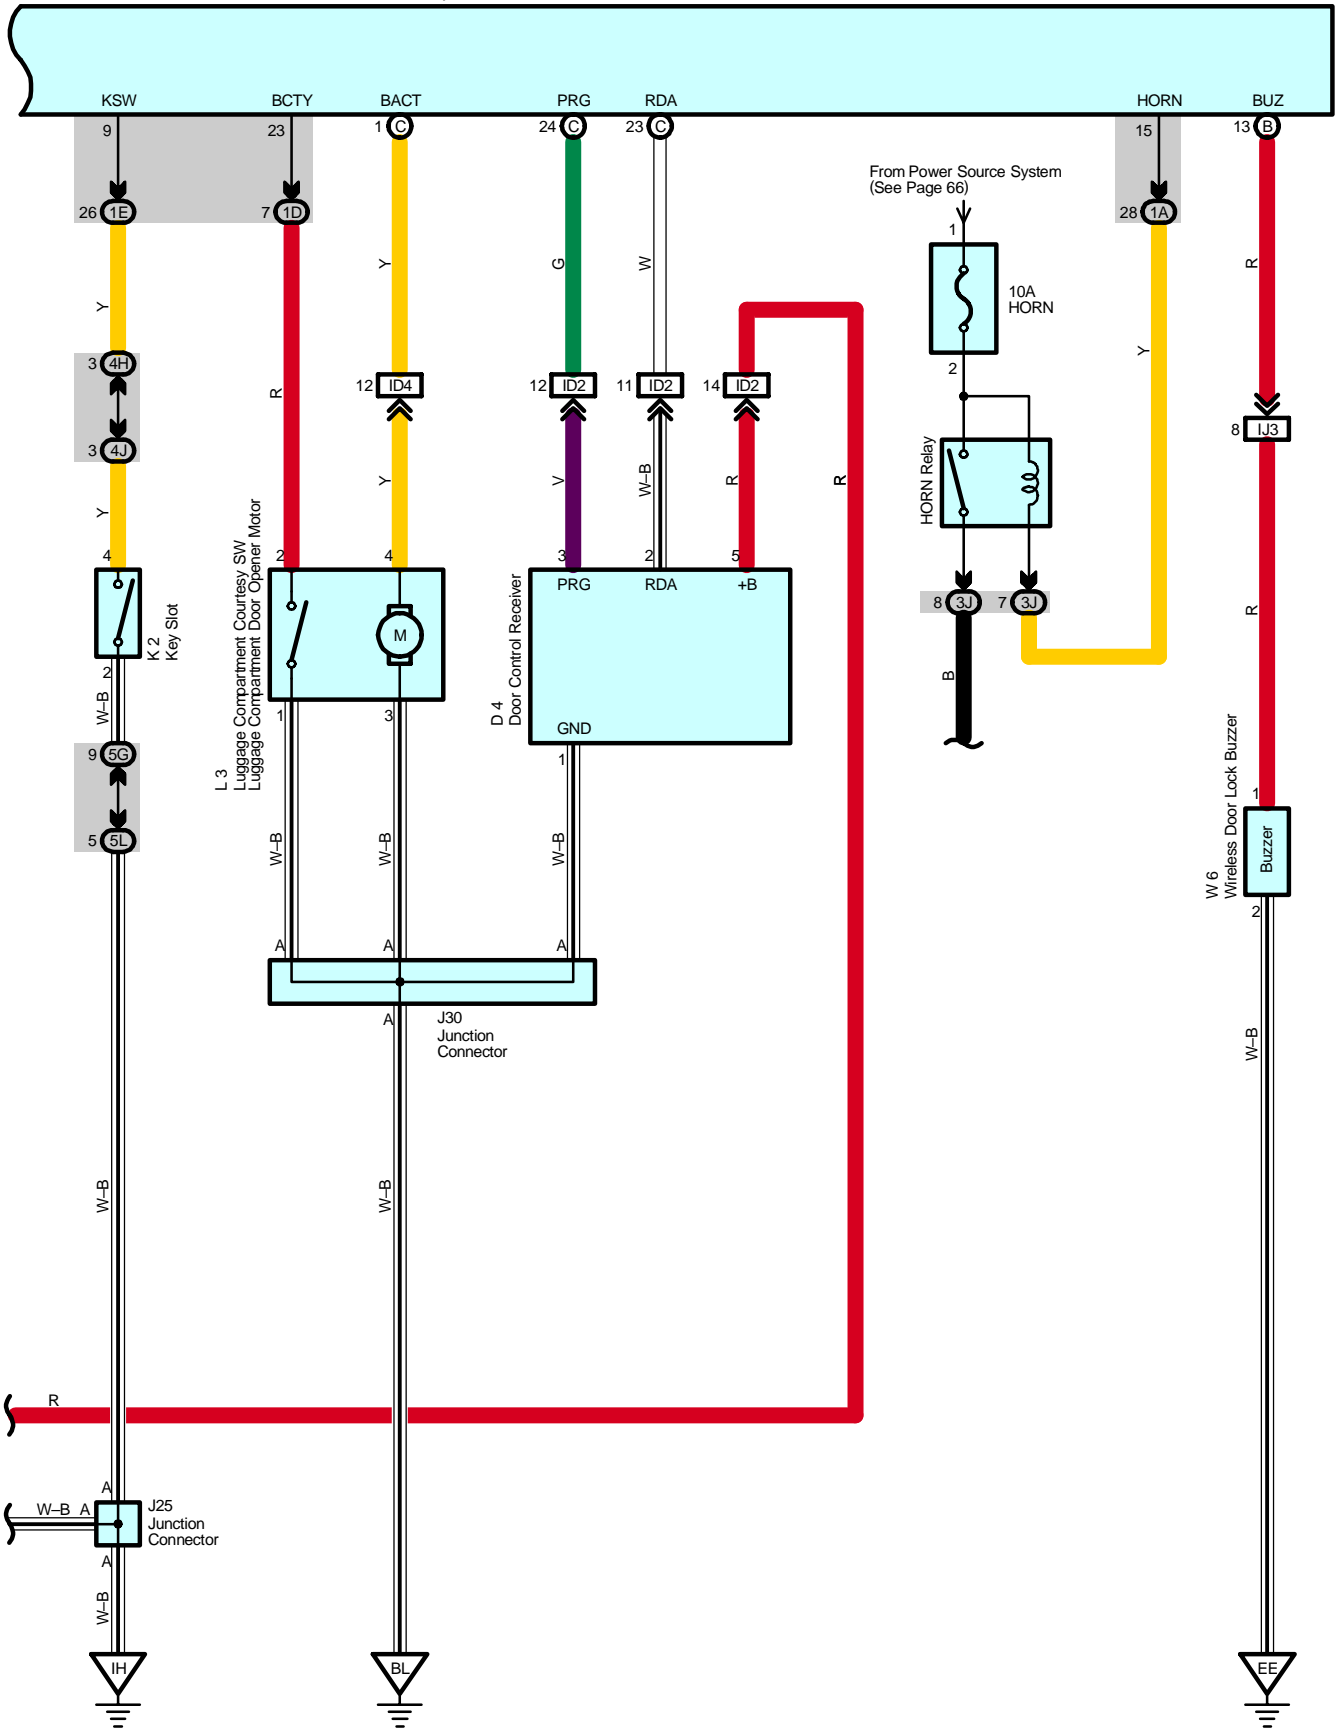

## System Outline

Door lock control (Lock and unlock) and panic control (Theft alarm and flash) is performed by remote control, without the key inserted in the door key cylinder, using low-power electrical waves emitted from a transmitter.

### 1. Normal Operation

\* Lock operation

When the lock SW on the transmitter is pressed, all the doors will lock.

\* Unlock operation

When the unlock SW on the transmitter is pressed once, only the driver door will unlock. When the unlock SW is pressed again within 3 seconds, all the doors will unlock.

### 2. Auto Lock Function

When the door is not actually opened within 30 seconds after the door has been unlocked by the unlock SW on the transmitter, all the doors will automatically lock. If any one of the following conditions is detected, the wireless door lock does not function.

\* Any door is opened.

\* The electrical key is inserted in the key slot.

\* Power SW is on

### 3. Wireless Door Lock Stop Function

If any one of the following conditions is detected, the wireless door lock does not function.

Lock operation

\* When any door is open (Door courtesy SW on)

\* The electrical key is inserted in the key slot (Unlock warning SW on)

\* Power SW is on

Unlock operation

\* Power SW is on

\* The electrical key is inserted in the key slot

### 4. Visual Confirmation of Lock or Unlock

During lock operation, when the body ECU receives a lock signal from the door lock detection SW, the turn signal light flashes once. During unlock operation, when the body ECU receives an unlock signal from the door lock detection SW, the turn signal light flashes twice.

### 5. Remote Panic Operation

Panic will function when doors are locked or unlocked, open or closed. When the panic button (Transmitter) is pushed once, interior lights light up, and theft alarm and horn sounds and turn signal lights, headlights and taillights flash. Then, any one of the button (Transmitter) is pushed once again, interior lights turn off, sounding and flashing will stop. Panic will not function when power SW is on.

### 6. Repeat Function

If the lock detection signal is not received in response to the output signal after the body ECU has output the lock signal, the lock signal is output again.

### 7. Illuminated Entry Function

When the body ECU detects the unlock state after the unlock operation has been made, it lights up the key slot, overhead J/B, power SW and interior light for approx. 15 sec. If all the doors are locked during this operation, lighting is cancelled and the lights immediately fade out.

## Service Hints

### Body ECU

4, 6-Ground : Always approx. 12 volts

5-Ground : Approx. 12 volts with the power SW at IG ON position

1-Ground : Always continuity

### D4 Door Control Receiver

5-Ground : Always approx. 12 volts

1-Ground : Always continuity

# Wireless Door Lock Control without Smart Entry System

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
B5	A 46	D13	50	J27	51
B6	B 46	D14	50	J28	51
B7	C 46	D15	50	J29	51
D1	47	I18	51	J30	51
D4	50	J6	48	J32	51
D5	50	J7	A 48	J33	51
D6	50	J8	B 48	K2	48
D7	50	J22	48	K3	48
D8	50	J23	48	L3	51
D9	50	J24	48	O3	52
D10	50	J25	48	T1	45
D12	50	J26	51	W6	45

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	22	Engine Room R/B (Engine Compartment Left)

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1B		
1D	28	Floor Wire and Driver Side J/B (Lower Finish Panel)
1E	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1F		
1H		
1L		
1O	28	Roof Wire and Driver Side J/B (Lower Finish Panel)
3B	22	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
3D		
3J		
4F	36	Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4G		
4H		
4I		
4J		
4K		
4L		
5G	40	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5H		
5I		
5L		
5M		

 : Connector Joining Wire Harness and Wire Harness


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	56	Engine Room Main Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)
IB1	56	Roof Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)
ID2	56	Instrument Panel Wire and Floor Wire (Left Kick Panel)
ID3		
ID4		
IE1	56	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IE2		
IJ3	58	Engine Room Main Wire and Instrument Panel Wire (Behind the Glove Box)
IL1	58	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IL2		
IM1	58	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
IM2		
BB1	60	Rear Door No.2 Wire and Floor Wire (Left Center Pillar)
BJ1	62	Rear Door No.1 Wire and Floor No.2 Wire (Right Center Pillar)

 : Ground Points


Code	See Page	Ground Points Location
EE	54	Left Side of the Suspension Tower
IH	56	Cowl Side Panel LH
BL	60	Rear Side of Left Quarter Panel
BQ	60	Rear Side of Right Quarter Panel

# Luggage Compartment Door Opener

From Power Source System (See Page 66)

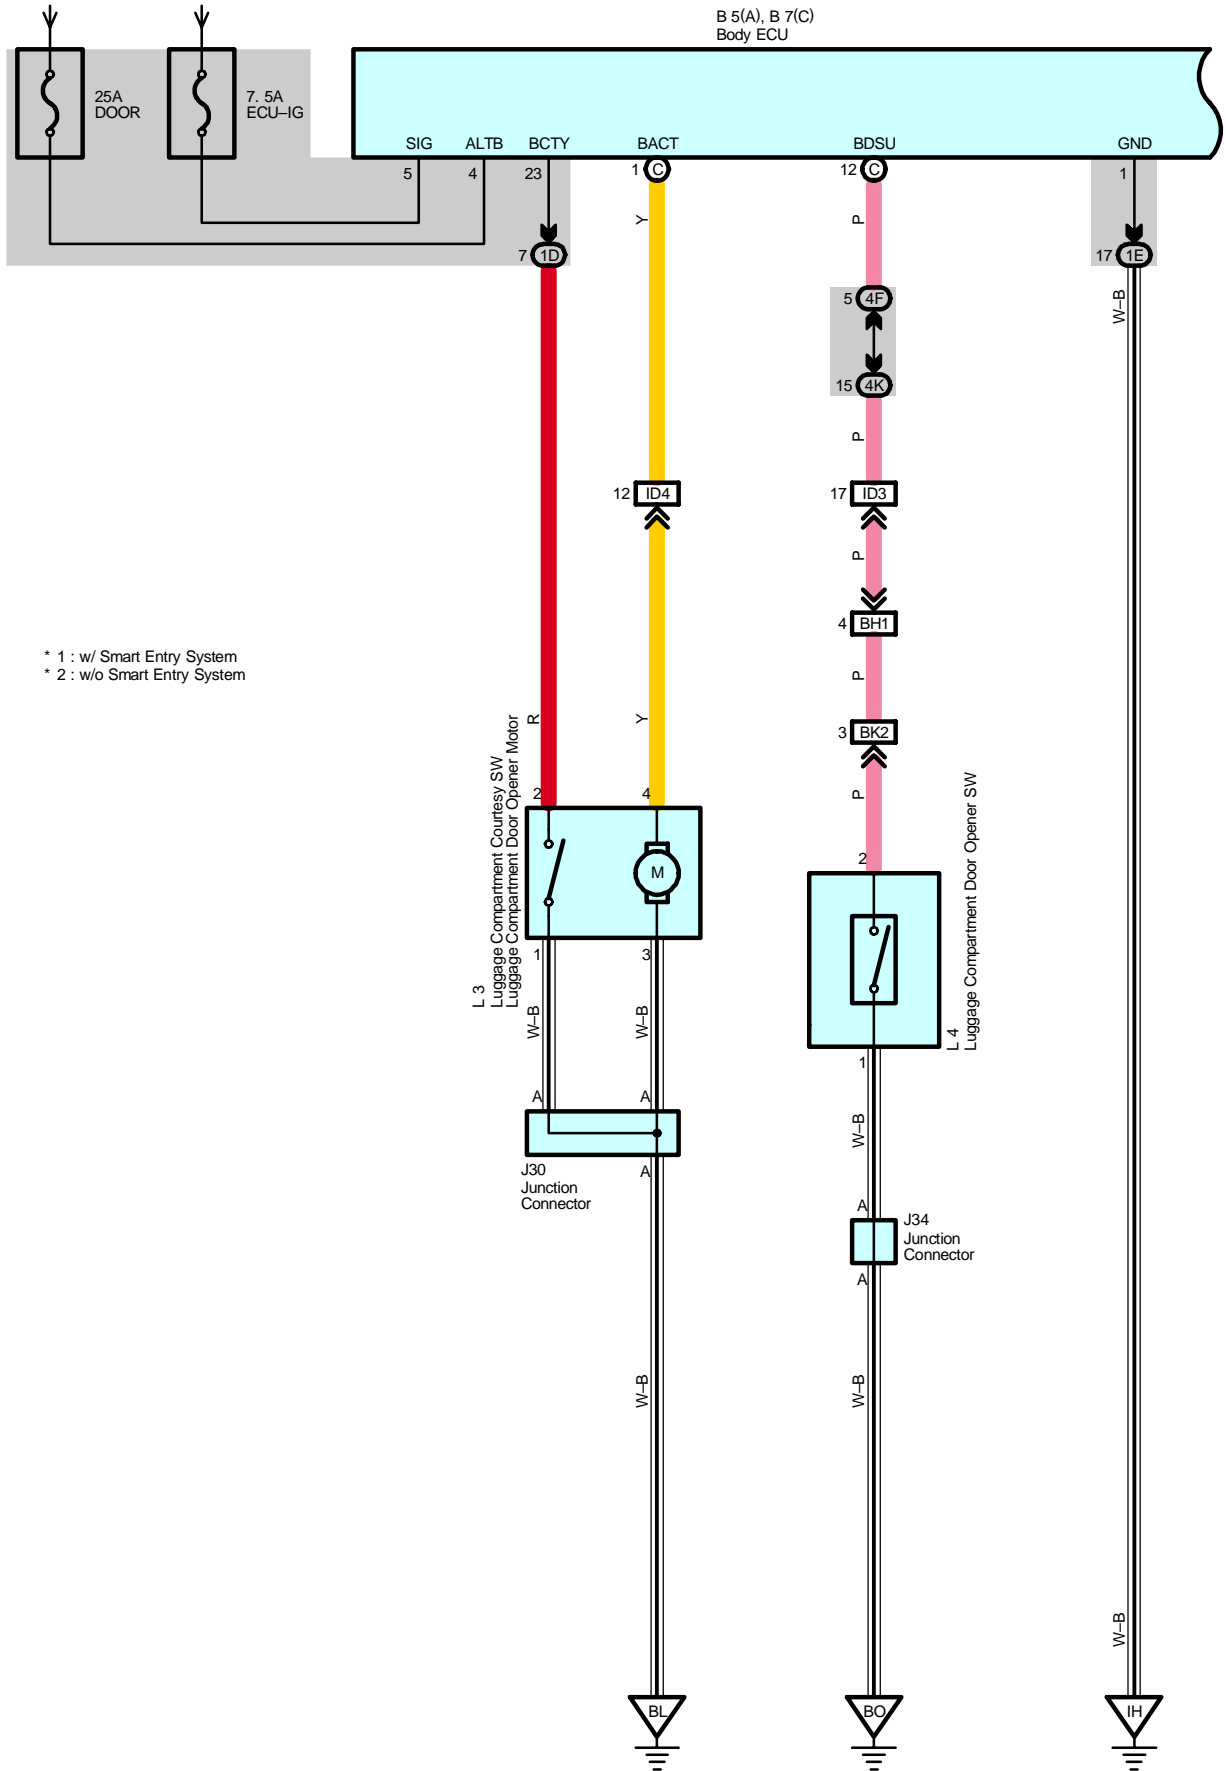

- \* 1 : w/ Smart Entry System
- \* 2 : w/o Smart Entry System

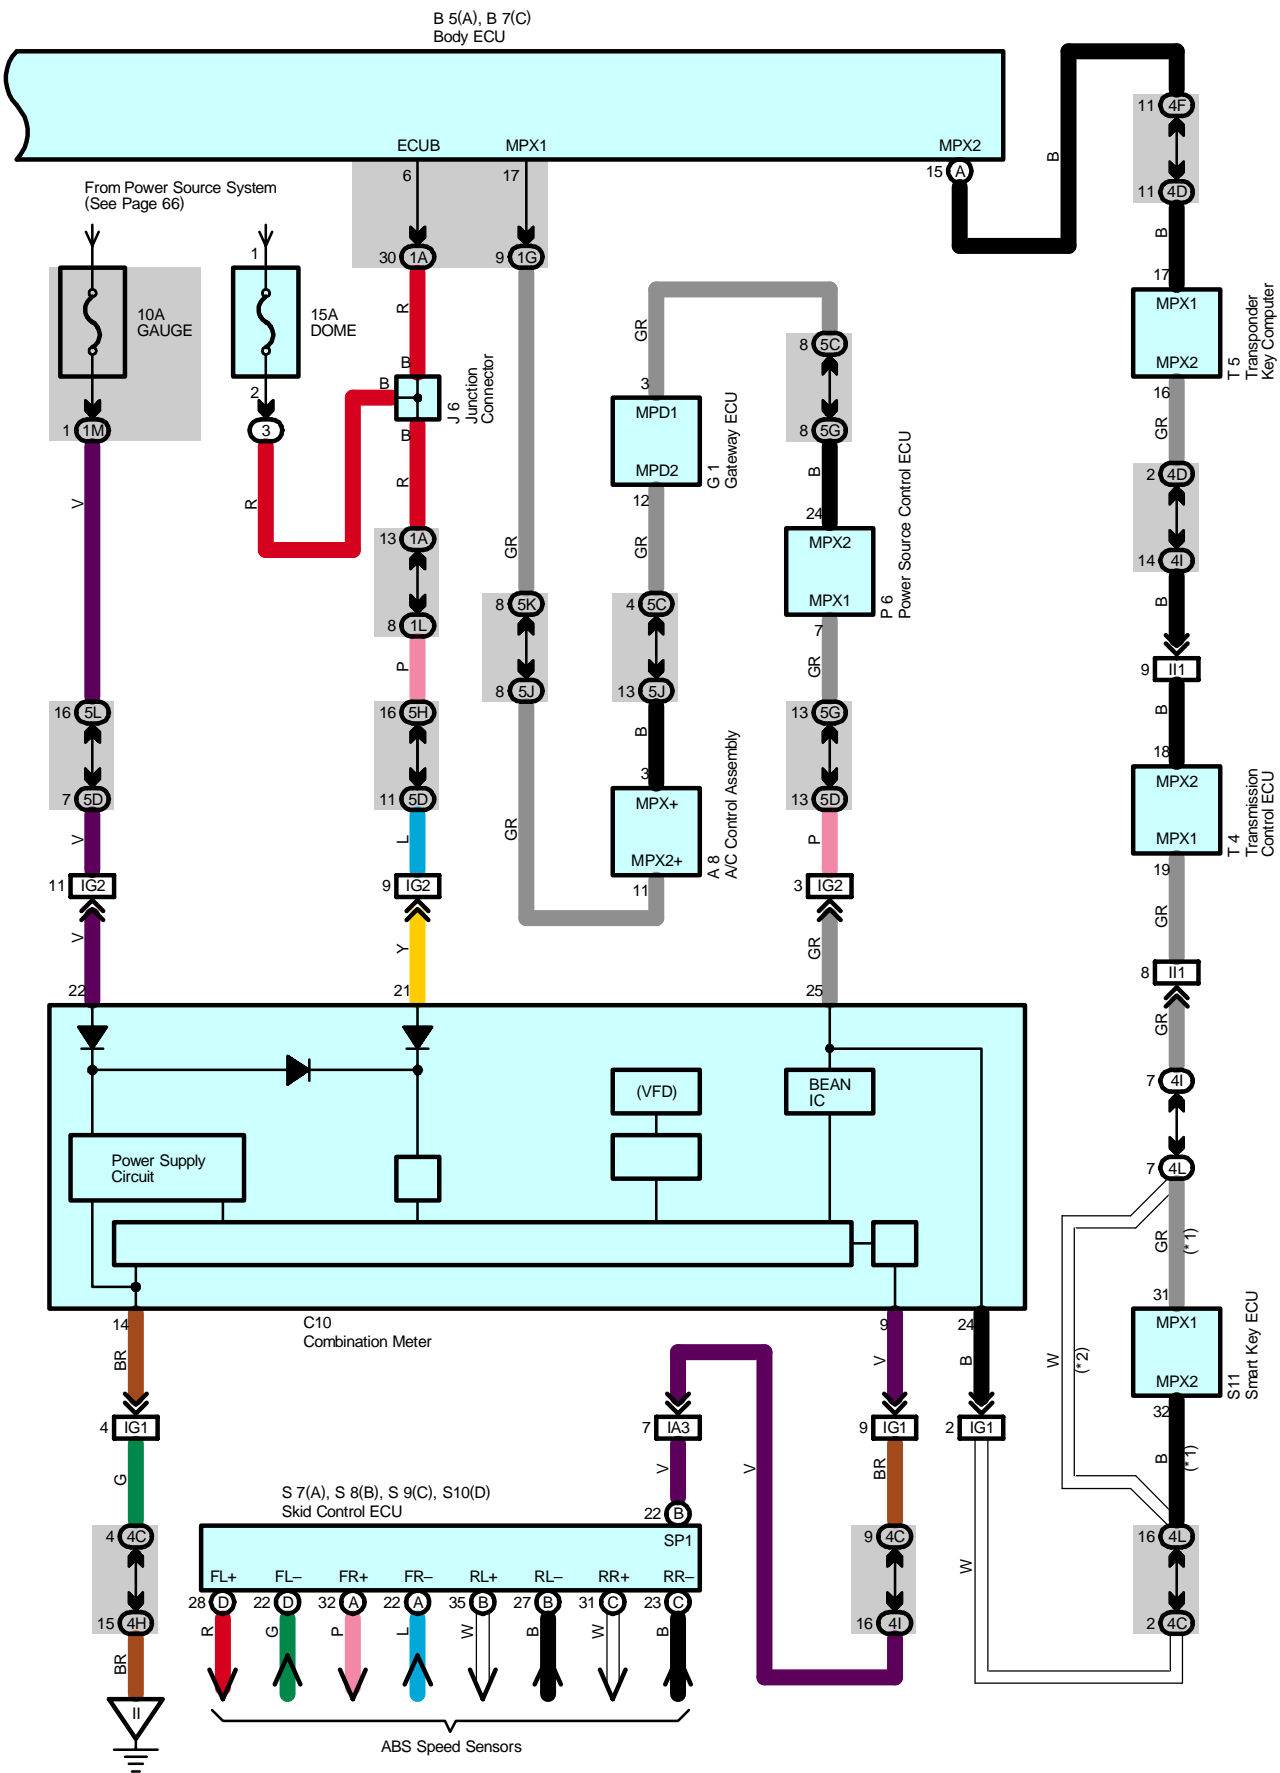



# Luggage Compartment Door Opener

## System Outline

If the vehicle is stationary (Slower than 5 km/h) and luggage compartment door is unlocked, the luggage compartment door opener motor activates with control of body ECU when luggage compartment door opener SW is pushed. It results in releasing latch of luggage compartment door to open luggage compartment door.

## Service Hints

### Body ECU

- 4, 6–Ground : Always approx. 12 volts
- 1–Ground : Always continuity
- 5–Ground : Approx. 12 volts with the power SW at IG ON position
- 23–Ground : Continuity with the luggage compartment door open

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A8	46	J30	51	S8	B 49
B5	A 46	J34	51	S9	C 49
B7	C 46	L3	51	S10	D 49
C10	47	L4	51	S11	49
G1	47	P6	49	T4	49
J6	48	S7	A 49	T5	49

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	22	Engine Room R/B (Engine Compartment Left)

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1D	28	Floor Wire and Driver Side J/B (Lower Finish Panel)
1E	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1G		
1L		
1M		
1N		
4C	36	Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4D		
4F		
4H		
4I		
4K		
4L	40	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5C		
5D		
5G		
5H		
5J		
5K		
5L		


 : **Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA3	56	Engine Room Main Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)
ID3	56	Instrument Panel Wire and Floor Wire (Left Kick Panel)
ID4		
IG1	58	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the Combination Meter)
IG2		
II1	58	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
BH1	62	Back Door No.1 Wire and Floor Wire (Rear Side of Roof Panel)
BK2	62	Back Door No.1 Wire and Back Door No.2 Wire (Rear Side of Roof Panel)

 : **Ground Points**


Code	See Page	Ground Points Location
IH	56	Cowl Side Panel LH
II	56	Instrument Panel Brace LH
BL	60	Rear Side of Left Quarter Panel
BO	60	Center of the Back Door Panel

# Theft Deterrent

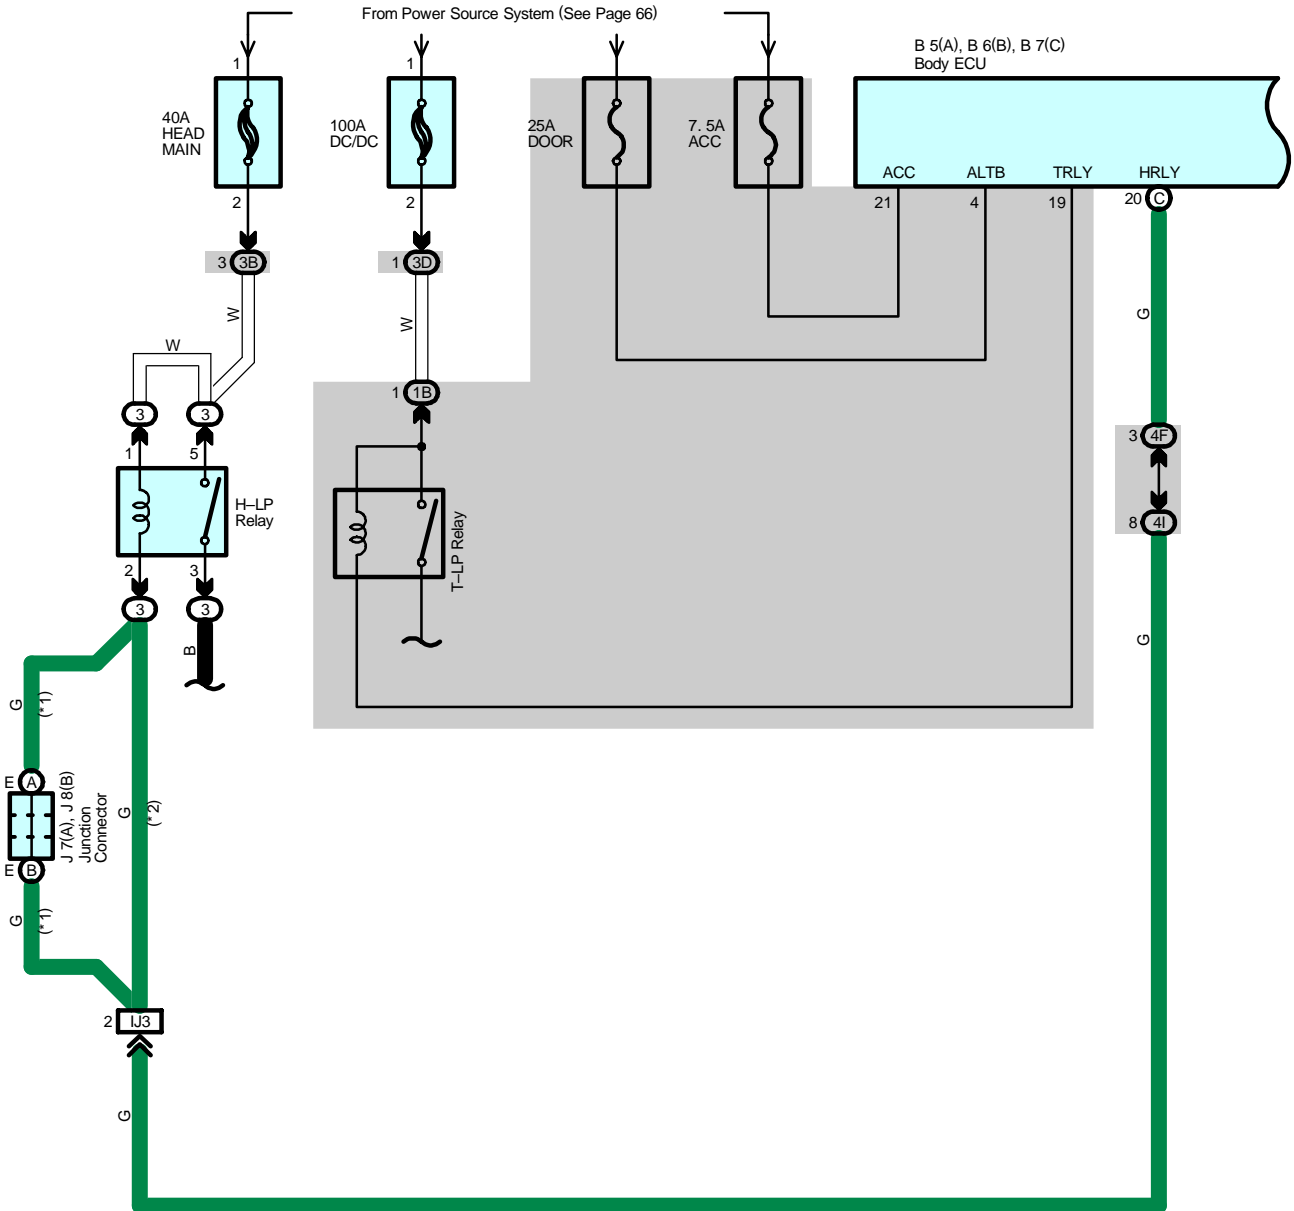


\* 1 : w/ HID  
 \* 2 : w/o HID

B 5(A), B 6(B), B 7(C)  
Body ECU

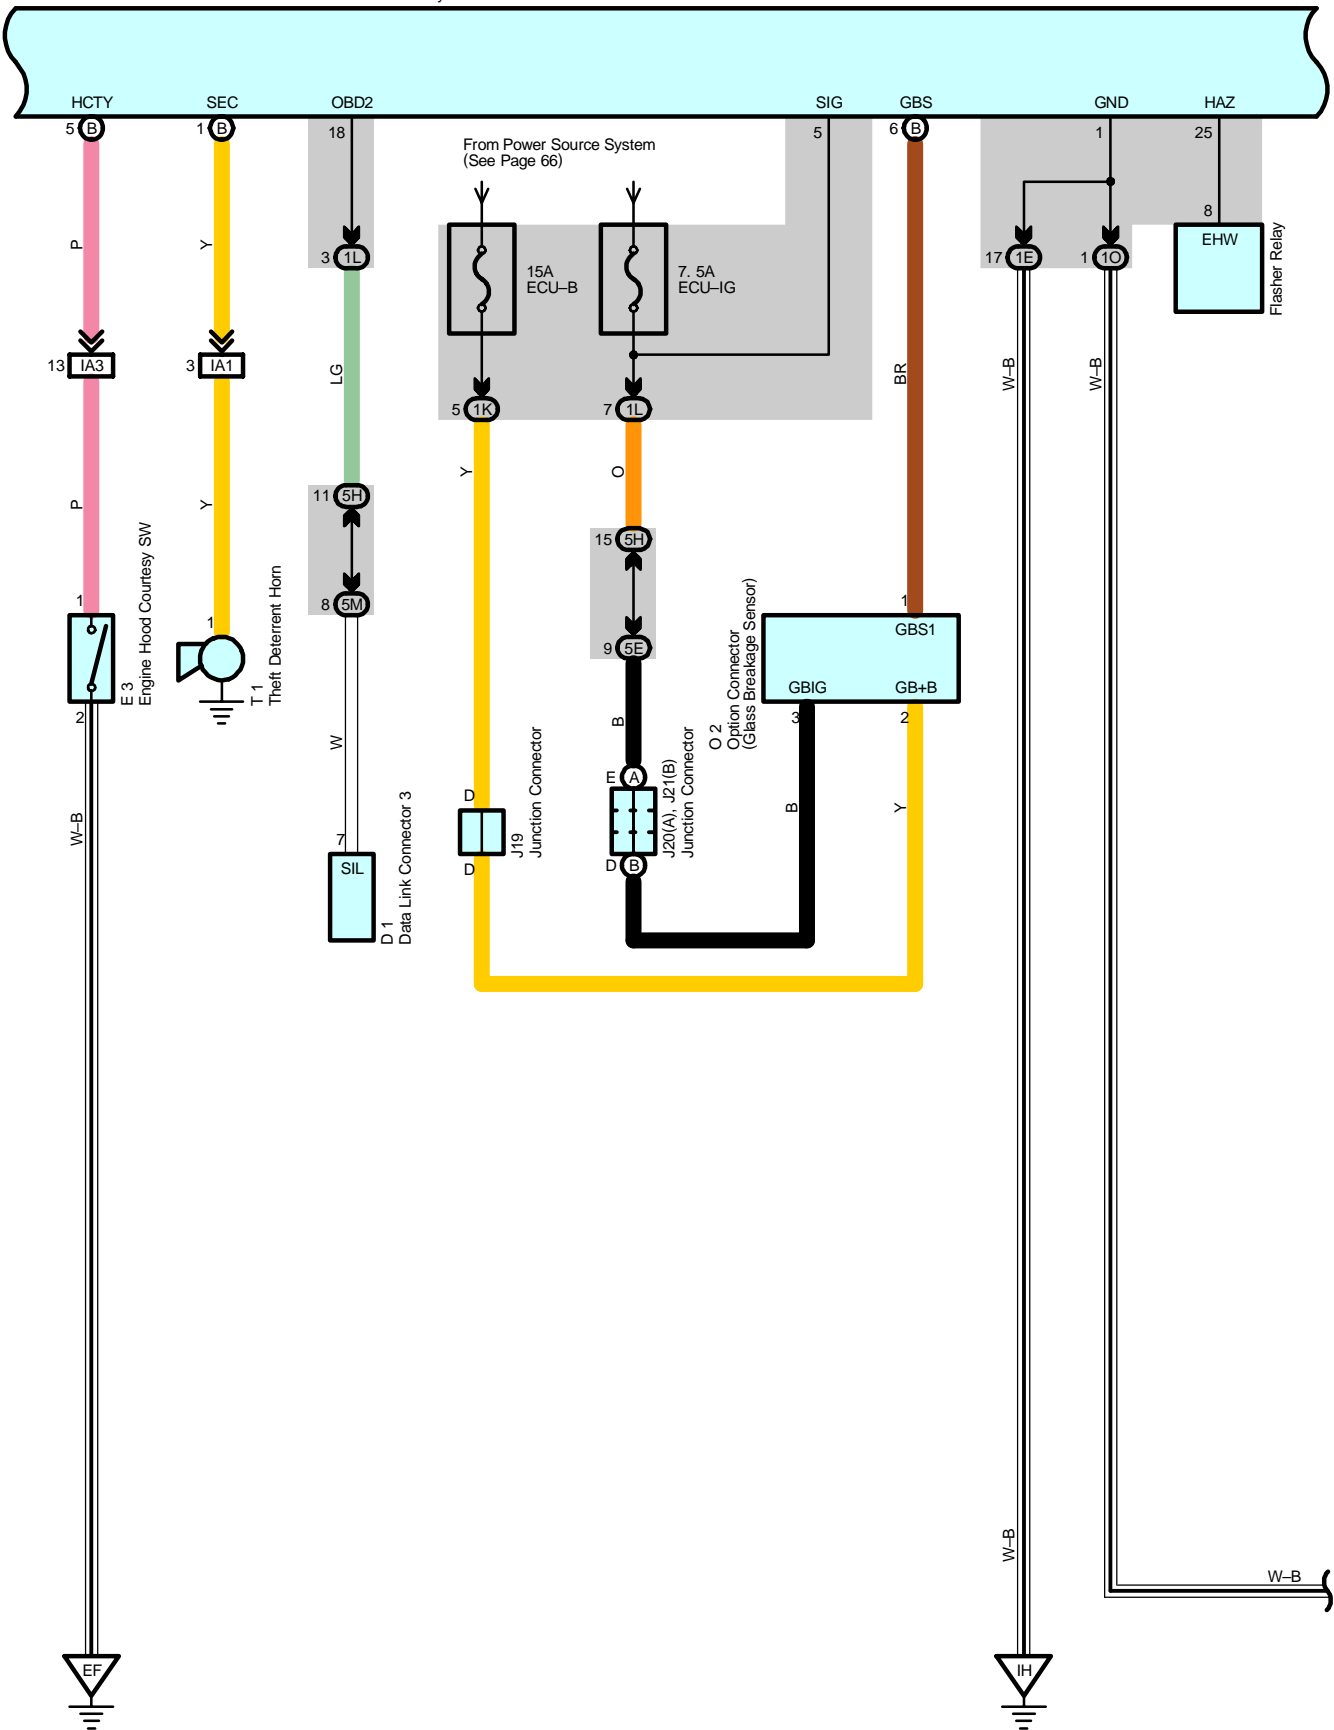


# Theft Deterrent

B 5(A), B 6(B), B 7(C)  
Body ECU

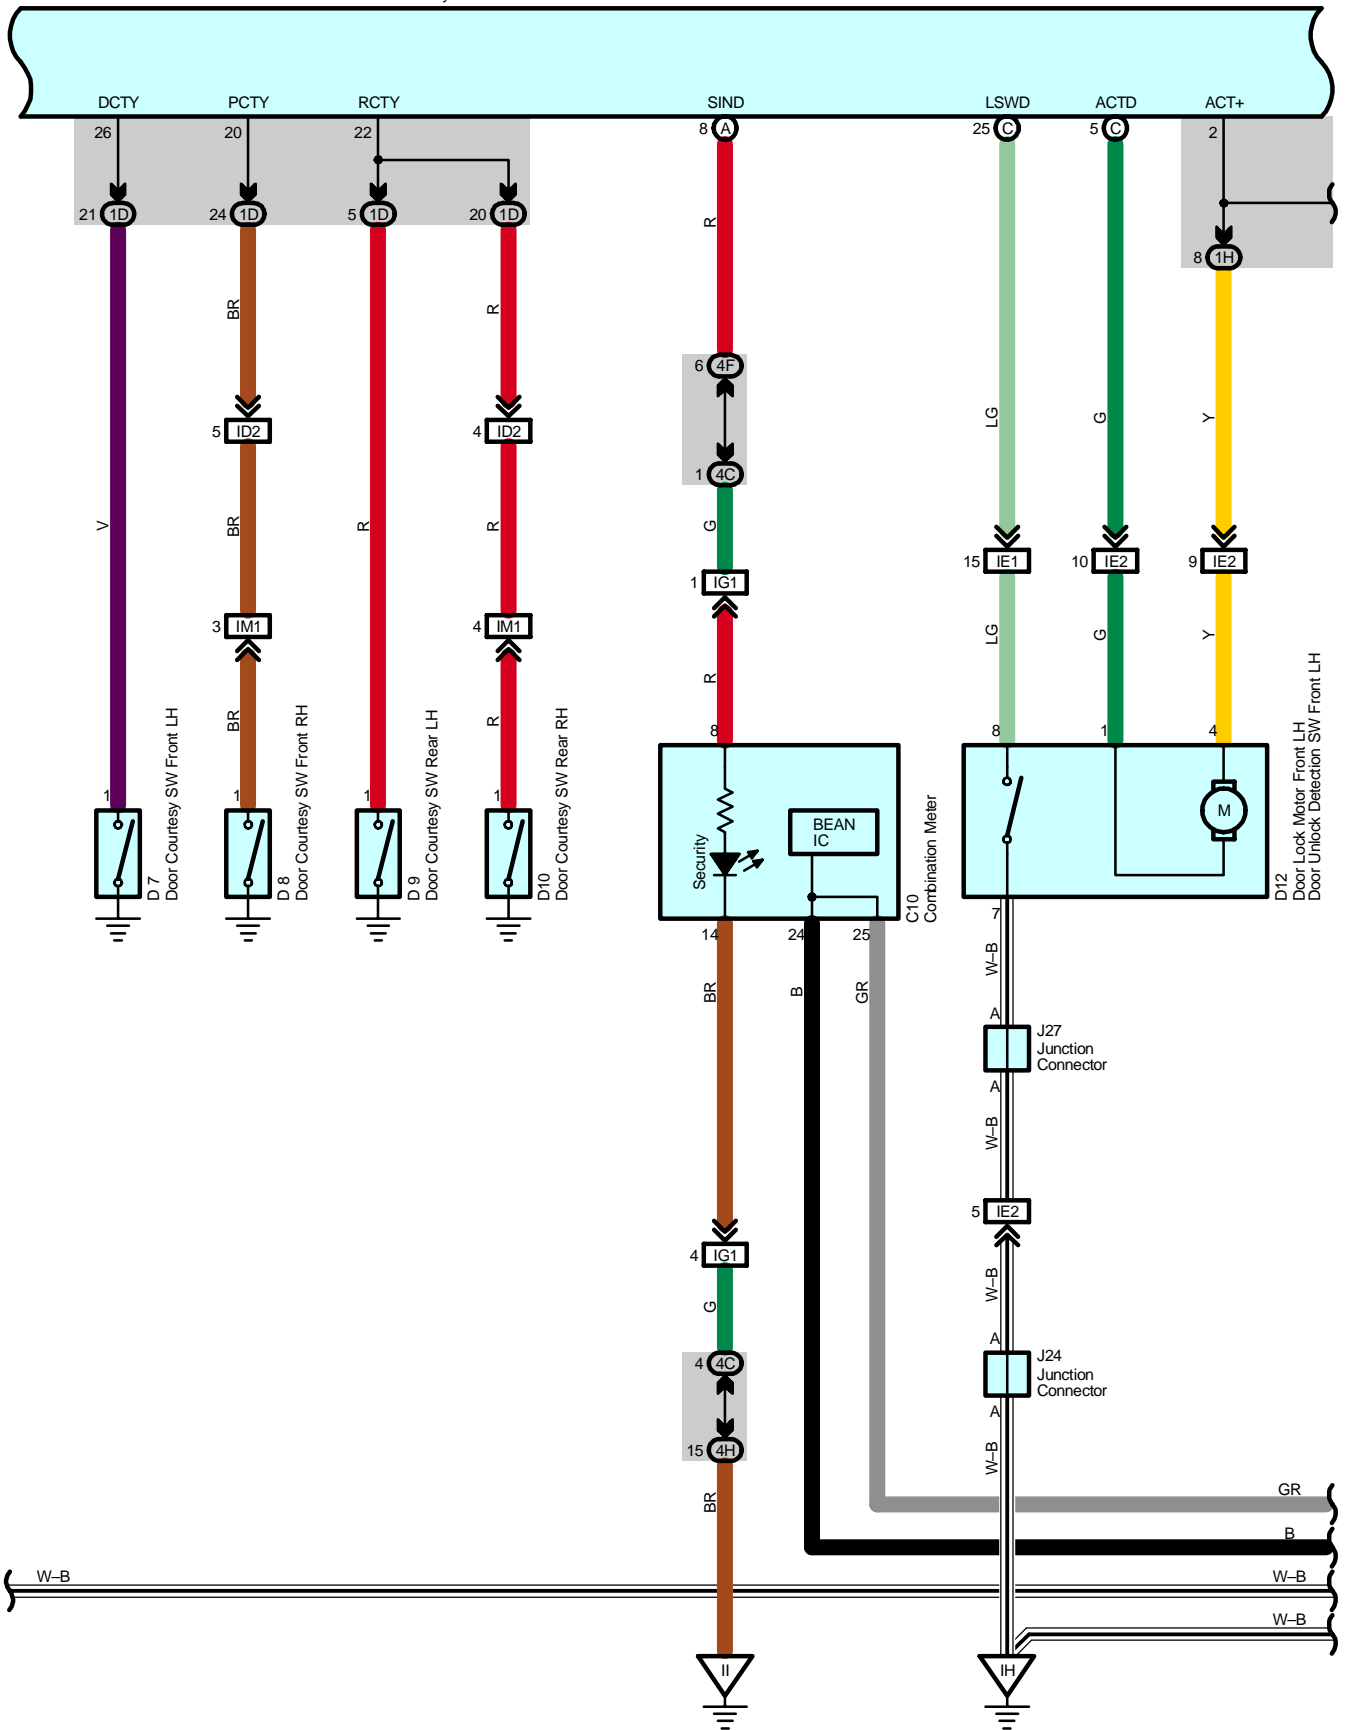


B 5(A), B 6(B), B 7(C)  
Body ECU

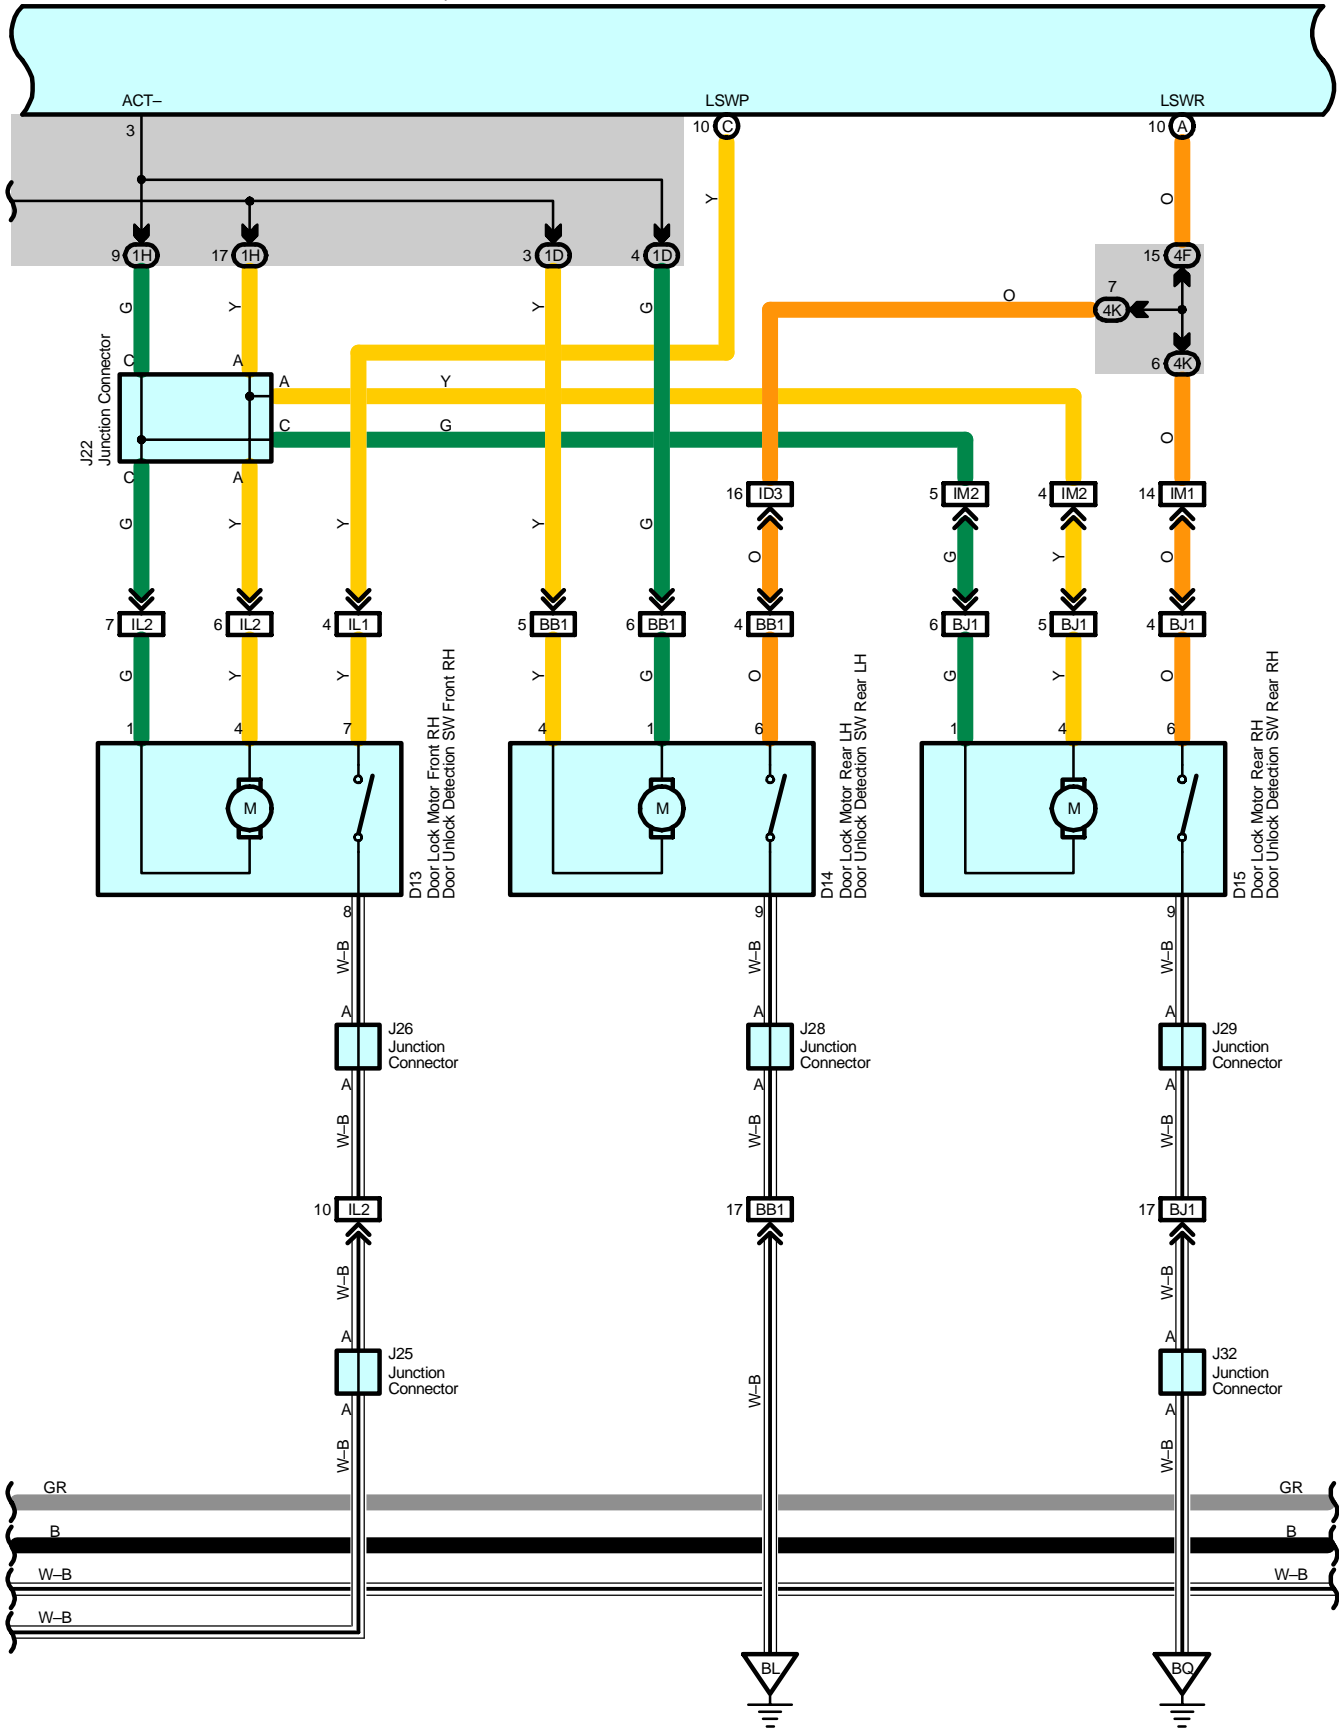


# Theft Deterrent

B 5(A), B 6(B), B 7(C)  
Body ECU

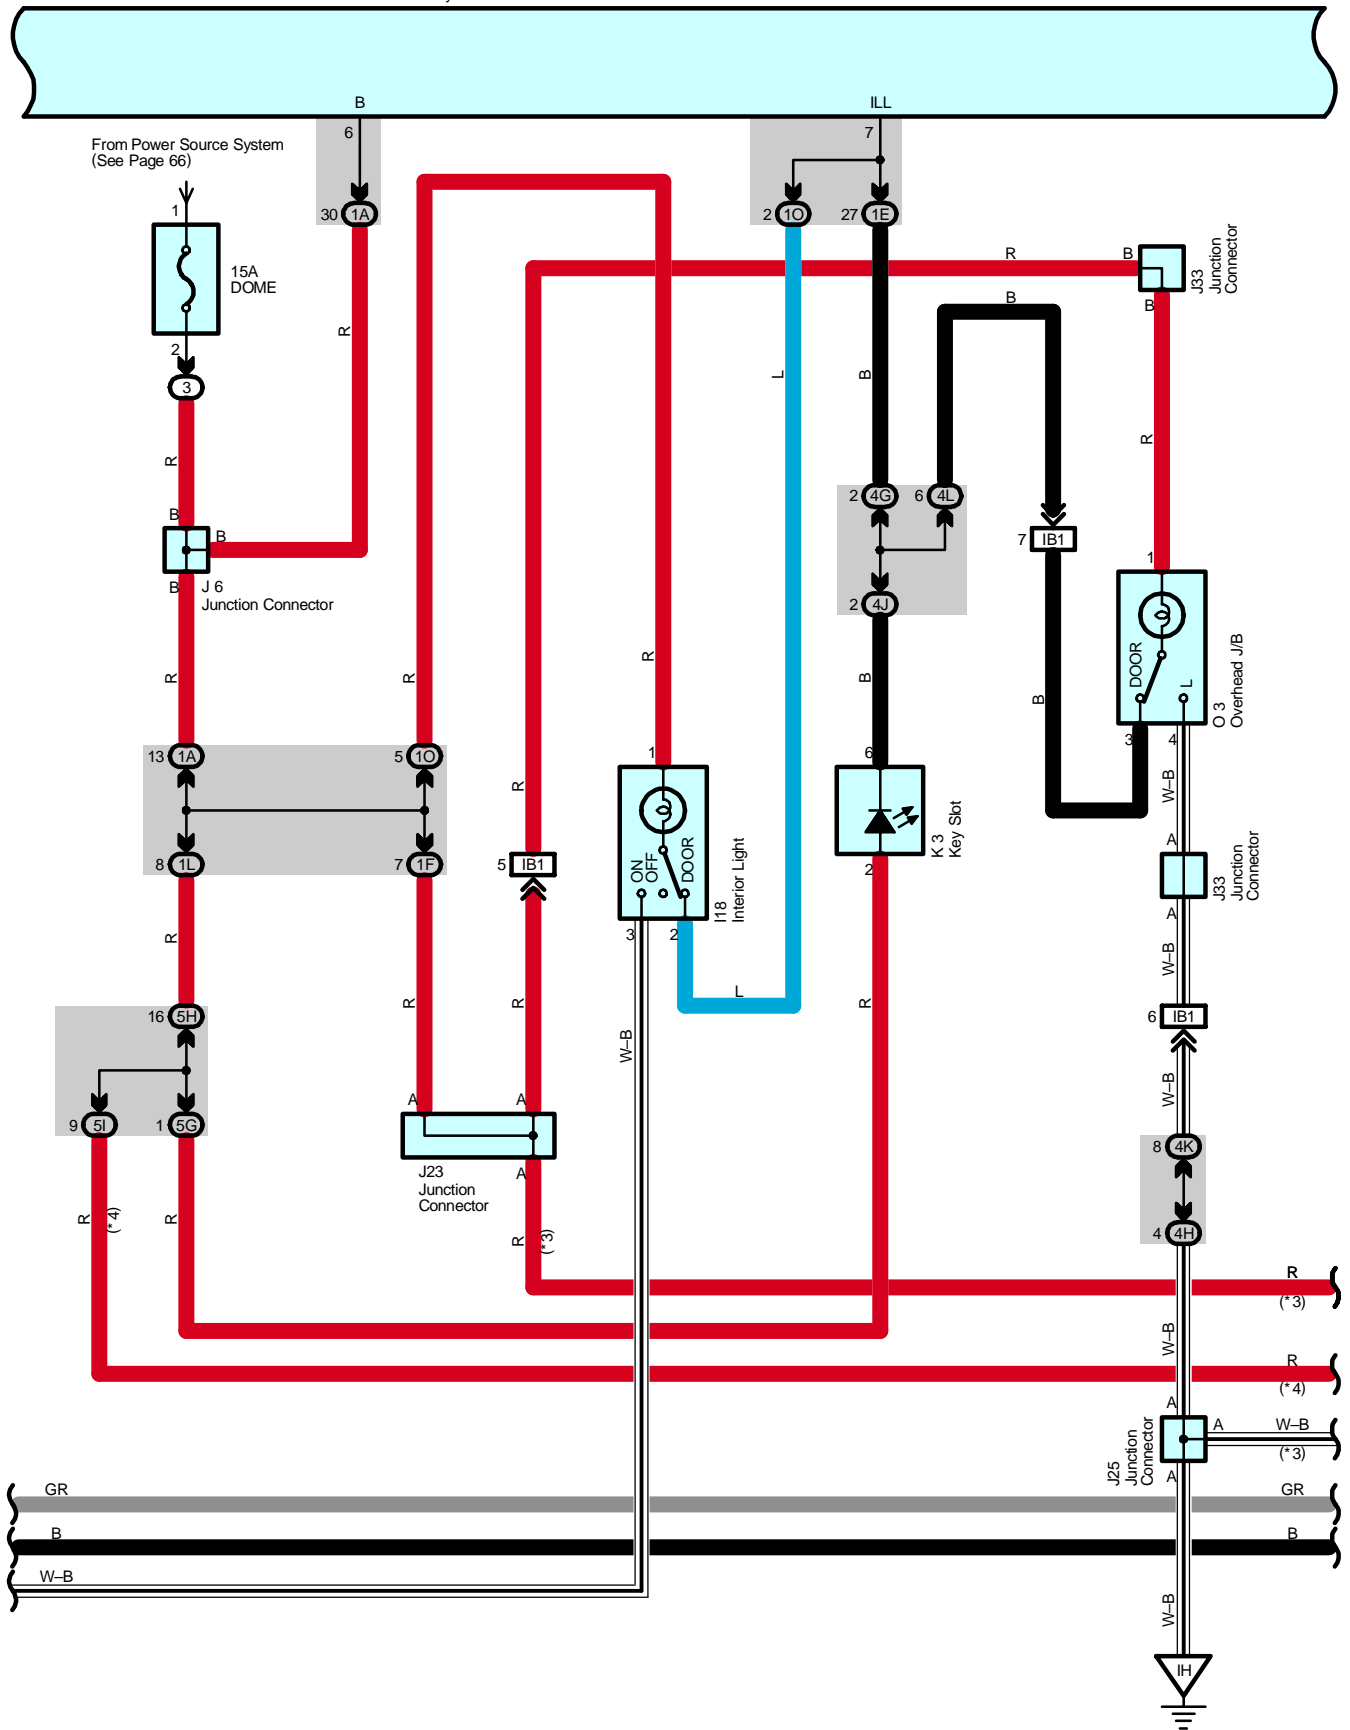


B 5(A), B 6(B), B 7(C)  
Body ECU

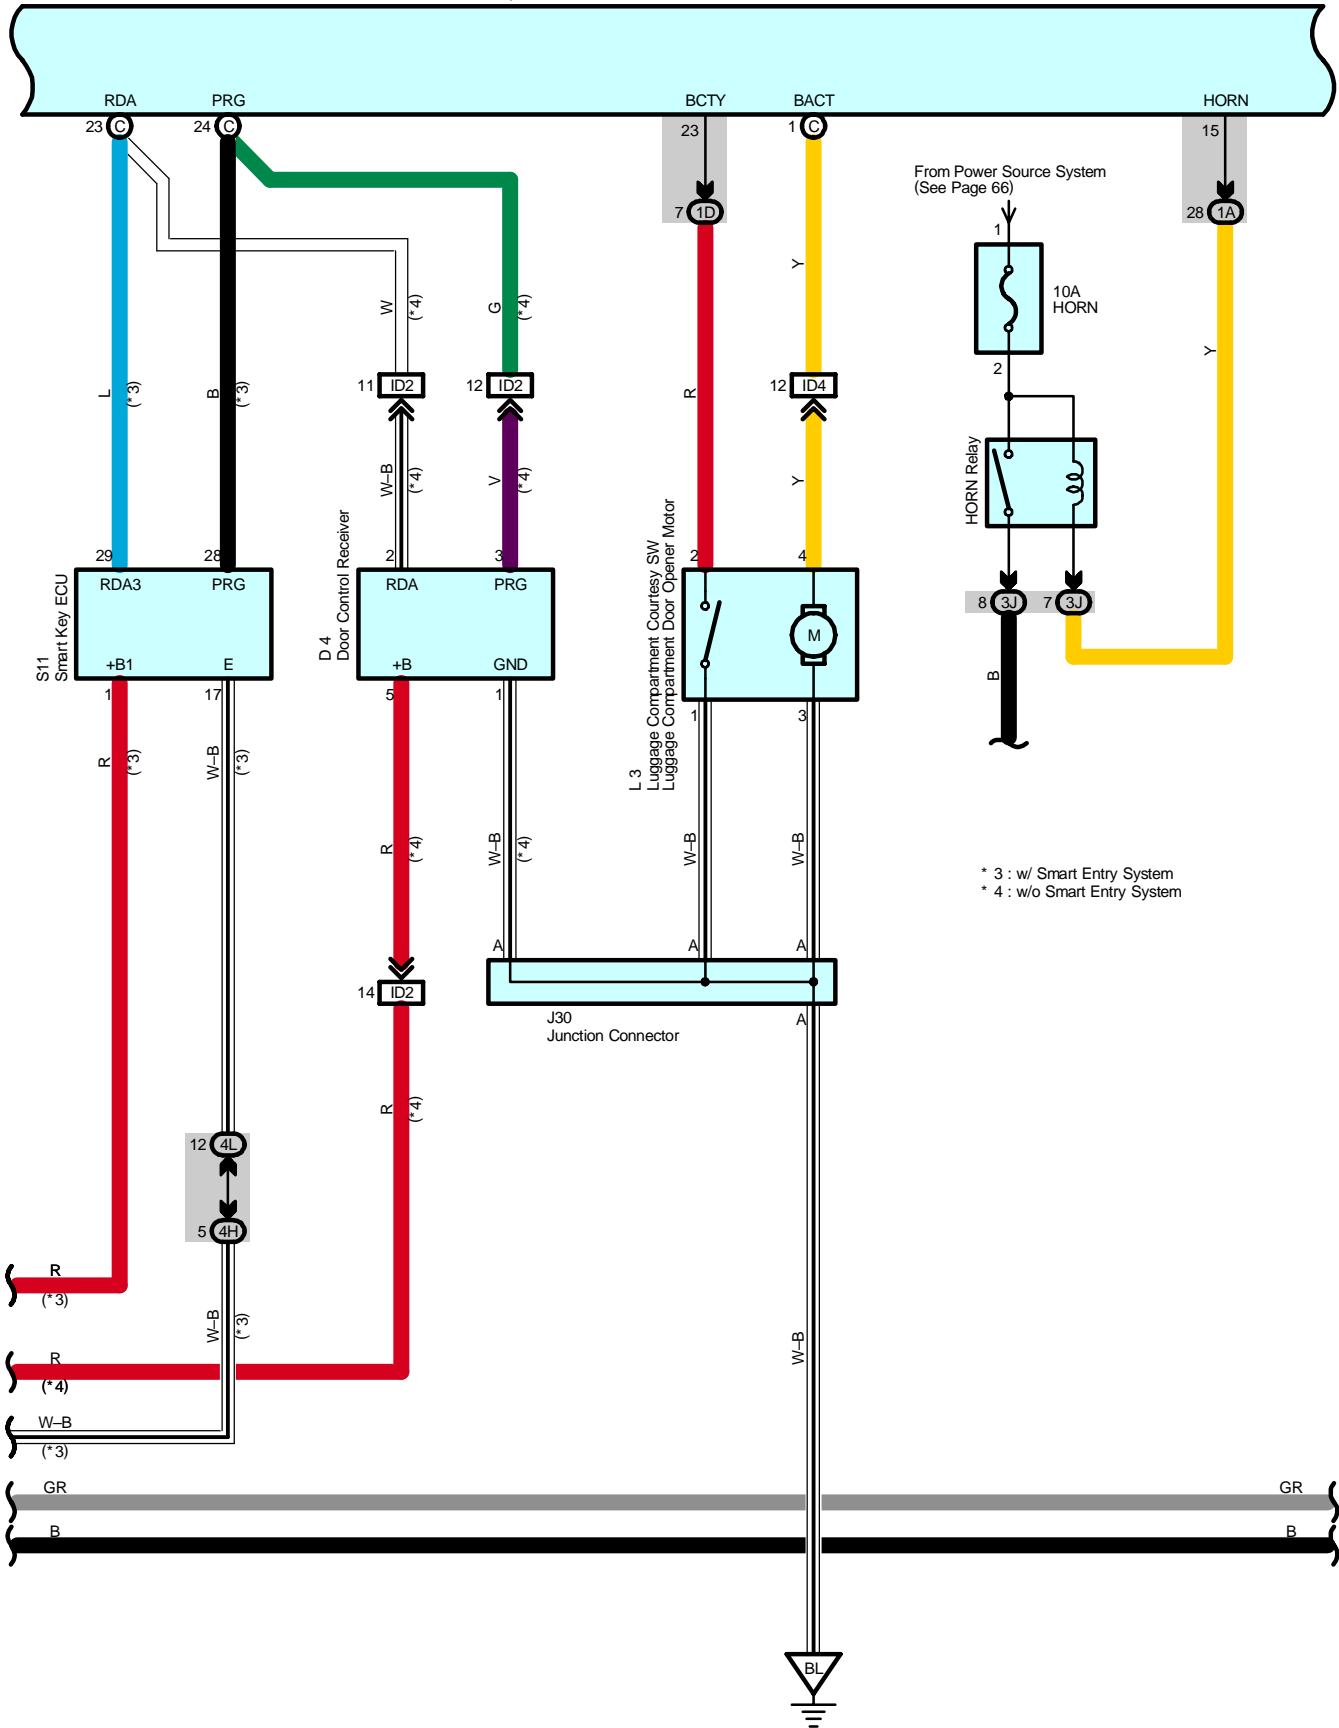



# Theft Deterrent

\* 3 : w/ Smart Entry System  
 \* 4 : w/o Smart Entry System

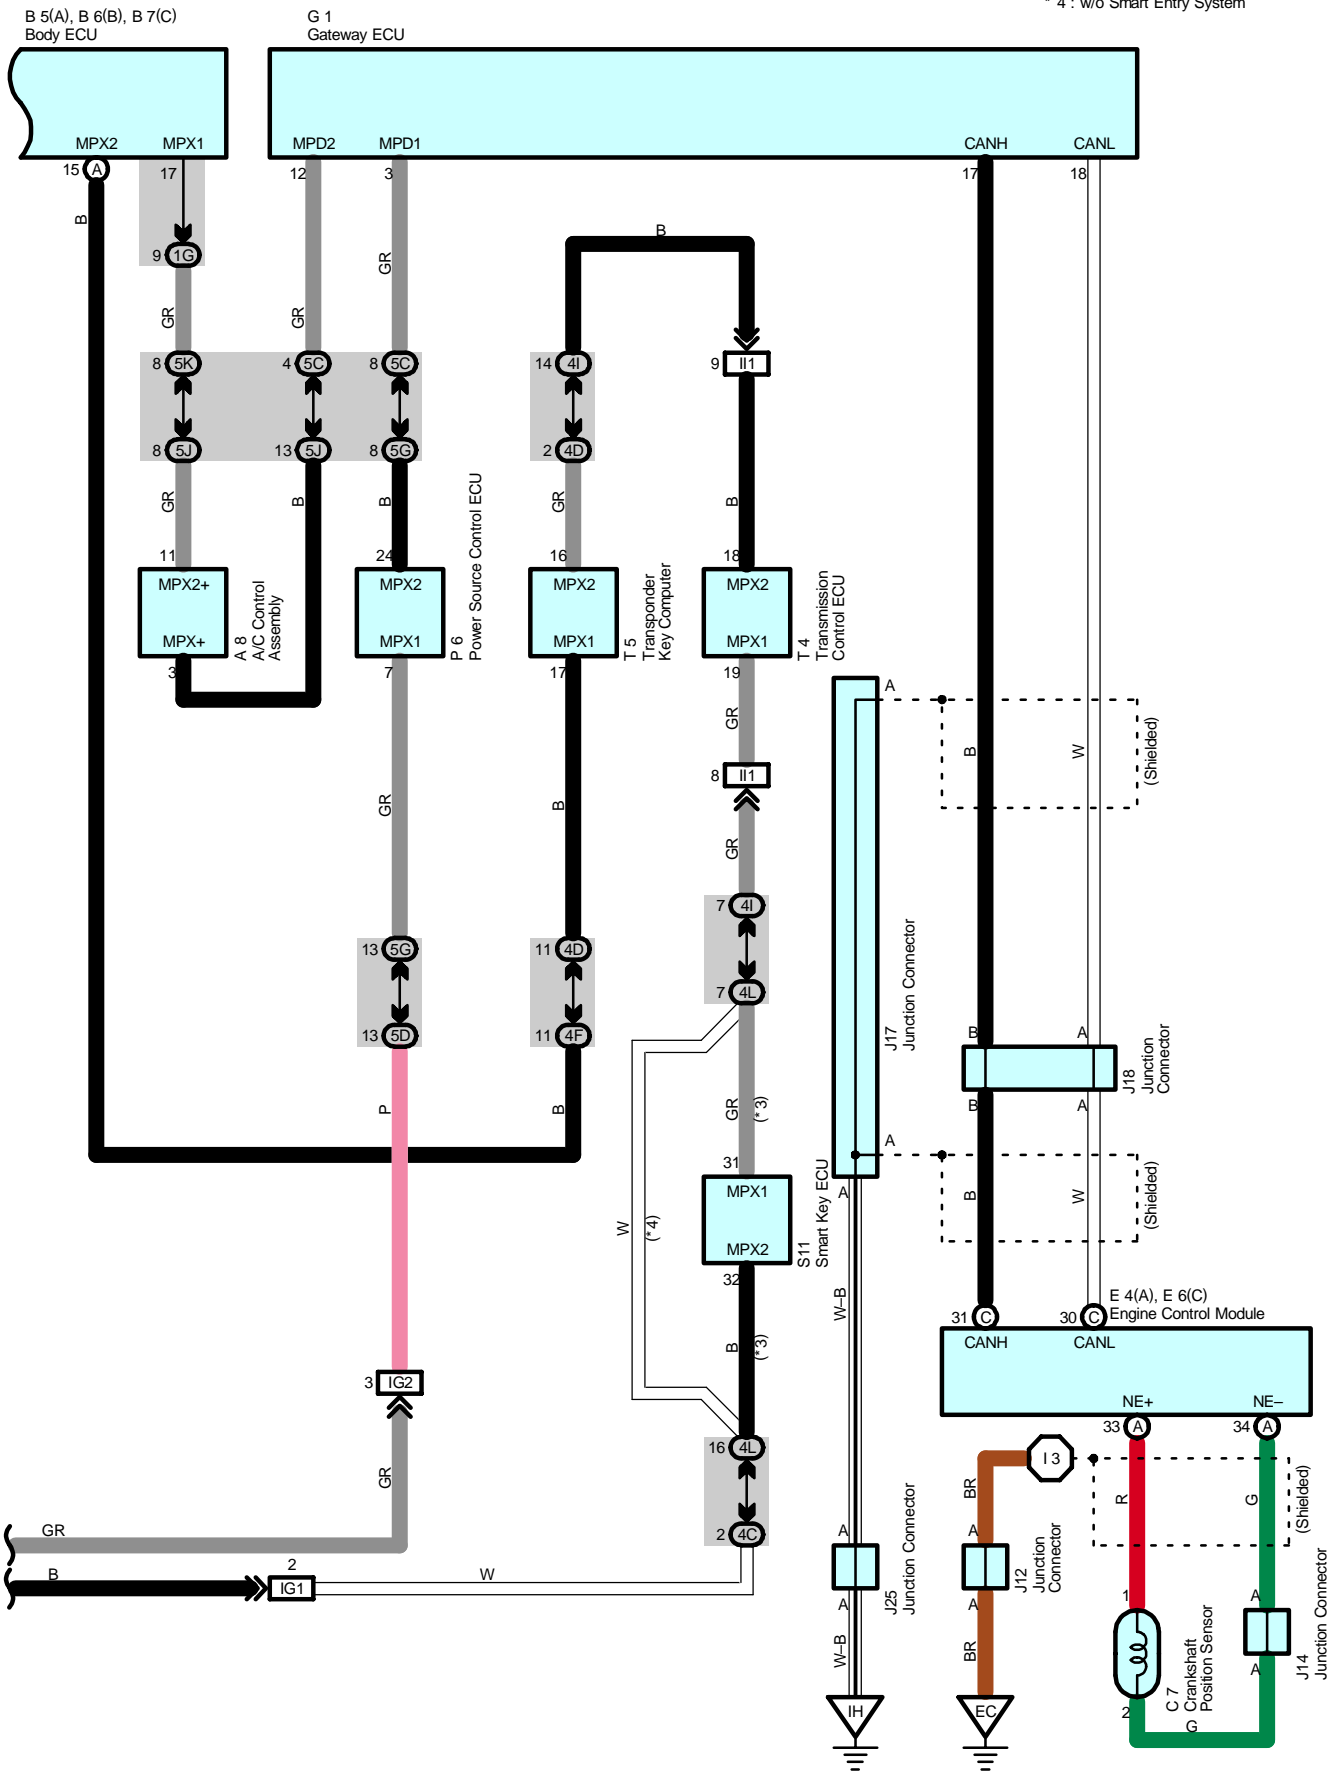

## Service Hints

### Body ECU

- 1-Ground : Always continuity
- 4, 6-Ground : Always approx. 12 volts
- 21-Ground : Approx. 12 volts with the power SW at ACC ON or IG ON position
- 5-Ground : Approx. 12 volts with the power SW at IG ON position

### ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A8	46	E4	A 47	J25	48
B5	A 46	E6	C 47	J26	51
B6	B 46	G1	47	J27	51
B7	C 46	I18	51	J28	51
C7	44	J6	48	J29	51
C10	47	J7	A 48	J30	51
D1	47	J8	B 48	J32	51
D4	50	J12	48	J33	51
D7	50	J14	48	K3	48
D8	50	J17	48	L3	51
D9	50	J18	48	O2	49
D10	50	J19	48	O3	52
D12	50	J20	A 48	P6	49
D13	50	J21	B 48	S11	49
D14	50	J22	48	T1	45
D15	50	J23	48	T4	49
E3	44	J24	48	T5	49

### ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	22	Engine Room R/B (Engine Compartment Left)

# Theft Deterrent

## : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1B		
1D	28	Floor Wire and Driver Side J/B (Lower Finish Panel)
1E	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1F		
1G		
1H		
1K		
1L		
1O	28	Roof Wire and Driver Side J/B (Lower Finish Panel)
3B	22	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
3D		
3J		
4C	36	Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4D		
4F		
4G		
4H		
4I		
4J		
4K		
4L		
5C	40	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5D		
5E		
5G		
5H		
5I		
5J		
5K		
5M		

## : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	56	Engine Room Main Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)
IA3		
IB1	56	Roof Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)
ID2	56	Instrument Panel Wire and Floor Wire (Left Kick Panel)
ID3		
ID4		
IE1	56	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IE2		
IG1	58	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the Combination Meter)
IG2		
II1	58	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
IJ3	58	Engine Room Main Wire and Instrument Panel Wire (Behind the Glove Box)
IL1	58	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IL2		
IM1	58	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
IM2		
BB1	60	Rear Door No.2 Wire and Floor Wire (Left Center Pillar)
BJ1	62	Rear Door No.1 Wire and Floor No.2 Wire (Right Center Pillar)



**: Ground Points**


Code	See Page	Ground Points Location
EC	<a href="#">54</a>	Engine Block
EF	<a href="#">54</a>	Left Side of the Suspension Tower
IH	<a href="#">56</a>	Cowl Side Panel LH
II	<a href="#">56</a>	Instrument Panel Brace LH
BL	<a href="#">60</a>	Rear Side of Left Quarter Panel
BQ	<a href="#">60</a>	Rear Side of Right Quarter Panel




**: Splice Points**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I3	<a href="#">58</a>	Engine Wire			


# Shift Control System

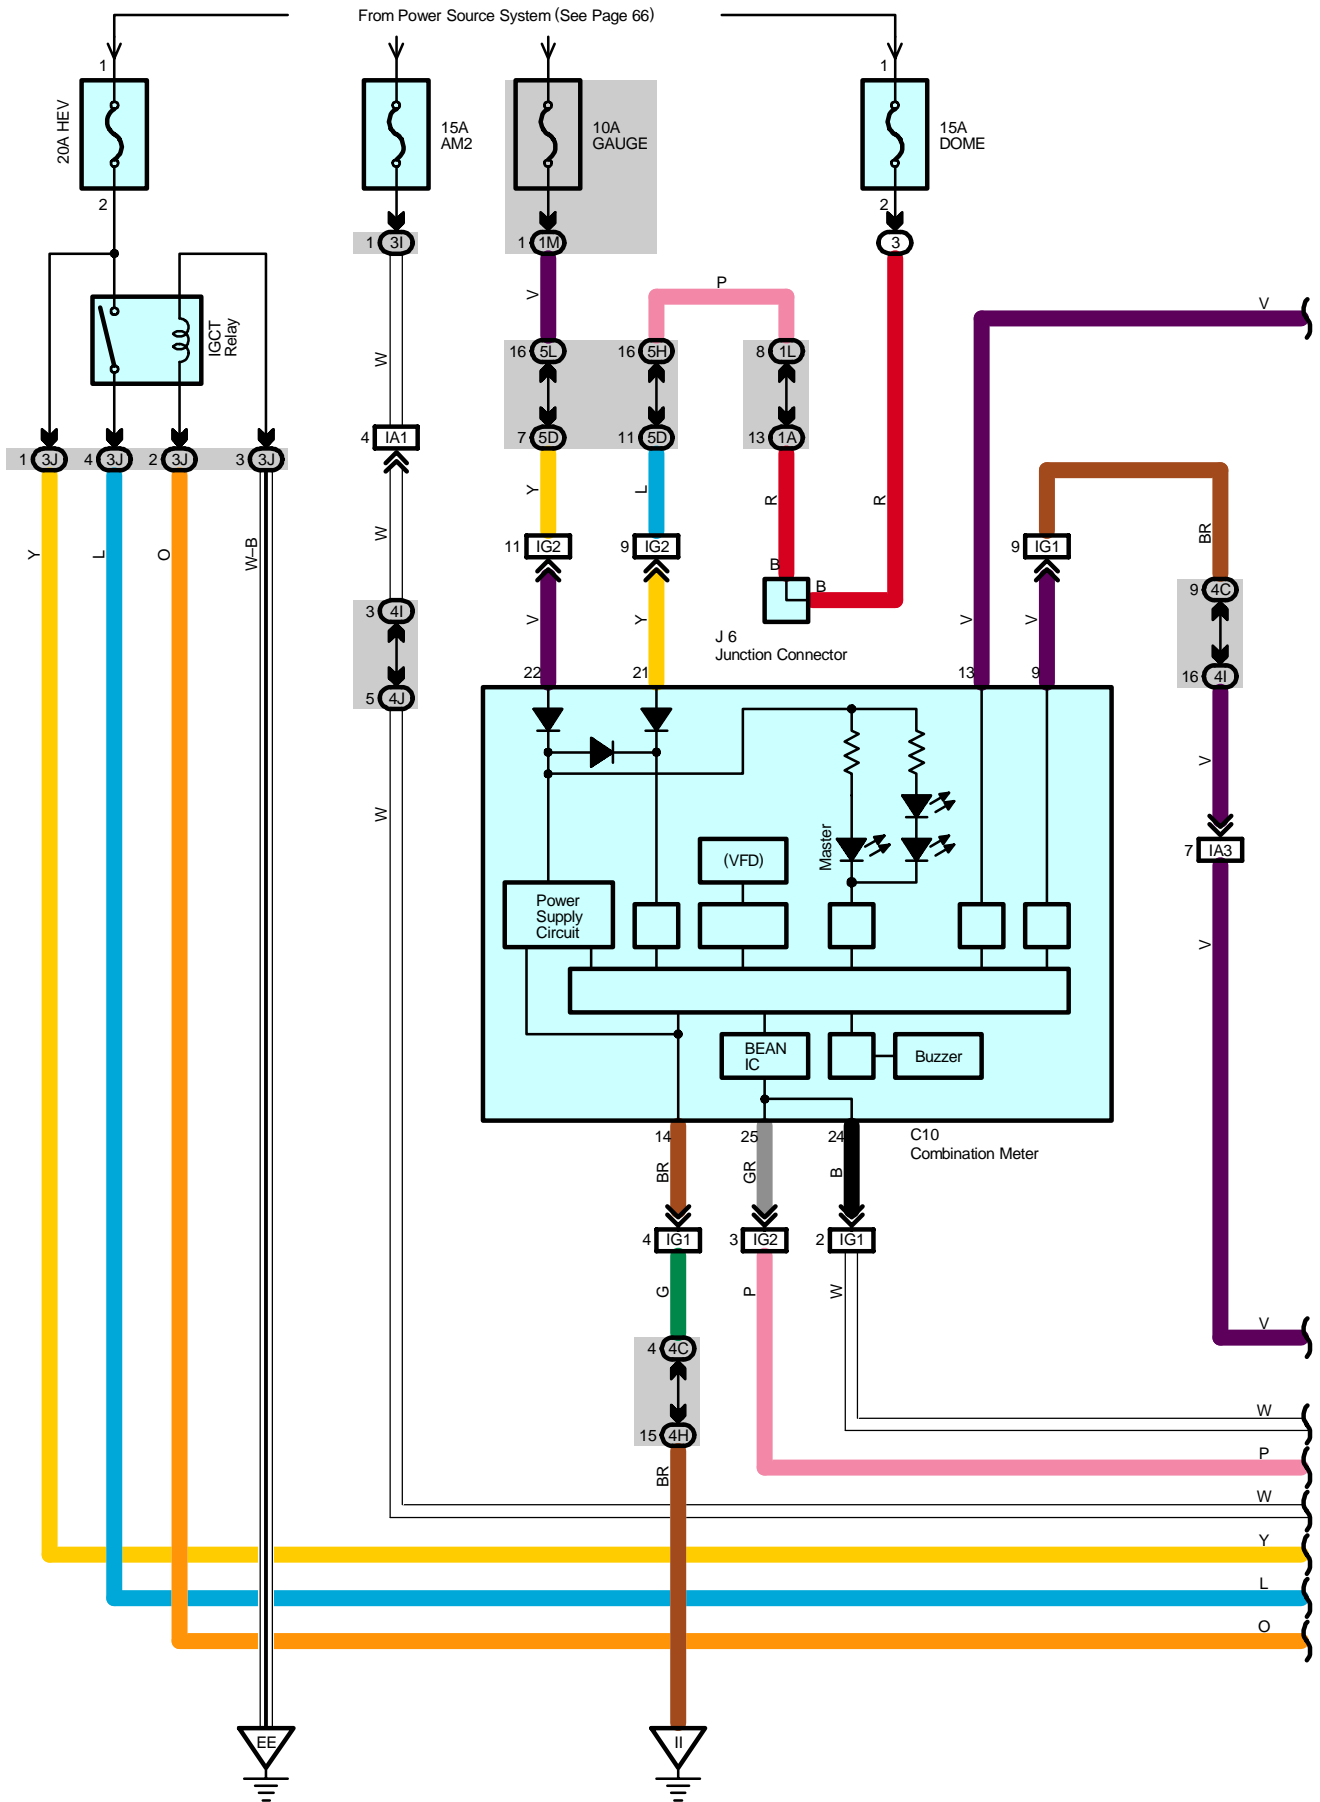


- \* 1 : w/ Smart Entry System
- \* 2 : w/o Smart Entry System

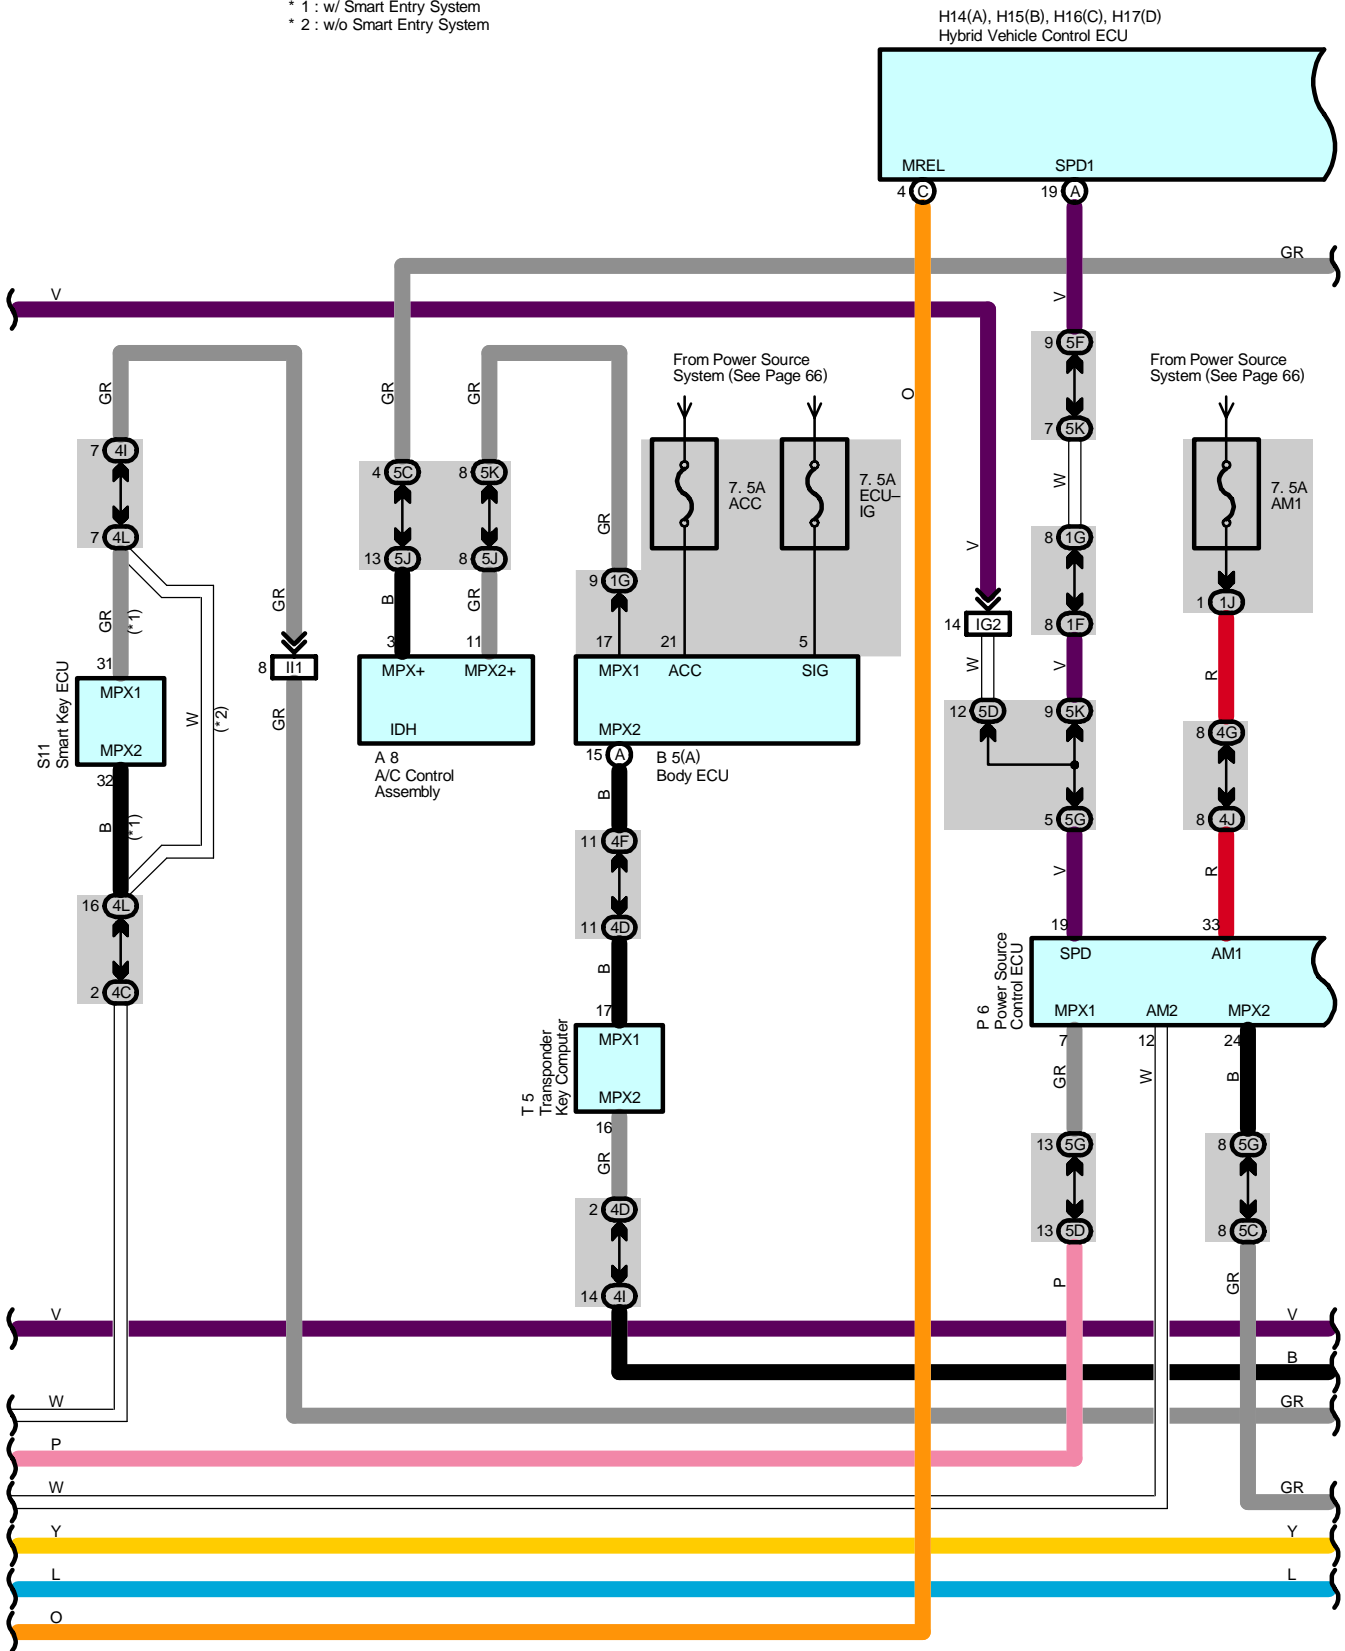

# Shift Control System

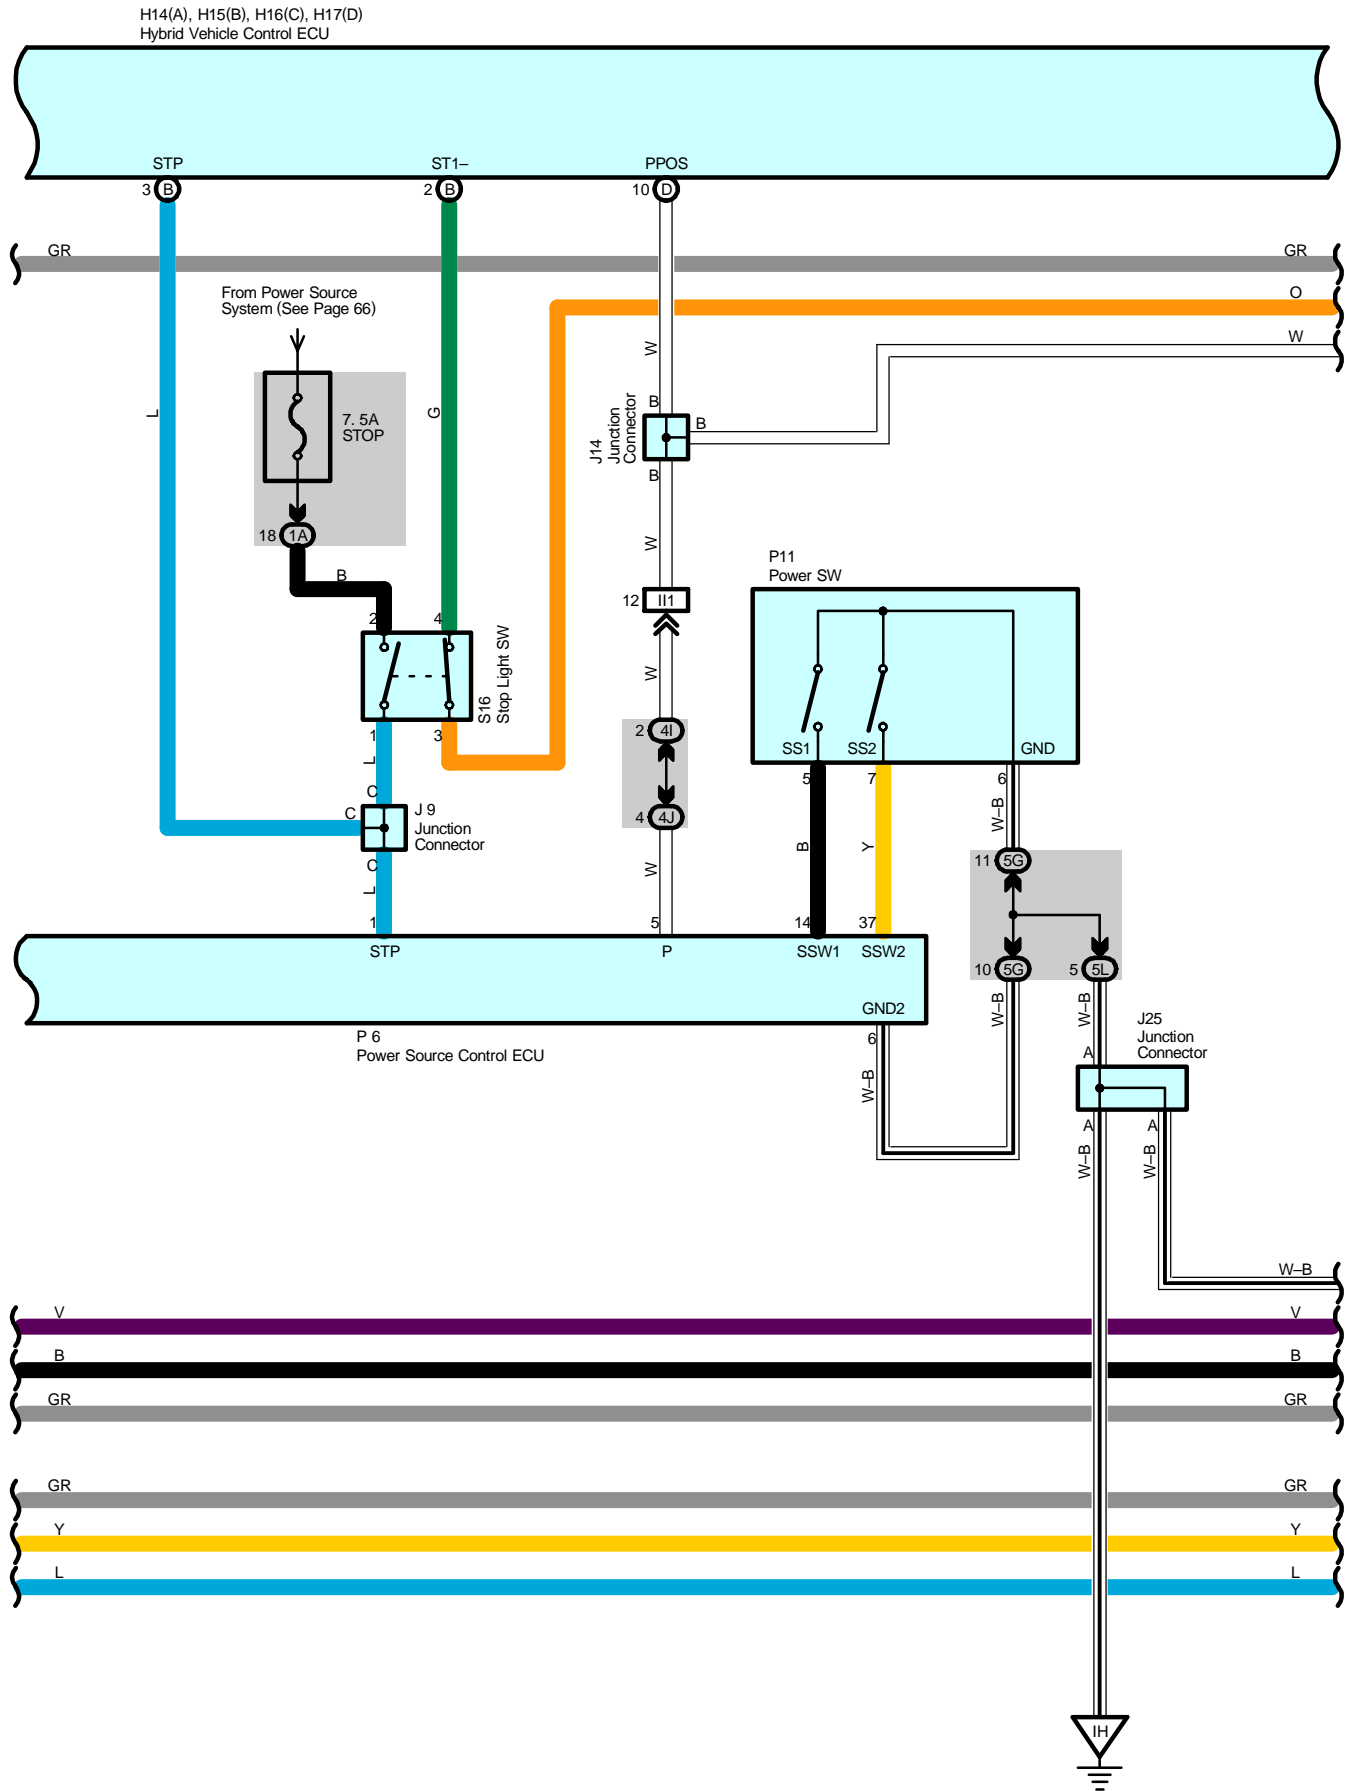


H14(A), H15(B), H16(C), H17(D)  
Hybrid Vehicle Control ECU

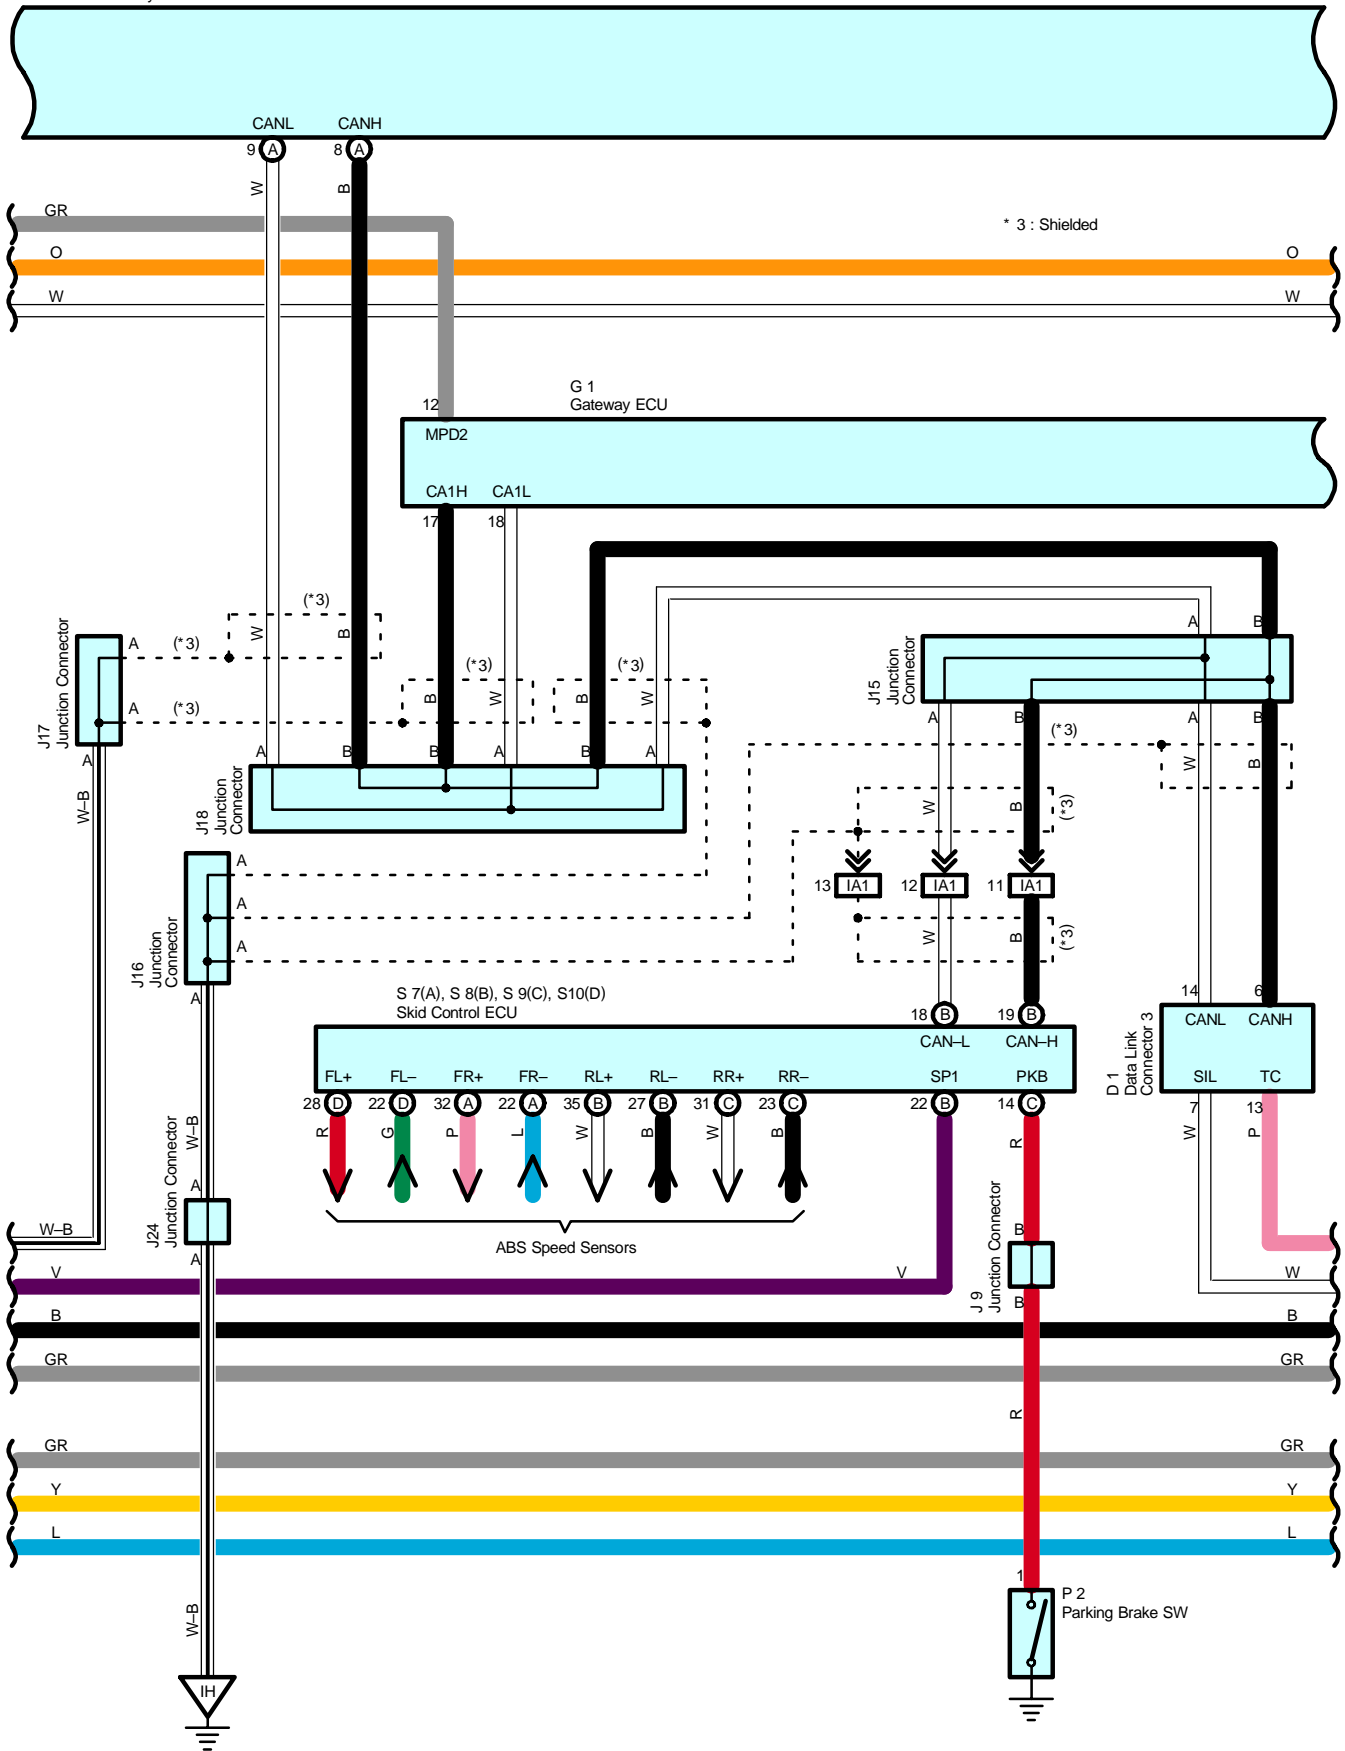




# Shift Control System

H14(A), H15(B), H16(C), H17(D)  
Hybrid Vehicle Control ECU

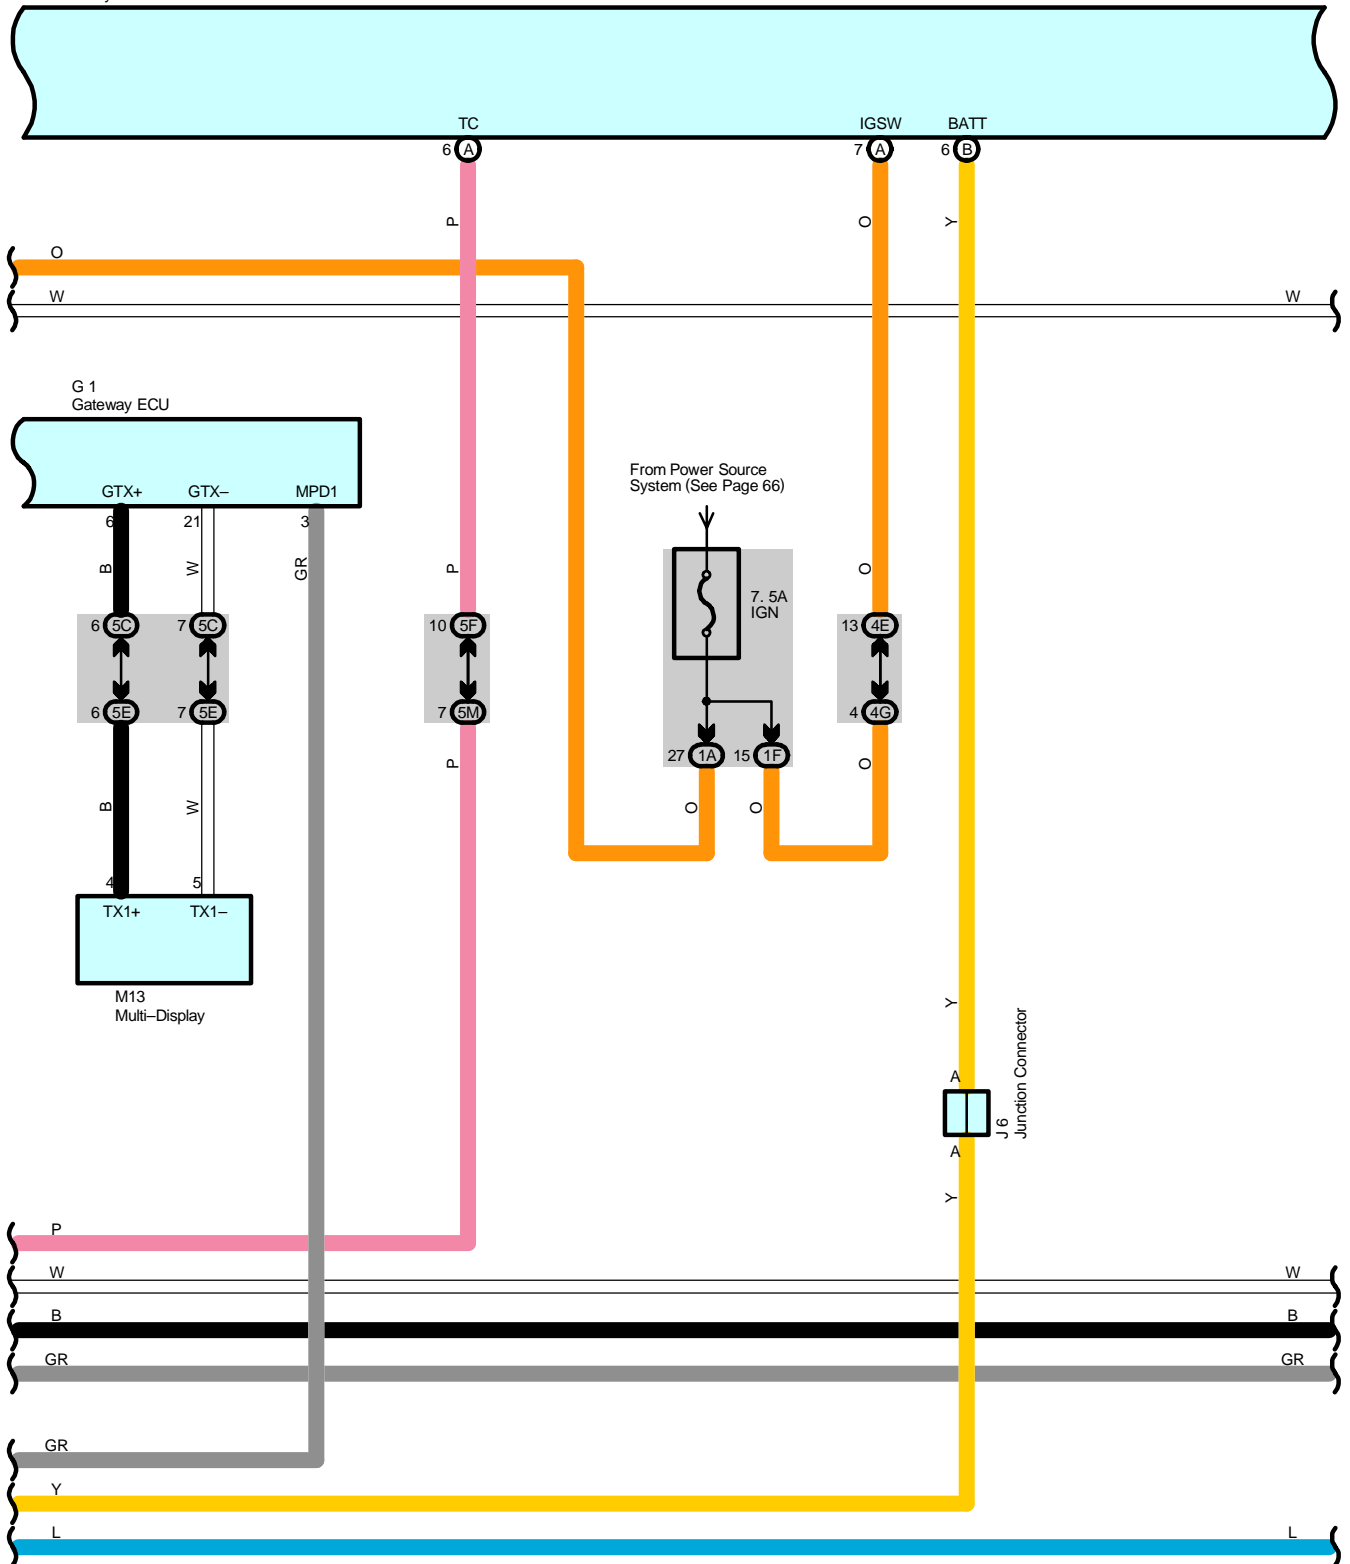


H14(A), H15(B), H16(C), H17(D)  
Hybrid Vehicle Control ECU

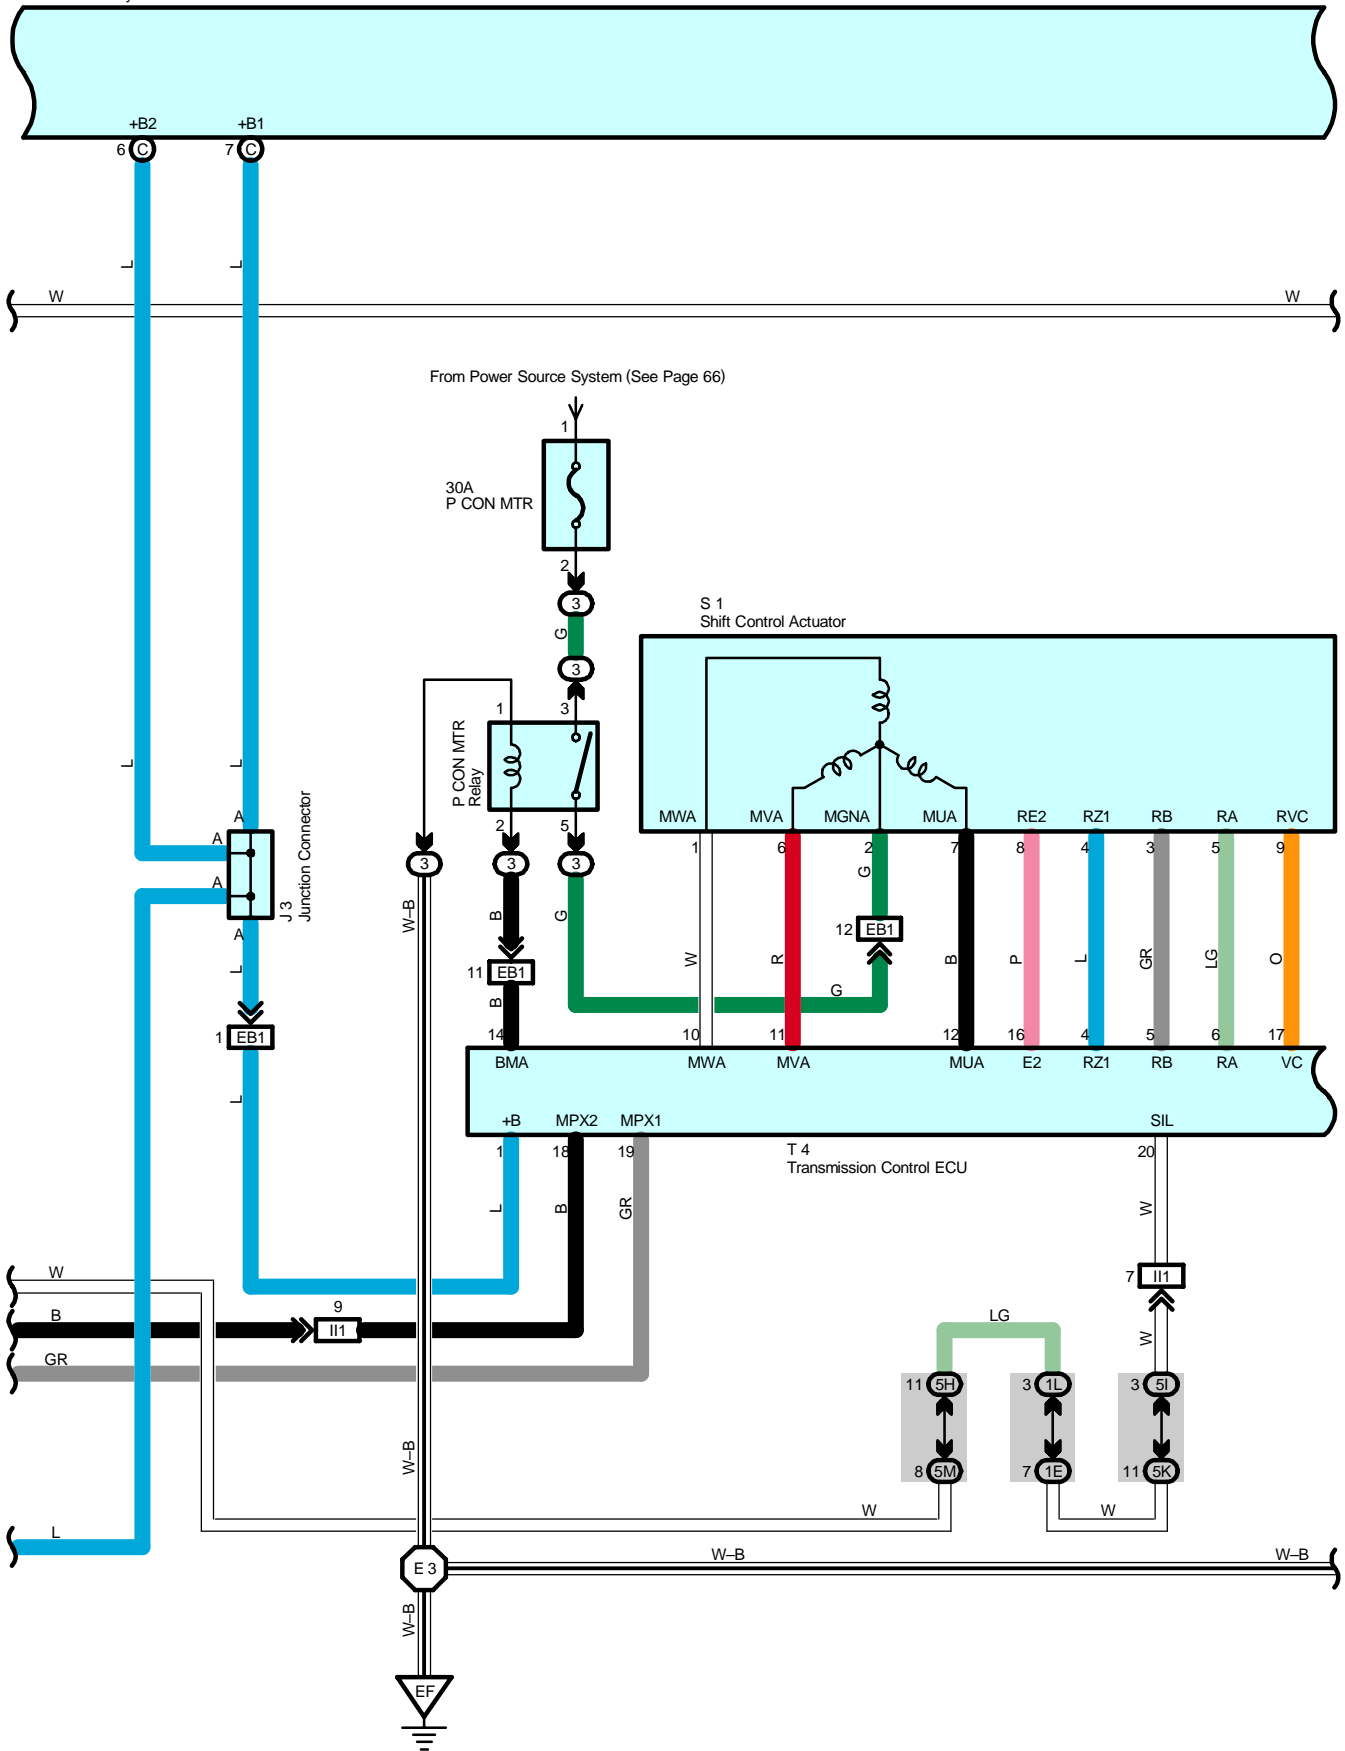


# Shift Control System

H14(A), H15(B), H16(C), H17(D)  
Hybrid Vehicle Control ECU

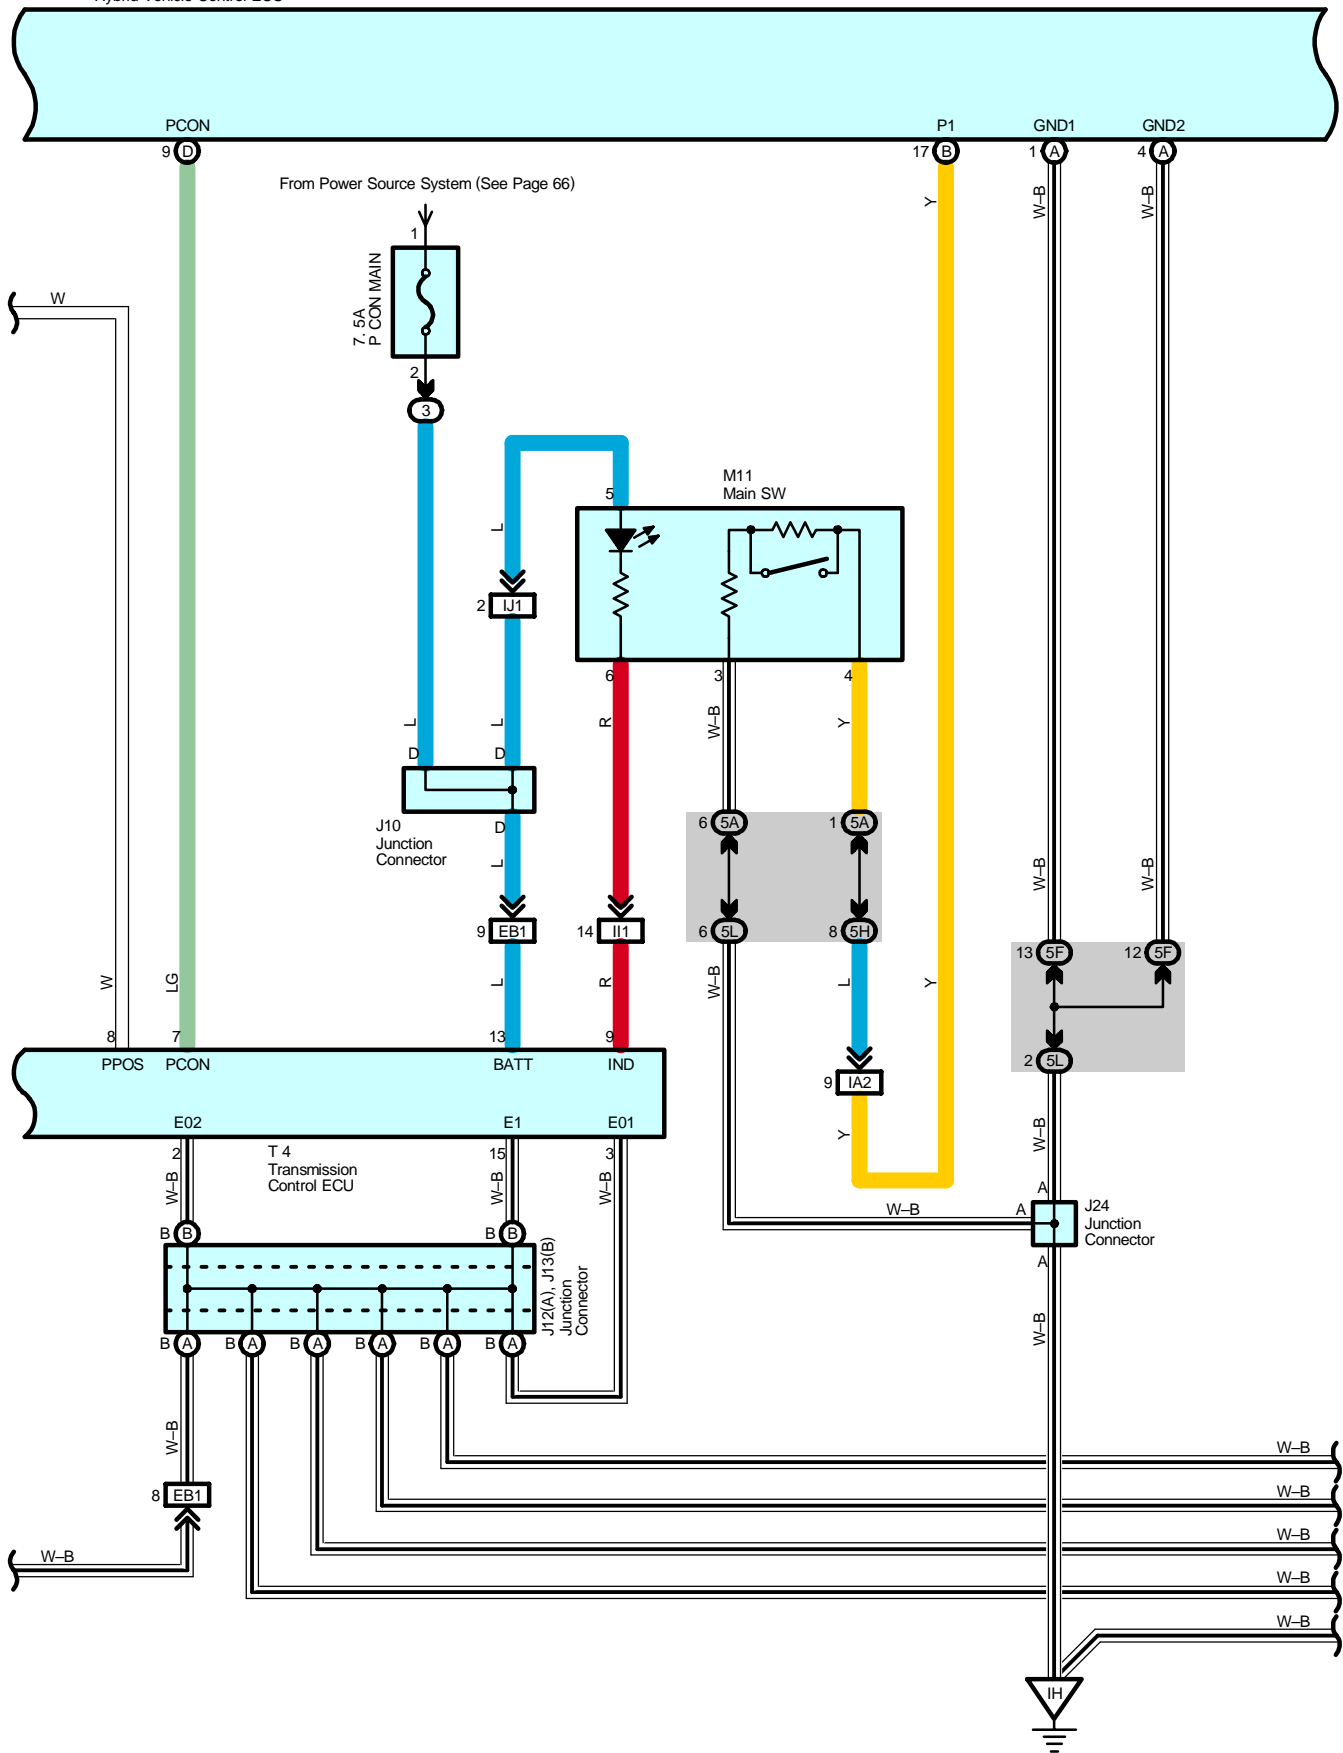

H14(A), H15(B), H16(C), H17(D)  
Hybrid Vehicle Control ECU

\* 3 : Shielded

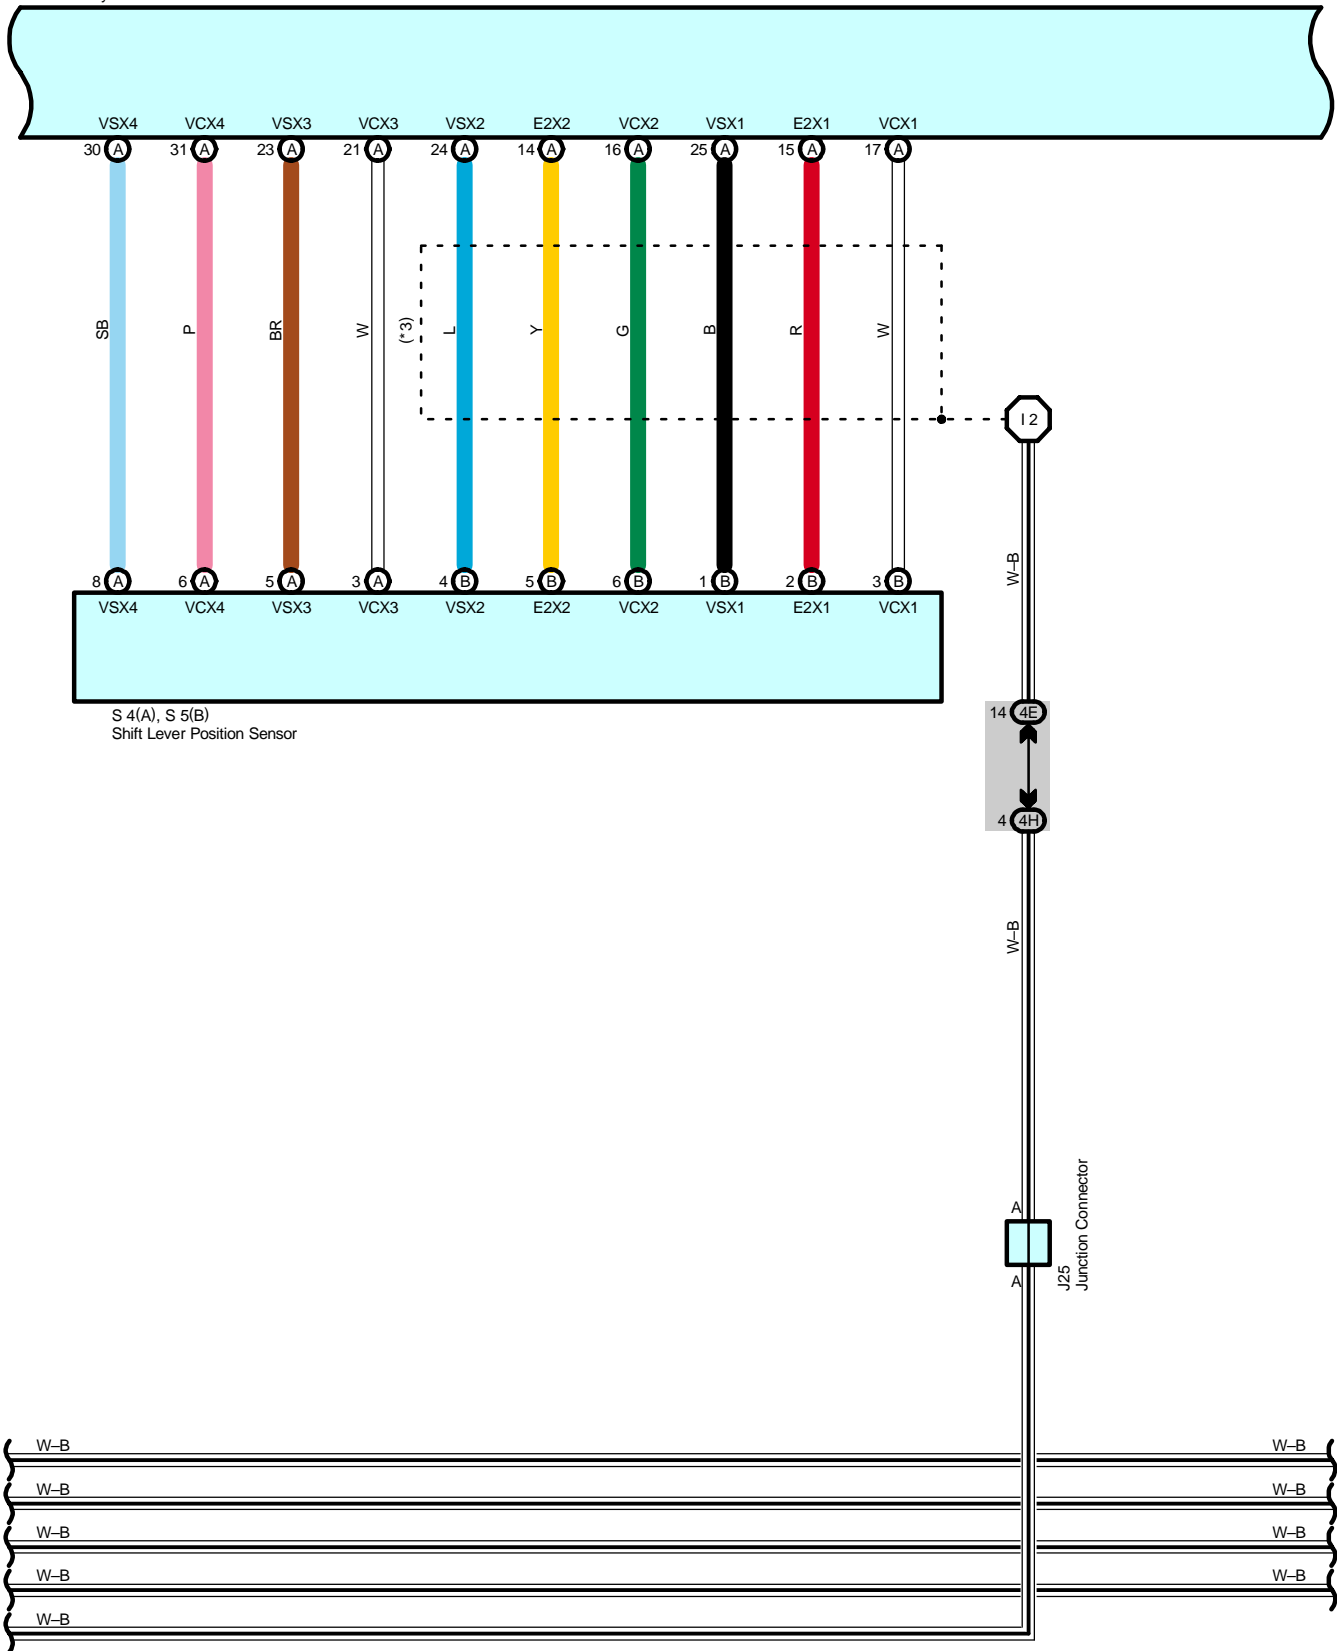


S 4(A), S 5(B)  
Shift Lever Position Sensor

J25  
Junction Connector


# Shift Control System

H14(A), H15(B), H16(C), H17(D)  
Hybrid Vehicle Control ECU

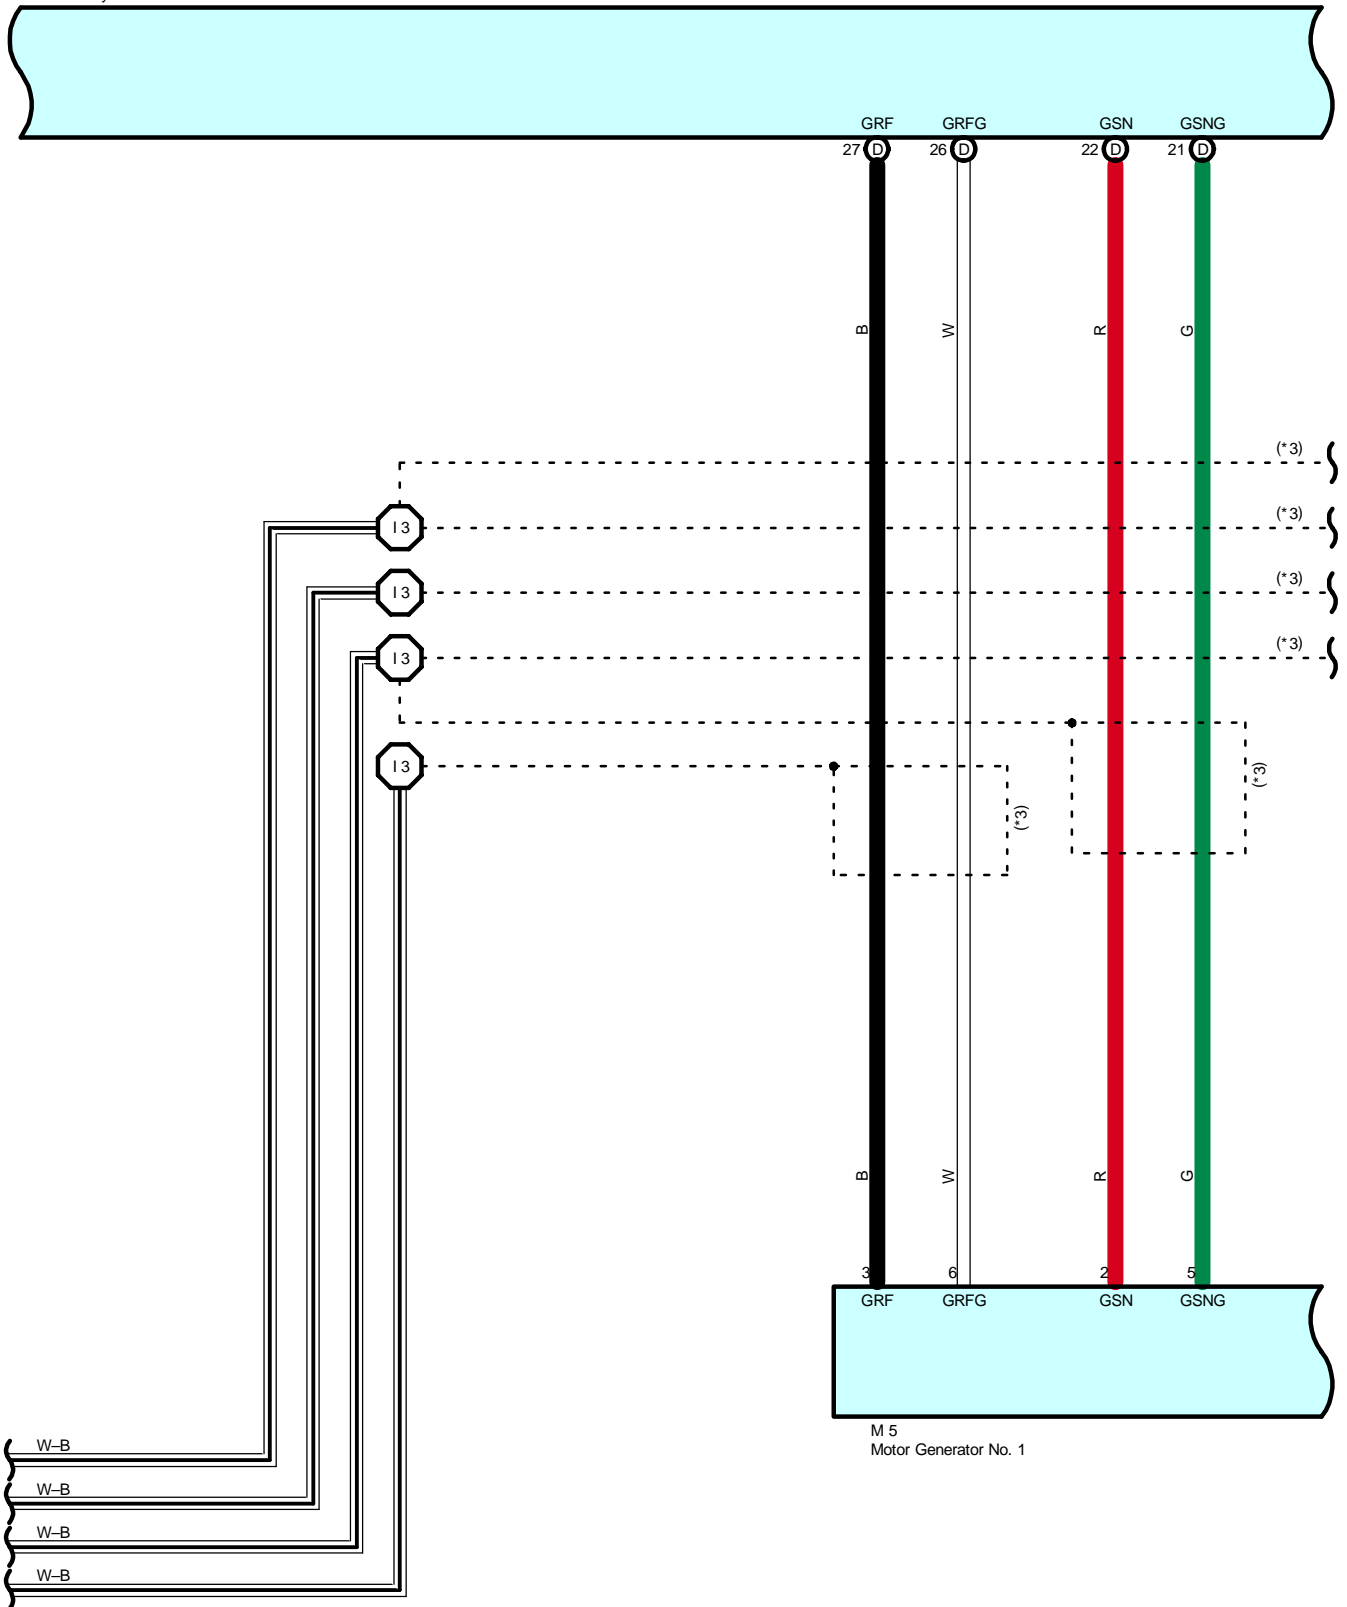

H14(A), H15(B), H16(C), H17(D)  
Hybrid Vehicle Control ECU

\* 3 : Shielded

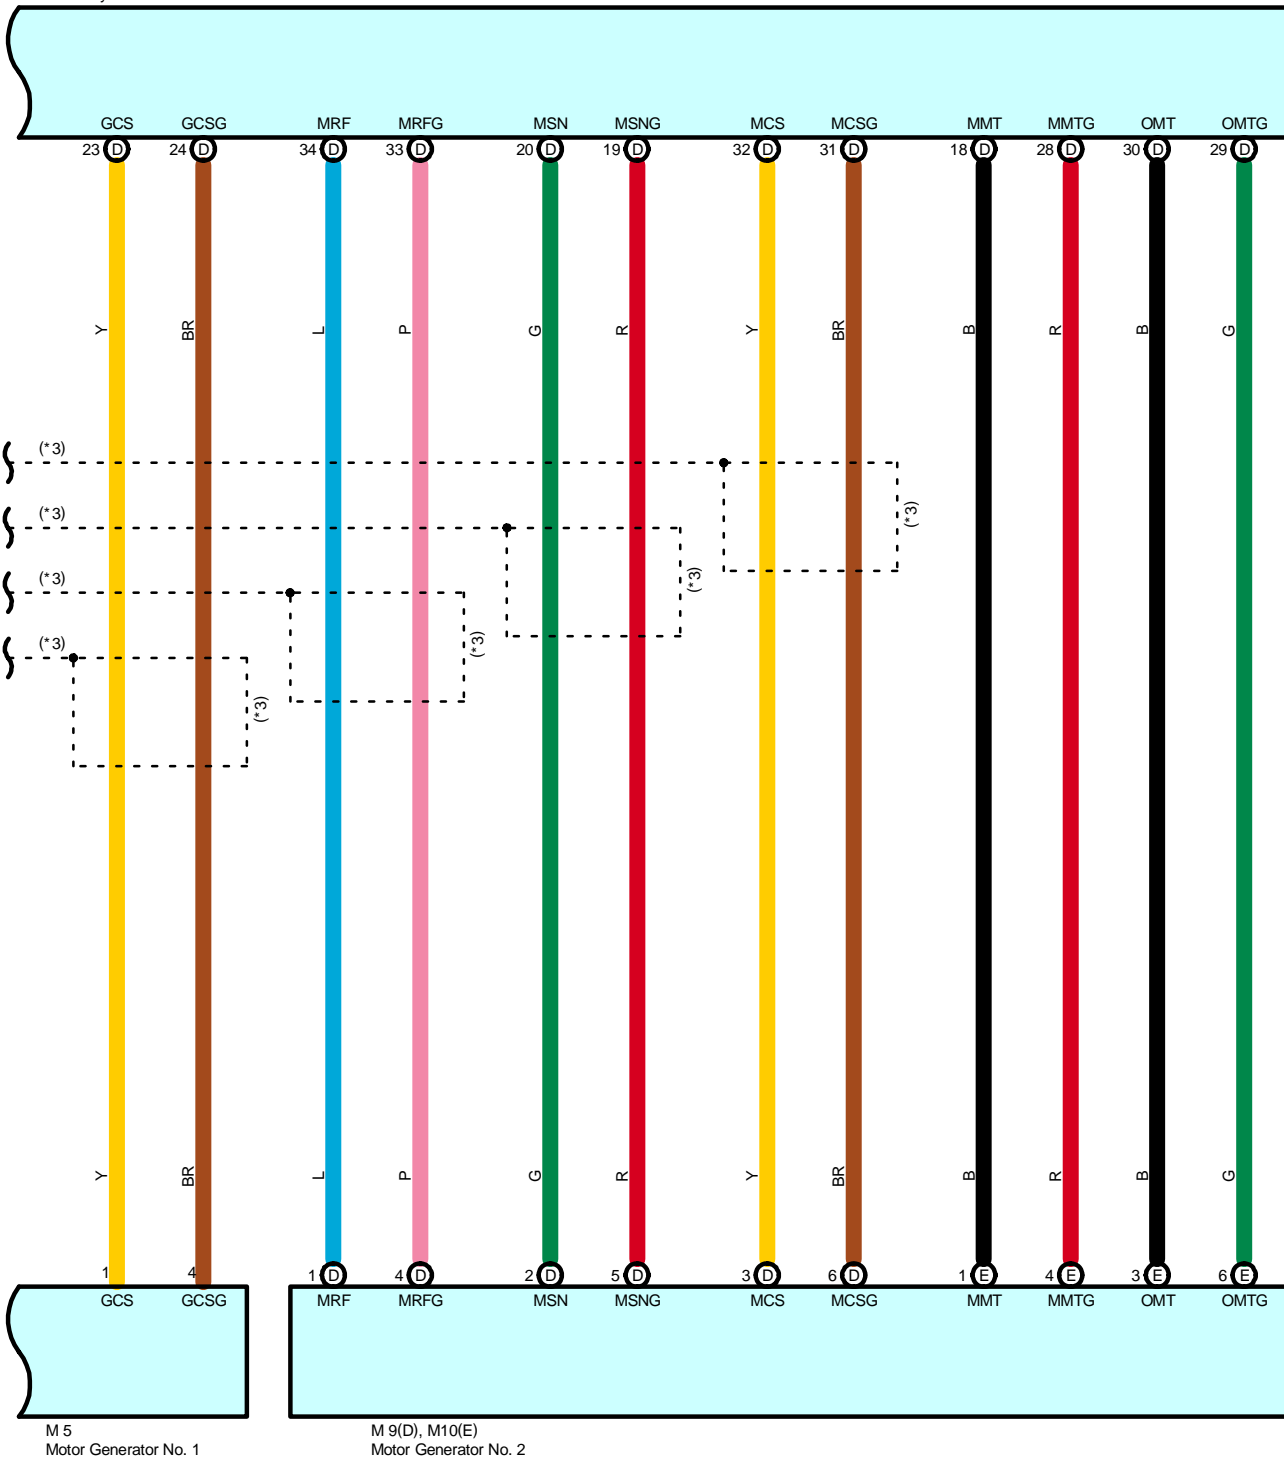

# Shift Control System

## System Outline

Under this system, operating signal of shift lever is sent to hybrid vehicle control ECU to control hybrid motor, which changes shift ranges (R, N, D, B) electrically. When shift is put in P range, transmission control ECU receives operating signal from hybrid vehicle control ECU and activates parking lock electrically.

### 1. Shift Range Change Function

Gear can be shifted to any shift range under condition when vehicle can drive except when reject function is in operation.

When vehicle cannot drive with power SW at IG ON position, gear can be shifted only to P and N range.

When vehicle cannot drive with power SW at ACC ON position, gear can be shifted only to P range.

When power SW is at OFF position, gear cannot be shifted to any range.

When main SW is operated at vehicle stop after starting hybrid system, gear is automatically changed to P range from any other gear range and turns off power supply.

### 2. Reject Function

Changing gear may not effect to change range under certain vehicle condition. Under such condition, warning buzzer of combination meter sounds to show the rejection and call for driver's attention. Followings are shift operations and shift range conditions under which reject function is activated.

- \* When gear is shifted from P range to other range without applying brake pedal, gear stays in P range.
- \* Main SW cannot put gear in P range during driving but changes to N range.
- \* Shift change to forward or backward during driving changes gear to N range.
- \* When gear is changed from other range than D range to B range, gear is changed to N range automatically.

### 3. Combination Meter Indication

The combination meter shows present shift range position. Other shift range positions than D or B range are not shown in lighting in the combination meter. This is to avoid unnecessary shifting operation to B range from other shift position except D range.

### 4. Operation of Parking Lock

Operation signal from/to P range is sent from main SW or power SW to transmission control ECU through hybrid vehicle control ECU. At that time the transmission control ECU operates P CON MTR relay, activates parking lock actuator with appropriate control of electric current, and lights up main SW when shift is at P range. If the system has abnormality on parking lock operation, it tells the system abnormality to the driver by lighting up master warning light on combination meter, displaying warning of the system abnormality on the multi-display, and blinking indicator light of main SW.

### 5. Operation at Electric Power OFF

Under electric power OFF, transmission control ECU receives signal from power source control ECU by multi-communication, and sends shift range position information to hybrid vehicle control ECU. The hybrid vehicle control ECU sends signal to power source control ECU to tell whether it is right or wrong condition to turn off electric power. Accepted conditions for electric power OFF are as follows;

- \* When hybrid vehicle control ECU is not sending request signal for parking lock release with shift range in P range position.
- \* With shift range is at other range than P range, when hybrid vehicle control ECU is outputting signal that hybrid system is not running or request signal for parking lock.
- \* When there is abnormal motor's not running condition with parking lock in operation, and hybrid system is not running and parking brake is being applied.

## Service Hints

### T4 Transmission Control ECU

1-Ground : Approx. 12 volts with the power SW at IG ON position

13-Ground : Always approx. 12 volts

2, 3, 15-Ground : Always continuity

**○ : Parts Location**

Code	See Page	Code	See Page	Code	See Page
A8	46	J13   B	48	P6	49
B5   A	46	J14	48	P11	49
C10	47	J15	48	S1	45
D1	47	J16	48	S4   A	49
G1	47	J17	48	S5   B	49
H14   A	47	J18	48	S7   A	49
H15   B	47	J24	48	S8   B	49
H16   C	47	J25	48	S9   C	49
H17   D	47	M5	45	S10   D	49
J3	45	M9   D	45	S11	49
J6	48	M10   E	45	S16	49
J9	48	M11	48	T4	49
J10	48	M13	48	T5	49
J12   A	48	P2	49		

**○ : Relay Blocks**

Code	See Page	Relay Blocks (Relay Block Location)
3	22	Engine Room R/B (Engine Compartment Left)

**○ : Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1E	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1F		
1G		
1J		
1L		
1M		
3I	22	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
3J		
4C	36	Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4D		
4E		
4F		
4G		
4H		
4I		
4J		
4L		
5A	40	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5C		
5D		
5E		
5F		
5G		
5H		
5I		
5J		
5K		
5L		
5M		



# Shift Control System

## : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB1	54	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B)
IA1	56	Engine Room Main Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)
IA2		
IA3		
IG1	58	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the Combination Meter)
IG2		
II1	58	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
IJ1	58	Engine Room Main Wire and Instrument Panel Wire (Behind the Glove Box)

## : Ground Points


Code	See Page	Ground Points Location
EE	54	Left Side of the Suspension Tower
EF		
IH	56	Cowl Side Panel LH
II	56	Instrument Panel Brace LH

## : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E3	54	Engine Room Main Wire	I3	58	Engine Wire
I2	58	Instrument Panel Wire			




# Cruise Control

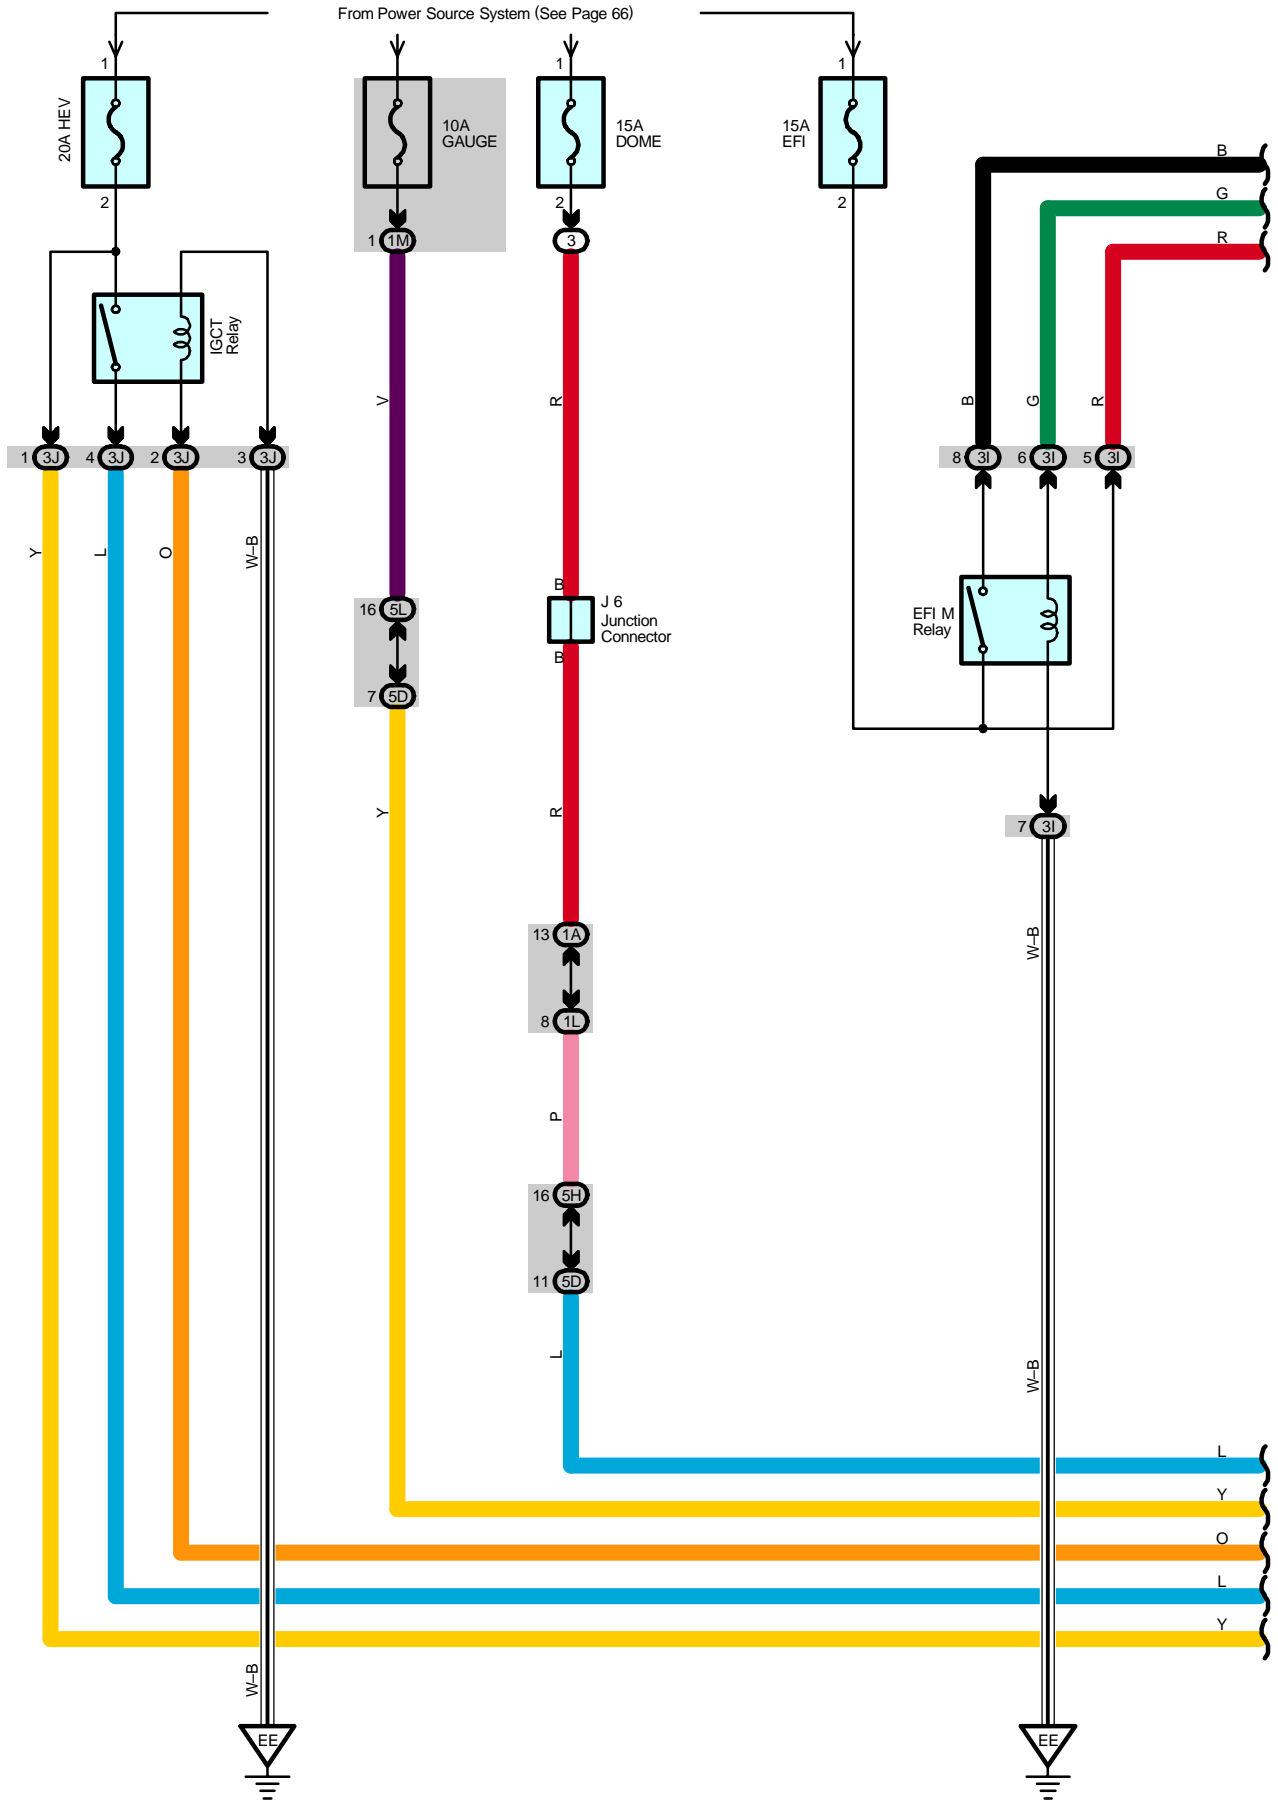


From Power Source System (See Page 66)

\* 1 : Shielded

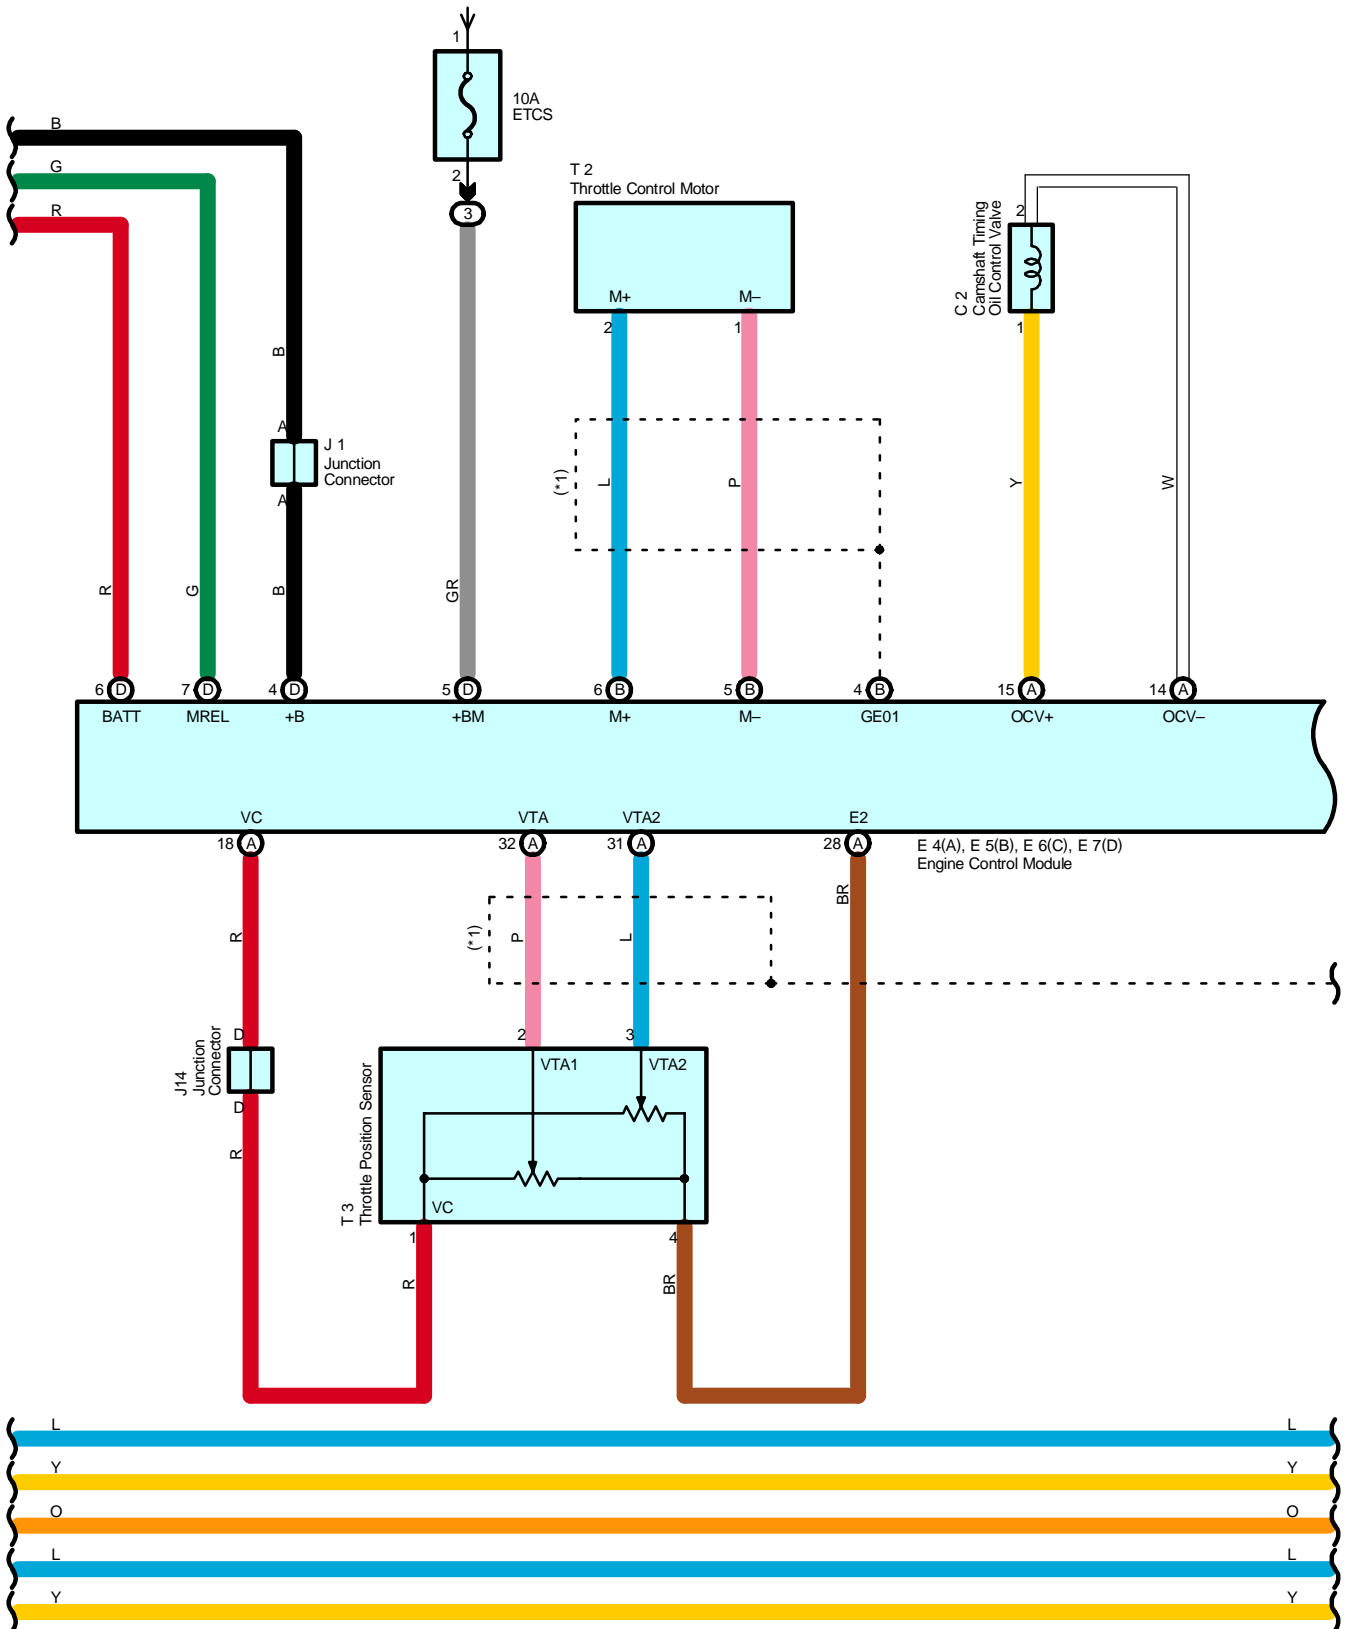


# Cruise Control

\* 1 : Shielded

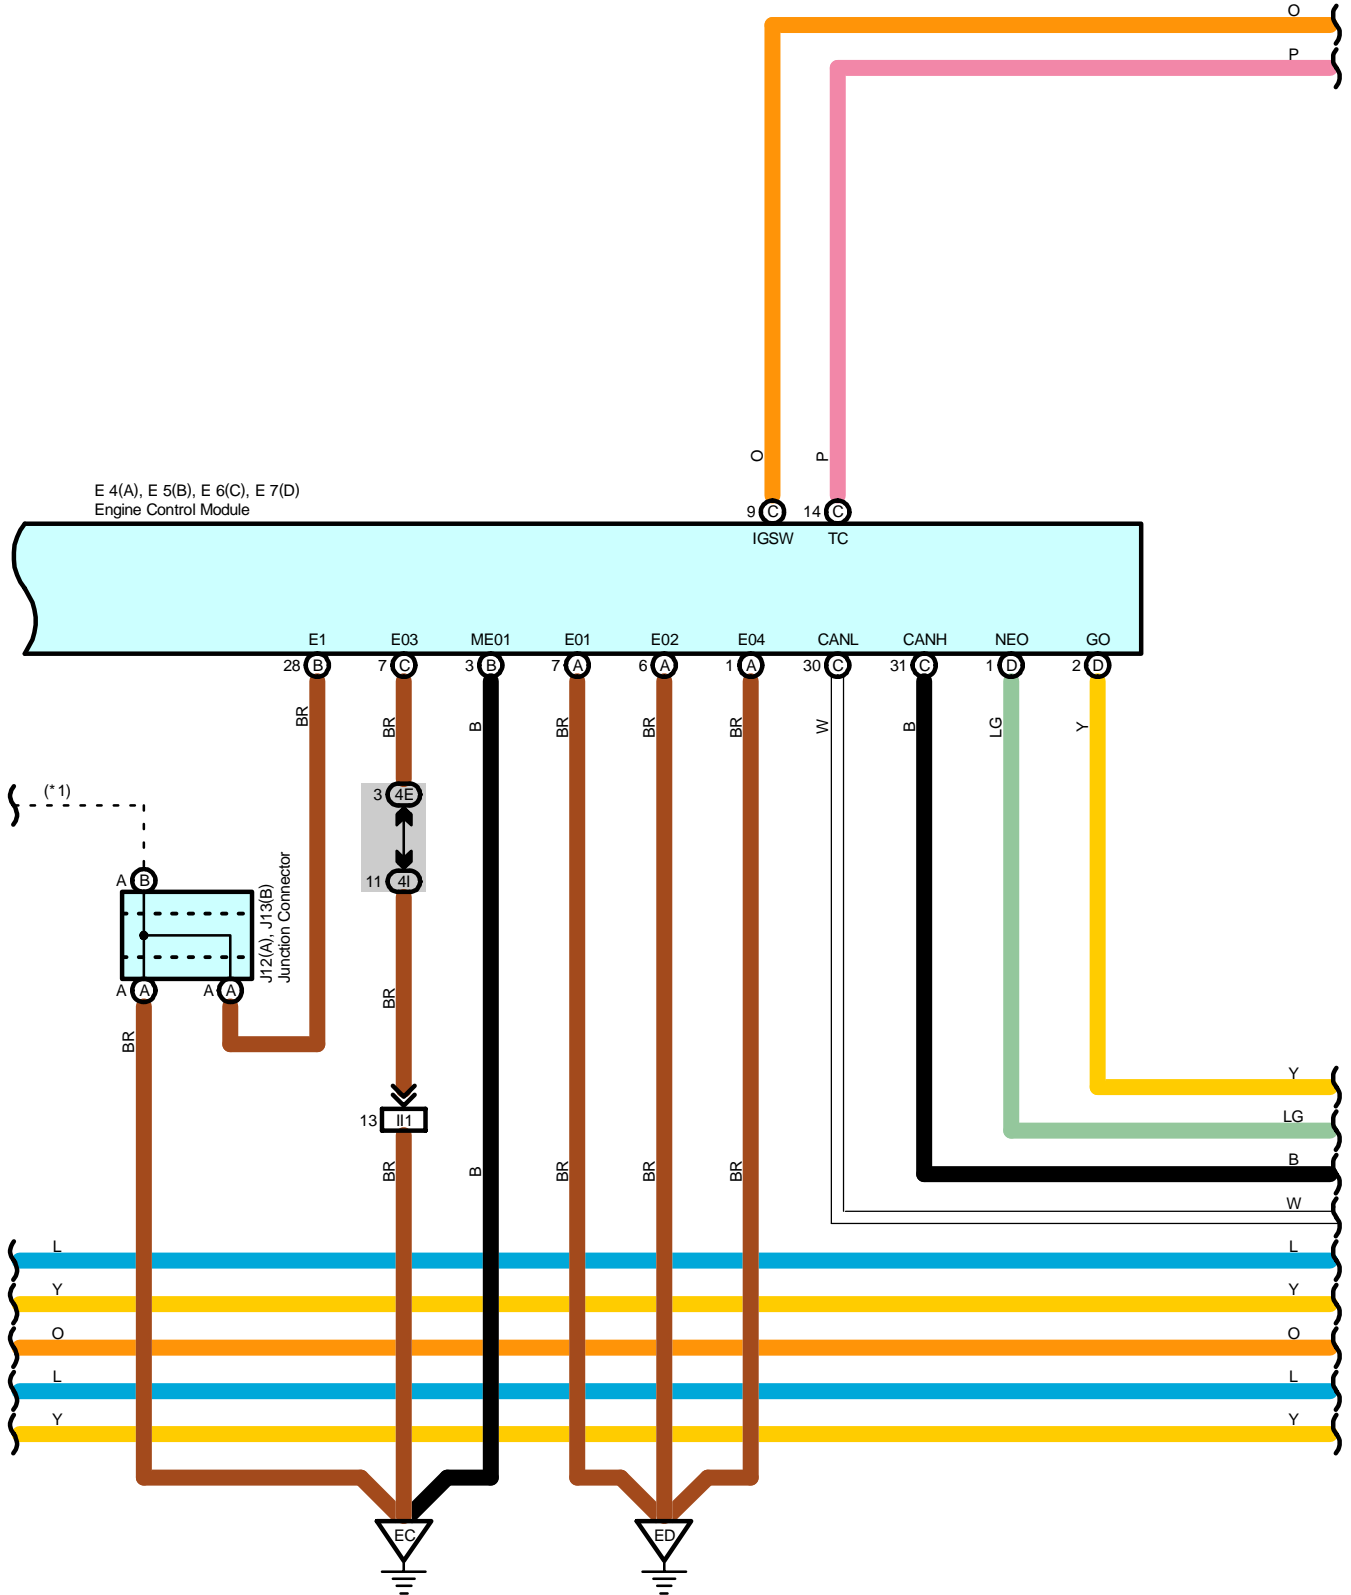


H14(A), H15(B), H16(C), H17(D)  
Hybrid Vehicle Control ECU

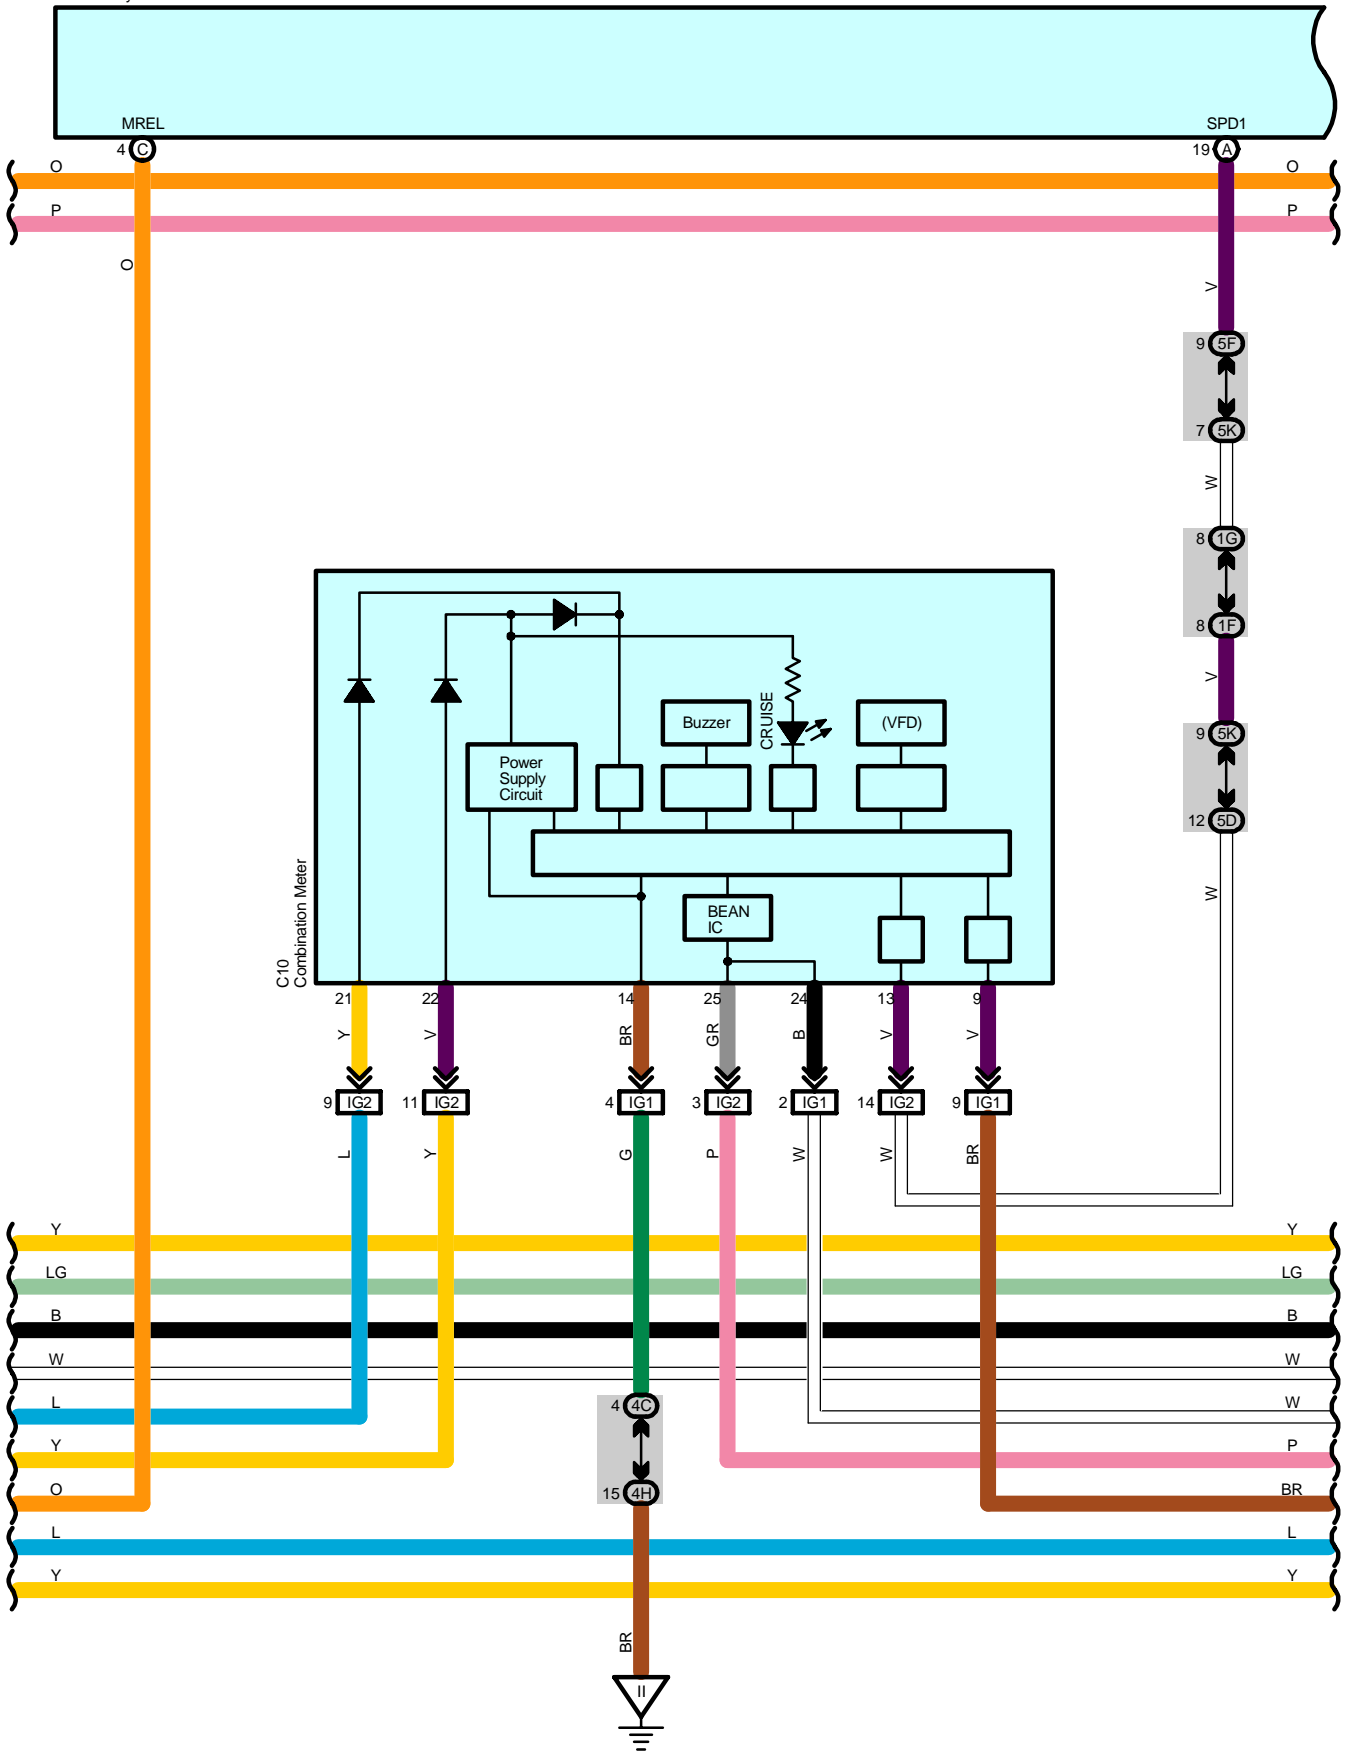


# Cruise Control

H14(A), H15(B), H16(C), H17(D)  
Hybrid Vehicle Control ECU

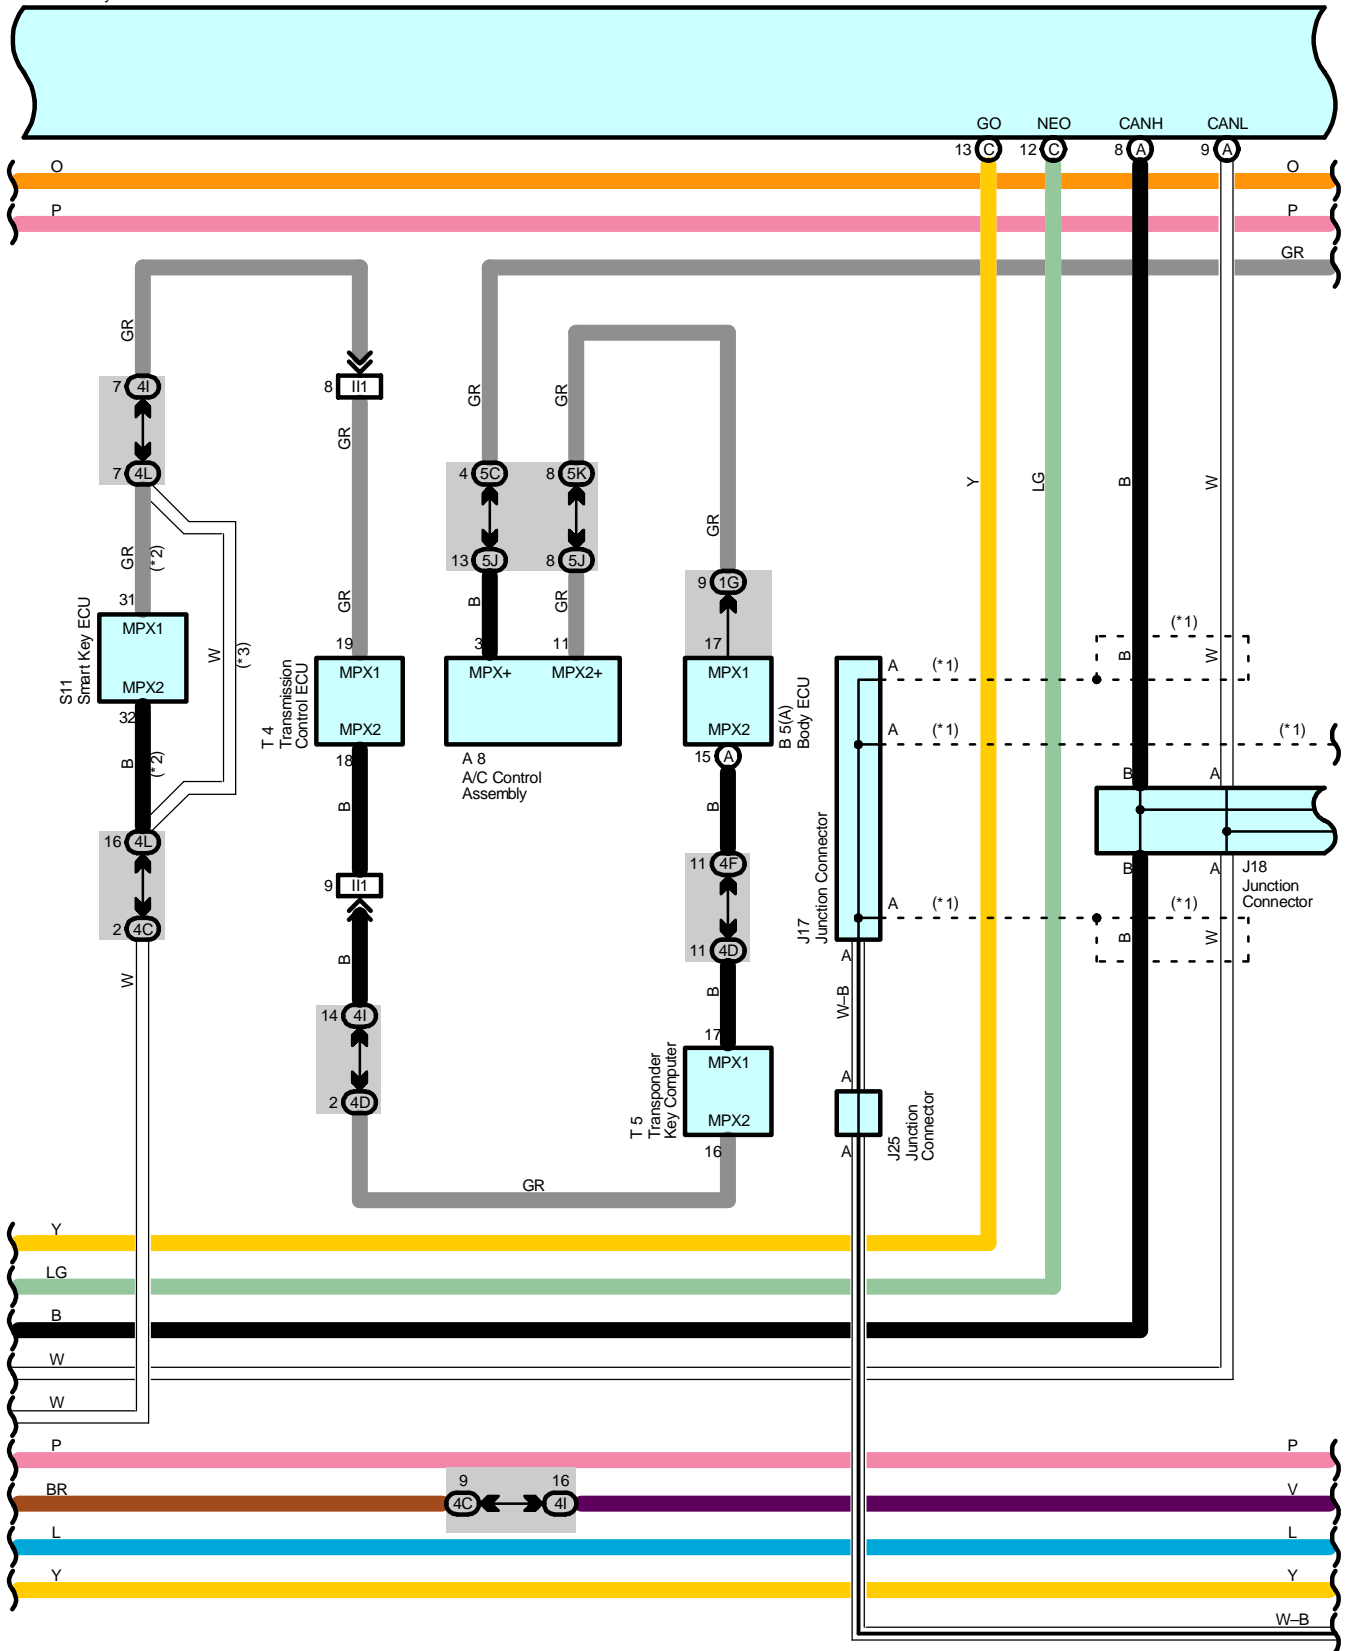


H14(A), H15(B), H16(C), H17(D)  
Hybrid Vehicle Control ECU

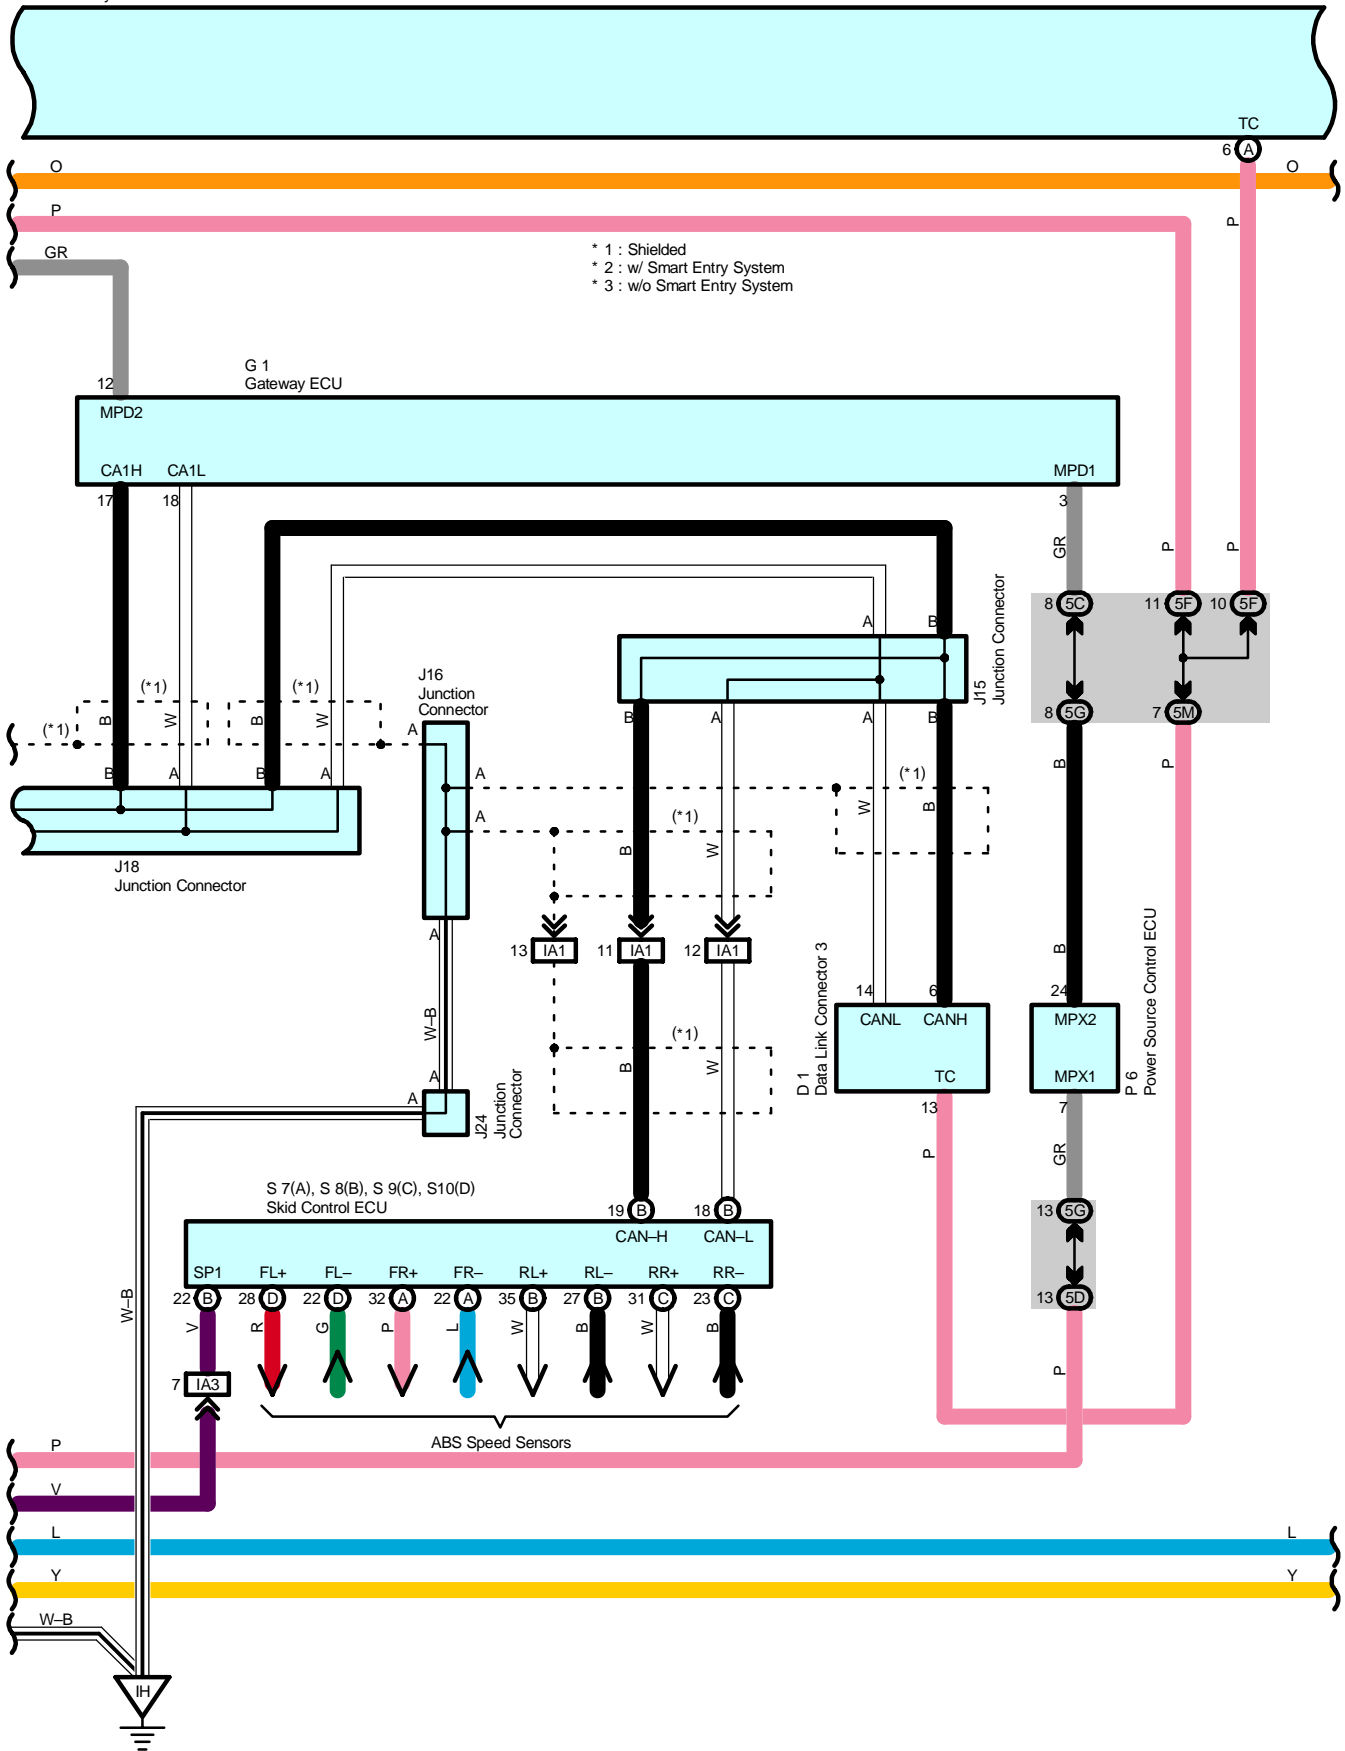




# Cruise Control

H14(A), H15(B), H16(C), H17(D)  
Hybrid Vehicle Control ECU

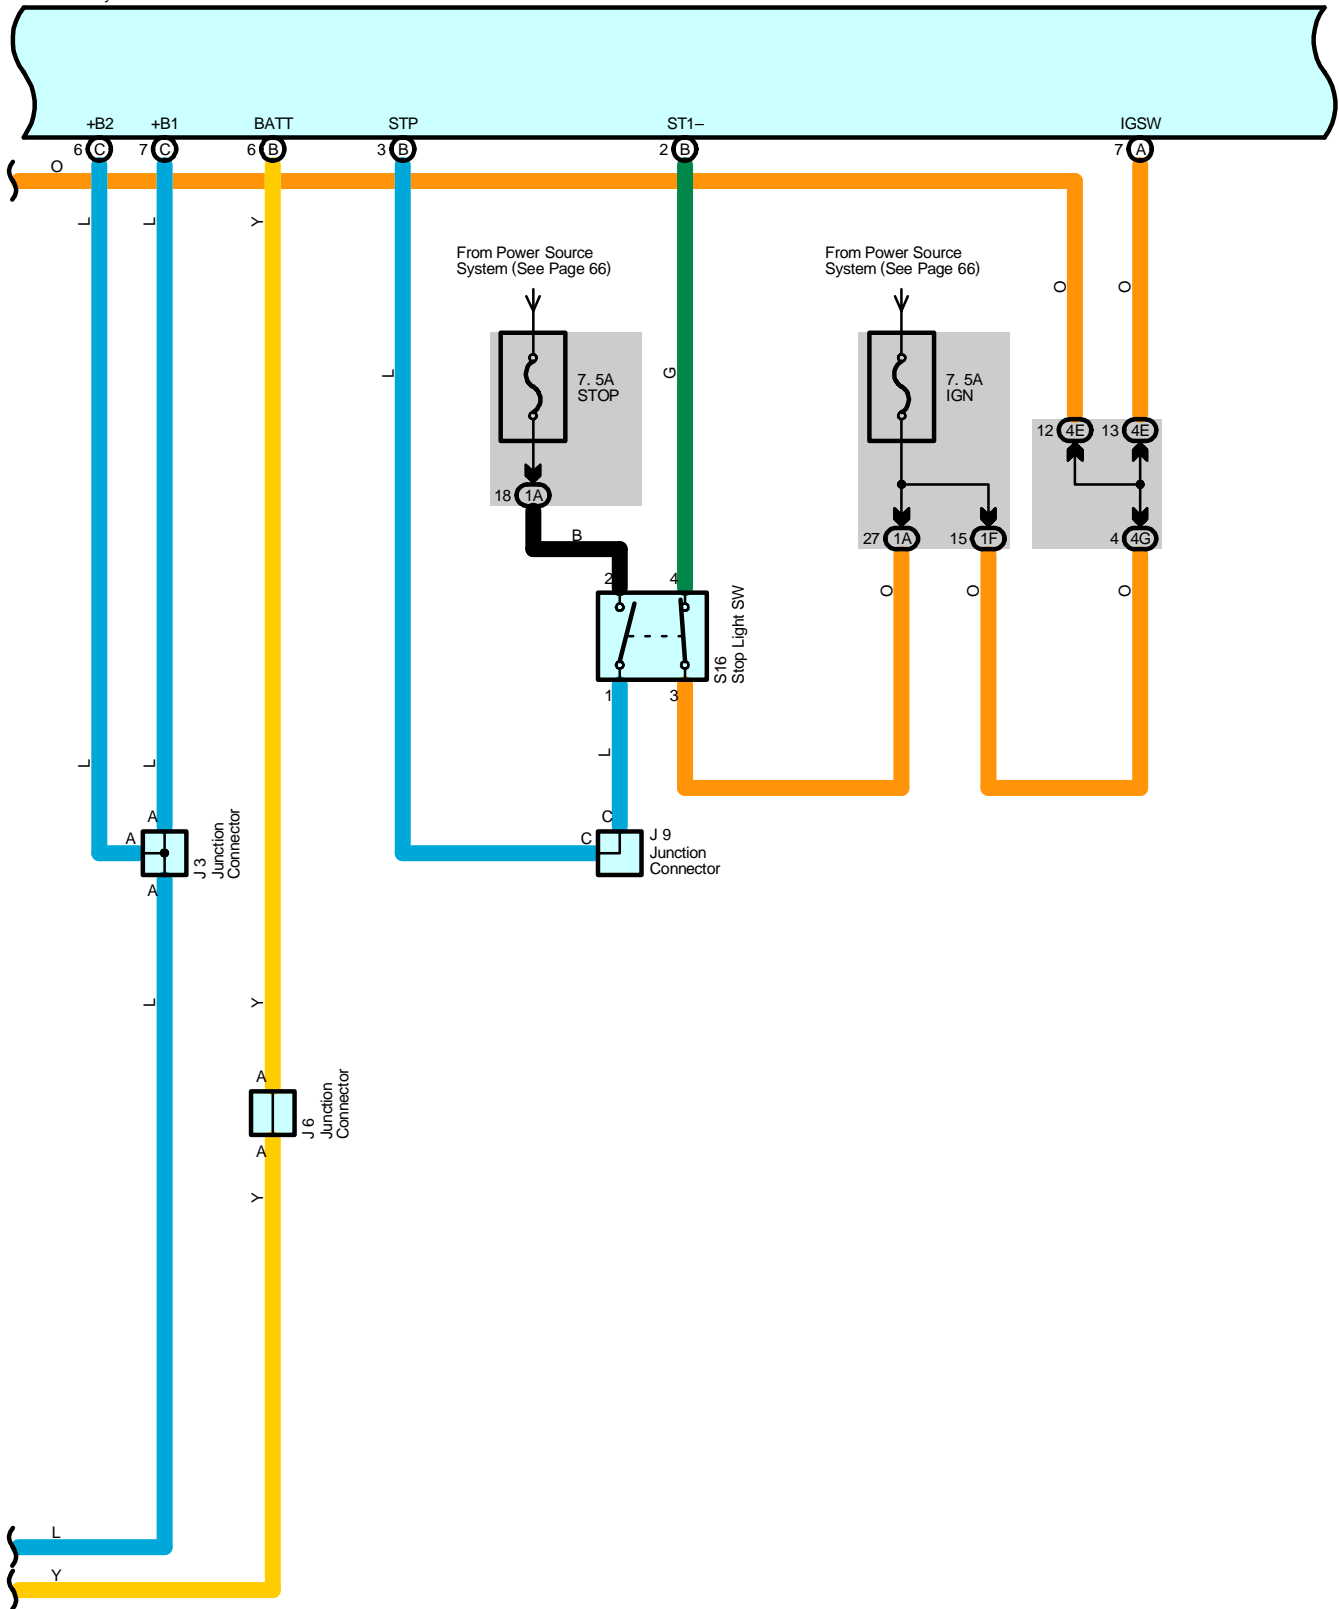

H14(A), H15(B), H16(C), H17(D)  
Hybrid Vehicle Control ECU

\* 1 : Shielded

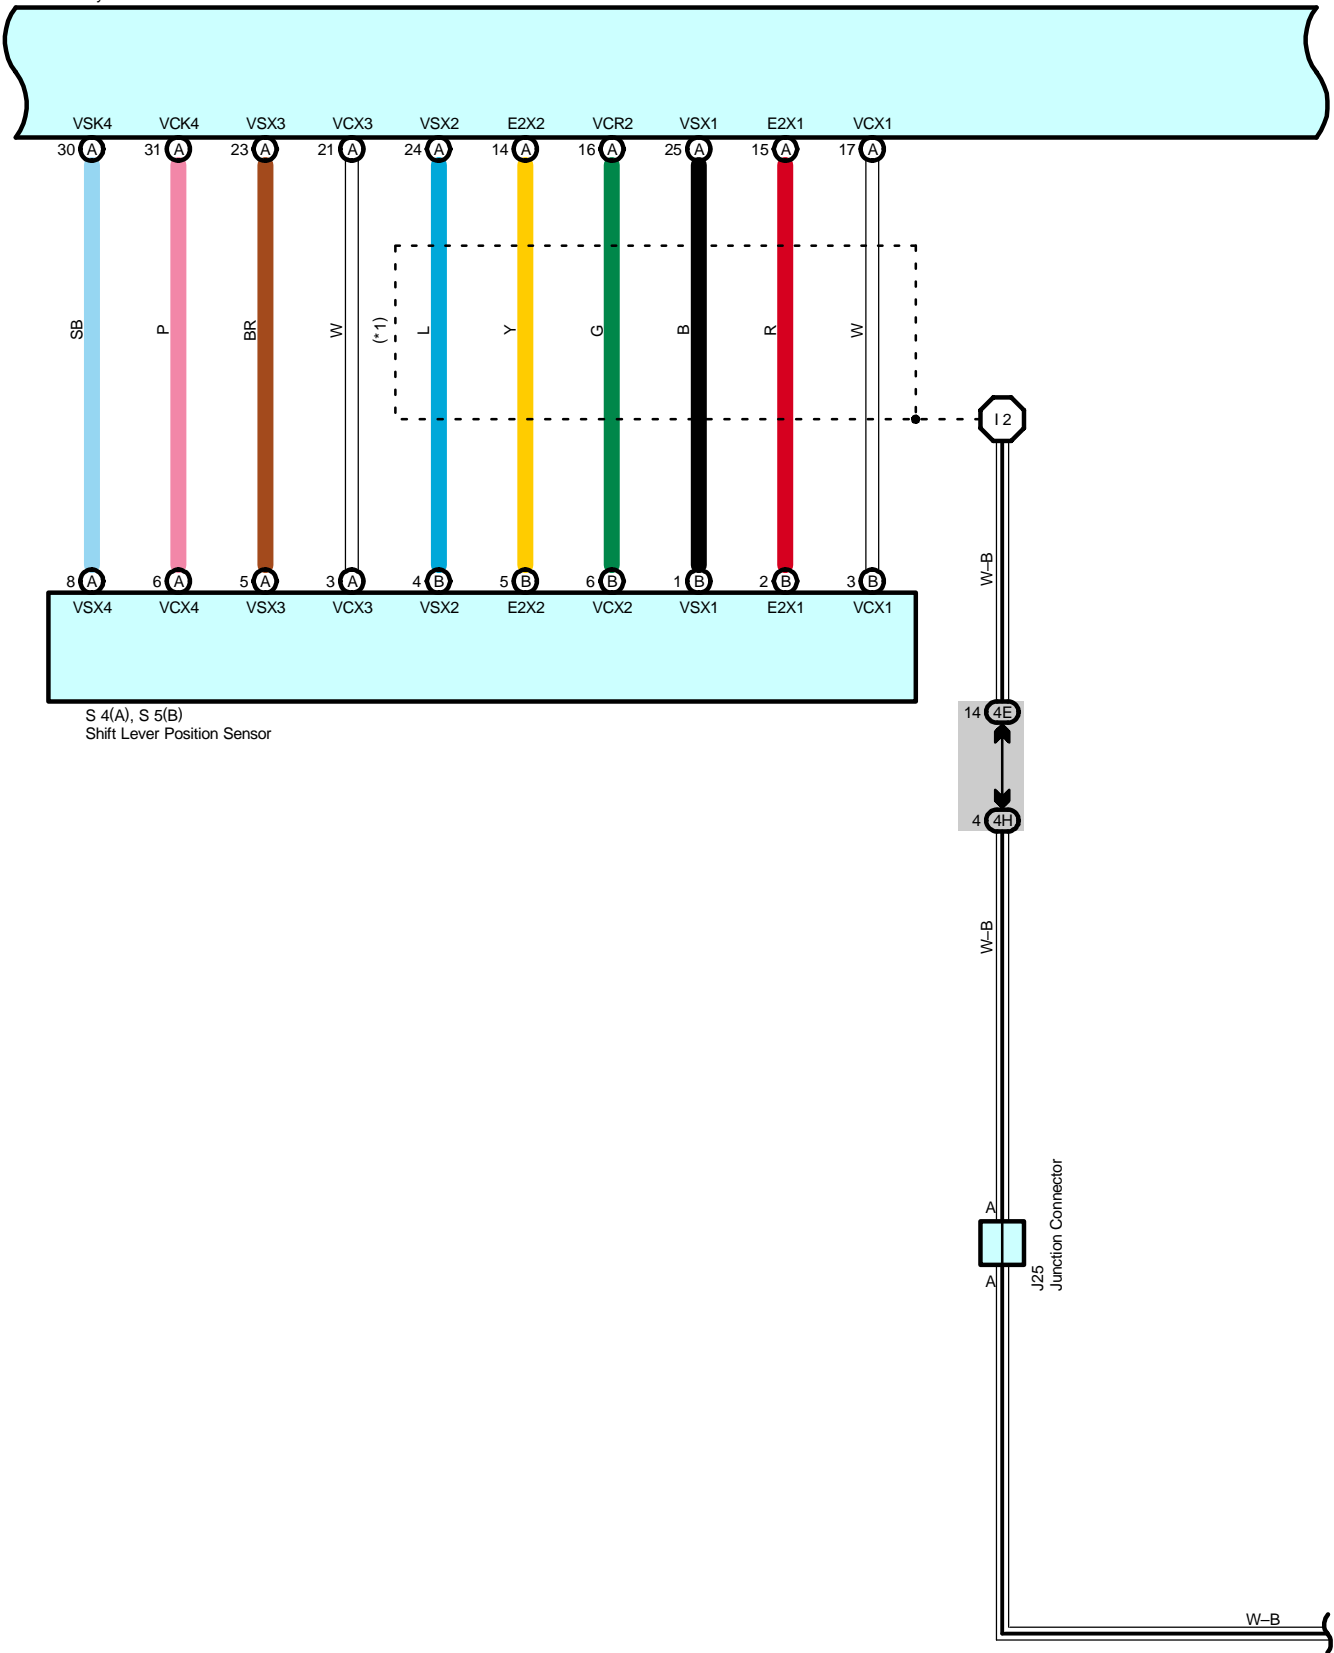

S 4(A), S 5(B)  
Shift Lever Position Sensor

I2

14 4E

4 4H


A A

J25  
Junction Connector

W-B


# Cruise Control

H14(A), H15(B), H16(C), H17(D)  
Hybrid Vehicle Control ECU

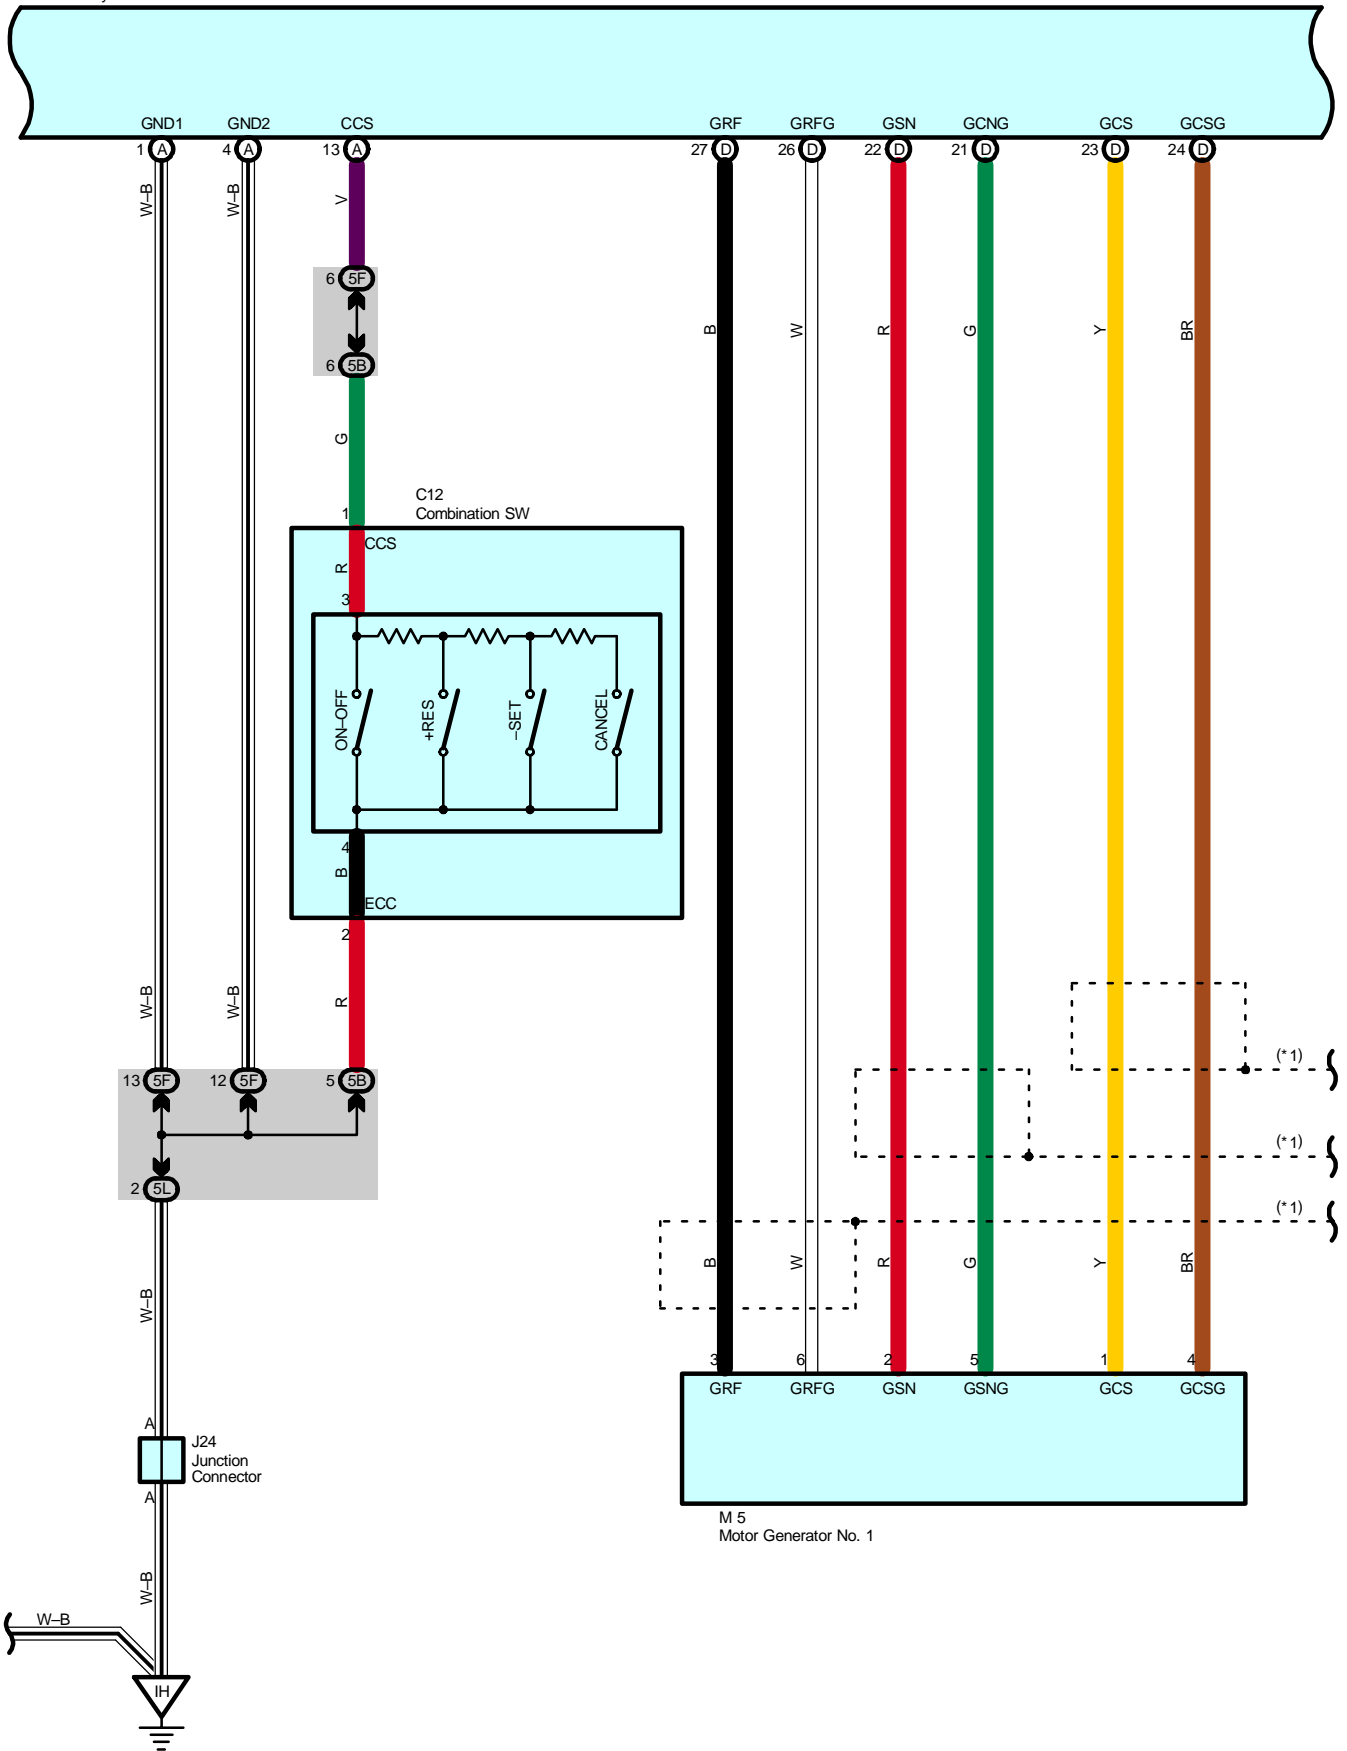

H14(A), H15(B), H16(C), H17(D)  
Hybrid Vehicle Control ECU

\* 1 : Shielded

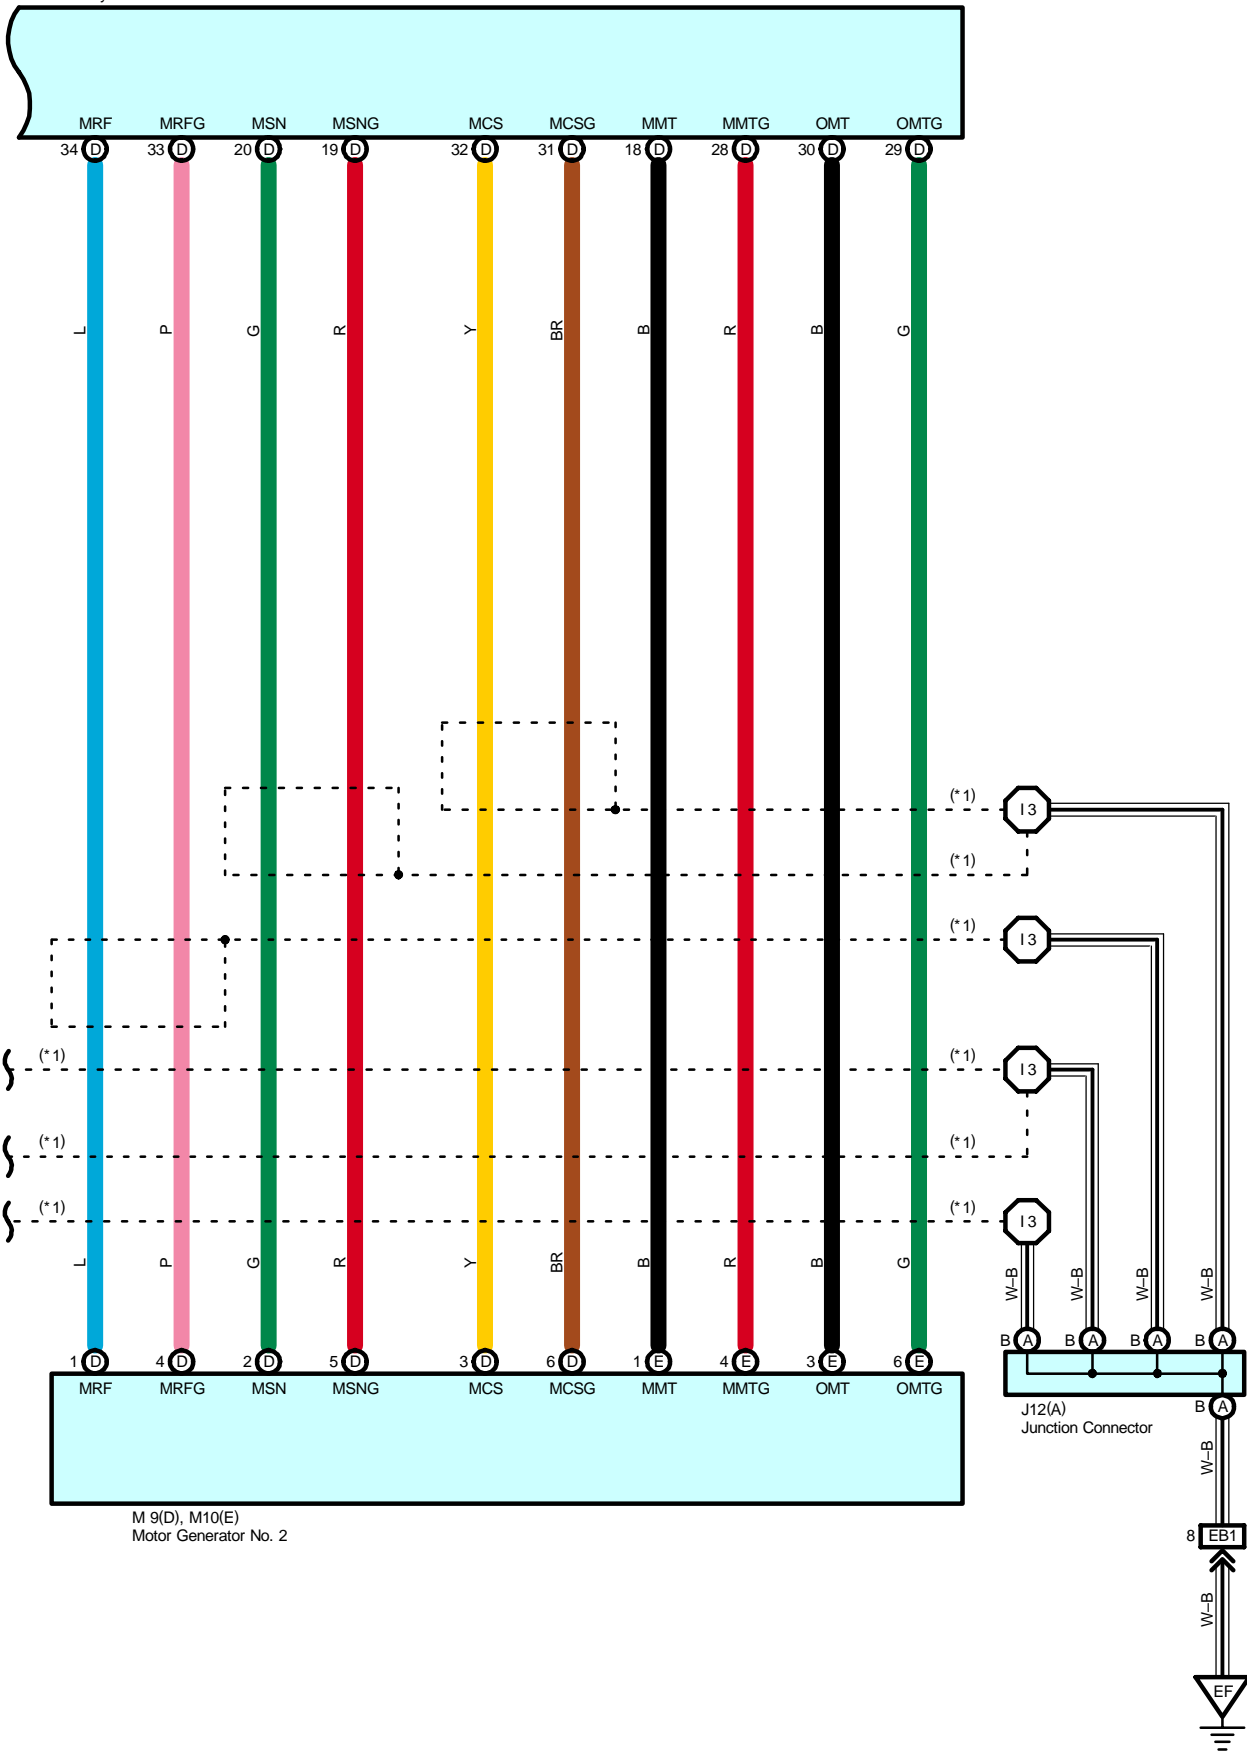

# Cruise Control

## System Outline

Cruise control is the speed control device, which can set desired speed by just operating the switch on the control panel without applying the accelerator pedal. The device can be used when driver would like to drive the vehicle at fixed speed.

### 1. Set Control

If the cruise control switch is pushed to – SET side and hand is released from the switch during driving, (The available range of set speed: between 40 and 200 km/h) with the ON–OFF switch at ON (Power indicator comes on), the device stores vehicle speed at that time and controls it constantly at the set speed.

### 2. Set Speed Control

The device compares the actual vehicle speed with the set speed, and controls the driving power of the motor and the engine by calculating the cruise control requirements to drive it constantly at the set speed.

### 3. Coast Control

If the cruise control switch is kept pushed to the – SET side during driving in the cruise control mode, the device recognizes the cruise control requirement is at zero and decelerates the vehicle speed. When hand is released from the cruise control switch, the device stores the vehicle speed while the vehicle speed is decelerating. From then on, vehicle speed is controlled to stay at that speed.

Every time the switch is operated to – SET side momentarily (For about 0.5 seconds), the set speed is decreased by about 1.6 km/h. However, in case of tap–down operation to make more than 5 km/h gap between the set speed and the actual vehicle speed, the device recalls the original set speed and controls it at the speed constantly.

### 4. Accel Control

If the cruise control switch is kept pushed to the + RES side during driving in the cruise control mode, the device recognizes the cruise control is on the acceleration side and accelerates the vehicle speed. When hand is released from the cruise control switch, the device stores the vehicle speed at that time and controls it with the set speed constantly.

Every time the switch is operated to + RES side momentarily (For about 0.5 seconds), the set speed is increased by about 1.6 km/h. However, in case of tap–up operation to make more than 5 km/h gap between the set speed and the actual vehicle speed, the device does not change the set speed. (Tap–up operation is not available.)

### 5. Resume Control

After the cruise control mode is cancelled by any one the cancel switches, the mode can be resumed and controlled at the set speed by operating the cruise control switch in the + RES direction providing that the vehicle speed has not dropped below the low speed limit [Approx. 40 km/h (25 mph)].

The mode cannot be resumed if the vehicle speed once drops below the low speed limit, because the speed in the memory is cleared.

### 6. Manual Cancel Control

If any of the following signals is sent to the device while the vehicle is running in the cruise control, the cruise control is cancelled accordingly.

- \* Stop light switch: ON (Depressing the brake pedal)
- \* CANCEL switch of control switch: ON
- \* ON–OFF switch: OFF

### 7. Auto Cancel Function

A) The set speed is cleared and the cruise control is canceled under the following conditions. The cruise main indicator blinks until the main switch is turned OFF. The speed control is unavailable unless the main switch is turned ON again.

- \* When the stop light switch open or short–circuits.
- \* When signal of sudden change in the vehicle speed is sent.

B) The set speed is cleared and the cruise control is canceled under the following conditions.

- \* When there is malfunction of the stop light switch input circuit.
- \* When the vehicle speed becomes lower than 40 km/h.
- \* When the vehicle speed becomes lower than the speed that 16 km/h is subtracted from the set speed.

## Service Hints

### C12 Combination SW

- 1–2 : Approx. 1540  $\Omega$  with the CANCEL SW on
- Approx. 240  $\Omega$  with the + RES SW on
- Approx. 630  $\Omega$  with the – SET SW on

**○ : Parts Location**

Code	See Page	Code	See Page	Code	See Page
A8	46	J1	45	M10	E 45
B5	A 46	J3	45	P6 49	
C2	44	J6	48	S4	A 49
C10	47	J9	48	S5	B 49
C12	47	J12	A 48	S7	A 49
D1	47	J13	B 48	S8	B 49
E4	A 47	J14	48	S9	C 49
E5	B 47	J15	48	S10	D 49
E6	C 47	J16	48	S11 49	
E7	D 47	J17	48	S16 49	
G1	47	J18	48	T2 45	
H14	A 47	J24	48	T3 45	
H15	B 47	J25	48	T4 49	
H16	C 47	M5	45	T5 49	
H17	D 47	M9	D 45		

**○ : Relay Blocks**

Code	See Page	Relay Blocks (Relay Block Location)
3	22	Engine Room R/B (Engine Compartment Left)

**○ : Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1F	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1G		
1L		
1M		
3I		
3J	22	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
4C	36	Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4D		
4E		
4F		
4G		
4H		
4I		
4L		
5B	40	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5C		
5D		
5F		
5G		
5H		
5J		
5K		
5L		
5M		

# Cruise Control

## : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB1	54	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B)
IA1	56	Engine Room Main Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)
IA3		
IG1	58	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the Combination Meter)
IG2		
II1	58	Engine Wire and Instrument Panel Wire (Behind the Glove Box)

## : Ground Points

Code	See Page	Ground Points Location
EC	54	Engine Block
ED		
EE	54	Left Side of the Suspension Tower
EF		
IH	56	Cowl Side Panel LH
II	56	Instrument Panel Brace LH

## : Splice Points


Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I2	58	Instrument Panel Wire	I3	58	Engine Wire







From Power Source System (See Page 66)


From Power Source System (See Page 66)

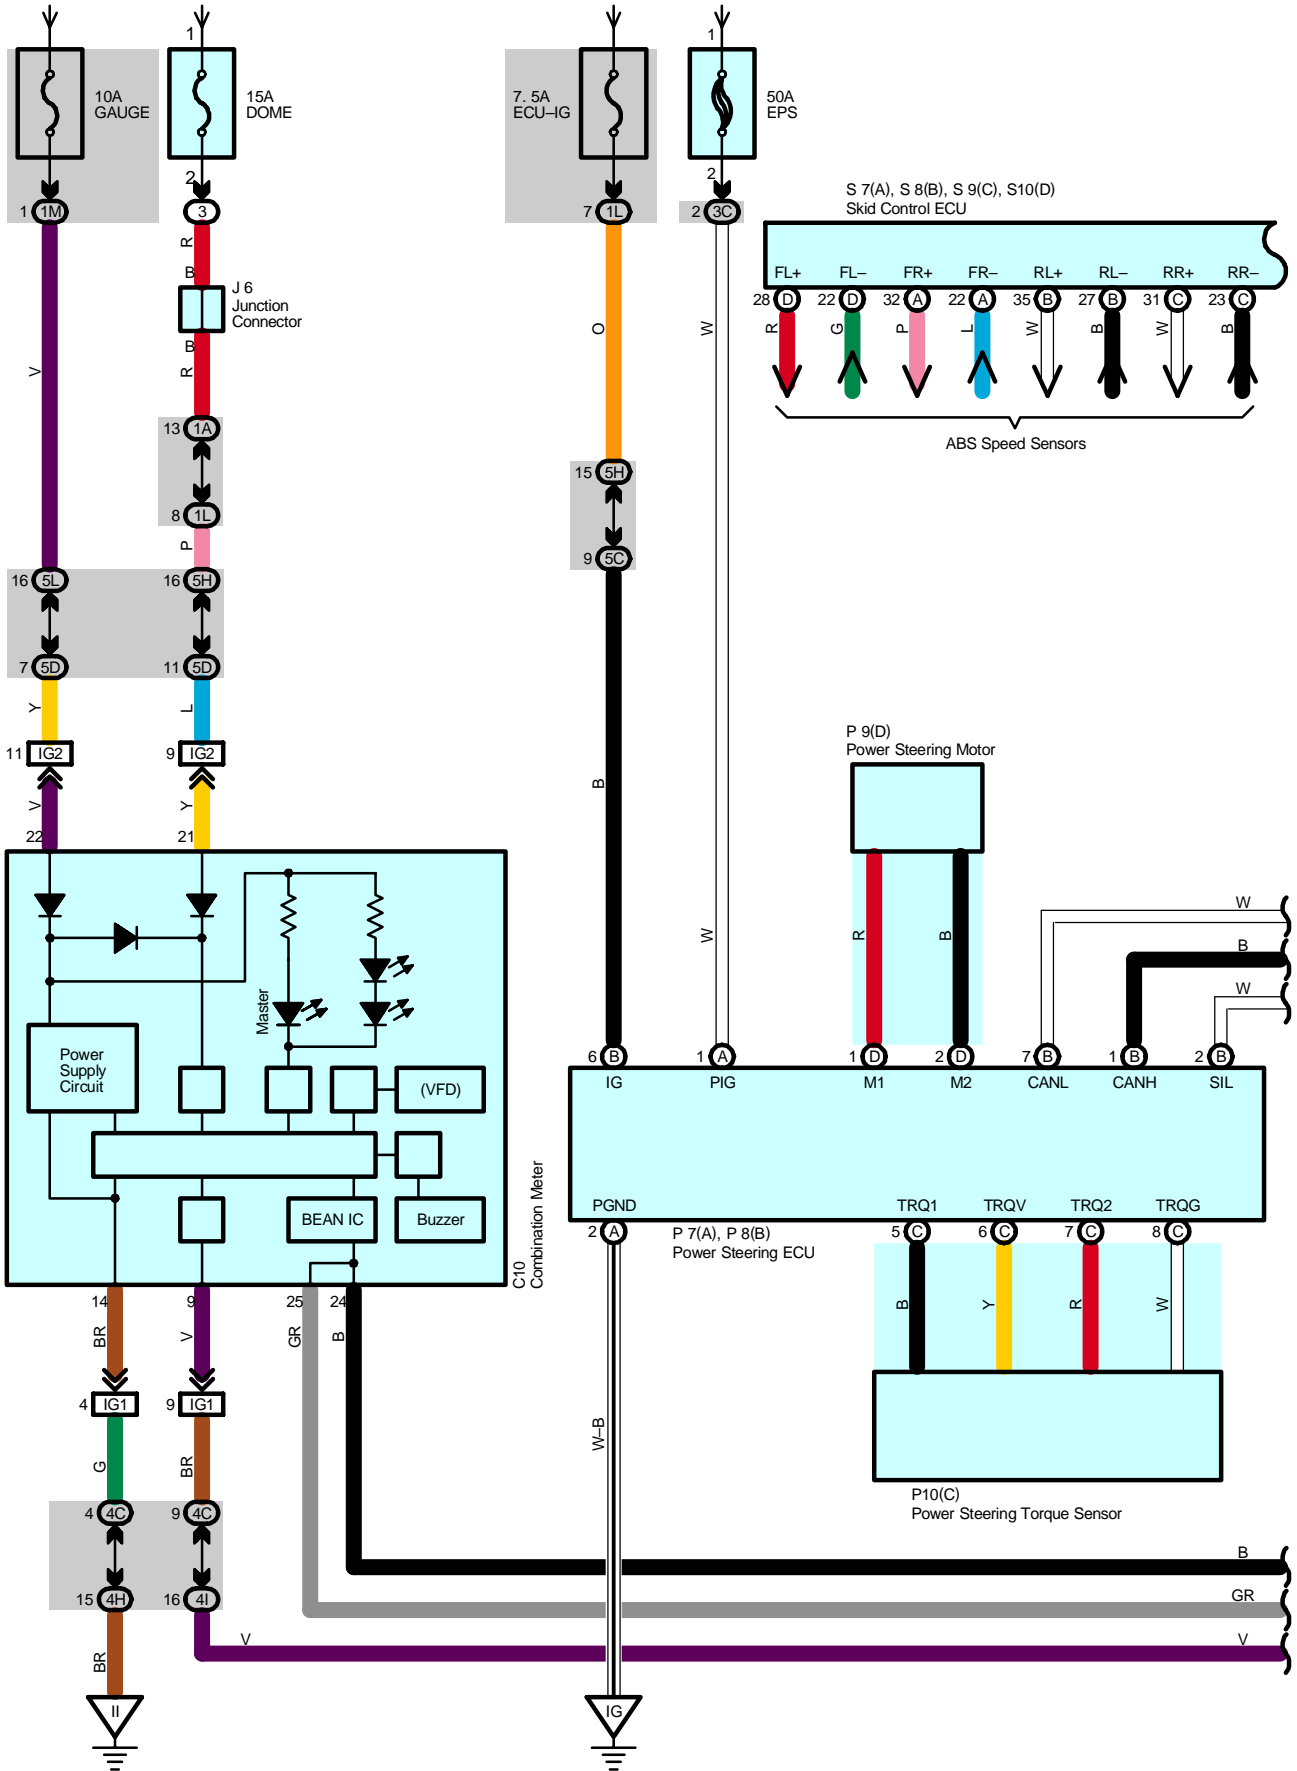

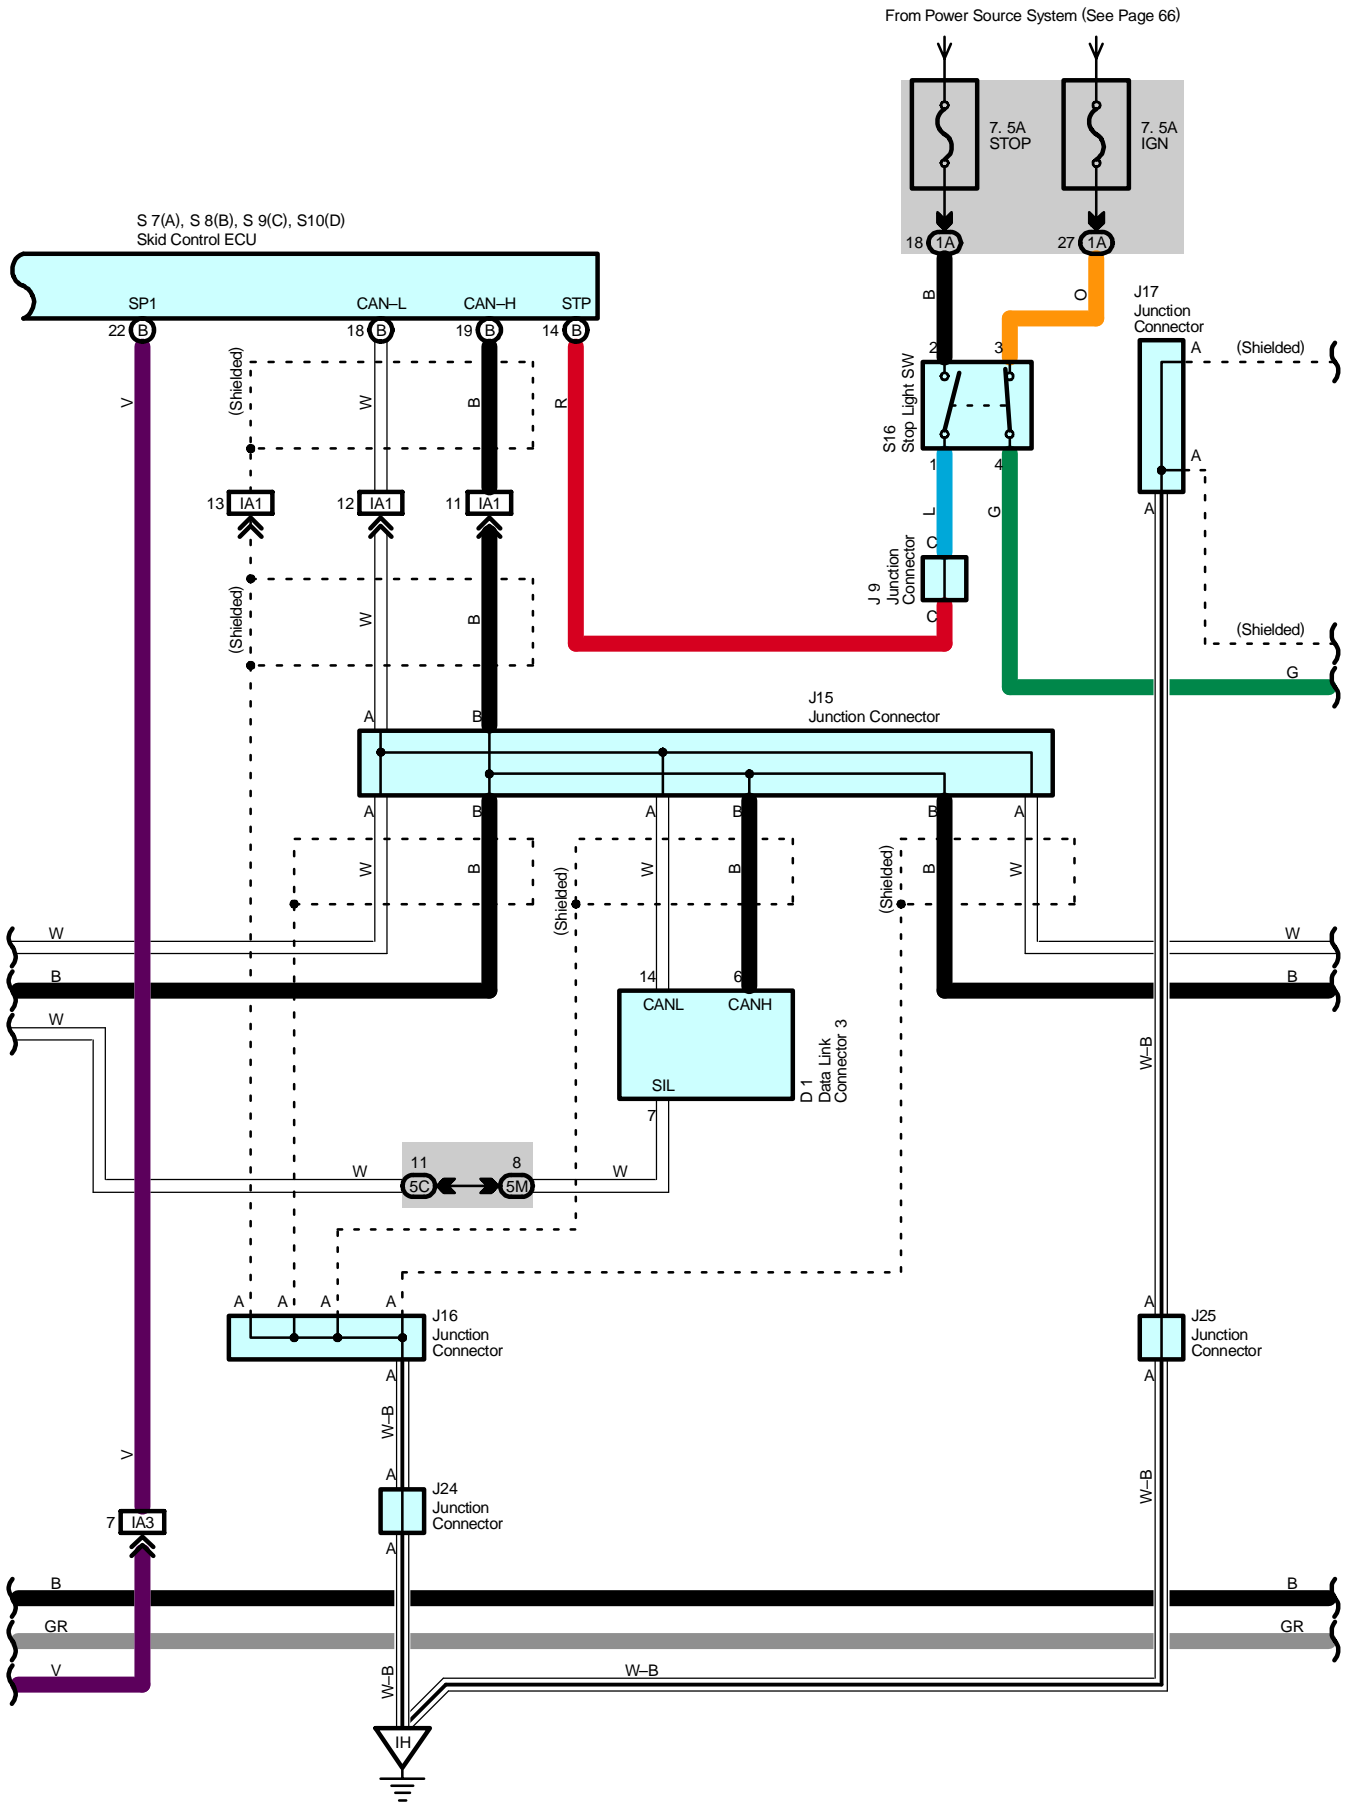

\* 1 : w/ Smart Entry System  
 \* 2 : w/o Smart Entry System

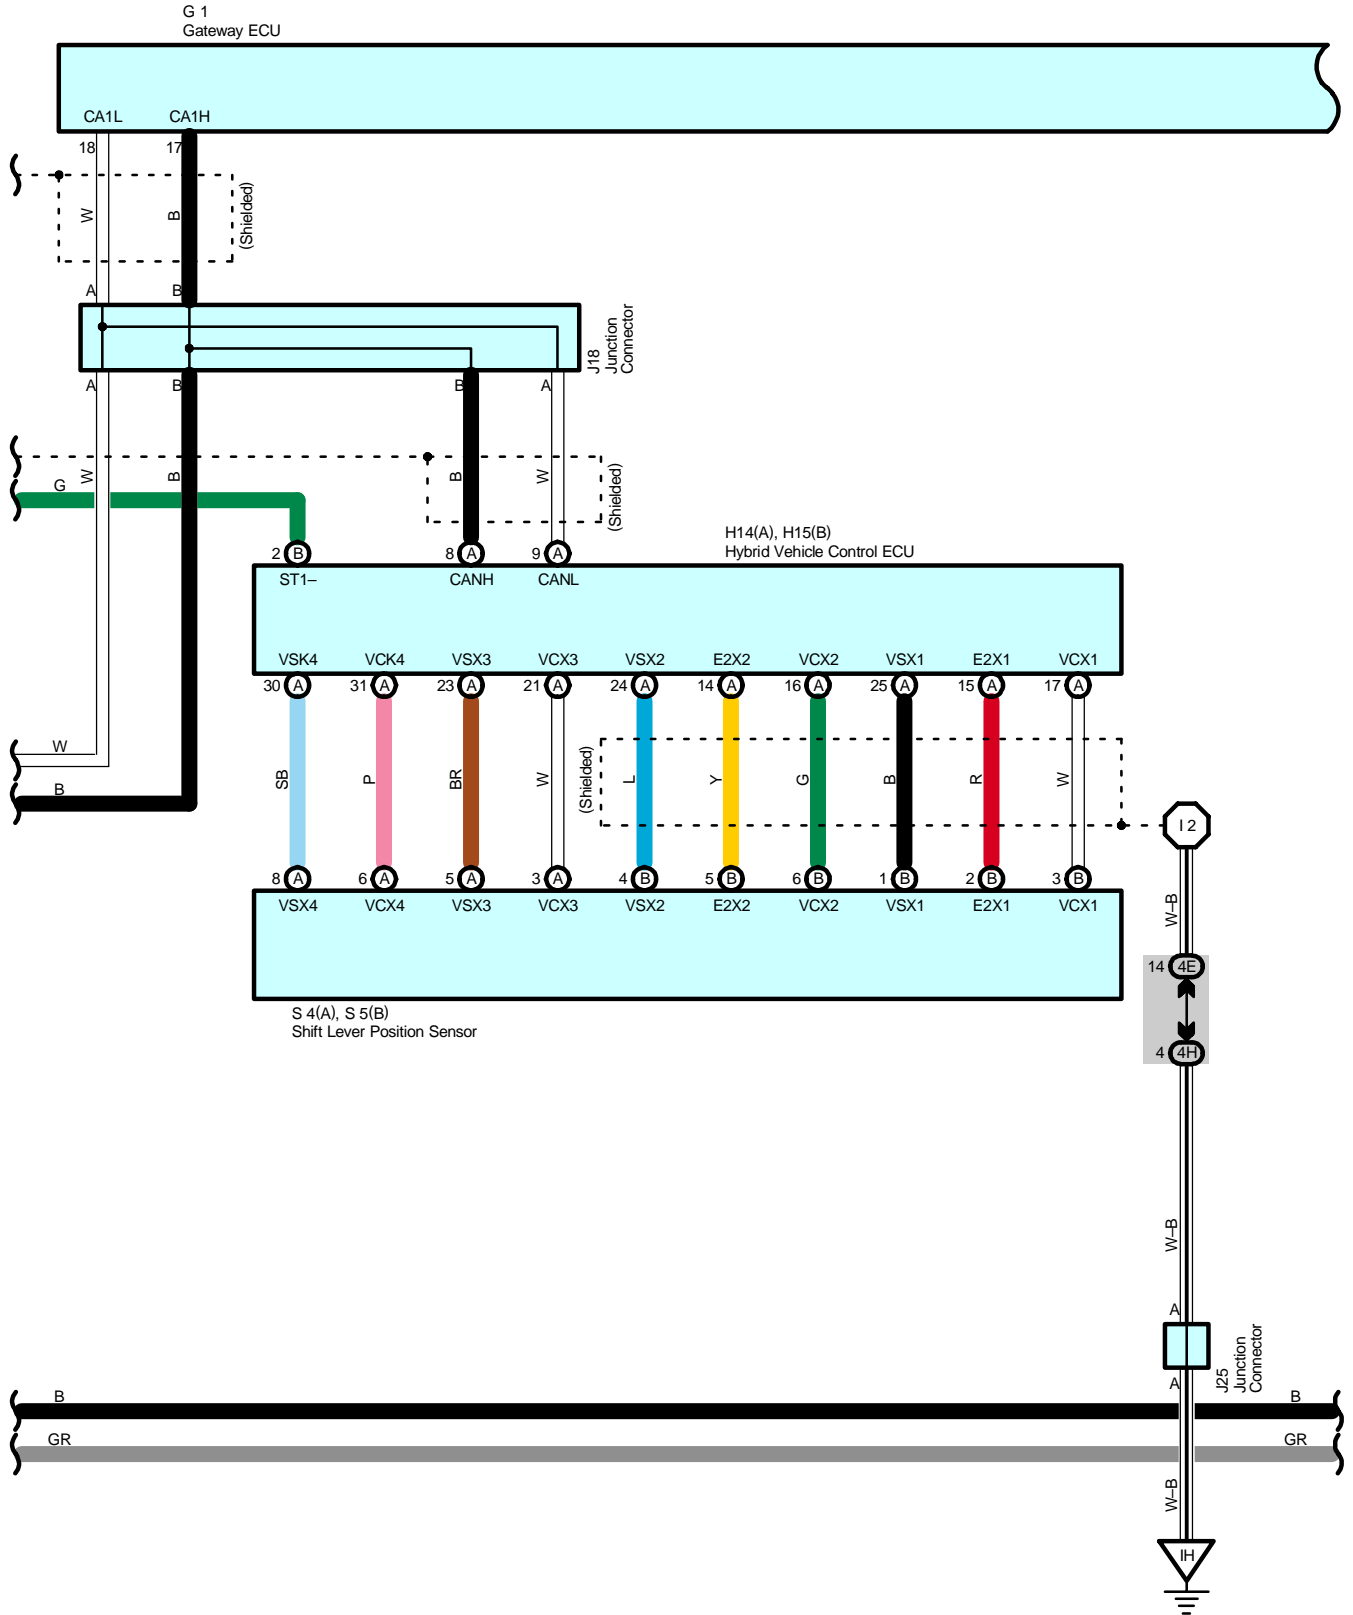

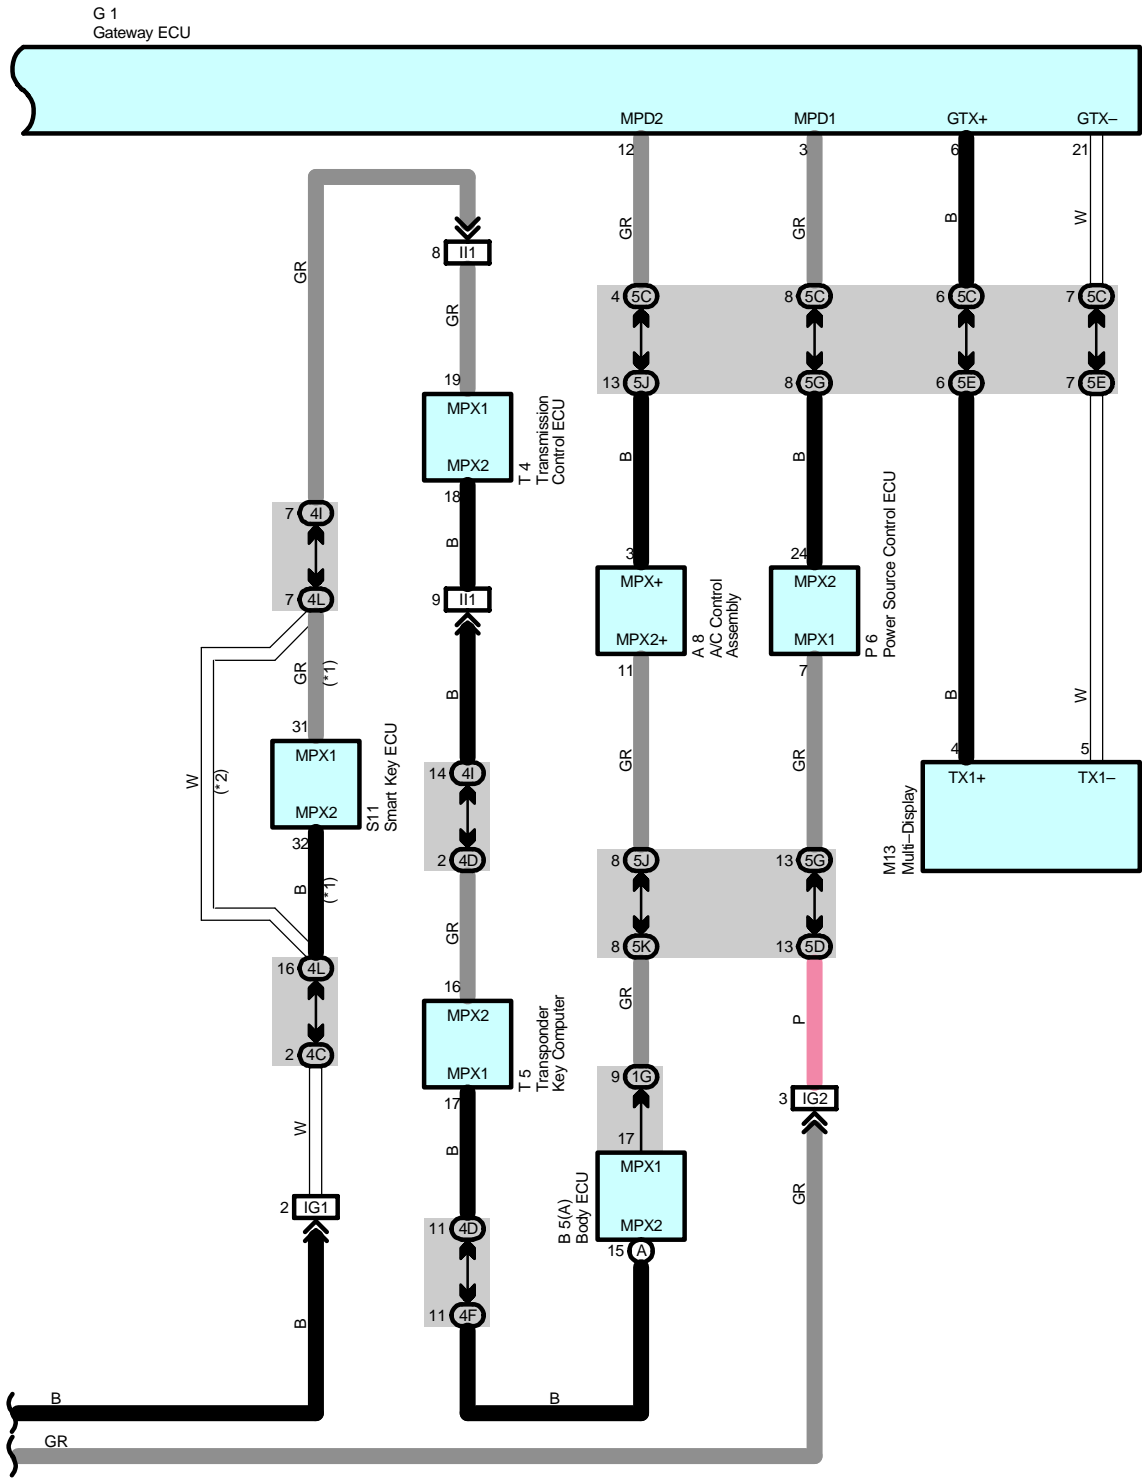

## System Outline

This is a system to assist the driver to steer the vehicle with easy steering force. Based on torque signal of steering from power steering torque sensor, and vehicle speed and other vehicle information from skid control ECU, power steering ECU calculates assisting current to control power steering motor.

Under the system in abnormality, power source relay and motor relay in power steering ECU is shut down and master warning lamp on combination meter blinks as well as P/S warning is indicated, resulting to stop the assistance.

## Service Hints

### P7 (A), P8 (B) Power Steering ECU

(B) 6–Ground : Approx. 12 volts with the power SW at IG ON position

(A) 1–Ground : Always approx. 12 volts

(A) 2–Ground : Always continuity

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A8	46	J17	48	S5	B 49
B5	A 46	J18	48	S7	A 49
C10	47	J24	48	S8	B 49
D1	47	J25	48	S9	C 49
G1	47	M13	48	S10	D 49
H14	A 47	P6	49	S11	49
H15	B 47	P7	A 49	S16	49
J6	48	P8	B 49	T4	49
J9	48	P9	D 49	T5	49
J15	48	P10	C 49		
J16	48	S4	A 49		

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	22	Engine Room R/B (Engine Compartment Left)

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1G	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1L		
1M		
3C	22	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
4C	36	Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4D		
4E		
4F		
4H		
4I		
4L		
5C	40	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5D		
5E		
5G		
5H		
5J		
5K		
5L		
5M		

 : **Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	56	Engine Room Main Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)
IA3		
IG1	58	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the Combination Meter)
IG2		
II1	58	Engine Wire and Instrument Panel Wire (Behind the Glove Box)


 : **Ground Points**

Code	See Page	Ground Points Location
IG	56	Cowl Side Panel LH
IH		
II	56	Instrument Panel Brace LH

 : **Splice Points**


Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I2	58	Instrument Panel Wire			



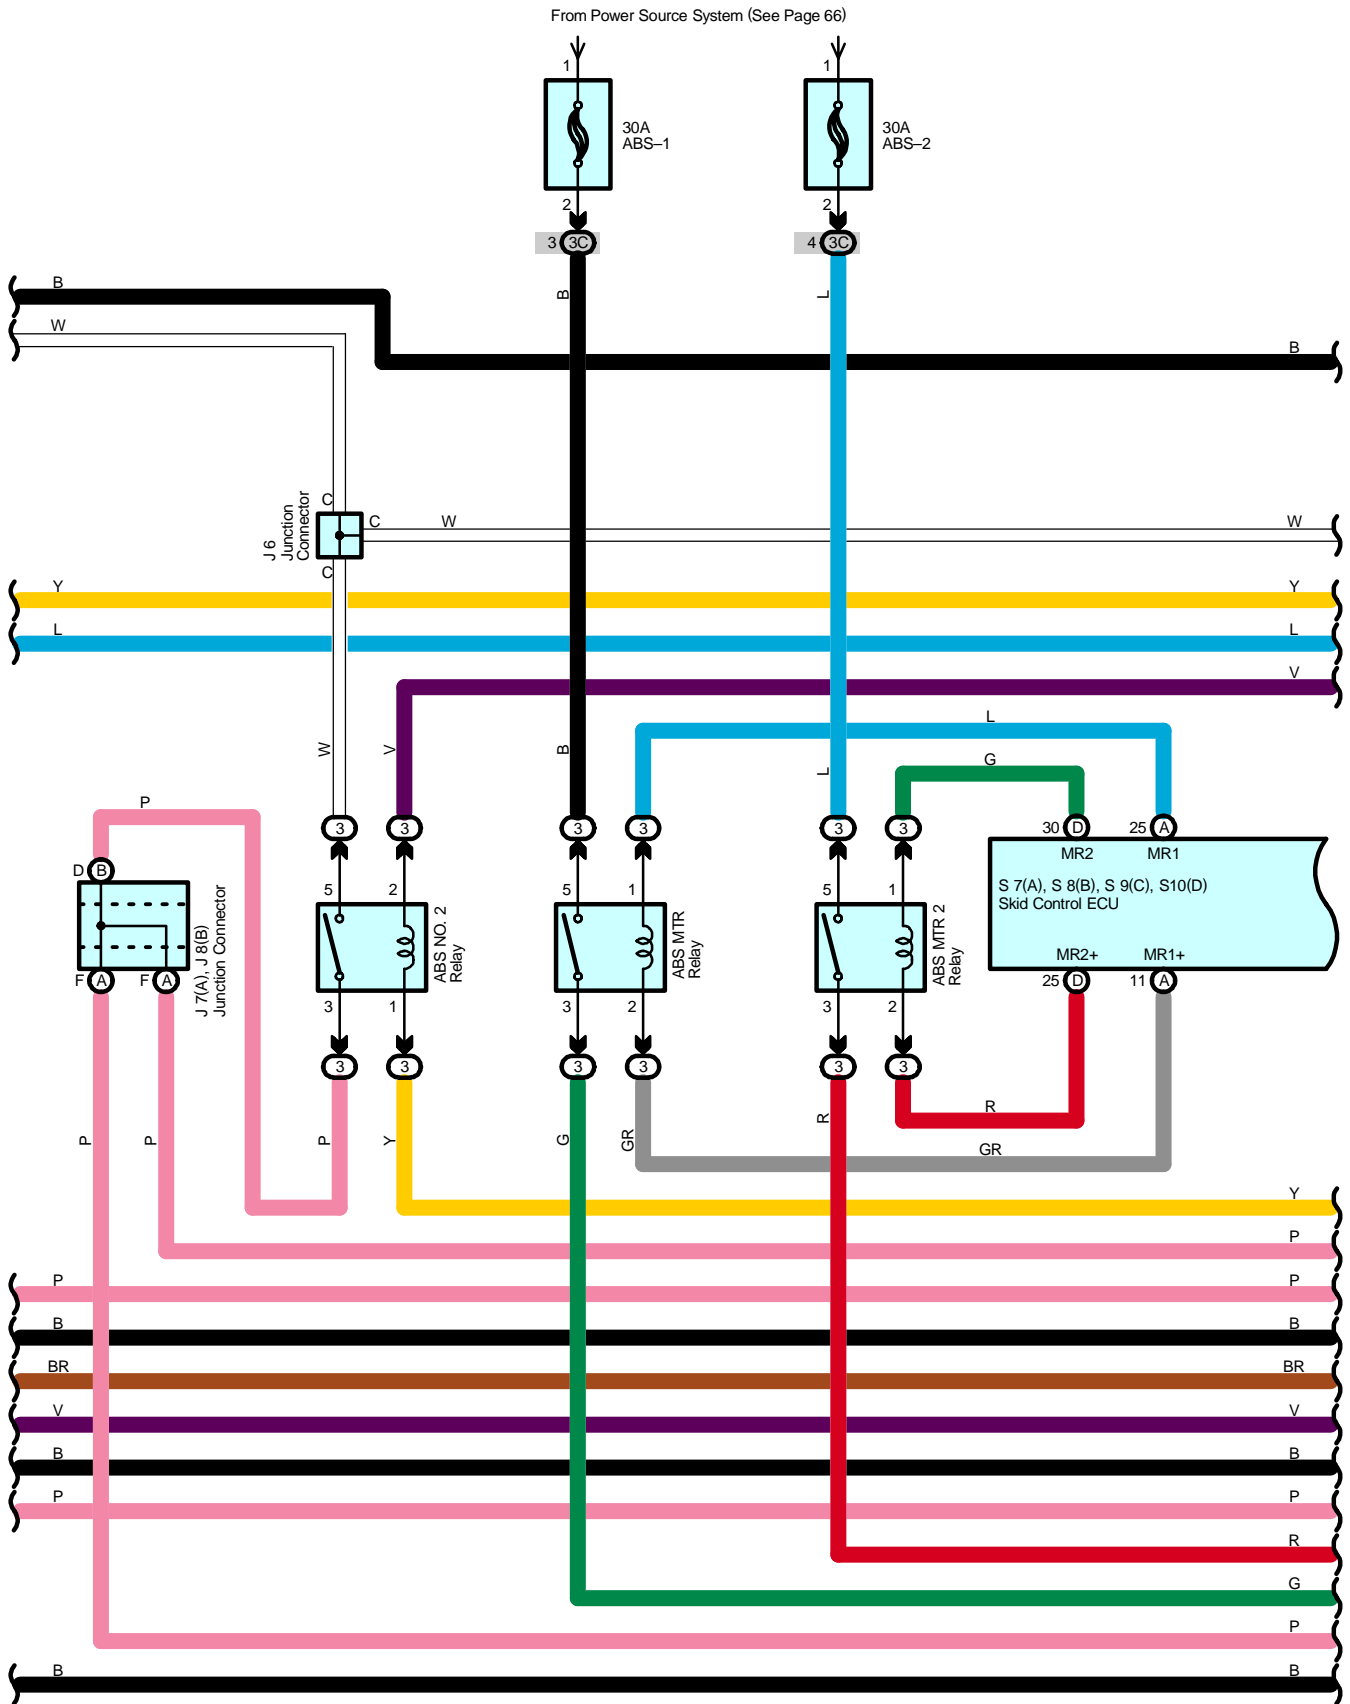




# Brake Control System

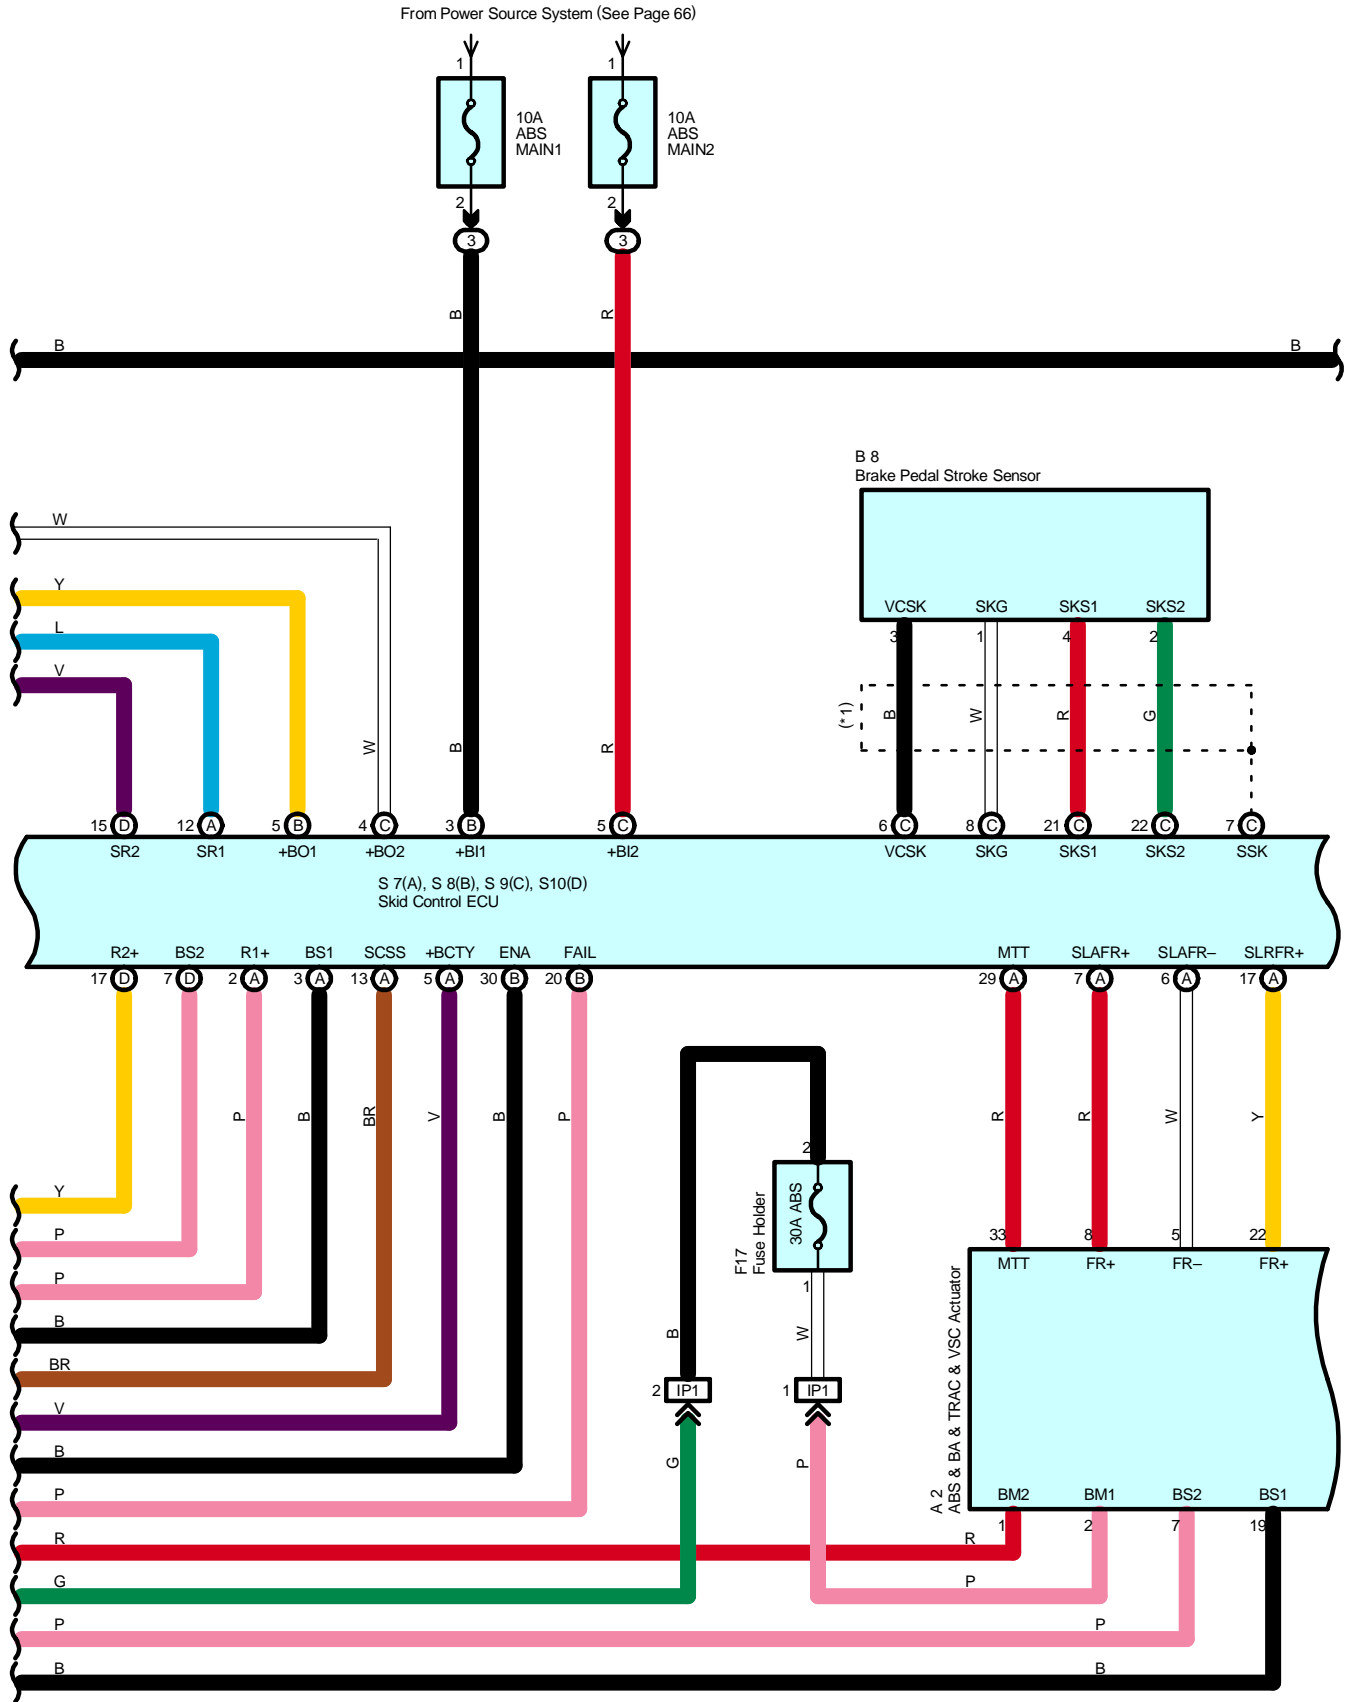


\* 1 : Shielded

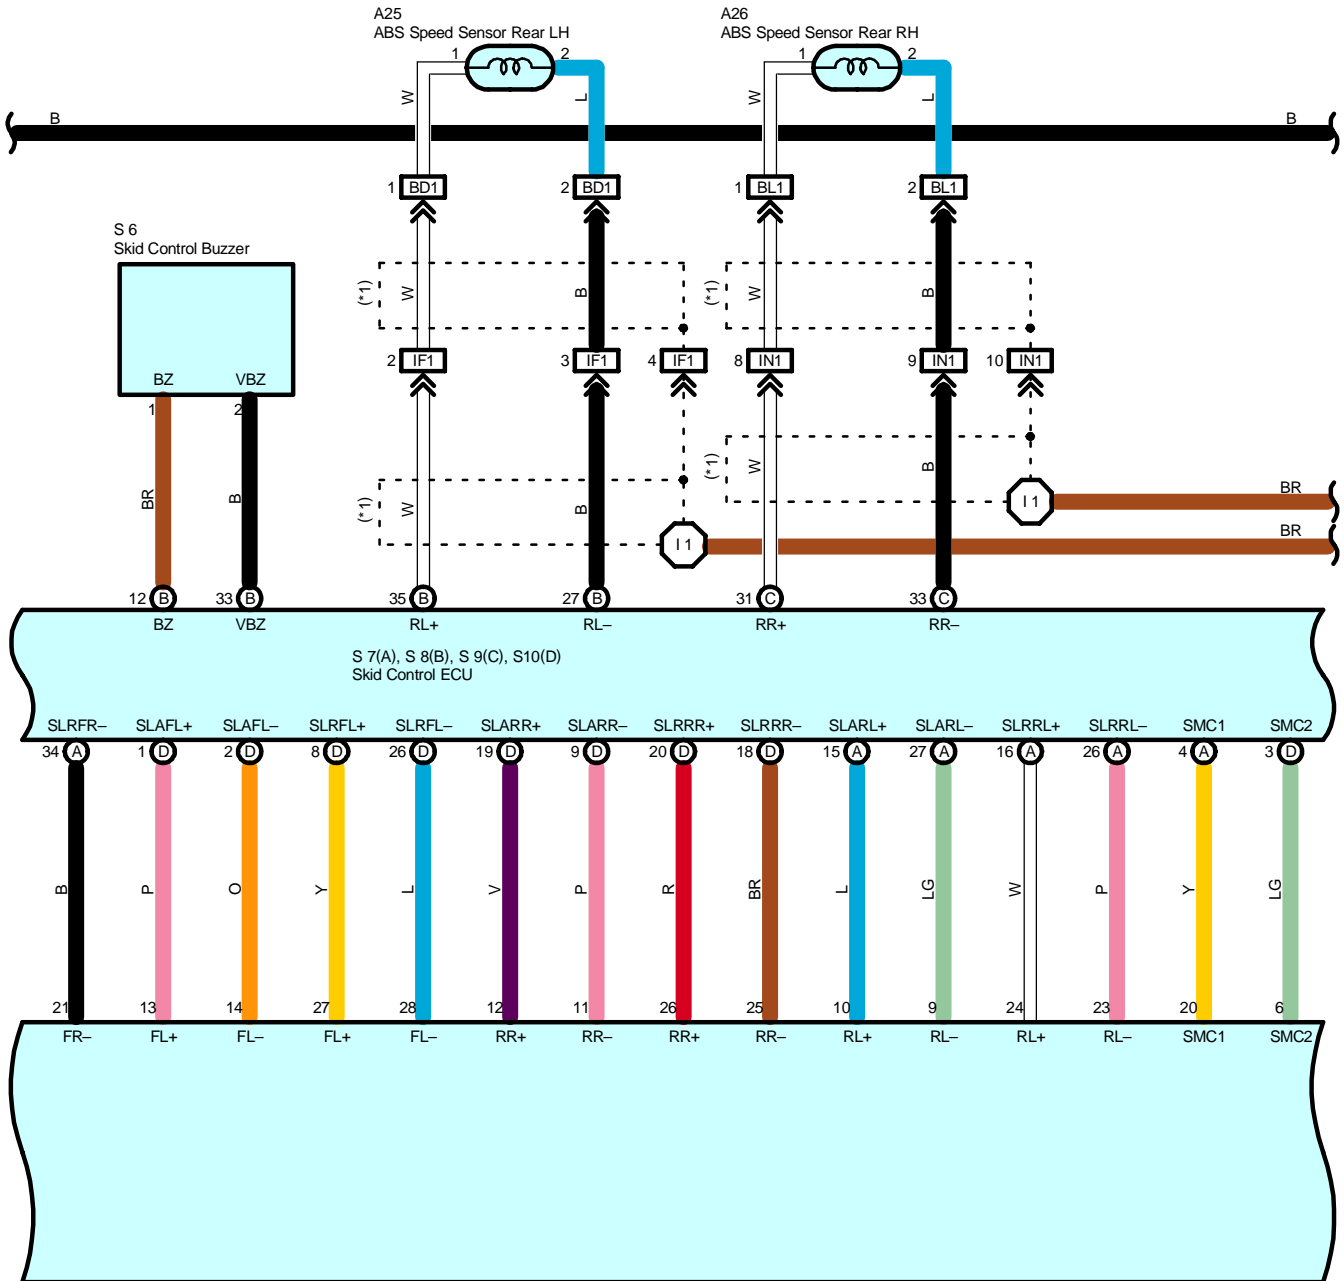

A 2  
ABS & BA & TRAC & VSC Actuator


# Brake Control System

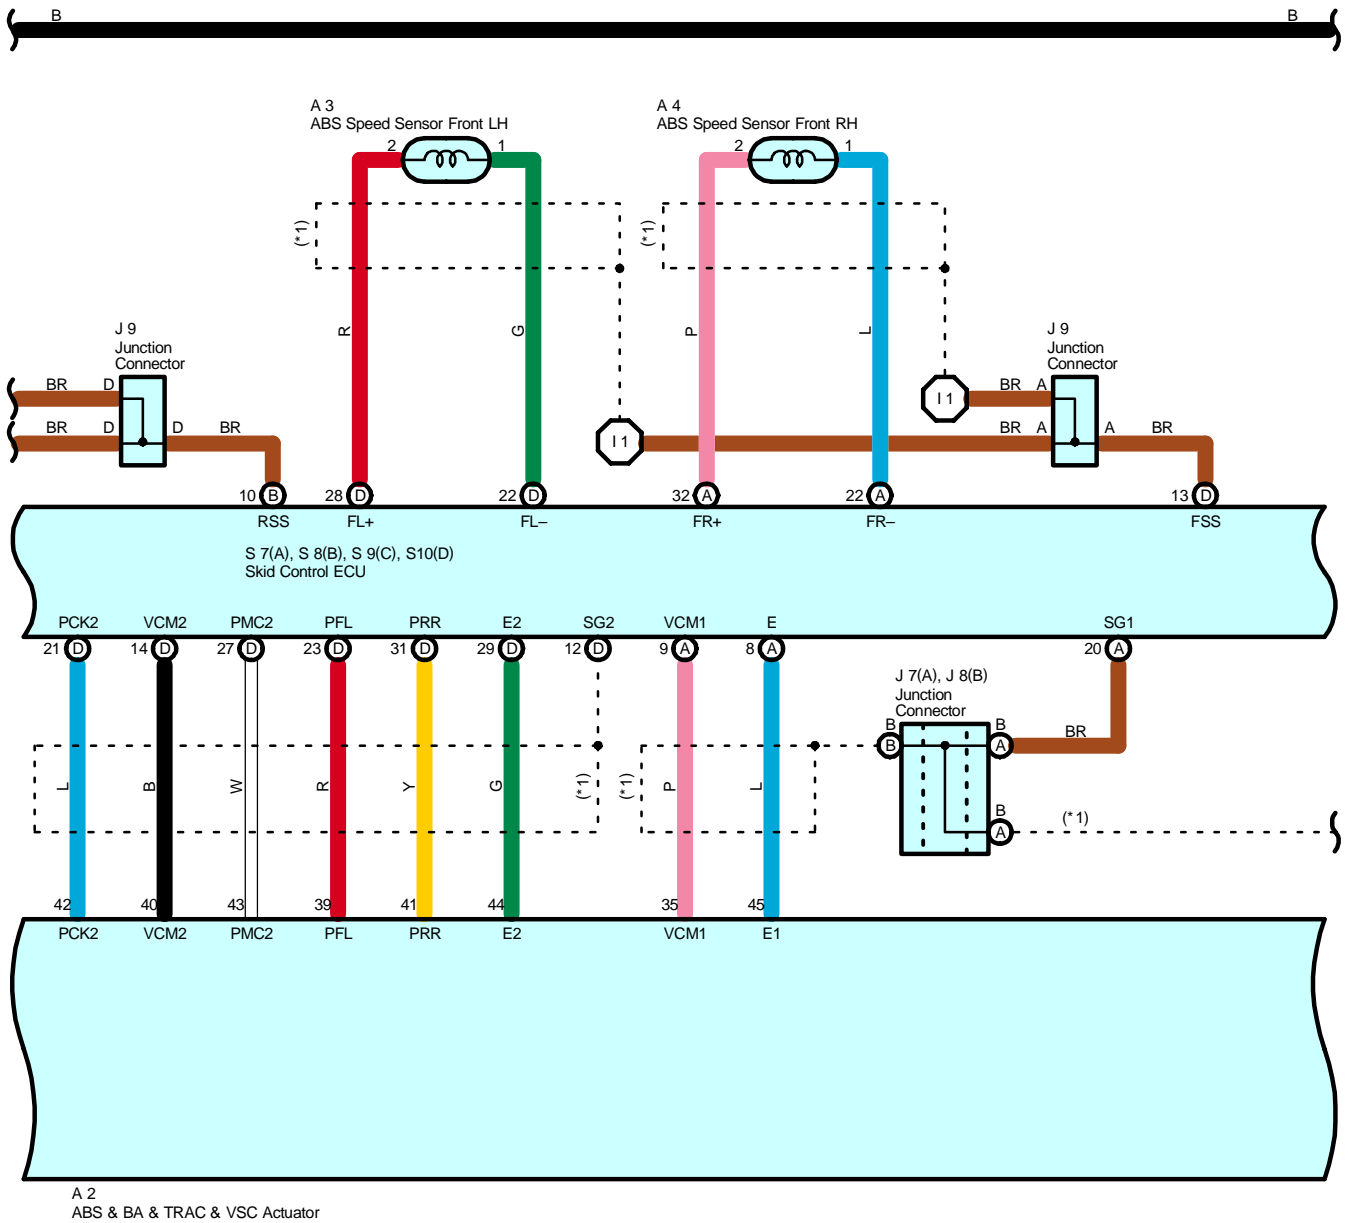




# Brake Control System


From Power Source System (See Page 66)

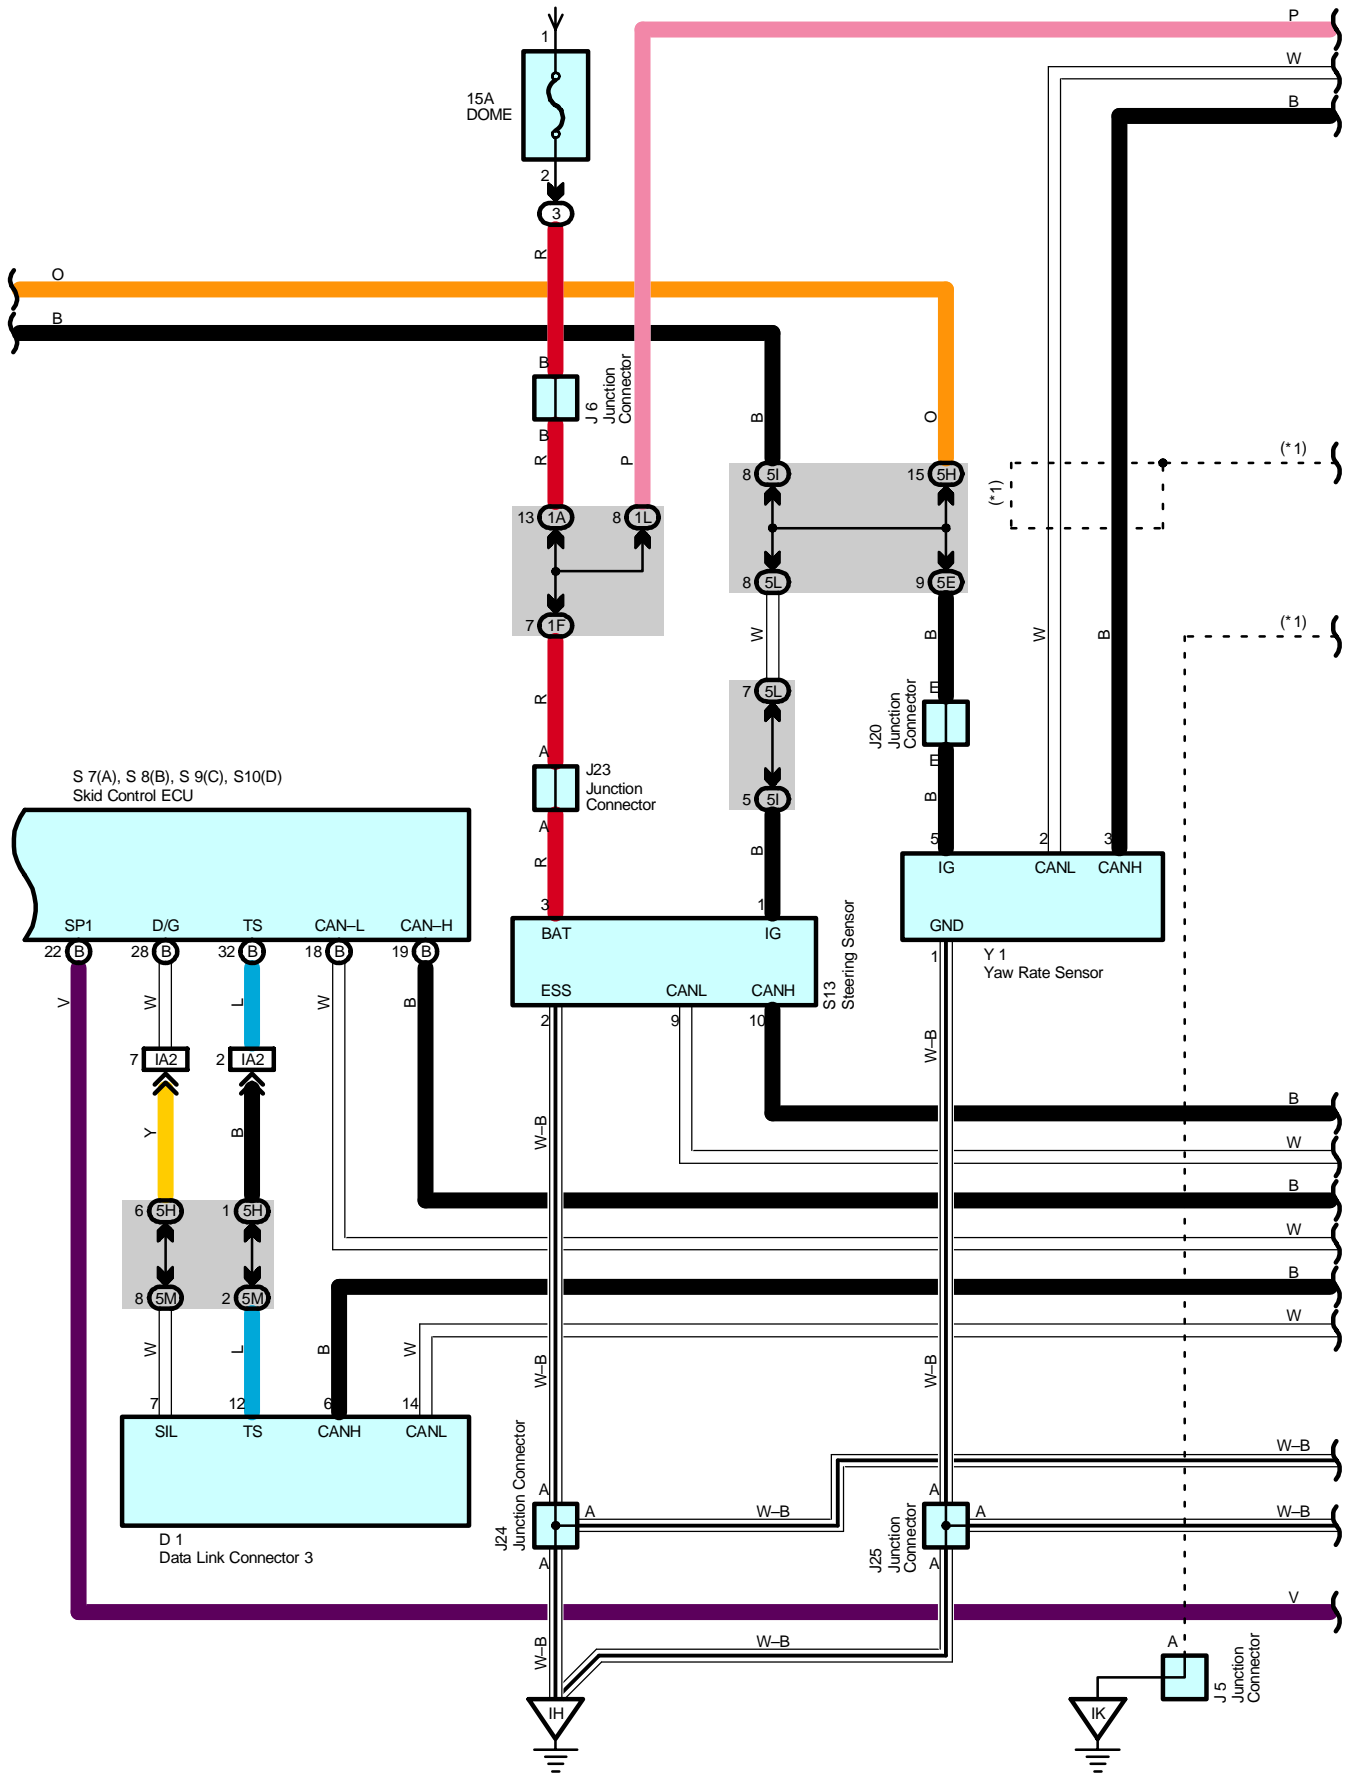


\* 1 : Shielded

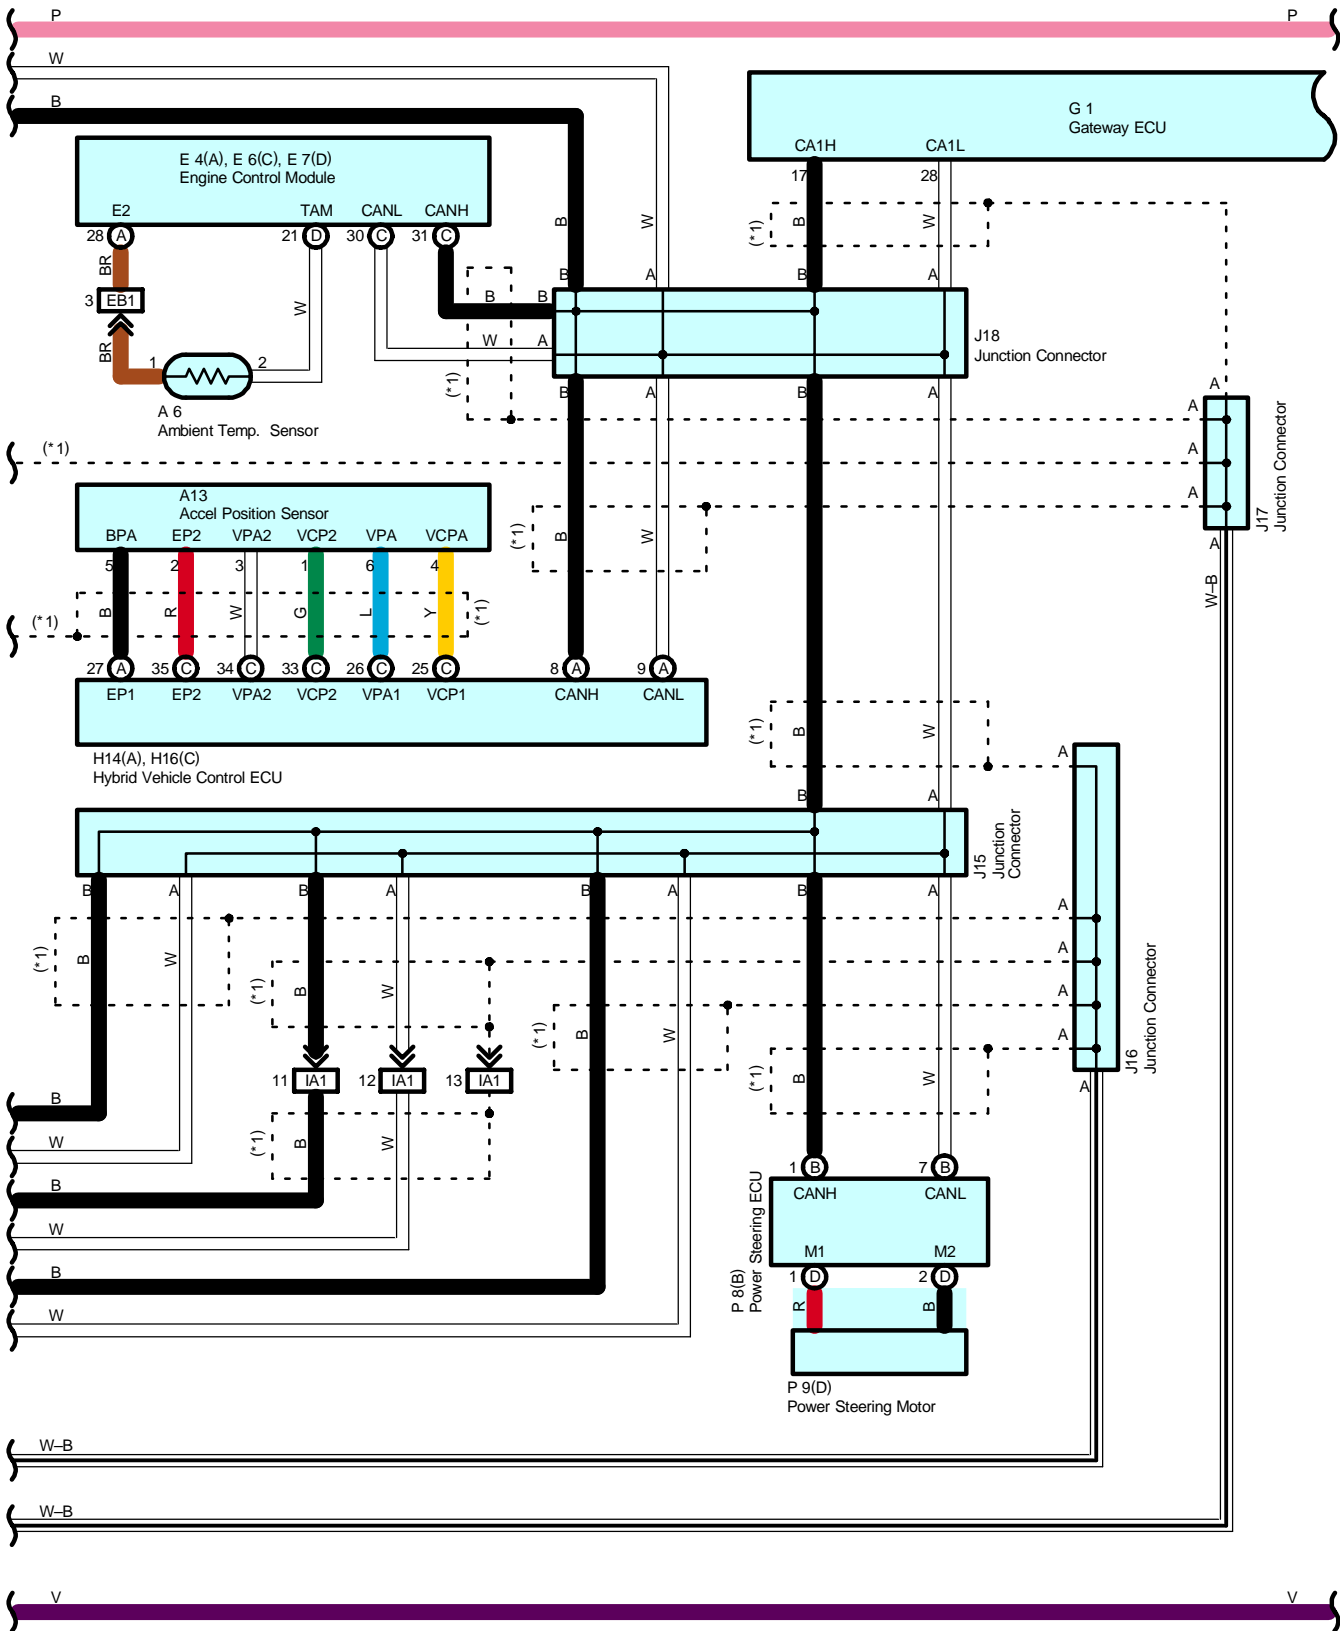

# Brake Control System

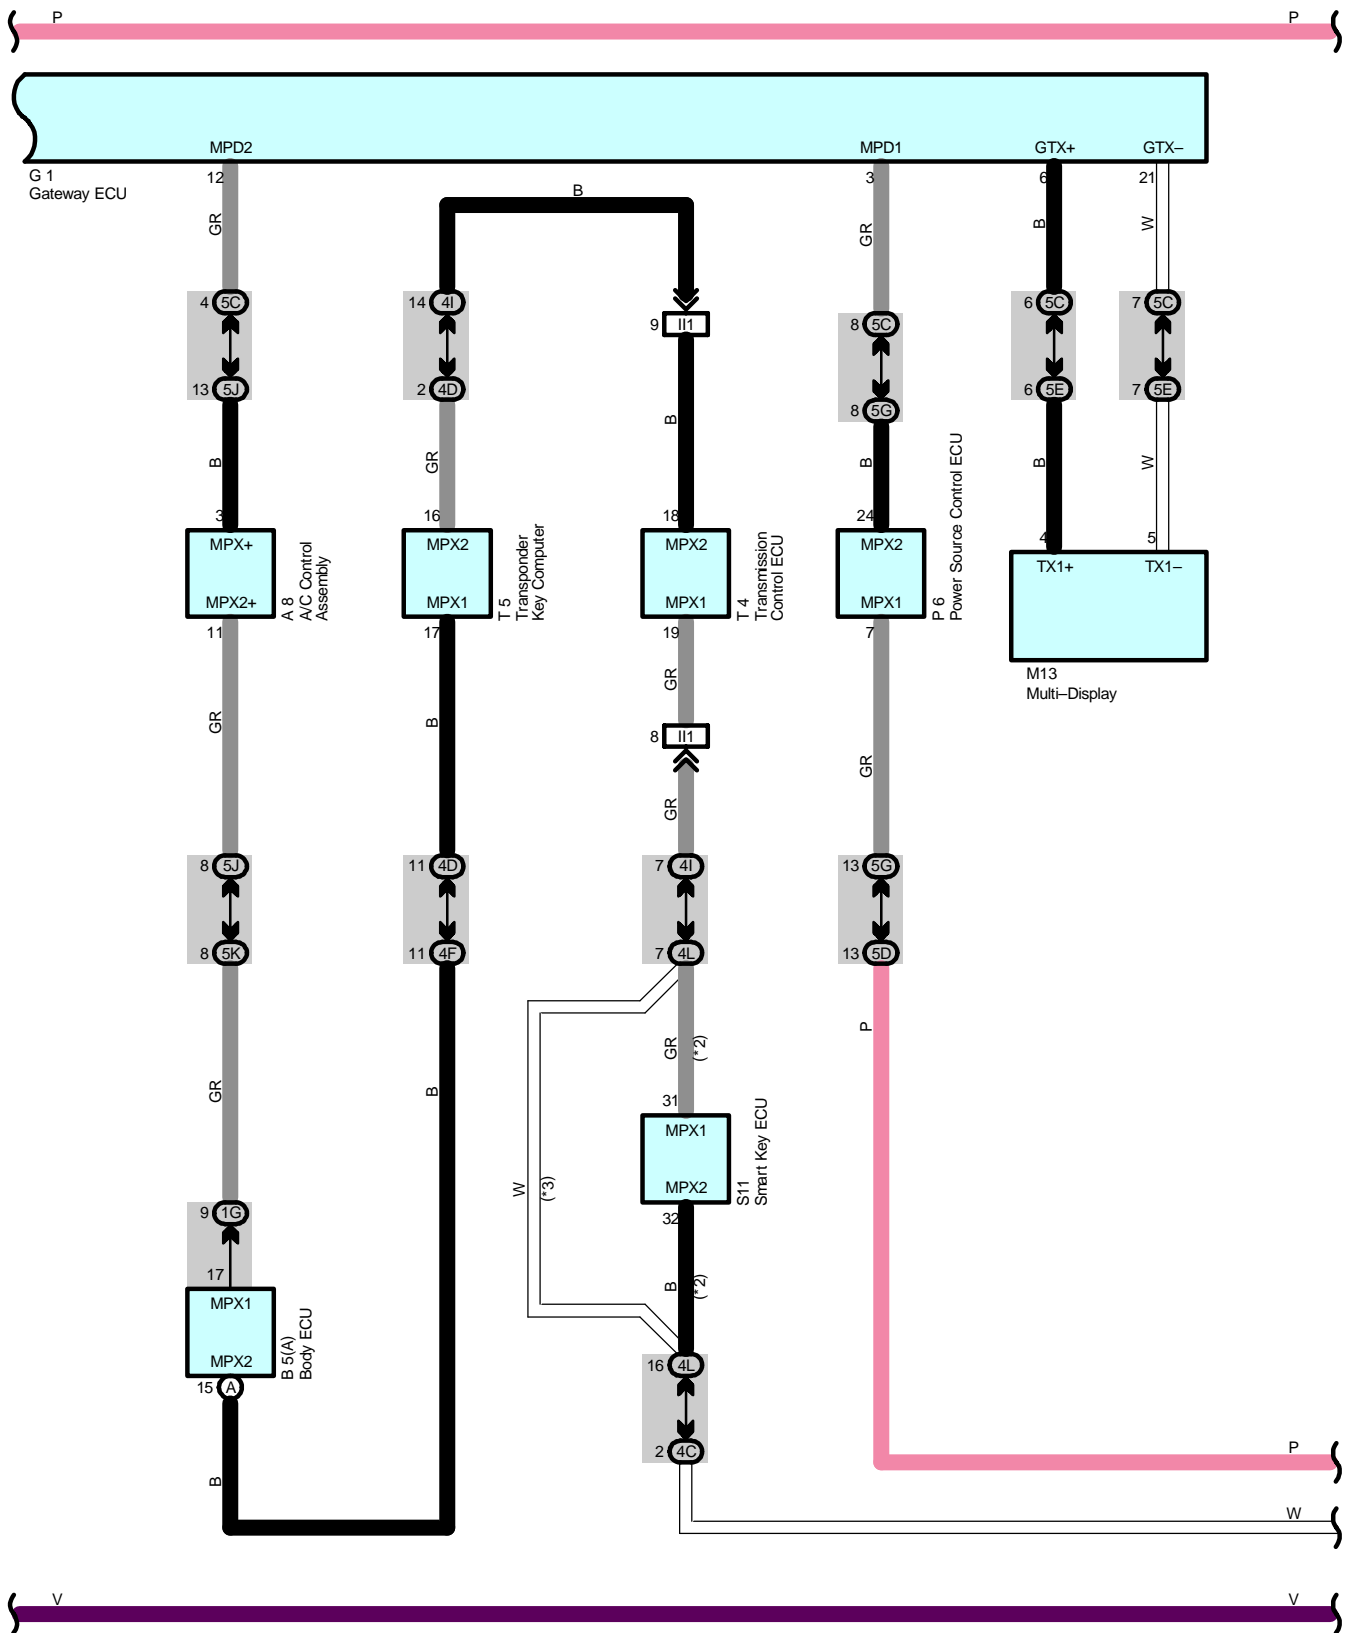

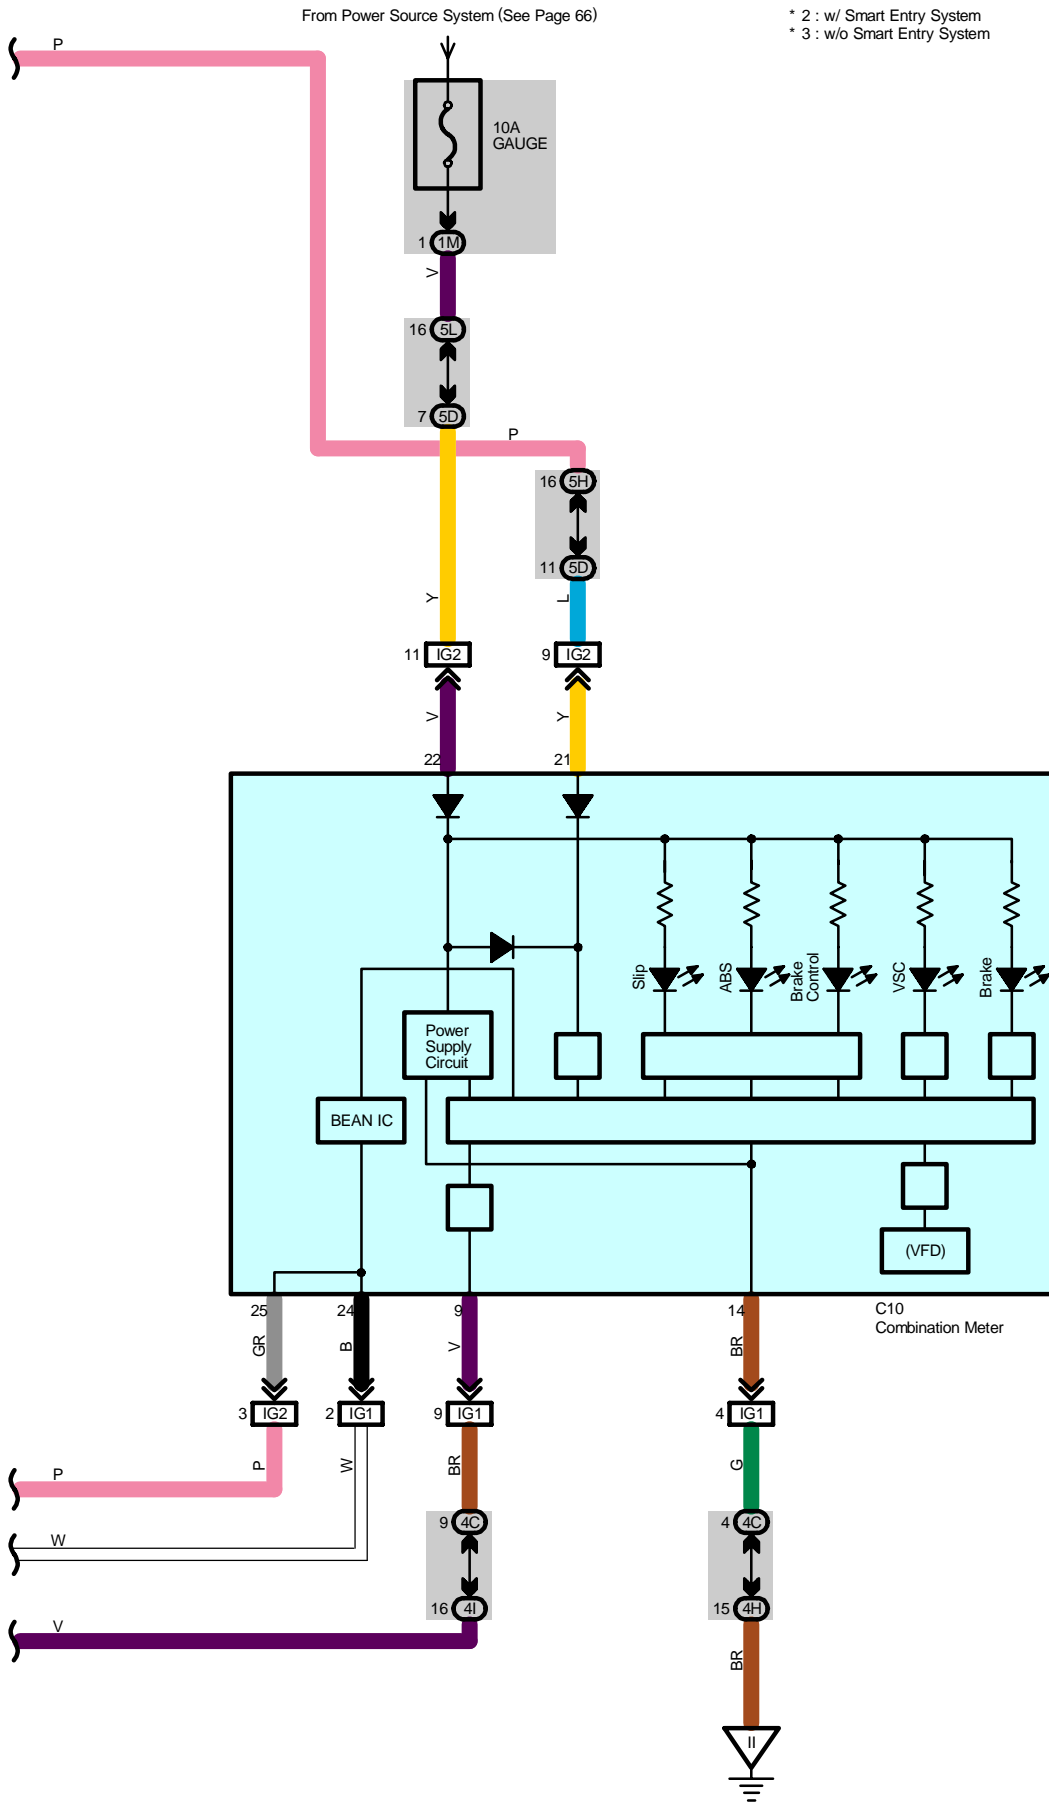



# Brake Control System

## System Outline

### 1. ABS Operation

If the brake pedal is depressed suddenly, the ABS controls the hydraulic pressure of all the four wheel cylinders to automatically avoid wheel locking and to ensure the directional and steering stability of the vehicle. Under the situation, the skid control ECU controls the solenoids in the actuators, using the signals from the sensors to move the brake fluid to the reservoir in order to release the braking pressure applied to the wheel cylinder. If the skid control ECU detects that the fluid pressure in the wheel cylinder is insufficient, the ECU controls the solenoids in the actuators to increase the braking pressure.

### 2. Electronic Brake-Force Distribution

Skid control ECU distributes appropriate brake-force to front and rear wheels (Control of brake-force distribution to front and rear wheels) corresponding to the vehicle driving conditions. It also makes effective use of rear wheel brake-force to match loading condition and decelerating of the vehicle, resulting to reduce depressing of brake pedal and to ensure effective braking. In braking during making a turn, the ECU controls appropriate brake-force distribution to right and left wheels (Control of brake-force distribution to right and left wheels) to ensure stability and braking of the vehicle.

### 3. Brake Assist System

Skid control ECU recognizes emergency braking from detecting applying speed of brake pedal and brake travel, and controls braking effectiveness to supply strong brake-force for the emergency braking.

### 4. VSC Operation (w/ VSC)

Unexpected road conditions, emergency situation, and any other external factors may cause large under- or over-steering of the vehicle. If they occur, the VSC system automatically controls the driving power and wheel brakes to reduce the under- or over-steering.

To reduce large over-steering :

If the VSC system determines that the over-steering is large, it activates the brakes for the outer turning wheels depending on the degree of the over-steering to produce the moment toward the outside of the vehicle and reduce the over-steering.

To reduce large under-steering :

If the VSC system determines that the under-steering is large, it controls the driving power and activates the front wheel brakes and rear inner side wheel brake to reduce the under-steering.

If there is malfunction in the VSC system, the VSC indicator lights up to warn the driver.

### 5. Mutual System Control

Due to cooperative control with hybrid vehicle control ECU, skid control ECU controls hydraulic brake to collect much electrical energy by making the most use of regenerative brake.

Skid control ECU also improves stability of the vehicle, performing cooperative control with power steering ECU to give steering torque assistance, corresponding to driving conditions. (w/ VSC)

### 6. Electric Source Backup Function

Electric charge is stored in brake control power supply. If voltage of vehicle electricity is declined, electric charge is released to cover electric supply to the system.

### 7. Fail Safe Function

Skid control ECU monitors the system component parts electrically. In case there is abnormality in ECU, sensor signal and actuator, normal parts except parts with abnormality continue braking operation.

Even in case braking is shut off due to malfunction of oil pressure source, braking is secured as master cylinder pressure made by manpower works on wheel cylinder.

In case only regenerative brake is not effective due to abnormality in communication with hybrid vehicle control ECU, control will be changed to have oil pressure brake generate all the braking force

## Service Hints

### S7 (A), S8 (B), S9 (C), S10 (D) Skid Control ECU

(B) 3, (C) 5-Ground : Always approx. 12 volts

(B) 7, (D) 5-Ground : Approx. 12 volts with the power SW at IG ON position

(B)14-Ground : Approx. 12 volts with the brake pedal depressed

(A) 1, (B) 1, (B) 2, (C) 1, (C) 2, (D) 4-Ground : Always continuity

**○ : Parts Location**

Code	See Page	Code	See Page	Code	See Page
A2	44	F17	47	M13	48
A3	44	G1	47	P2	49
A4	44	H14	A 47	P6	49
A6	44	H16	C 47	P8	B 49
A8	46	J1	45	P9	D 49
A13	46	J4	45	S2	A 45
A25	50	J5	48	S3	B 45
A26	50	J6	48	S6	49
B1	44	J7	A 48	S7	A 49
B5	A 46	J8	B 48	S8	B 49
B8	46	J9	48	S9	C 49
B17	44	J15	48	S10	D 49
B18	50	J16	48	S11	49
C10	47	J17	48	S13	49
D1	47	J18	48	S16	49
D7	50	J20	48	T4	49
E4	A 47	J23	48	T5	49
E6	C 47	J24	48	Y1	49
E7	D 47	J25	48		

**○ : Relay Blocks**

Code	See Page	Relay Blocks (Relay Block Location)
3	22	Engine Room R/B (Engine Compartment Left)

**○ : Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1D	28	Floor Wire and Driver Side J/B (Lower Finish Panel)
1F	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1G		
1L		
1M		
3C	22	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
4C	36	Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4D		
4F		
4H		
4I		
4L		
5C	40	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5D		
5E		
5G		
5H		
5I		
5J		
5K		
5L		
5M		

# Brake Control System

## : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB1	54	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B)
IA1	56	Engine Room Main Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)
IA2		
IF1	56	Floor Wire and Engine Room Main Wire (Left Kick Panel)
IG1	58	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the Combination Meter)
IG2		
II1	58	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
IK1	58	Engine Room Main Wire and Floor No.2 Wire (Cowl Side Panel RH)
IM1	58	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
IN1	58	Floor No.2 Wire and Engine Room Main Wire (Right Kick Panel)
IP1	58	Engine Room No.2 Wire and Engine Room Main Wire (Upper Parts of Front Body Pillar LH)
BD1	60	Skid Control Sensor No.1 Wire and Floor Wire (Front Side of Left Quarter Panel)
BL1	62	Skid Control Sensor No.2 Wire and Floor No.2 Wire (Front Side of Right Quarter Panel)

## : Ground Points

Code	See Page	Ground Points Location
EA	54	Right Side of the Fender Apron
EE	54	Left Side of the Suspension Tower
EF		
IH	56	Cowl Side Panel LH
II	56	Instrument Panel Brace LH
IK	56	Cowl Side Panel RH
BQ	60	Rear Side of Right Quarter Panel

## : Splice Points


Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E1	54	Engine Room Main Wire	I1	58	Instrument Panel Wire
E3					


NOTICE: When inspecting or repairing the SRS, perform service in accordance with the following precautionary instructions and the procedure, and precautions in the Repair Manual applicable for the model year.


- Malfunction symptoms of the SRS are difficult to confirm, so the DTCs become the most important source of information when troubleshooting. When troubleshooting the SRS, always inspect the DTCs before disconnecting the battery.
- **Work must be started more than 90 seconds after the power SW is pushed to the "OFF" position and the negative (-) terminal cable is disconnected from the battery.**  
**(The SRS is equipped with a back-up power source so that if work is started within 90 seconds from disconnecting the negative (-) terminal cable of the battery, the SRS may deploy.)**
- When the negative (-) terminal cable is disconnected from the battery, the memory of the clock and audio system will be cleared. So before starting work, make a record of the contents in the audio memory system. When work is finished, reset the audio systems as they were before and adjust the clock. Some vehicles have power tilt steering, power telescopic steering, power seat and power outside rear view mirror which are all equipped with memory function. However, it is not possible to make a record of these memory contents. So when the work is finished, it will be necessary to explain it to your customer, and ask the customer to adjust the features and reset the memory. To avoid erasing the memory in each system, never use a back-up power supply from outside the vehicle.
- Before repair, remove the airbag sensor if shocks are likely to be applied to the sensor during repair.
- Do not expose the following parts directly to hot air or flame;
- Even in cases of a minor collision where the SRS does not deploy, the following parts should be inspected;
- Never use SRS parts from another vehicle. When replacing parts, replace with new parts.
- For the purpose of reuse, never disassemble and repair the following parts.
- If the following parts have been dropped, or have cracks, dents and other defects in their case, bracket, and connector, replace with new one.
- Use a volt/ohmmeter with high impedance (10 k $\Omega$ /V minimum) for troubleshooting electrical circuits of the system.
- Information labels are attached to the periphery of the SRS components. Follow the instructions of the notice.
- After work on the SRS is completed, check the SRS warning light.
- If the vehicle is equipped with a mobile communication system, refer to the precaution in the IN section of the Repair Manual.

- \* Steering wheel pad
- \* Front Passenger airbag assembly
- \* Side airbag assembly
- \* Curtain shield airbag assembly
- \* Seat belt pretensioner
- \* Airbag sensor assembly
- \* Front airbag sensor assembly
- \* Curtain shield airbag sensor assembly
- \* Side airbag sensor assembly

From Power Source System (See Page 66)

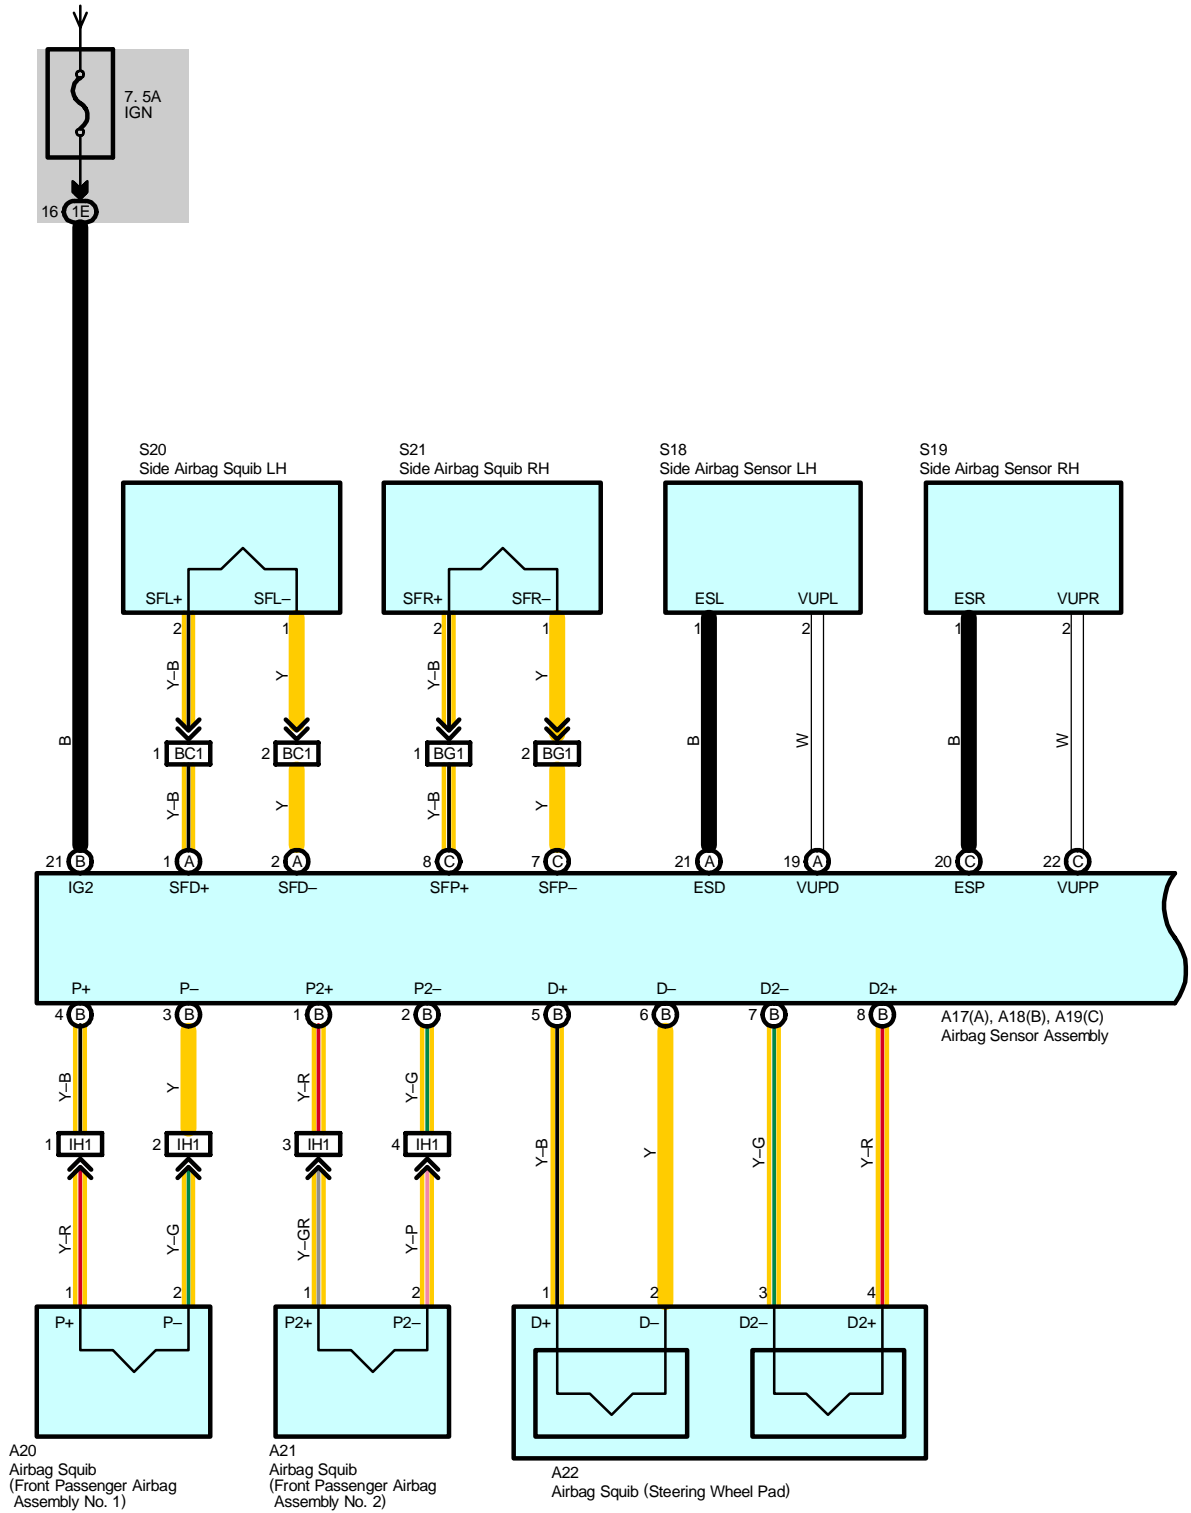

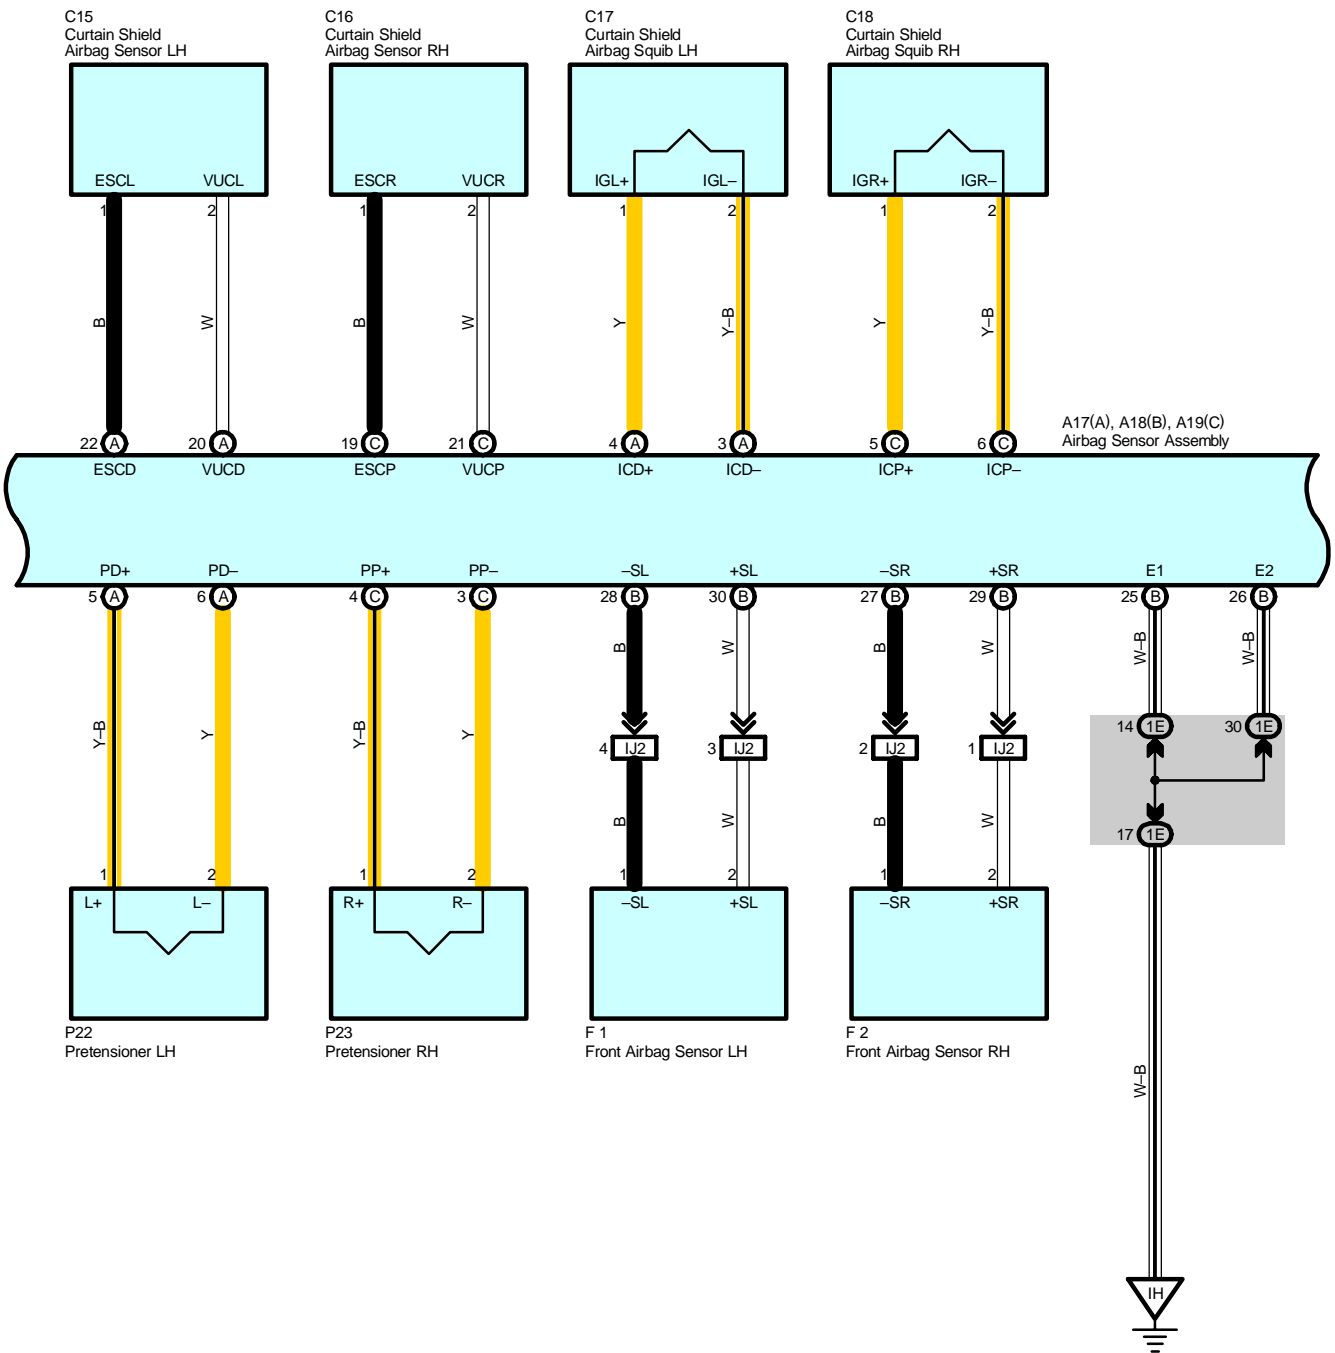

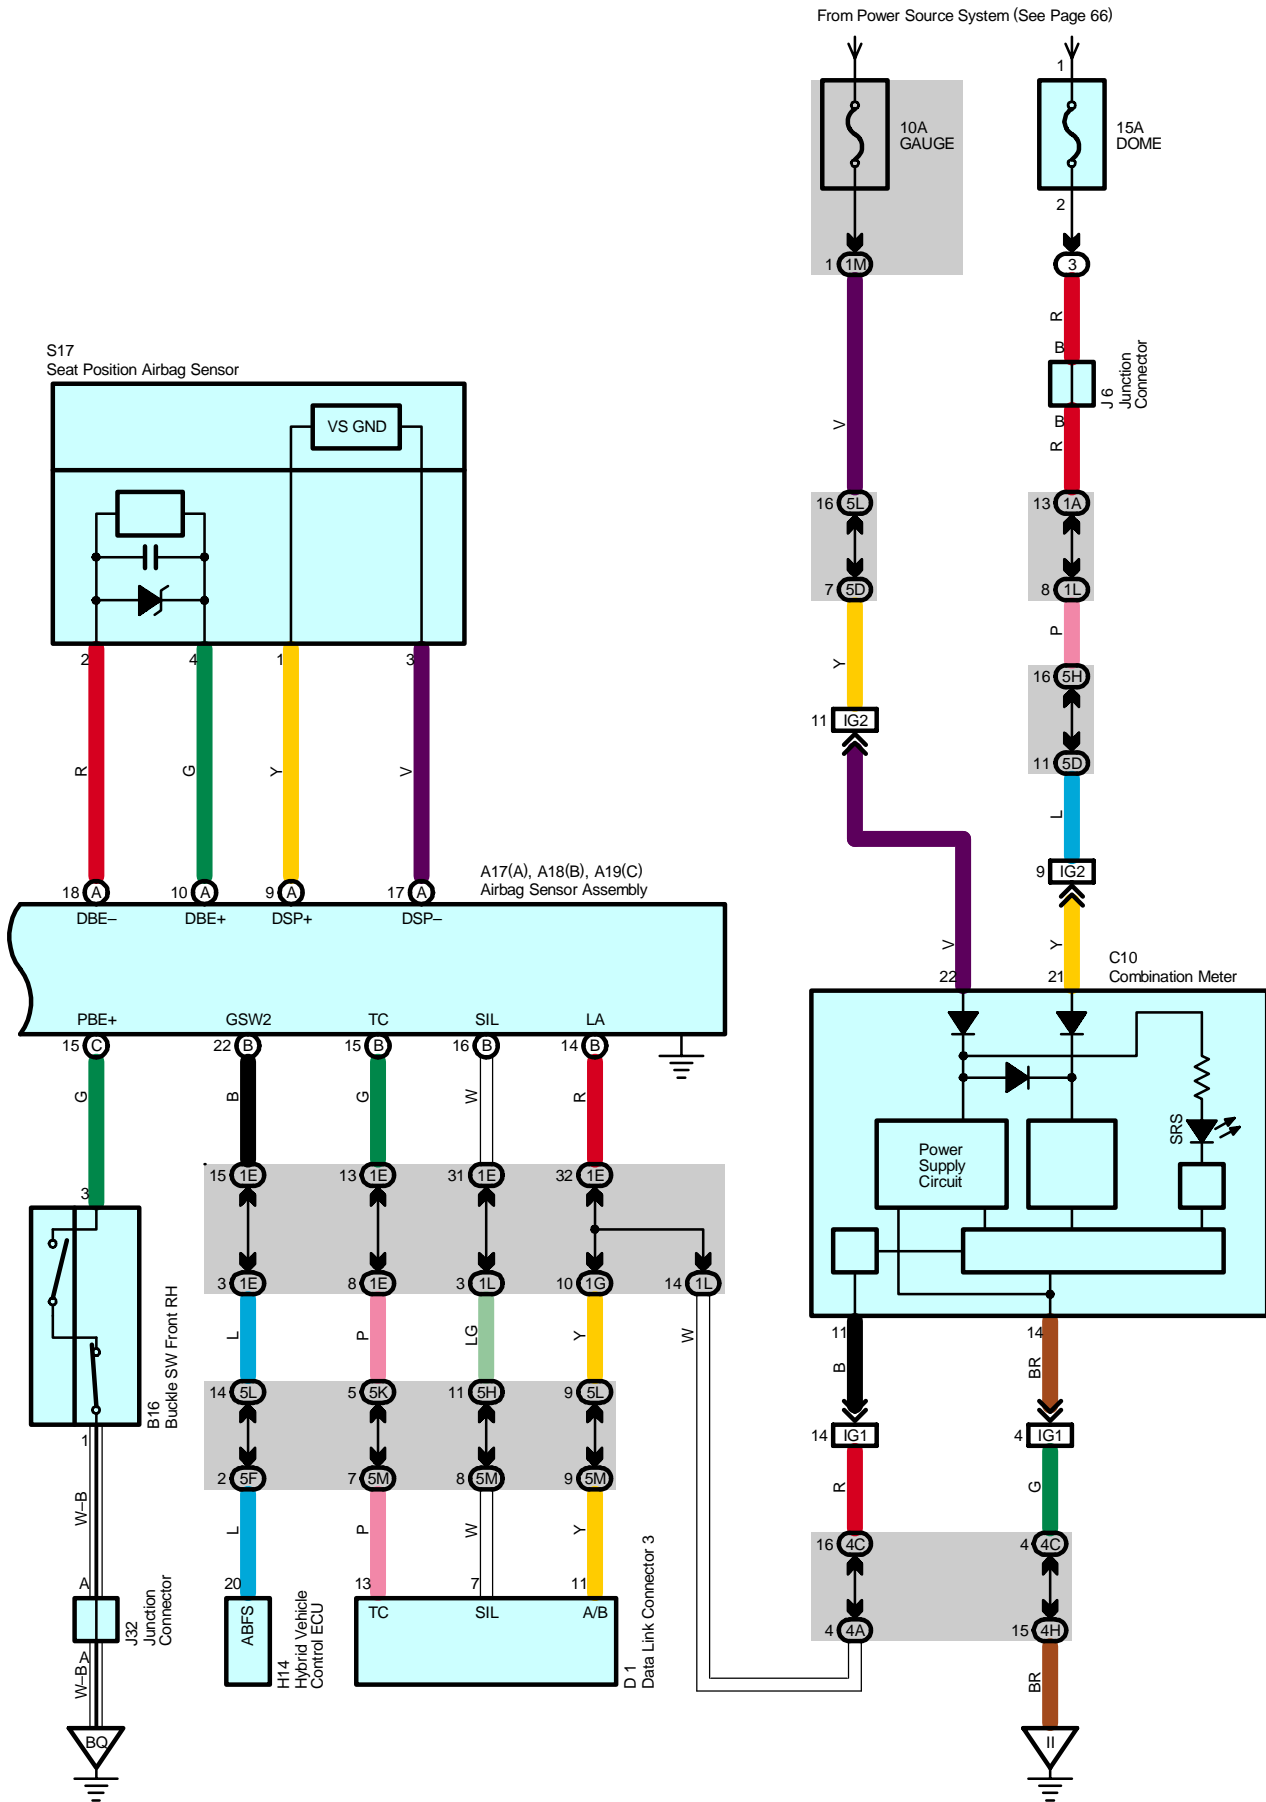

## System Outline

The SRS is a protection device for a driver and front passenger which has a supplemental role to the seat belts. When the power SW is pushed to IG ON position, the current from the IGN fuse flows to TERMINAL (B) 21 of the airbag sensor assembly.

If an accident occurs while driving, when the frontal impact exceeds set level, the current from the IGN fuse flows to TERMINALS (B) 5, (B) 8, (B) 4, (B) 1, (A) 5 and (C) 4 of the airbag sensor assembly to the airbag squibs and the pretensioners to TERMINALS (B) 6, (B) 7, (B) 3, (B) 2, (A) 6 and (C) 3 of the airbag sensor assembly to TERMINAL (B) 25, (B) 26 or BODY GROUND to GROUND. The flowing current activates the airbag squibs and the pretensioners.

When the side impact exceeds set level, the current from the SRS fuse flows to TERMINALS (A) 1, (C) 8, (A) 4 and (C) 5 of the airbag sensor assembly to the side airbag squibs and the curtain shield airbag squibs TERMINALS (A) 2, (C) 7, (A) 3 and (C) 6 of the airbag sensor assembly to TERMINAL (B) 25, (B) 26 or BODY GROUND to GROUND, which activates side airbag squibs and curtain shield airbag squibs.

The airbag stored inside the steering wheel pad is instantaneously expanded to reduce the shock to the driver.

The airbag stored inside the passenger's instrument panel expands instantaneously to reduce shock to the front passenger.

Side airbags expand instantaneously to reduce side shock to the driver and front passenger.

The curtain shield airbag can reduce impact on the head of the front and rear passengers and reduce risk of injury.

The pretensioner helps to maximize the seat belt restraint.

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page	
A17	A	46	C16	50	P22	52
A18	B	46	C17	50	P23	52
A19	C	46	C18	50	S17	53
A20	46	D1	47	S18	53	
A21	46	F1	44	S19	53	
A22	46	F2	44	S20	53	
B16	50	H14	47	S21	53	
C10	47	J6	48			
C15	50	J32	51			

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	22	Engine Room R/B (Engine Compartment Left)

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1E	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1G		
1L		
1M		
4A		
4C	36	Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4H	40	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5D		
5F		
5H		
5K		
5L		
5M		



# SRS

## : Connector Joining Wire Harness and Wire Harness


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IG1	58	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the Combination Meter)
IG2		
IH1	58	Instrument Panel Wire and Instrument Panel No.1 Wire (Behind the Glove Box)
IJ2	58	Engine Room Main Wire and Instrument Panel Wire (Behind the Glove Box)
BC1	60	Floor Wire and Seat Airbag No.1 Wire (Under the Driver's Seat)
BG1	60	Floor No.2 Wire and Seat Airbag No.2 Wire (Under the Front Passenger's Seat)

## : Ground Points

Code	See Page	Ground Points Location
IH	56	Cowl Side Panel LH
II	56	Instrument Panel Brace LH
BQ	60	Rear Side of Right Quarter Panel



From Power Source System (See Page 66)

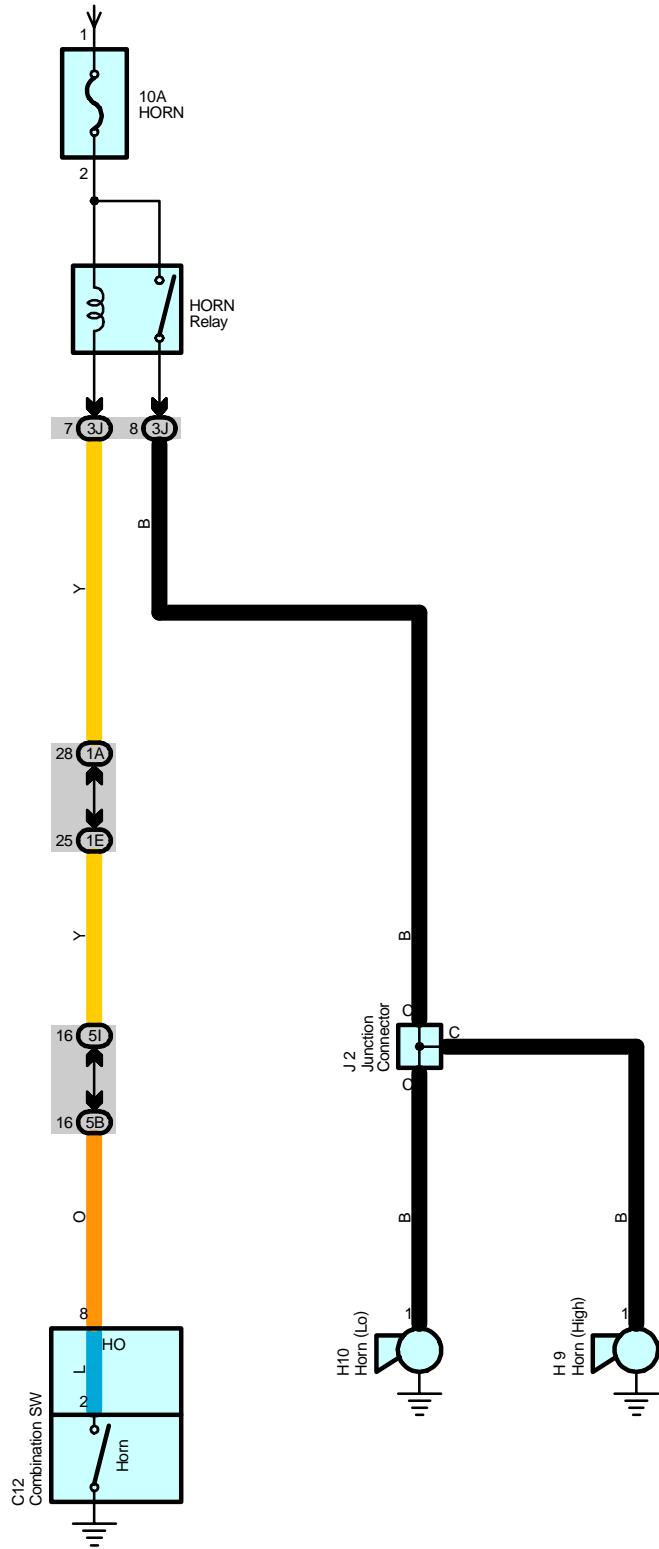

---

**Service Hints****H9, H10 Horn (Low), (High)**

1-Ground : Approx. 12 volts with the horn SW on

 : **Parts Location**

Code	See Page	Code	See Page	Code	See Page
C12	<a href="#">47</a>	H10	<a href="#">44</a>		
H9	<a href="#">44</a>	J2	<a href="#">45</a>		

 : **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	<a href="#">28</a>	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1E	<a href="#">28</a>	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
3J	<a href="#">22</a>	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
5B	<a href="#">40</a>	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5I		



**Service Hints****C9 Clock**

1-Ground : Always approx. 12 volts

4-Ground : Approx. 12 volts with the power SW at ACC ON or IG ON position

2-Ground : Always continuity

 : **Parts Location**

Code	See Page	Code	See Page	Code	See Page
C9	47	J6	48	J24	48

 : **Relay Blocks**

Code	See Page	Relay Blocks (Relay Block Location)
3	22	Engine Room R/B (Engine Compartment Left)


 : **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1L	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1M		
5G		
5H	40	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5K		
5L		

 : **Ground Points**

Code	See Page	Ground Points Location
IH	56	Cowl Side Panel LH

# Power Outlet

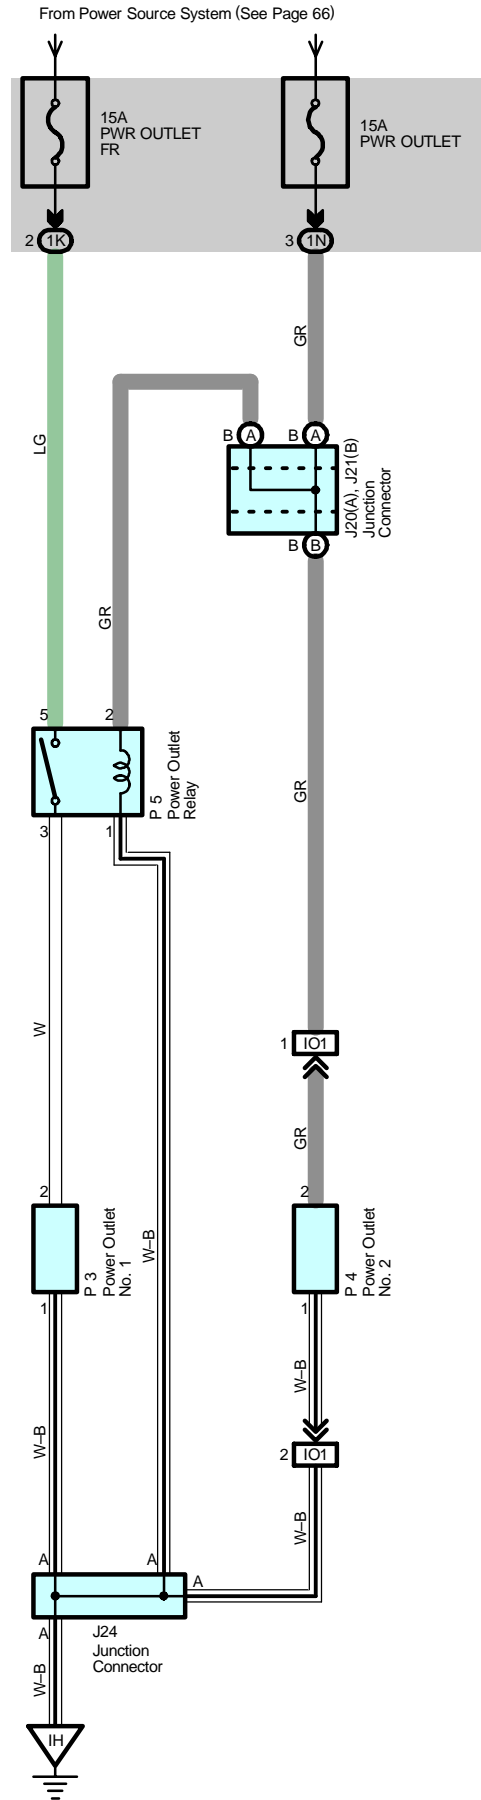

### Service Hints

#### P5 Power Outlet Relay

3-5 : Closed with the power SW at ACC ON or IG ON position

#### : Parts Location

Code		See Page	Code	See Page	Code	See Page
J20	A	48	J24	48	P4	49
J21	B	48	P3	49	P5	49

#### : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1K	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1N		

#### : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IO1	58	Instrument Panel Wire and Instrument Panel No.4 Wire (Front Console Box LH)


#### : Ground Points

Code	See Page	Ground Points Location
IH	56	Cowl Side Panel LH



# Remote Control Mirror

From Power Source System (See Page 66)

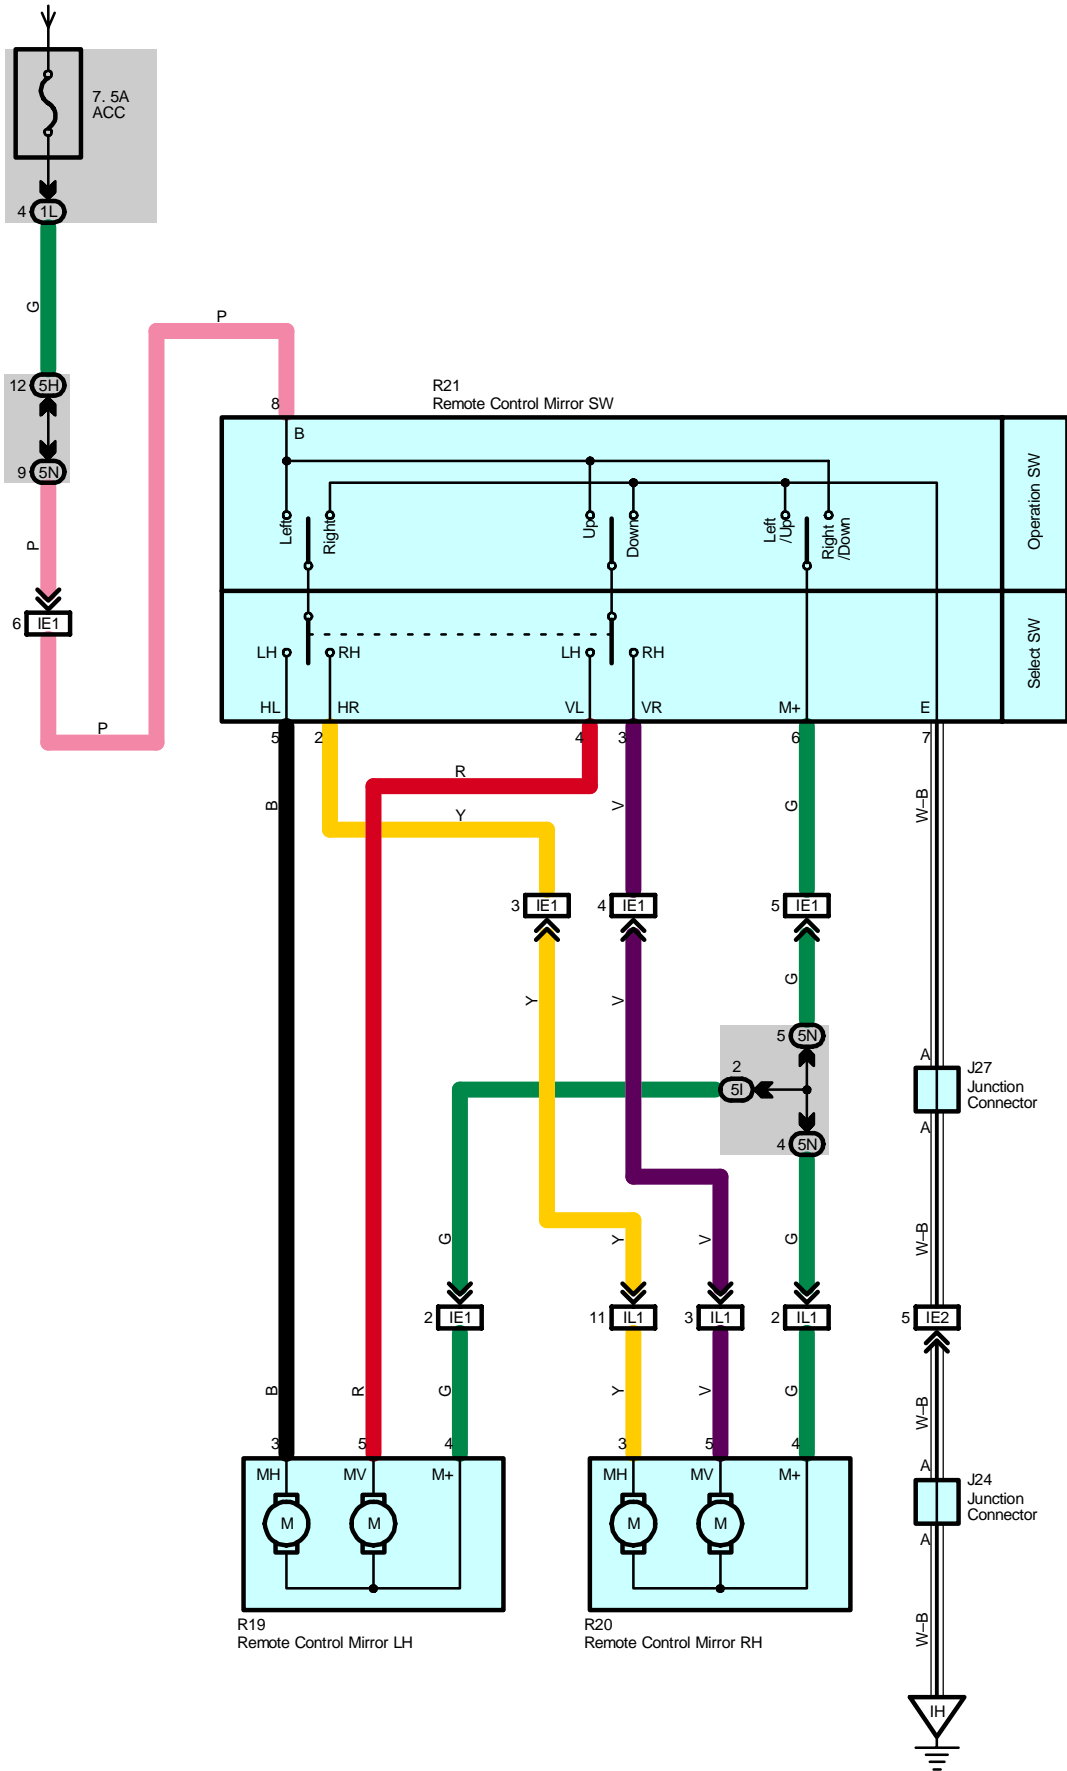

**Service Hints****R21 Remote Control Mirror SW**

8-6 : Continuity with the operation SW at DOWN or RIGHT position

6-7 : Continuity with the operation SW at UP or LEFT position

8-Ground : Approx. 12 volts with the power SW at ACC ON or IG ON position

7-Ground : Always continuity

**○ : Parts Location**

Code	See Page	Code	See Page	Code	See Page
J24	<a href="#">48</a>	R19	<a href="#">52</a>	R21	<a href="#">52</a>
J27	<a href="#">51</a>	R20	<a href="#">52</a>		

**○ : Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1L	<a href="#">28</a>	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
5H	<a href="#">40</a>	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5I		
5N		


**□ : Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE1	<a href="#">56</a>	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IE2		
IL1	<a href="#">58</a>	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)

**▽ : Ground Points**


Code	See Page	Ground Points Location
IH	<a href="#">56</a>	Cowl Side Panel LH

# Rear Window Defogger and Mirror Heater

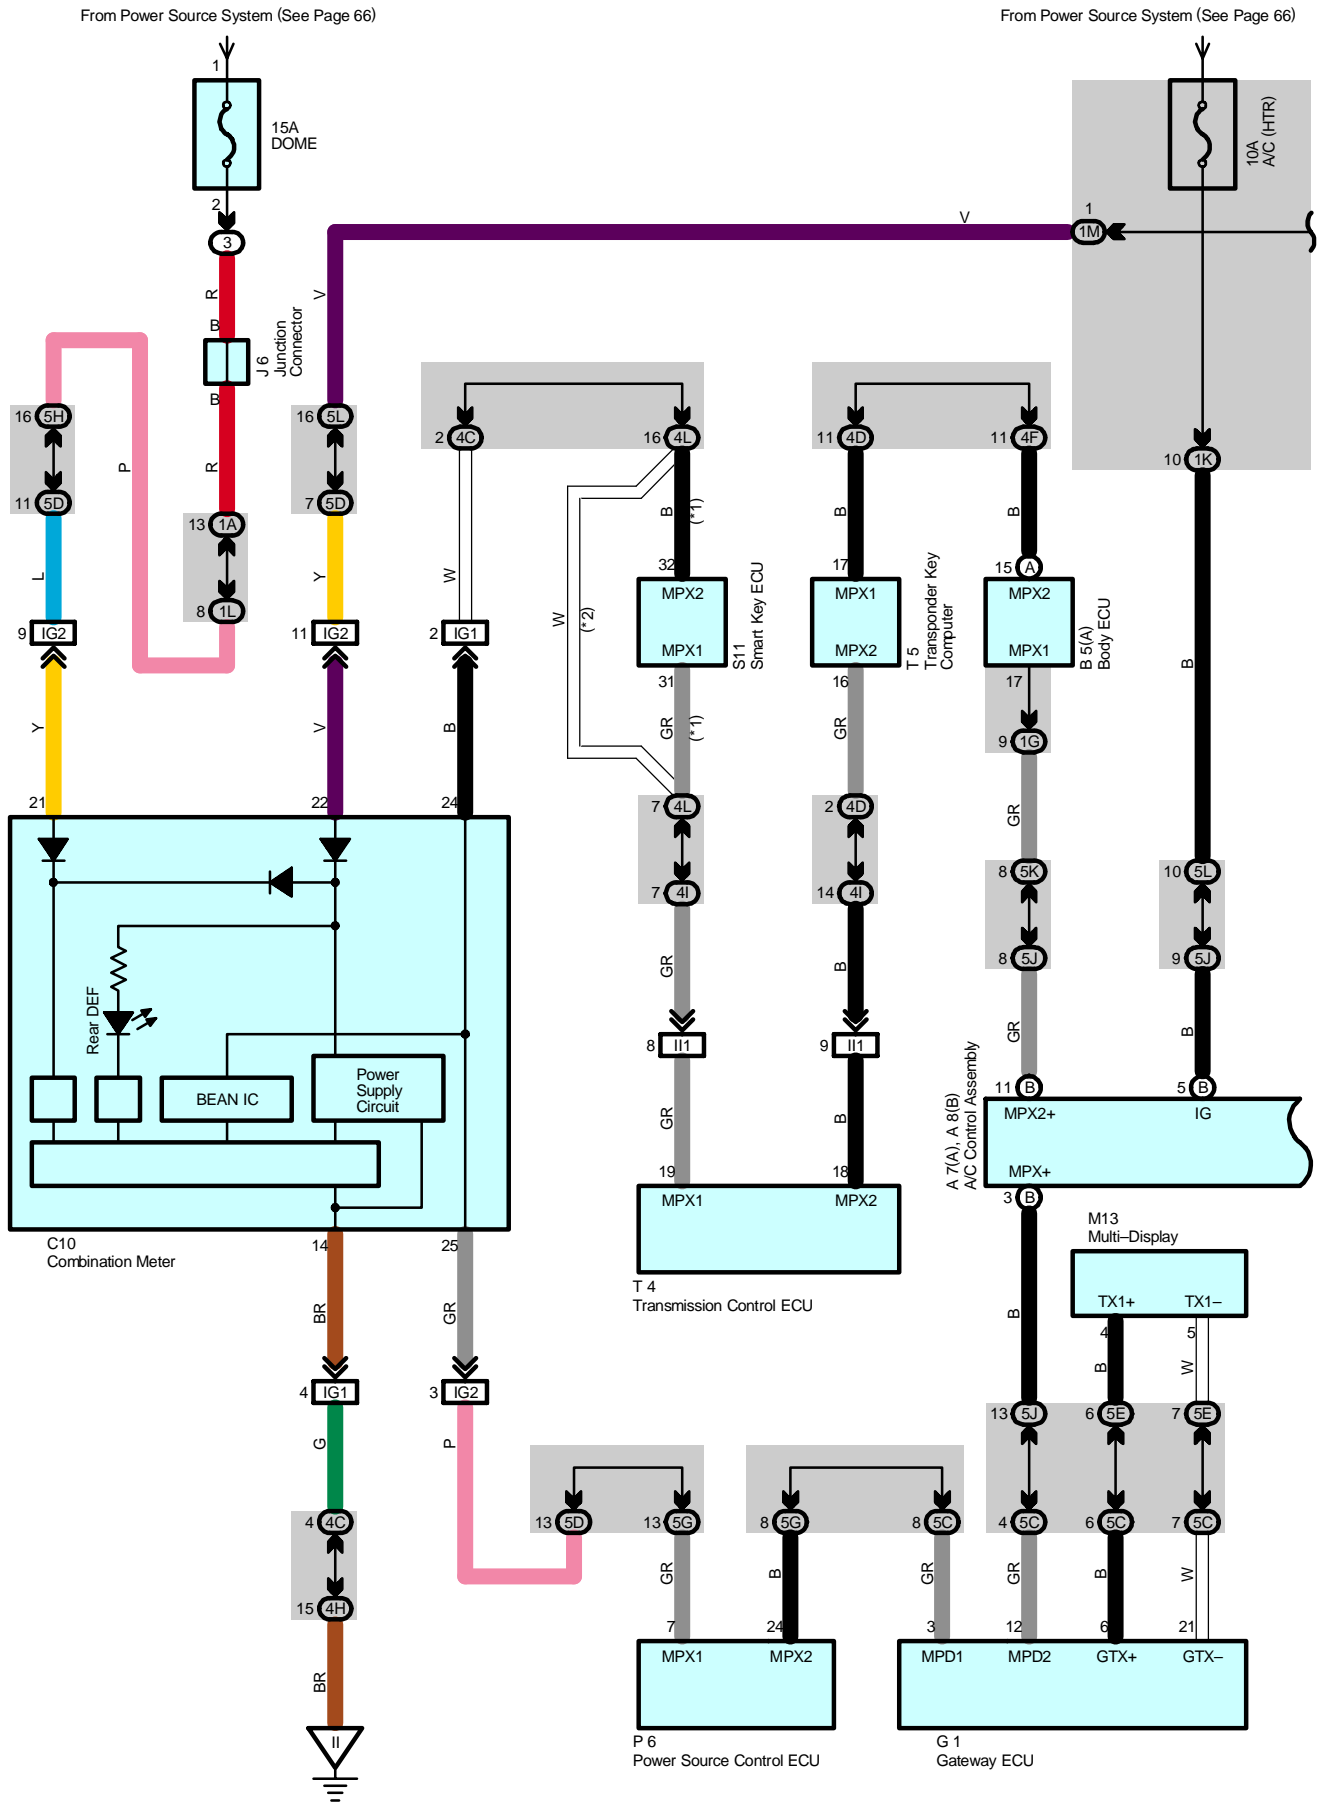

From Power Source System (See Page 66)

\* 1 : w/ Smart Entry System  
 \* 2 : w/o Smart Entry System

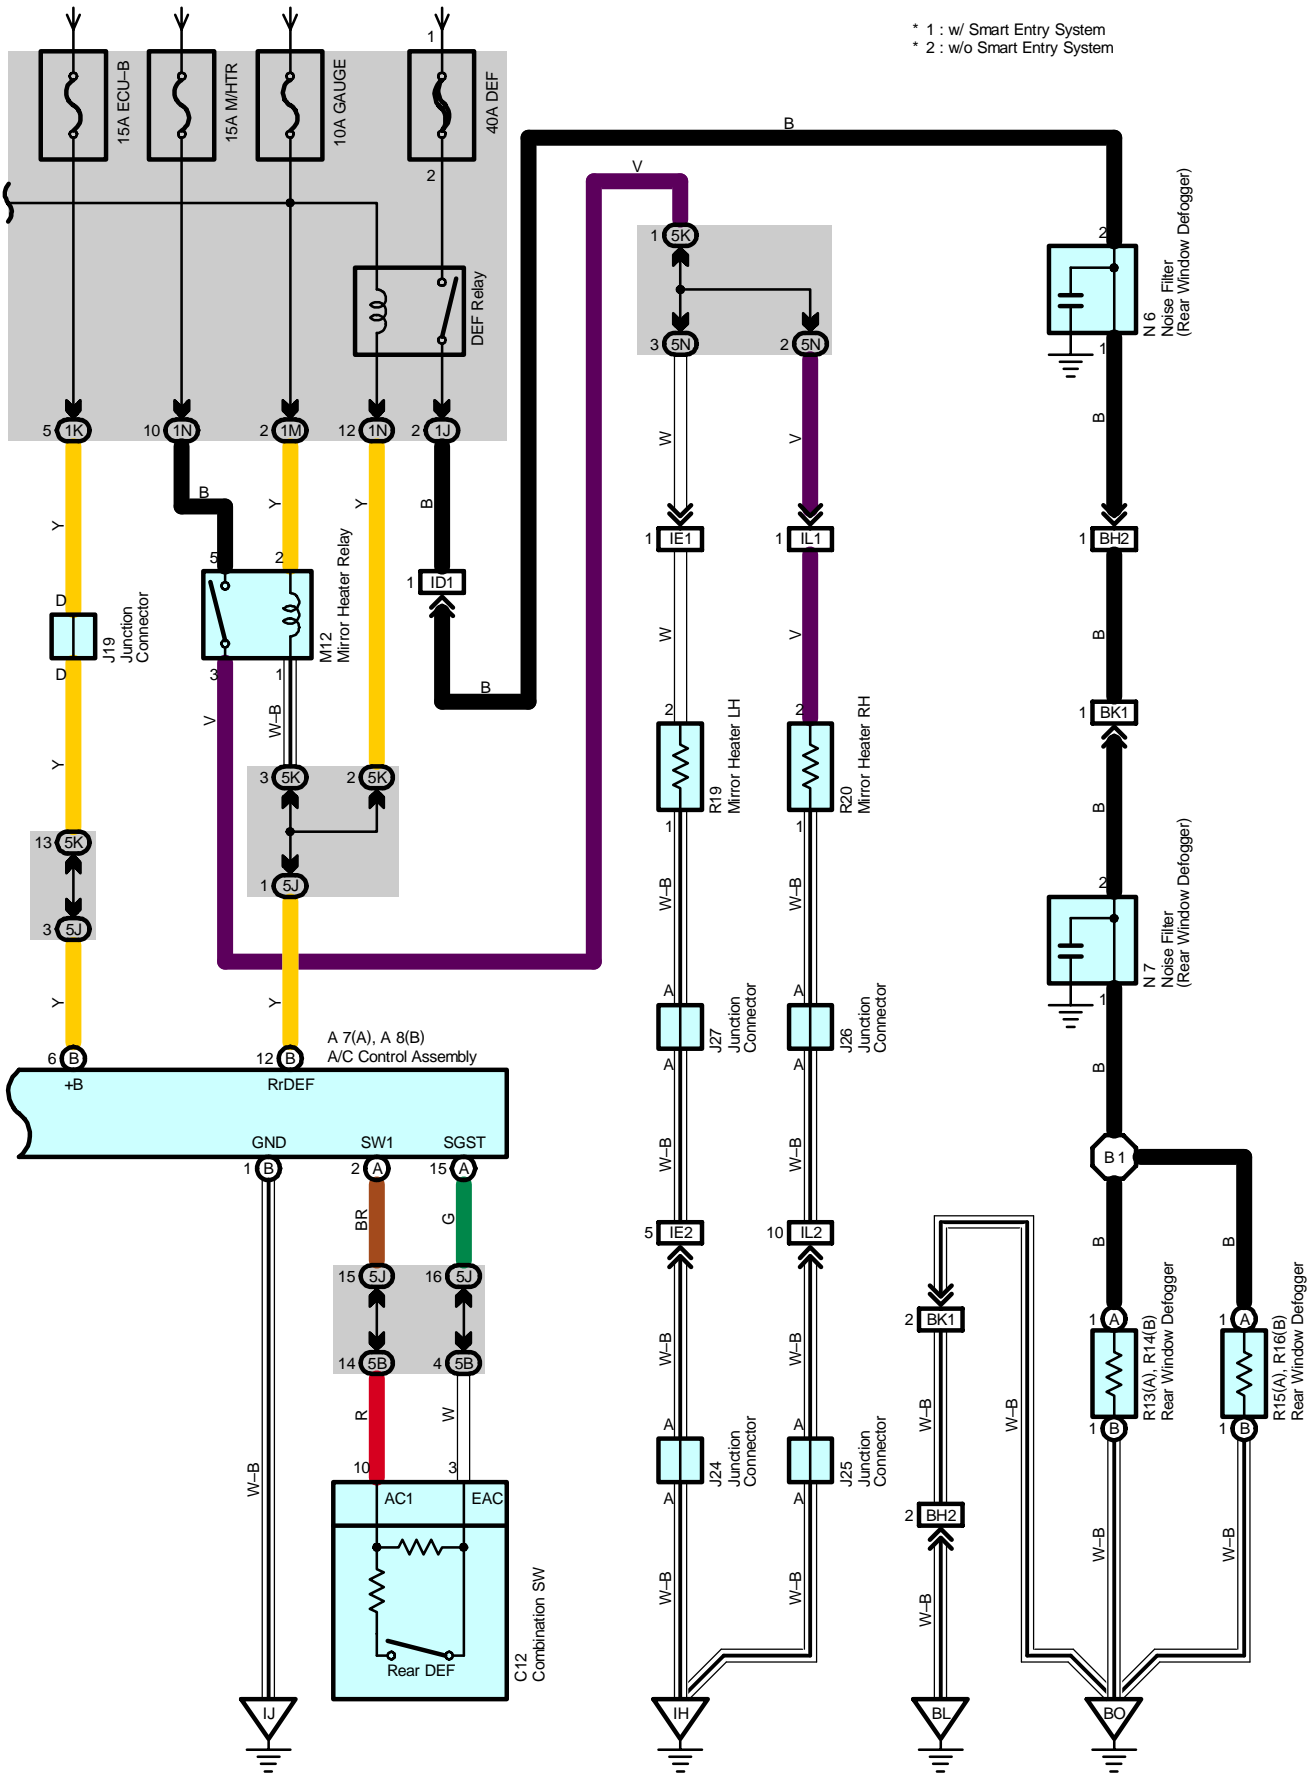

# Rear Window Defogger and Mirror Heater

## System Outline

When power SW is at IG ON position, turning ON rear DEF SW on the steering wheel sends signal to A/C control assembly. Then A/C control assembly flows electricity in TERMINAL Rr DEF, which activates DEF relay and mirror heater relay. As a result, rear DEF SW and mirror heater is turned on.

Turning ON rear DEF SW of multi-display sends signal to A/C control assembly. Then the same action follows as above.

During rear window defogger and mirror heater in operation, signal is input in combination meter, lighting rear DEF indicator in combination meter.

## Service Hints

### R13 (A), R15 (A) Rear Window Defogger

1-Ground : Approx. 12 volts with the push start SW at IG ON position and rear window defogger SW on

### R19, R20 Mirror Heater LH, RH

2-Ground : Approx. 12 volts with the push start SW at IG ON position and rear window defogger SW on

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A7	A 46	J25	48	R14	B 52
A8	B 46	J26	51	R15	A 52
B5	A 46	J27	51	R16	B 52
C10	47	M12	48	R19	52
C12	47	M13	48	R20	52
G1	47	N6	52	S11	49
J6	48	N7	52	T4	49
J19	48	P6	49	T5	49
J24	48	R13	A 52		

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	22	Engine Room R/B (Engine Compartment Left)

 : **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1G	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1J		
1K		
1L		
1M		
1N		
4C		
4D		
4F		
4H		
4I		
4L		
5B	40	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5C		
5D		
5E		
5G		
5H		
5J		
5K		
5L		
5N		

 : **Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID1	56	Instrument Panel Wire and Floor Wire (Left Kick Panel)
IE1	56	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IE2		
IG1	58	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the Combination Meter)
IG2		
II1	58	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
IL1	58	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IL2		
BH2	62	Back Door No.1 Wire and Floor Wire (Rear Side of Roof Panel)
BK1	62	Back Door No.1 Wire and Back Door No.2 Wire (Rear Side of Roof Panel)

 : **Ground Points**


Code	See Page	Ground Points Location
IH	56	Cowl Side Panel LH
II	56	Instrument Panel Brace LH
IJ	56	Instrument Panel Brace RH
BL	60	Rear Side of Left Quarter Panel
BO	60	Center of the Back Door Panel

 : **Splice Points**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B1	62	Back Door No.2 Wire			

# Automatic Glare-Resistant EC Mirror

From Power Source System (See Page 66)

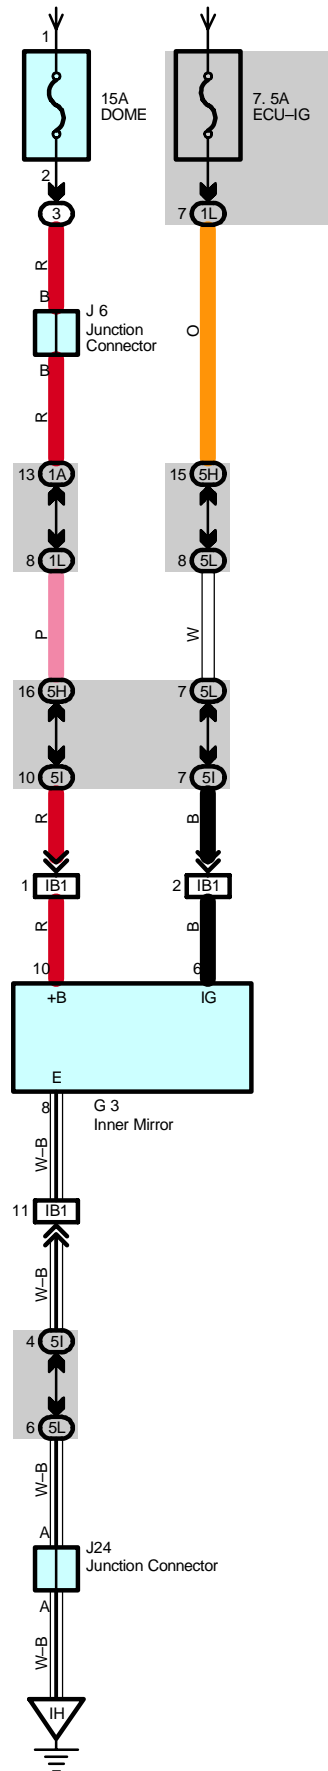

## Service Hints

### G3 Inner Mirror

10-Ground : Always approx. 12 volts

8-Ground : Always continuity

6-Ground : Approx. 12 volts with the power SW at IG ON position

### : Parts Location

Code	See Page	Code	See Page	Code	See Page
G3	51	J6	48	J24	48

### : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	22	Engine Room R/B (Engine Compartment Left)

### : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1L	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
5H	40	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5I		
5L		

### : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB1	56	Roof Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)


### : Ground Points

Code	See Page	Ground Points Location
IH	56	Cowl Side Panel LH



# Garage Door Opener

From Power Source System (See Page 66)

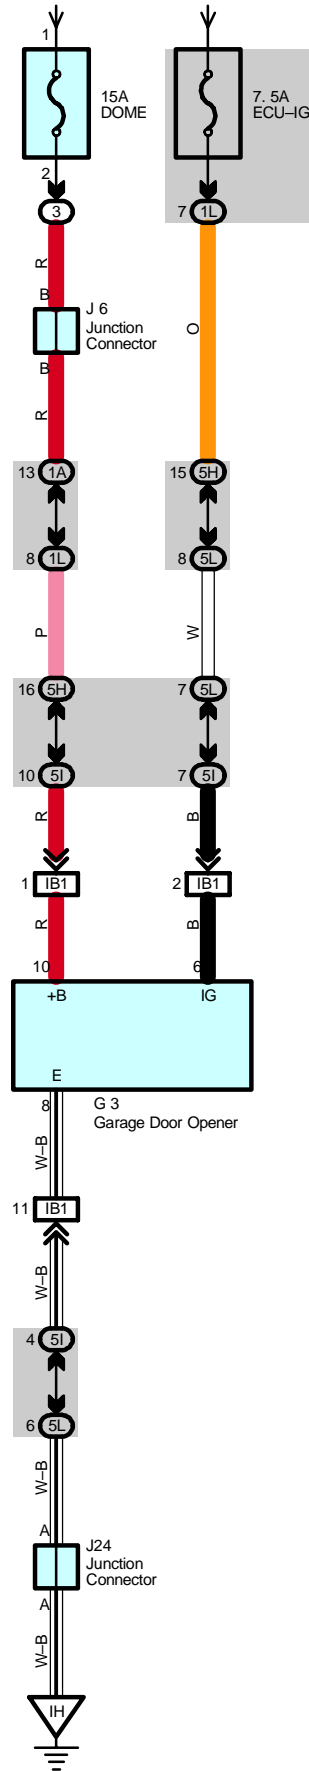

## Service Hints

### G3 Garage Door Opener

10-Ground : Always approx. 12 volts

8-Ground : Always continuity

6-Ground : Approx. 12 volts with the power SW at IG ON position

### : Parts Location

Code	See Page	Code	See Page	Code	See Page
G3	51	J6	48	J24	48

### : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	22	Engine Room R/B (Engine Compartment Left)

### : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1L	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
5H	40	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5I		
5L		


### : Connector Joining Wire Harness and Wire Harness


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB1	56	Roof Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)

### : Ground Points


Code	See Page	Ground Points Location
IH	56	Cowl Side Panel LH


# Multi-Display and Audio System with Separate Amplifier

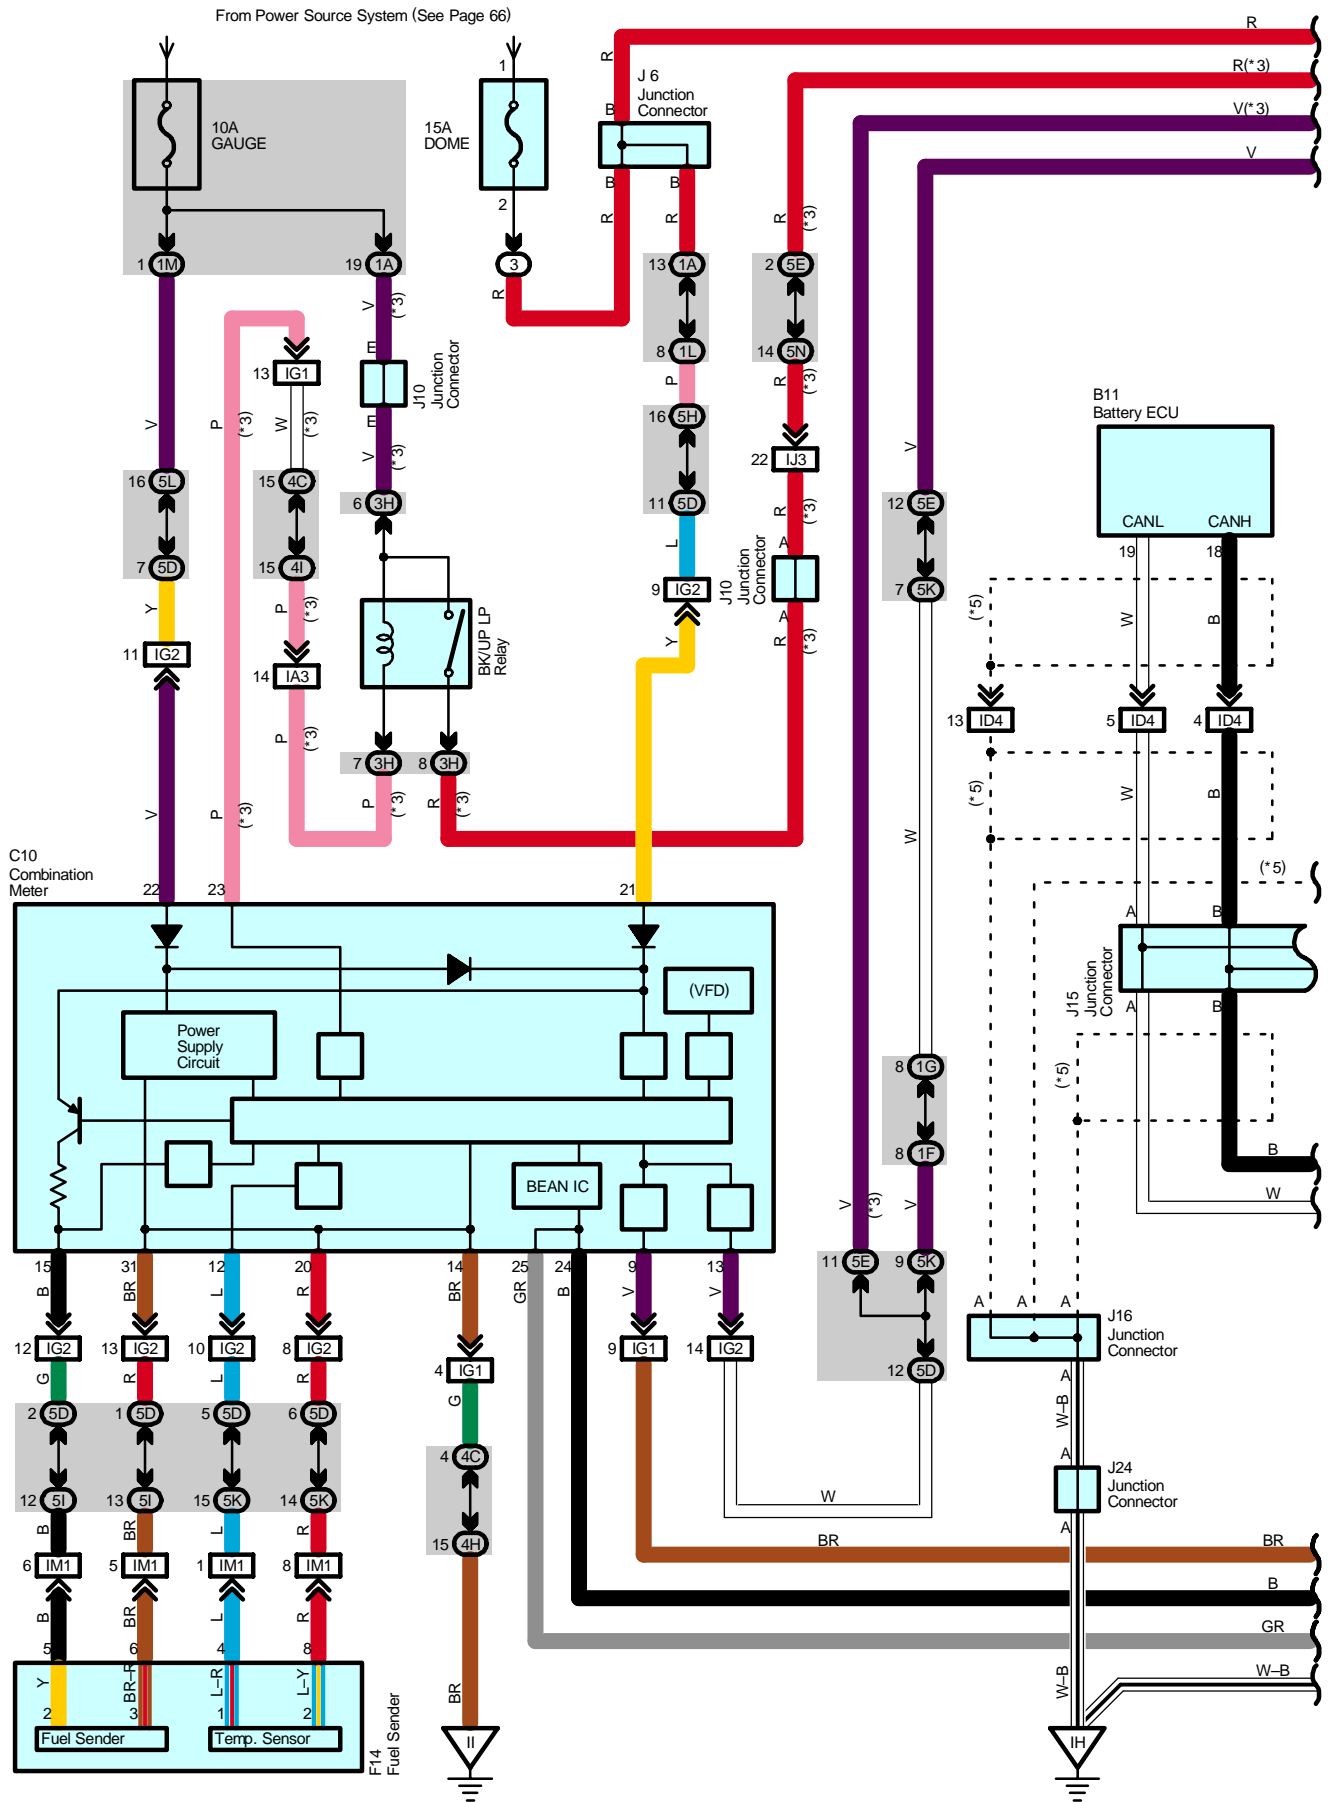

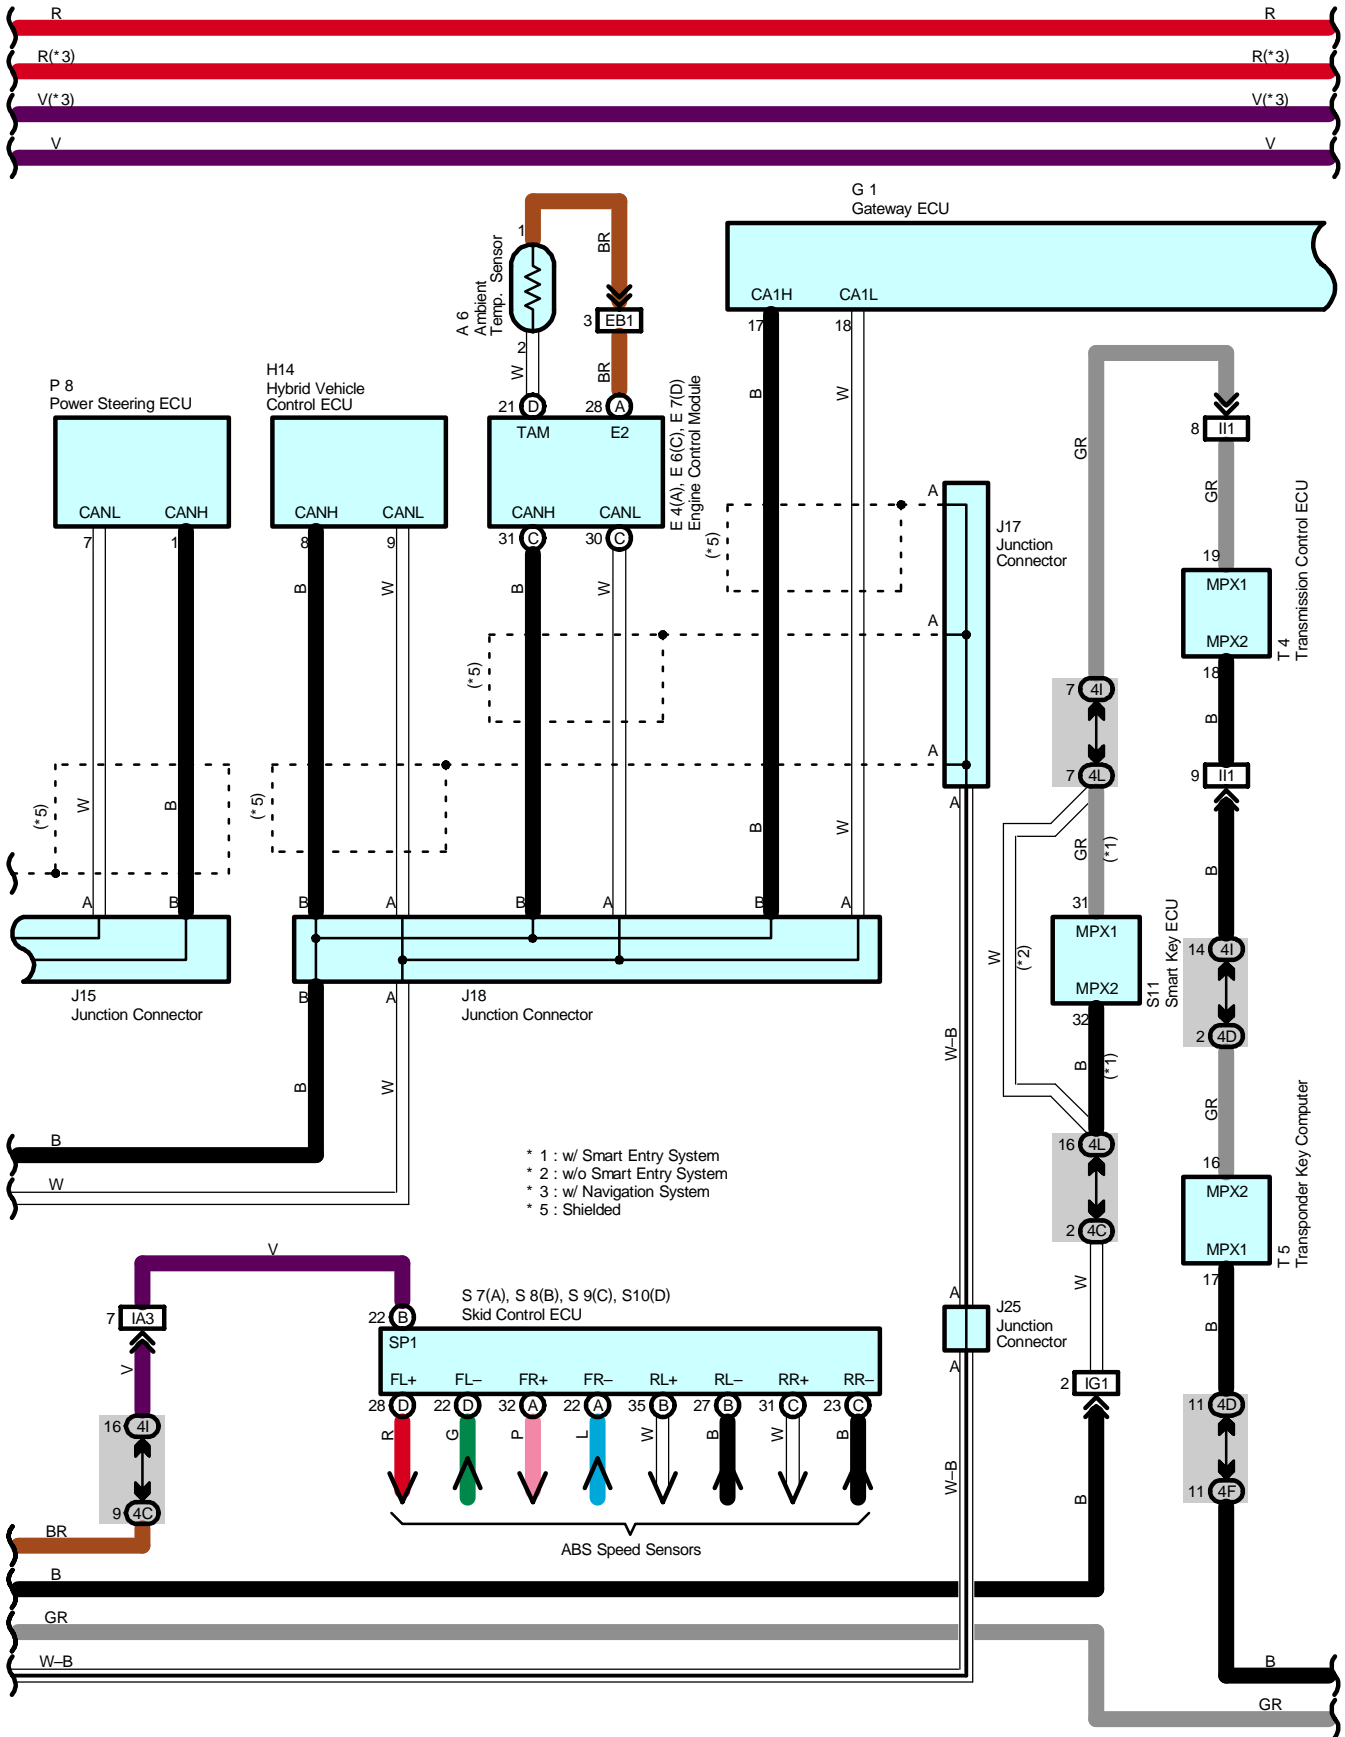



# Multi-Display and Audio System with Separate Amplifier

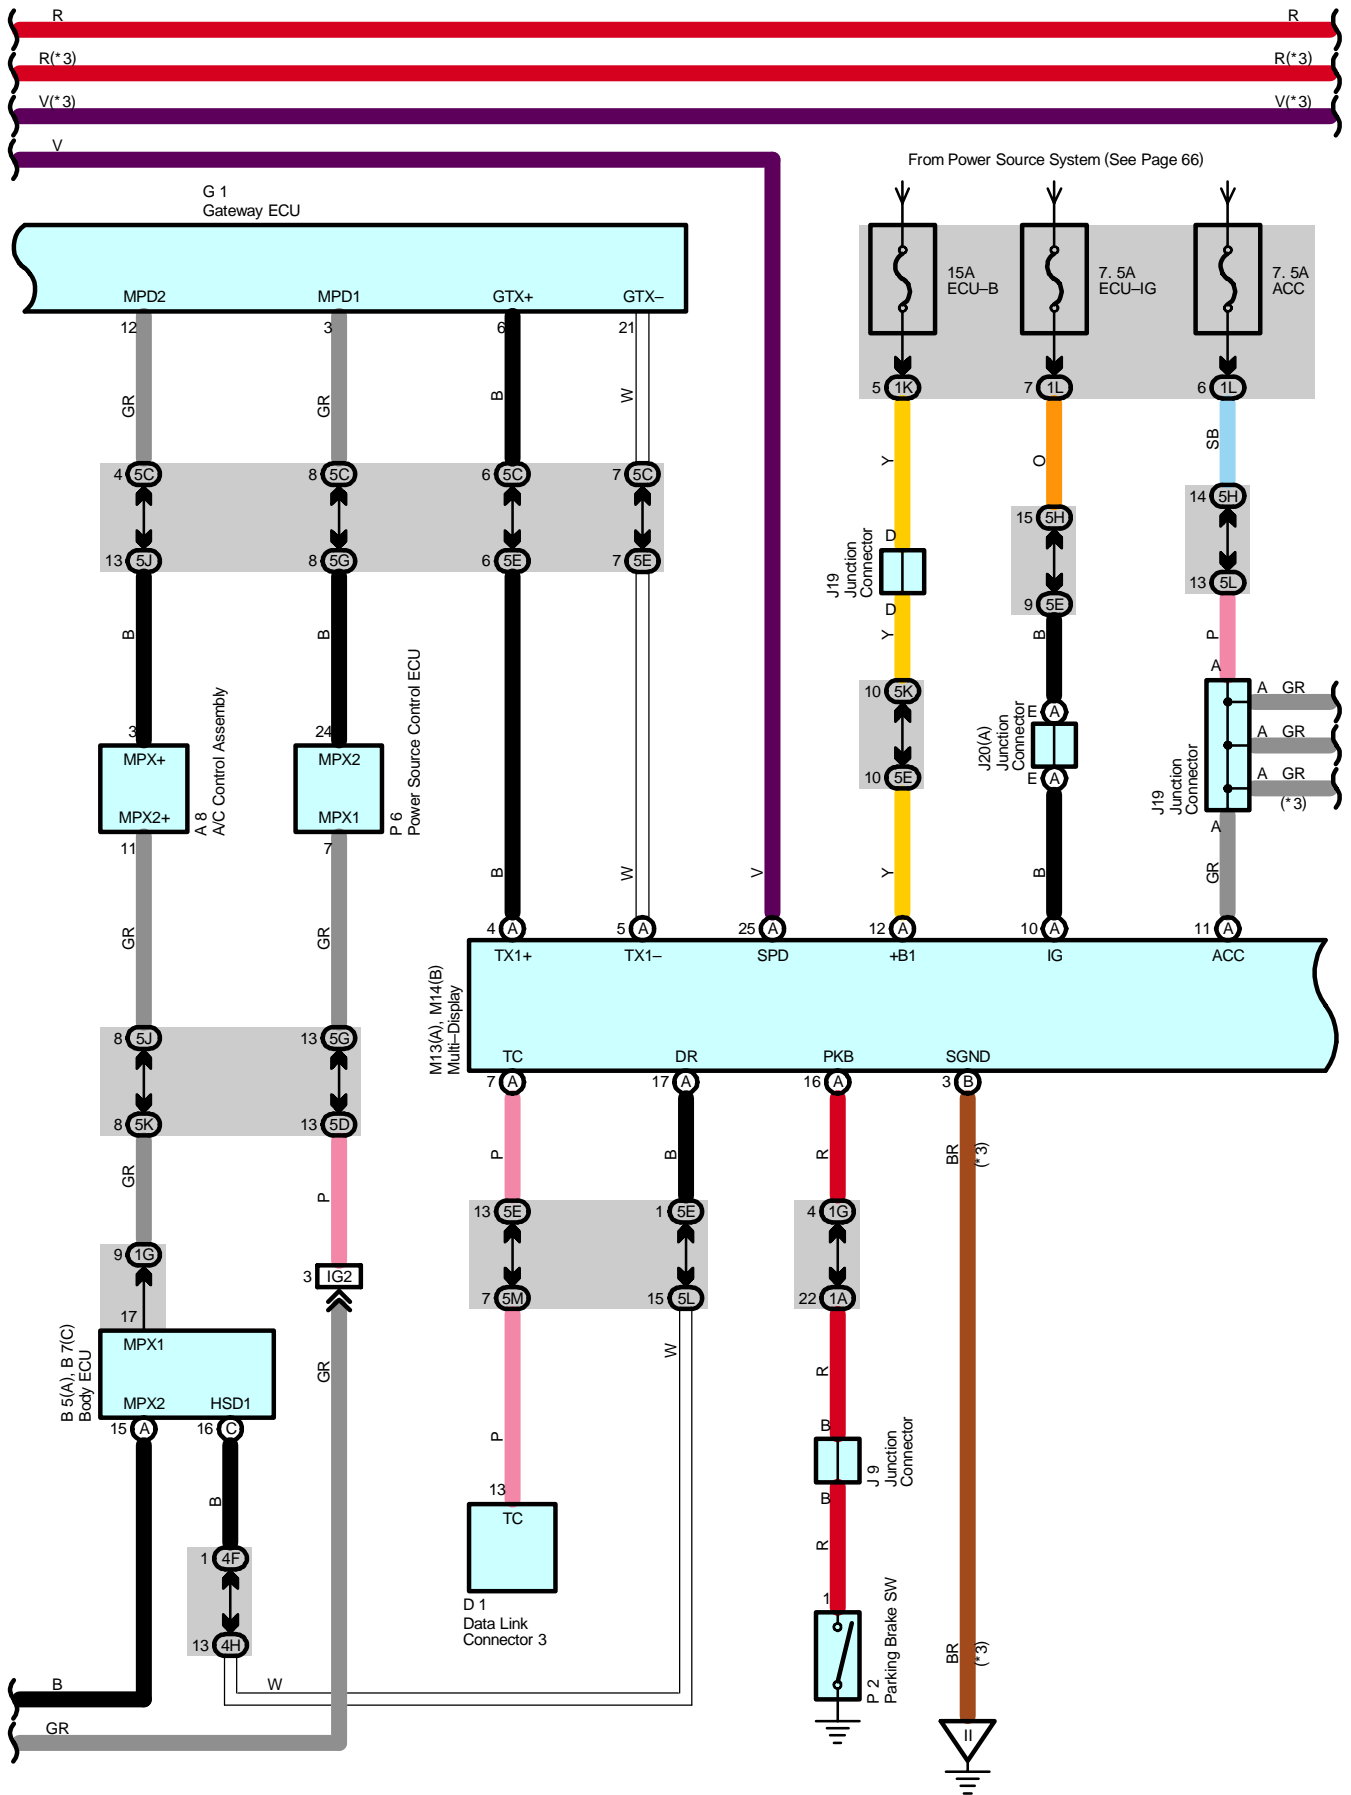

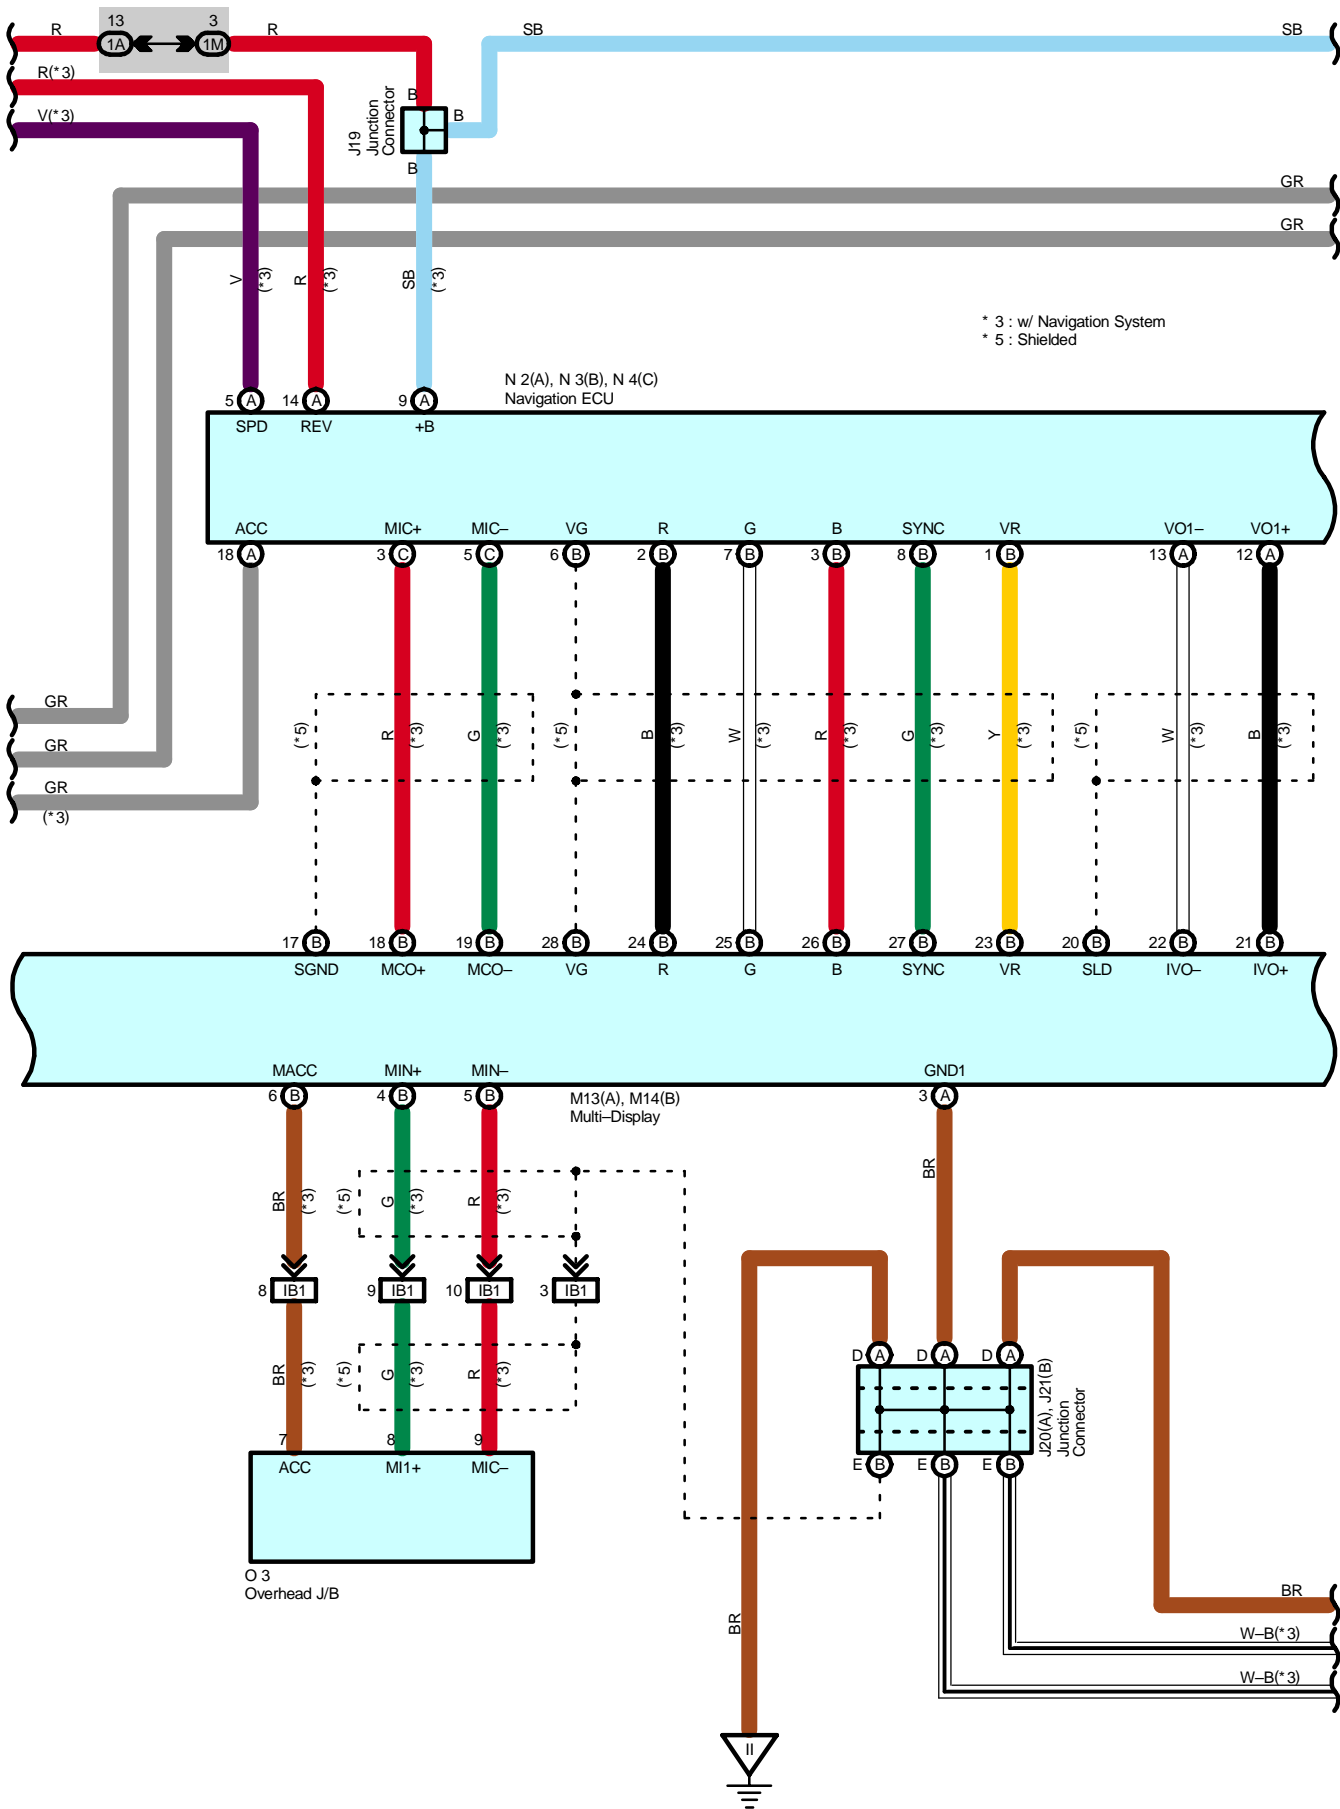


# Multi-Display and Audio System with Separate Amplifier

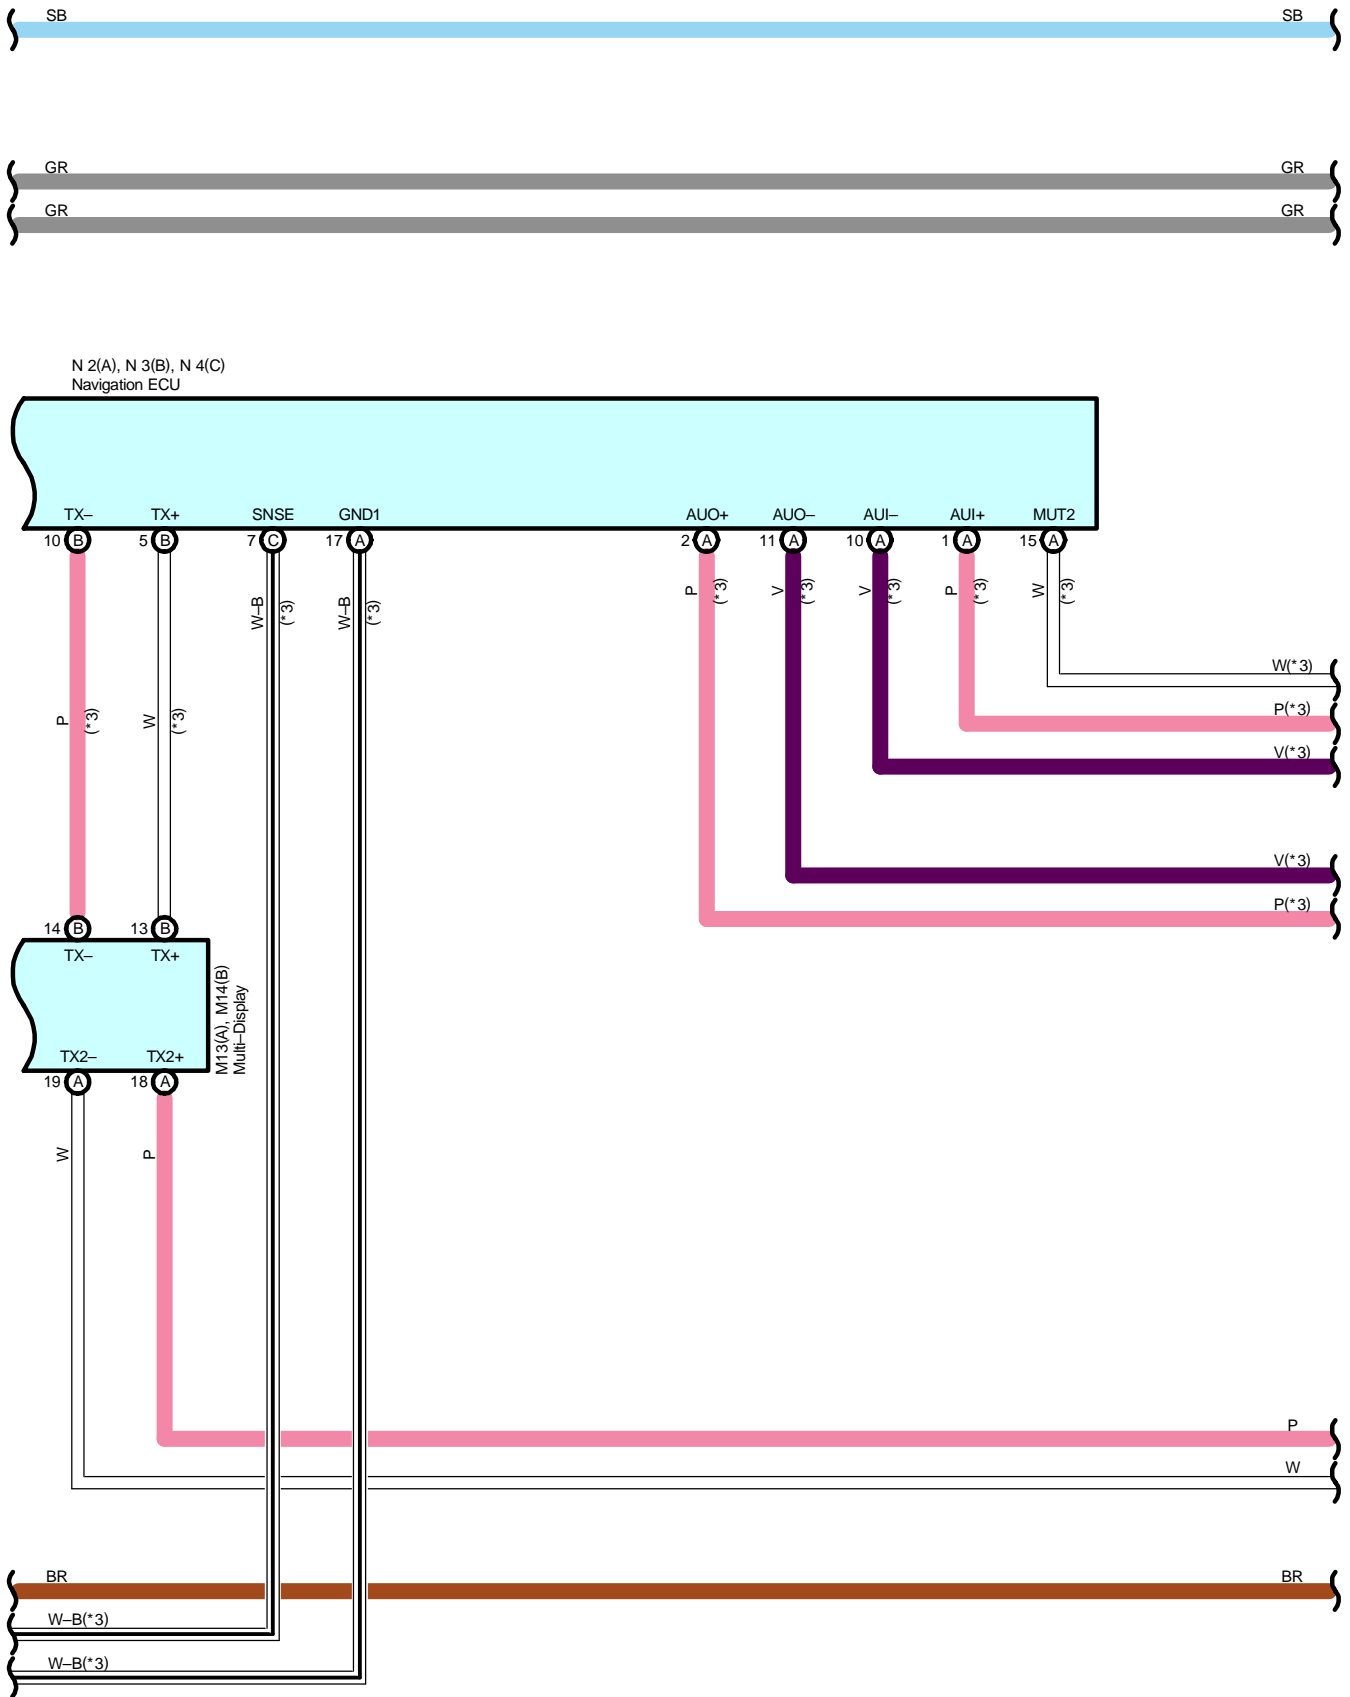

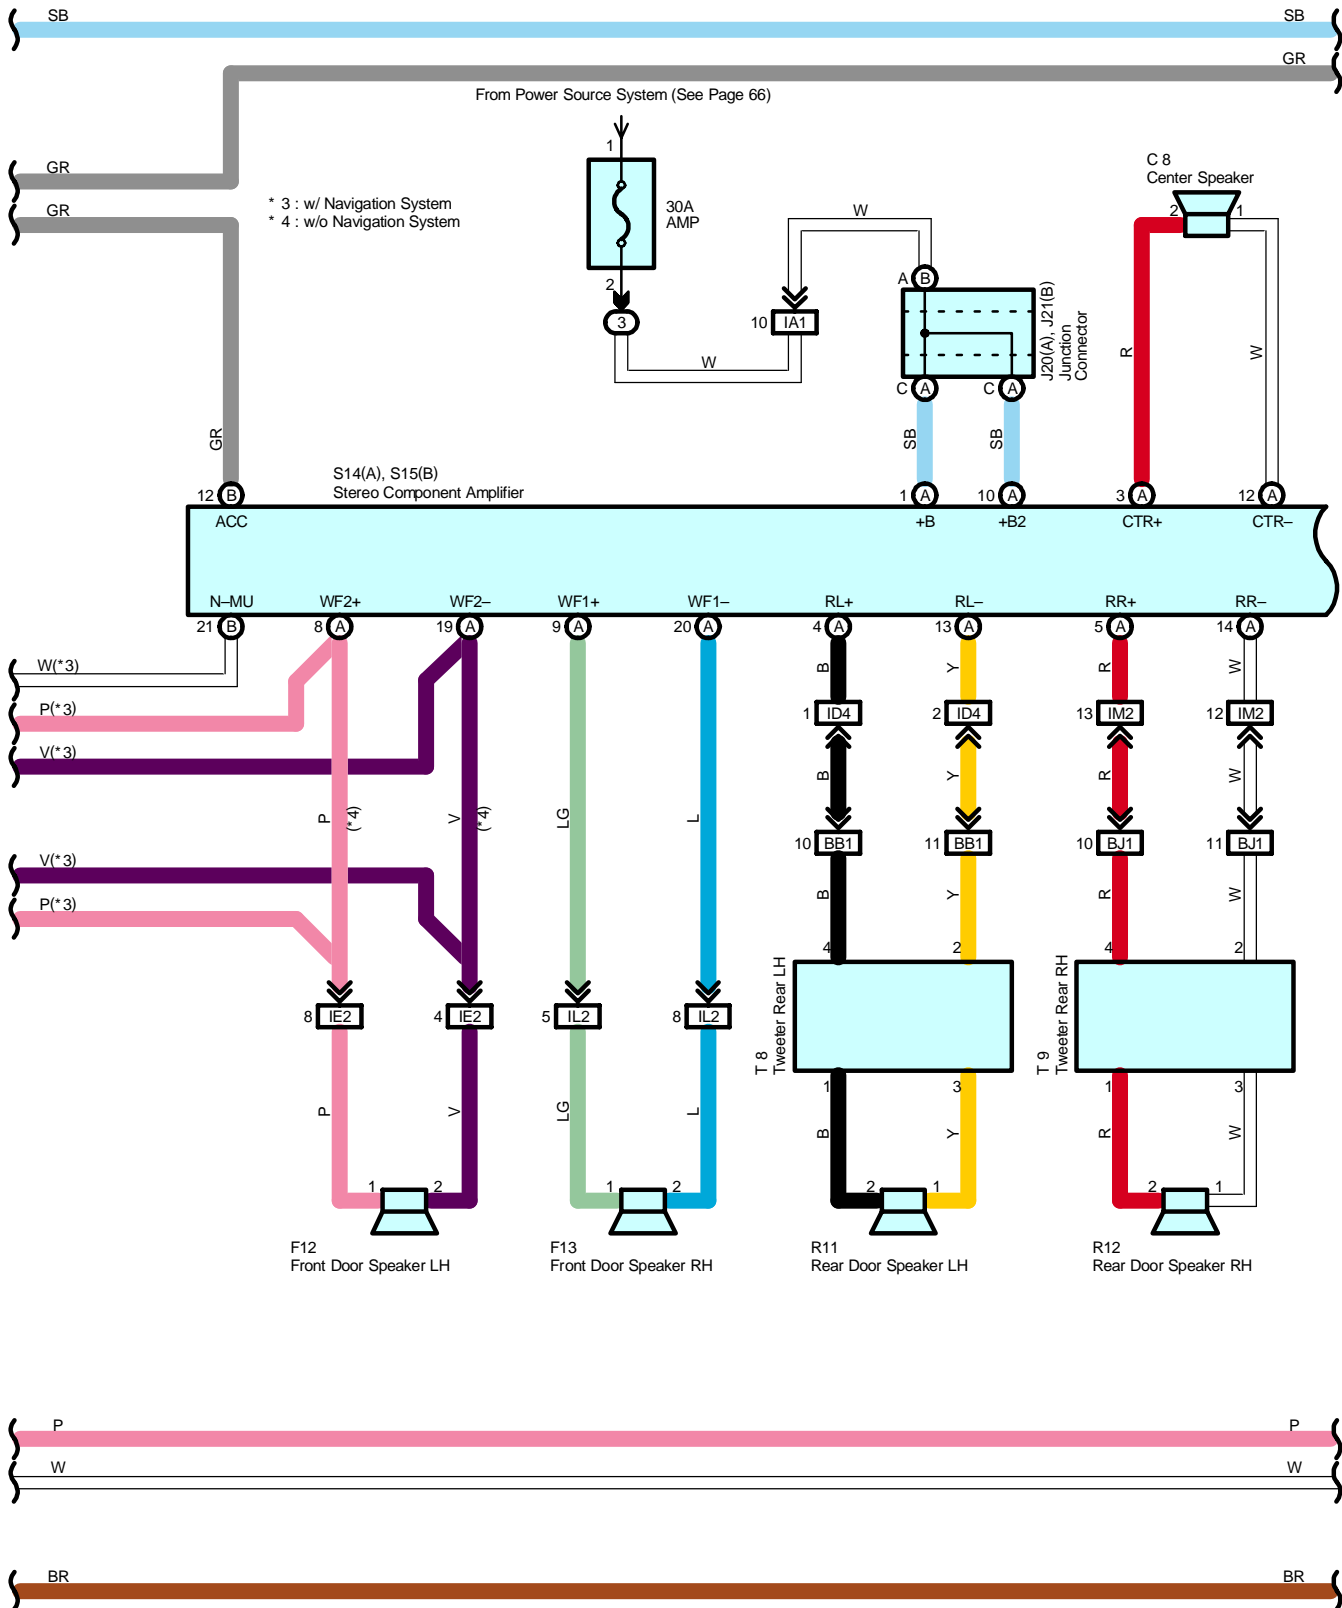



# Multi-Display and Audio System with Separate Amplifier

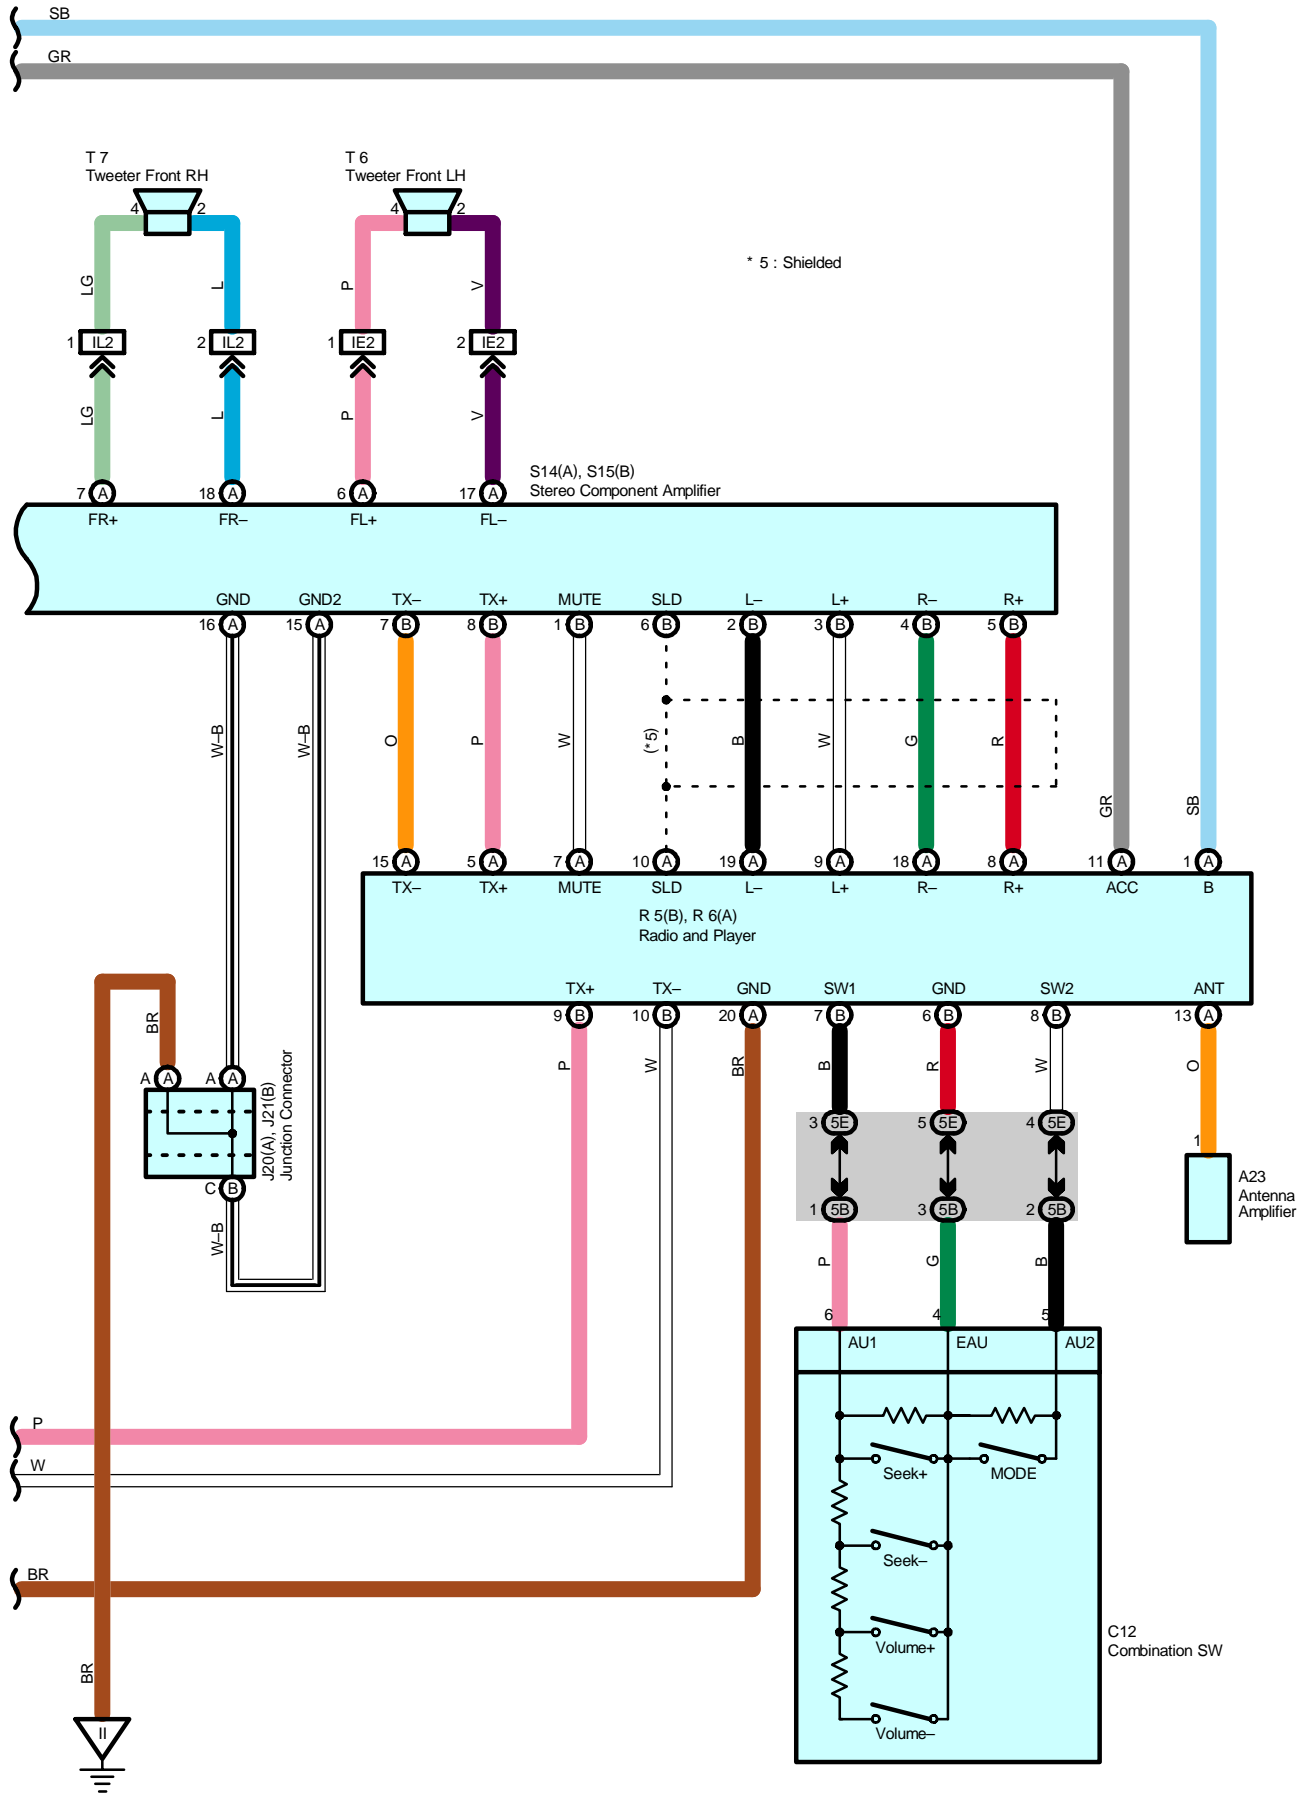

## Service Hints

### R6 (A) Radio and Player

- (A)11–Ground : Approx. 12 volts with the power SW at ACC ON or IG ON position
- (A) 1–Ground : Always approx. 12 volts
- (A)20–Ground : Always continuity

### S14 (A), S15 (B) Stereo Component Amplifier

- (B)12–Ground : Approx. 12 volts with the power SW at ACC ON or IG ON position
- (A) 1, (A) 10–Ground : Always approx. 12 volts
- (A)15, (A) 16–Ground: Always continuity

### N2 (A), N4 (C) Navigation ECU

- (A)18–Ground : Approx. 12 volts with the power SW at ACC ON or IG ON position
- (A) 9–Ground : Always approx. 12 volts
- (A) 17, (C) 7–Ground : Always continuity

### M13 (A), M14 (B) Multi–Display

- (A)12–Ground : Always approx. 12 volts
- (A)10–Ground : Approx. 12 volts with the power SW at IG ON position
- (A)11–Ground : Approx. 12 volts with the power SW at ACC ON or IG ON position
- (A) 3, (B) 3–Ground : Always continuity

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A6	44	J9	48	P8	49
A8	46	J10	48	R5   B	49
A23	46	J15	48	R6   A	49
B5   A	46	J16	48	R11	52
B7   C	46	J17	48	R12	52
B11	50	J18	48	S7   A	49
C8	47	J19	48	S8   B	49
C10	47	J20   A	48	S9   C	49
C12	47	J21   B	48	S10   D	49
D1	47	J24	48	S11	49
E4   A	47	J25	48	S14   A	49
E6   C	47	M13   A	48	S15   B	49
E7   D	47	M14   B	48	T4	49
F12	51	N2   A	48	T5	49
F13	51	N3   B	48	T6	53
F14	51	N4   C	48	T7	53
G1	47	O3	52	T8	53
H14	47	P2	49	T9	53
J6	48	P6	49		

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	22	Engine Room R/B (Engine Compartment Left)

# Multi-Display and Audio System with Separate Amplifier

## : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1F	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1G		
1K		
1L		
1M		
3H		
4C	36	Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4D		
4F		
4H		
4I		
4L		
5B	40	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5C		
5D		
5E		
5G		
5H		
5I		
5J		
5K		
5L		
5M		
5N		

## : Connector Joining Wire Harness and Wire Harness


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB1	54	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B)
IA1	56	Engine Room Main Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)
IA3		
IB1	56	Roof Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)
ID4	56	Instrument Panel Wire and Floor Wire (Left Kick Panel)
IE2	56	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IG1	58	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the Combination Meter)
IG2		
II1	58	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
IJ3	58	Engine Room Main Wire and Instrument Panel Wire (Behind the Glove Box)
IL2	58	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IM1	58	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
IM2		
BB1	60	Rear Door No.2 Wire and Floor Wire (Left Center Pillar)
BJ1	62	Rear Door No.1 Wire and Floor No.2 Wire (Right Center Pillar)


## : Ground Points

Code	See Page	Ground Points Location
IH	56	Cowl Side Panel LH
II	56	Instrument Panel Brace LH





# Multi-Display and Audio System with Built-in Amplifier

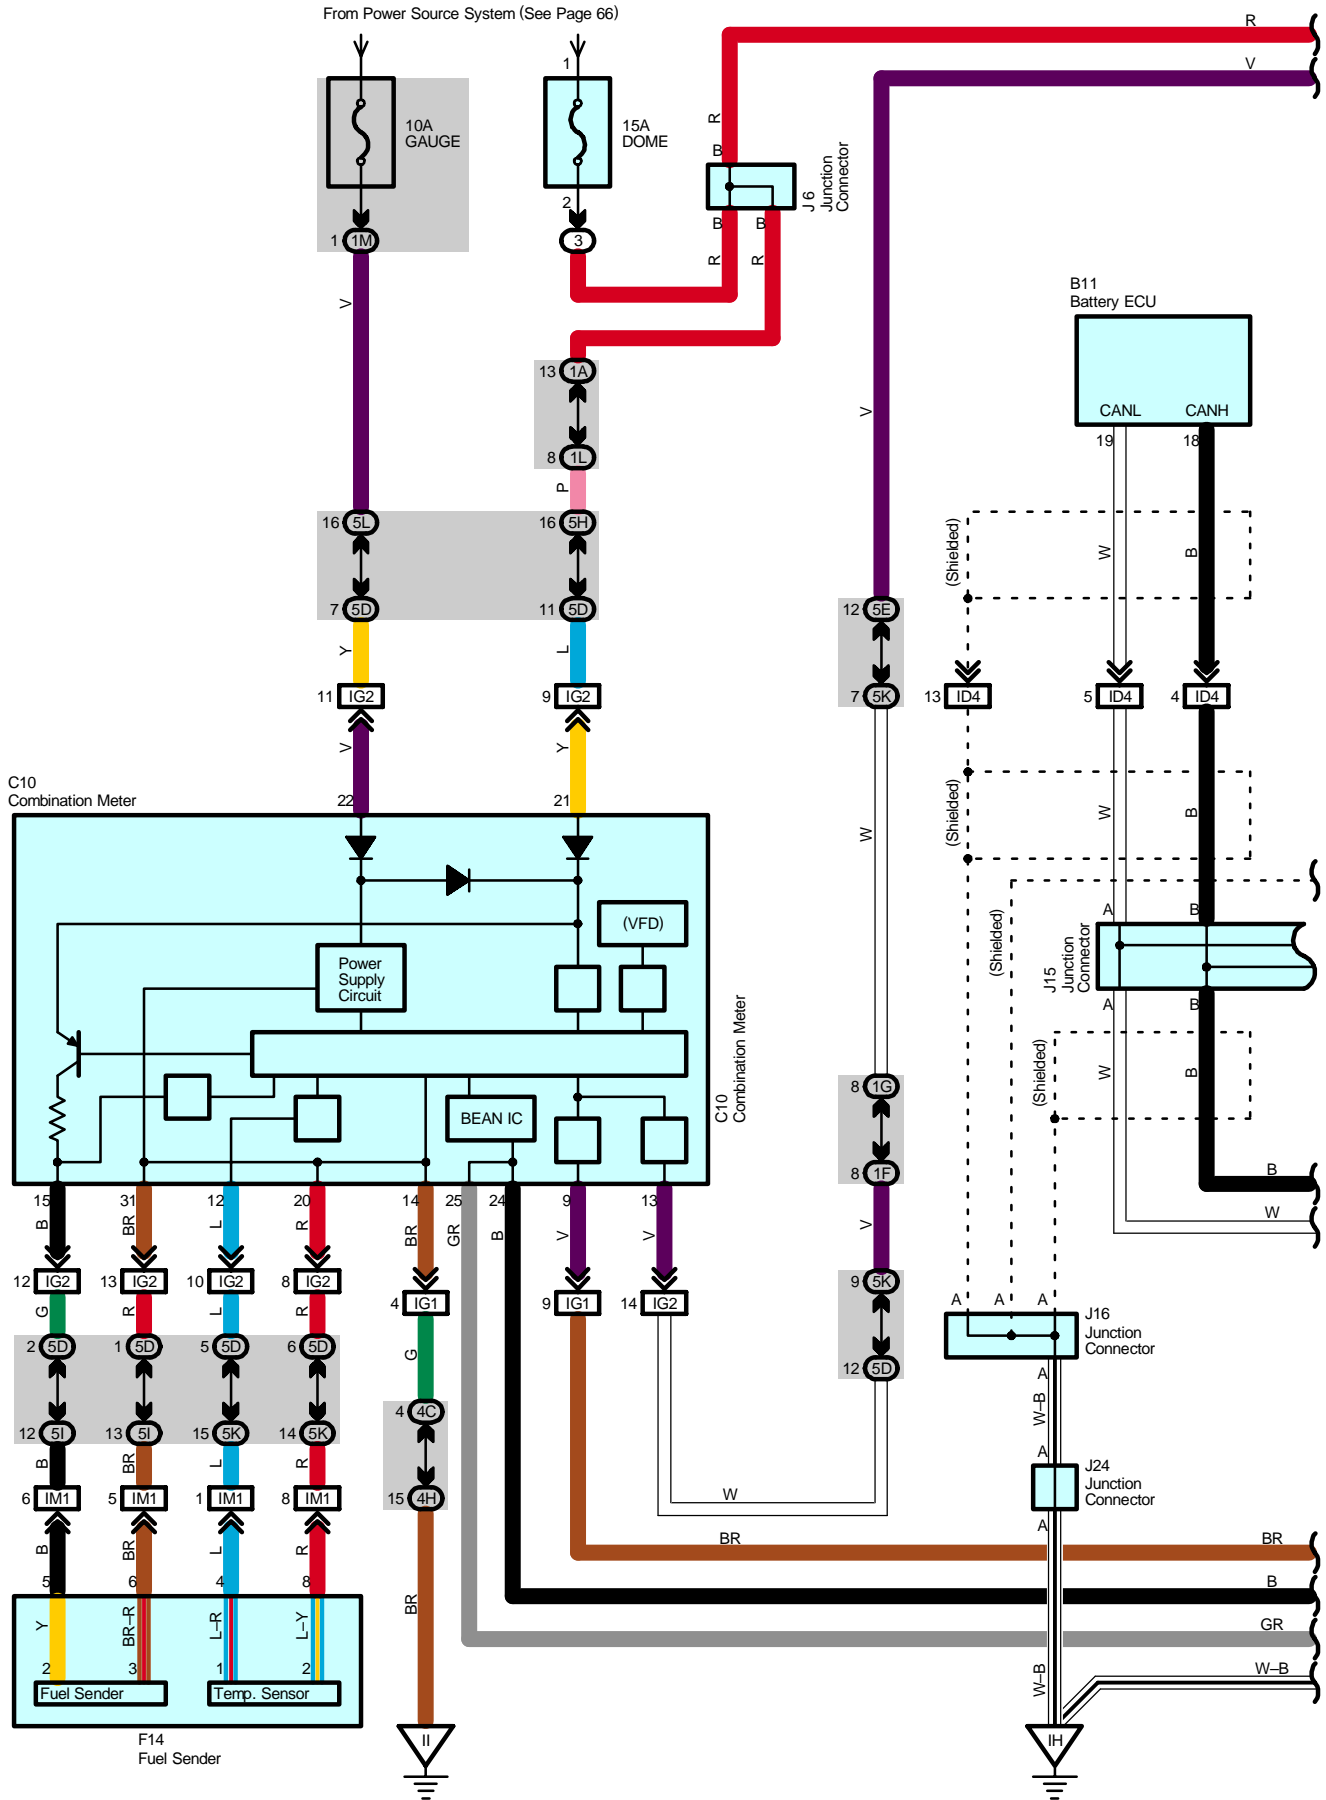

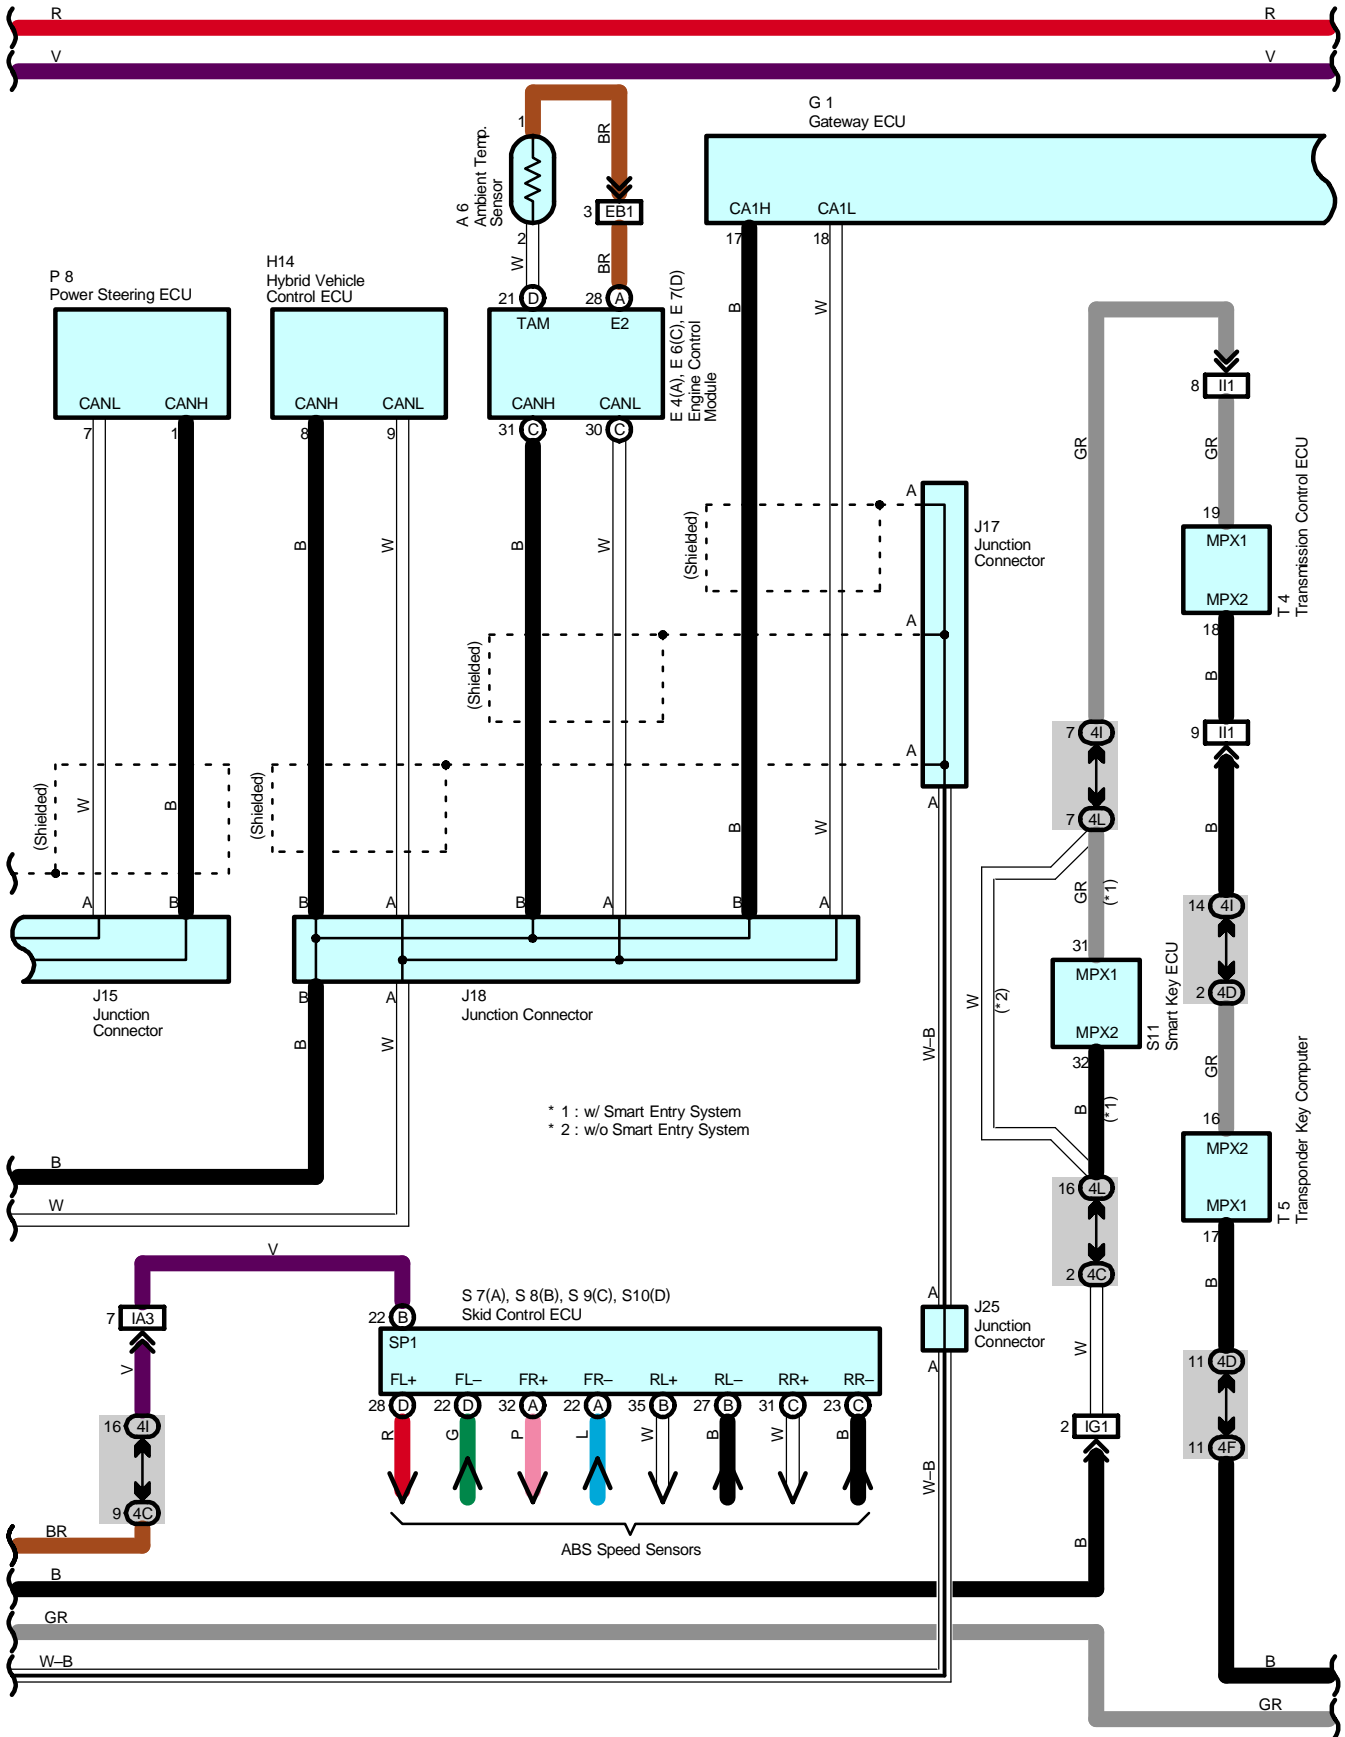

# Multi-Display and Audio System with Built-in Amplifier

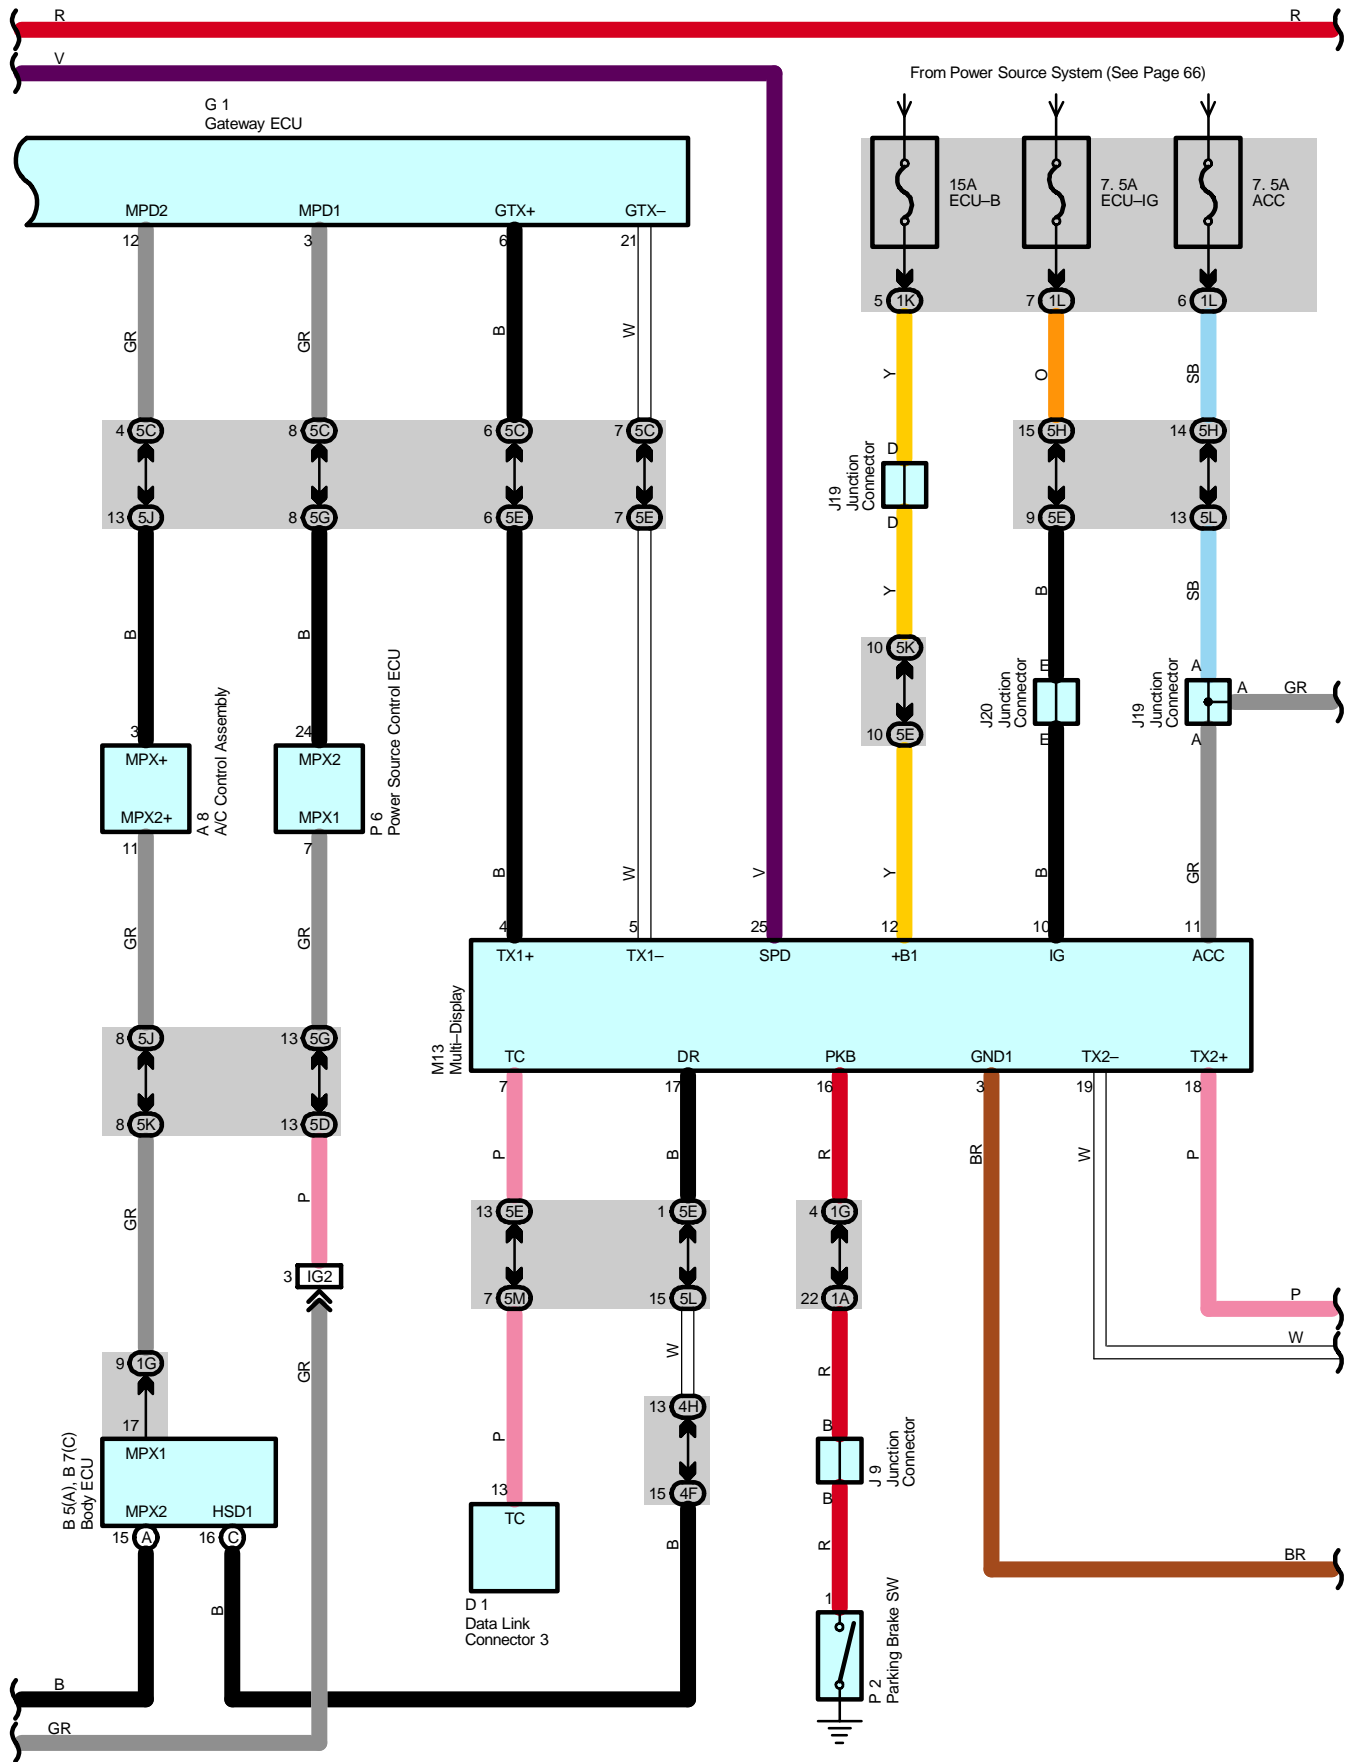

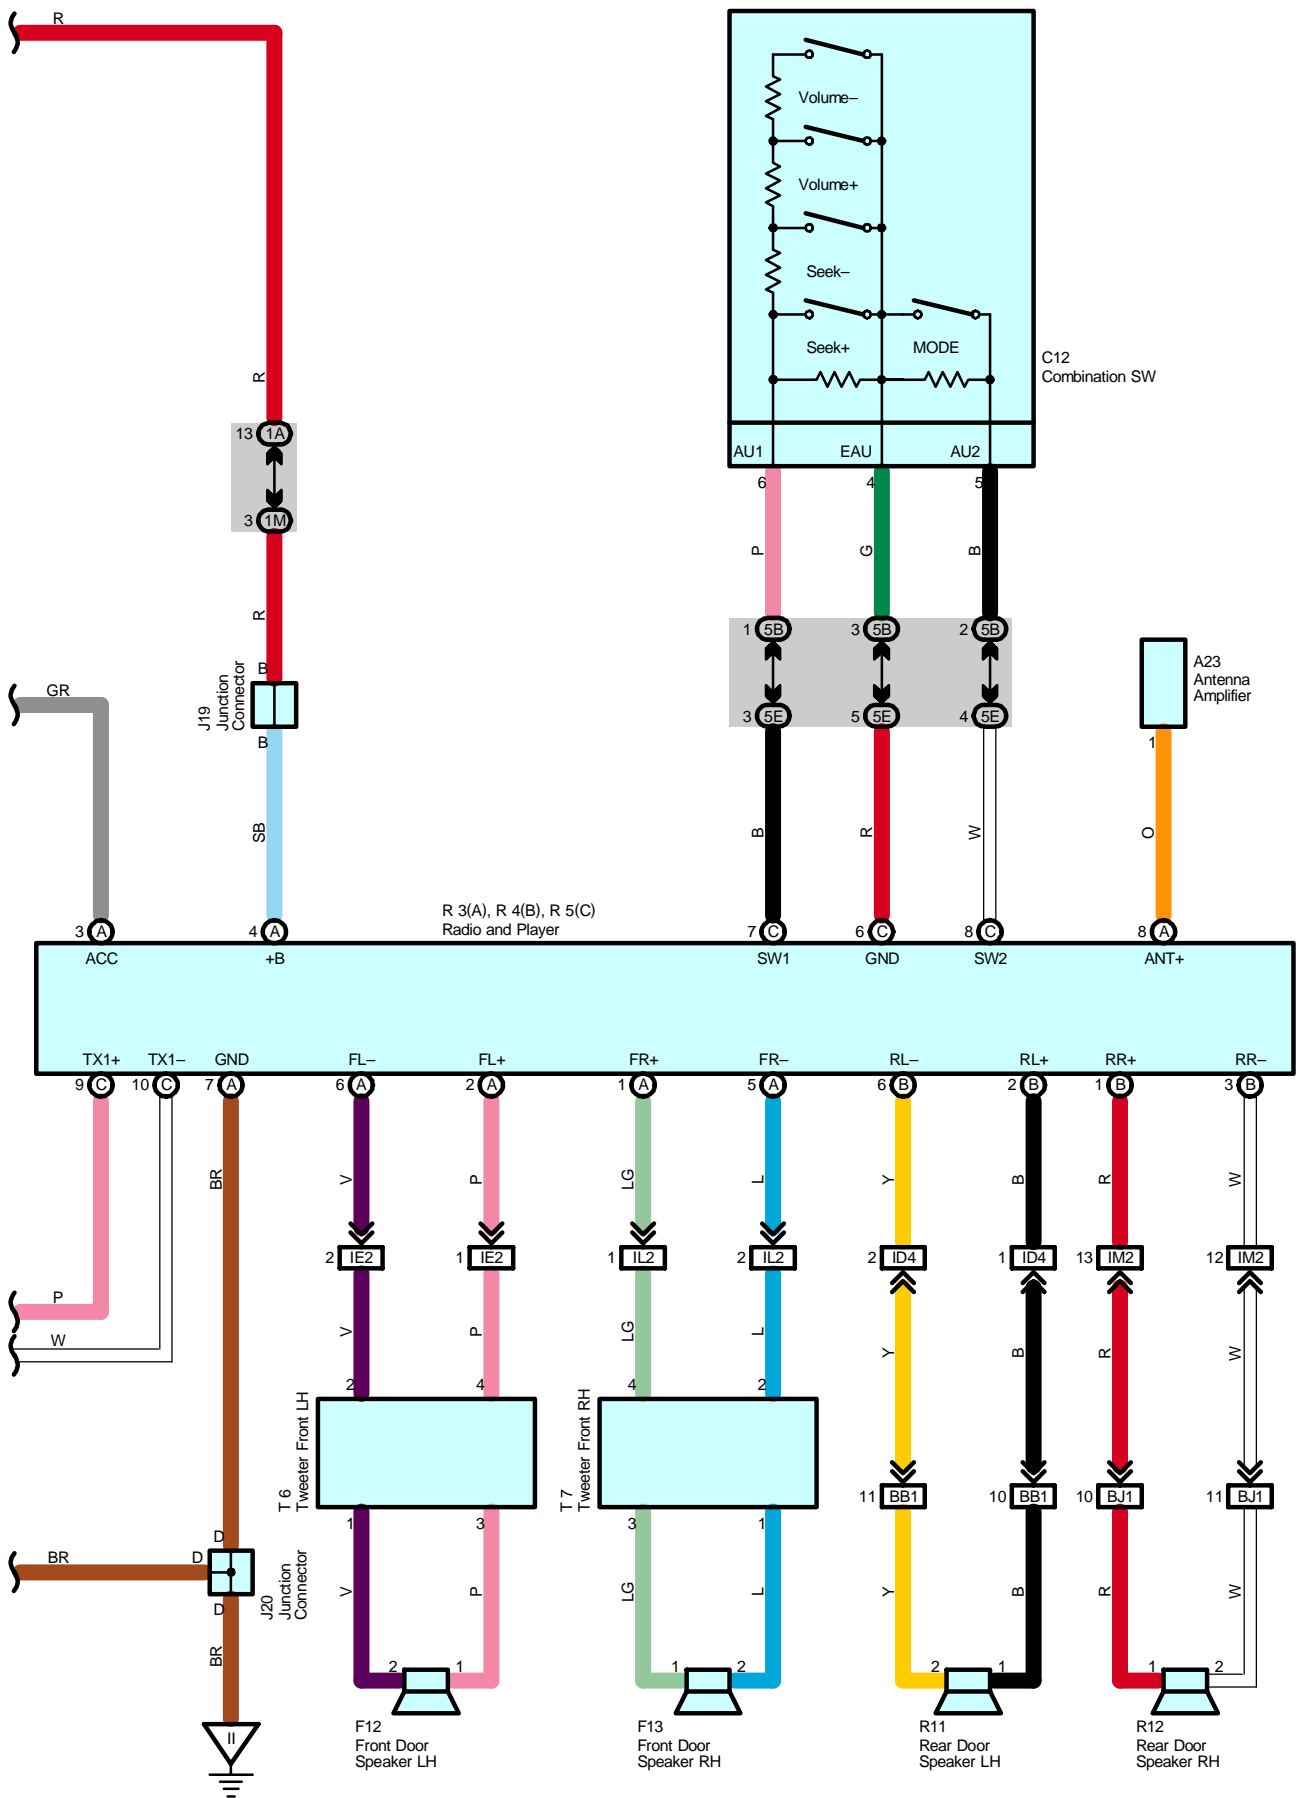



# Multi-Display and Audio System with Built-in Amplifier

## Service Hints

### R3 (A) Radio and Player

- (A) 3-Ground : Approx. 12 volts with the power SW at ACC ON or IG ON position
- (A) 4-Ground : Always approx. 12 volts
- (A) 7-Ground : Always continuity

### M13 Multi-Display

- 12-Ground : Always approx. 12 volts
- 10-Ground : Approx. 12 volts with the power SW at IG ON position
- 11-Ground : Approx. 12 volts with the power SW at ACC ON or IG ON position
- 3-Ground : Always continuity

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A6	44	G1	47	P8	49
A8	46	H14	47	R3	A 49
A23	46	J6	48	R4	B 49
B5	A 46	J9	48	R5	C 49
B7	C 46	J15	48	R11	52
B11	50	J16	48	R12	52
C10	47	J17	48	S7	A 49
C12	47	J18	48	S8	B 49
D1	47	J19	48	S9	C 49
E4	A 47	J20	48	S10	D 49
E6	C 47	J24	48	S11	49
E7	D 47	J25	48	T4	49
F12	51	M13	48	T5	49
F13	51	P2	49	T6	53
F14	51	P6	49	T7	53

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	22	Engine Room R/B (Engine Compartment Left)

 : **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1F	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1G		
1K		
1L		
1M		
4C	36	Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4D		
4F		
4H		
4I		
4L		
5B	40	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5C		
5D		
5E		
5G		
5H		
5I		
5J		
5K		
5L		
5M		


 : **Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB1	54	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B)
IA3	56	Engine Room Main Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)
ID4	56	Instrument Panel Wire and Floor Wire (Left Kick Panel)
IE2	56	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IG1	58	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the Combination Meter)
IG2		
II1	58	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
IL2	58	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IM1	58	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
IM2		
BB1	60	Rear Door No.2 Wire and Floor Wire (Left Center Pillar)
BJ1	62	Rear Door No.1 Wire and Floor No.2 Wire (Right Center Pillar)

 : **Ground Points**


Code	See Page	Ground Points Location
IH	56	Cowl Side Panel LH
II	56	Instrument Panel Brace LH

# Combination Meter

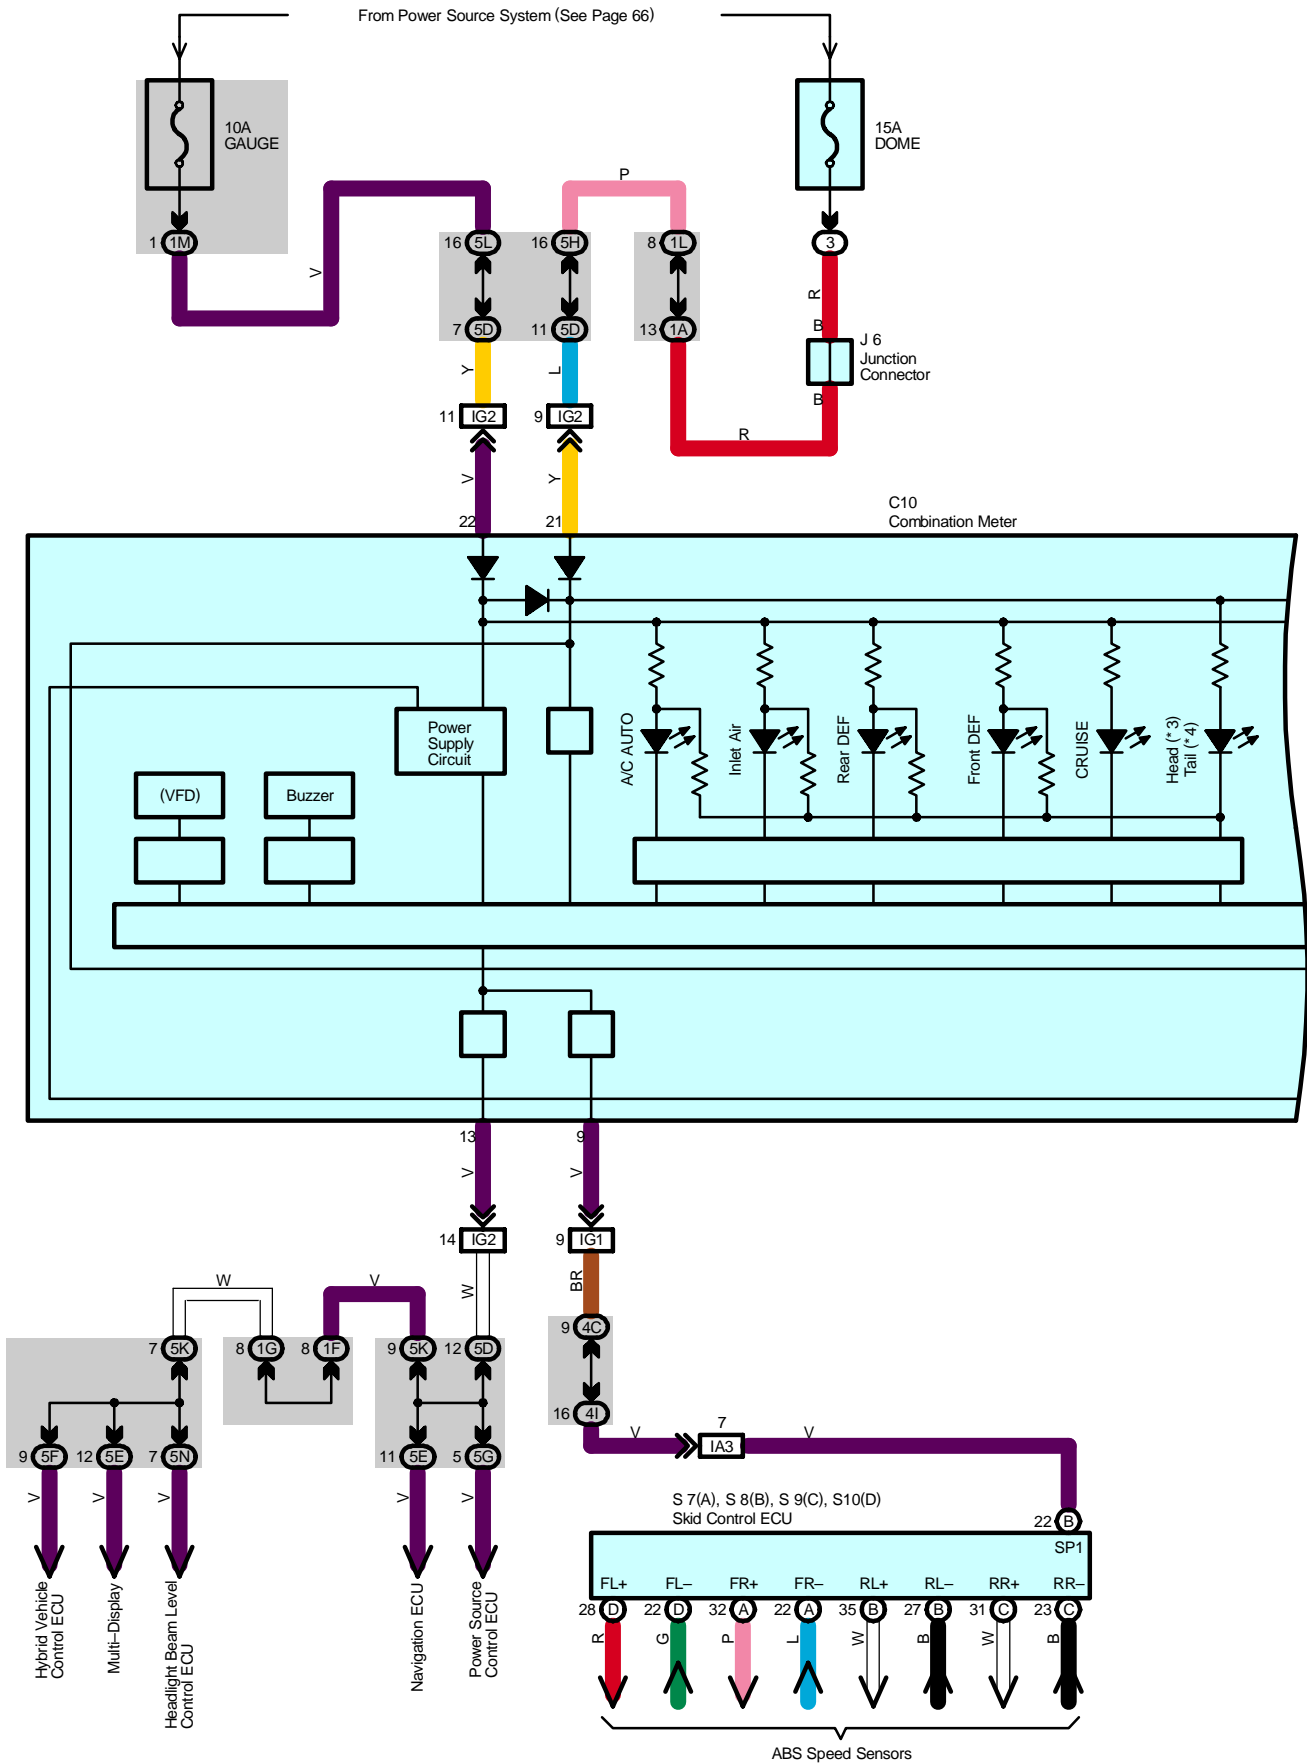



\* 3 : USA  
 \* 4 : Canada

C10  
 Combination Meter

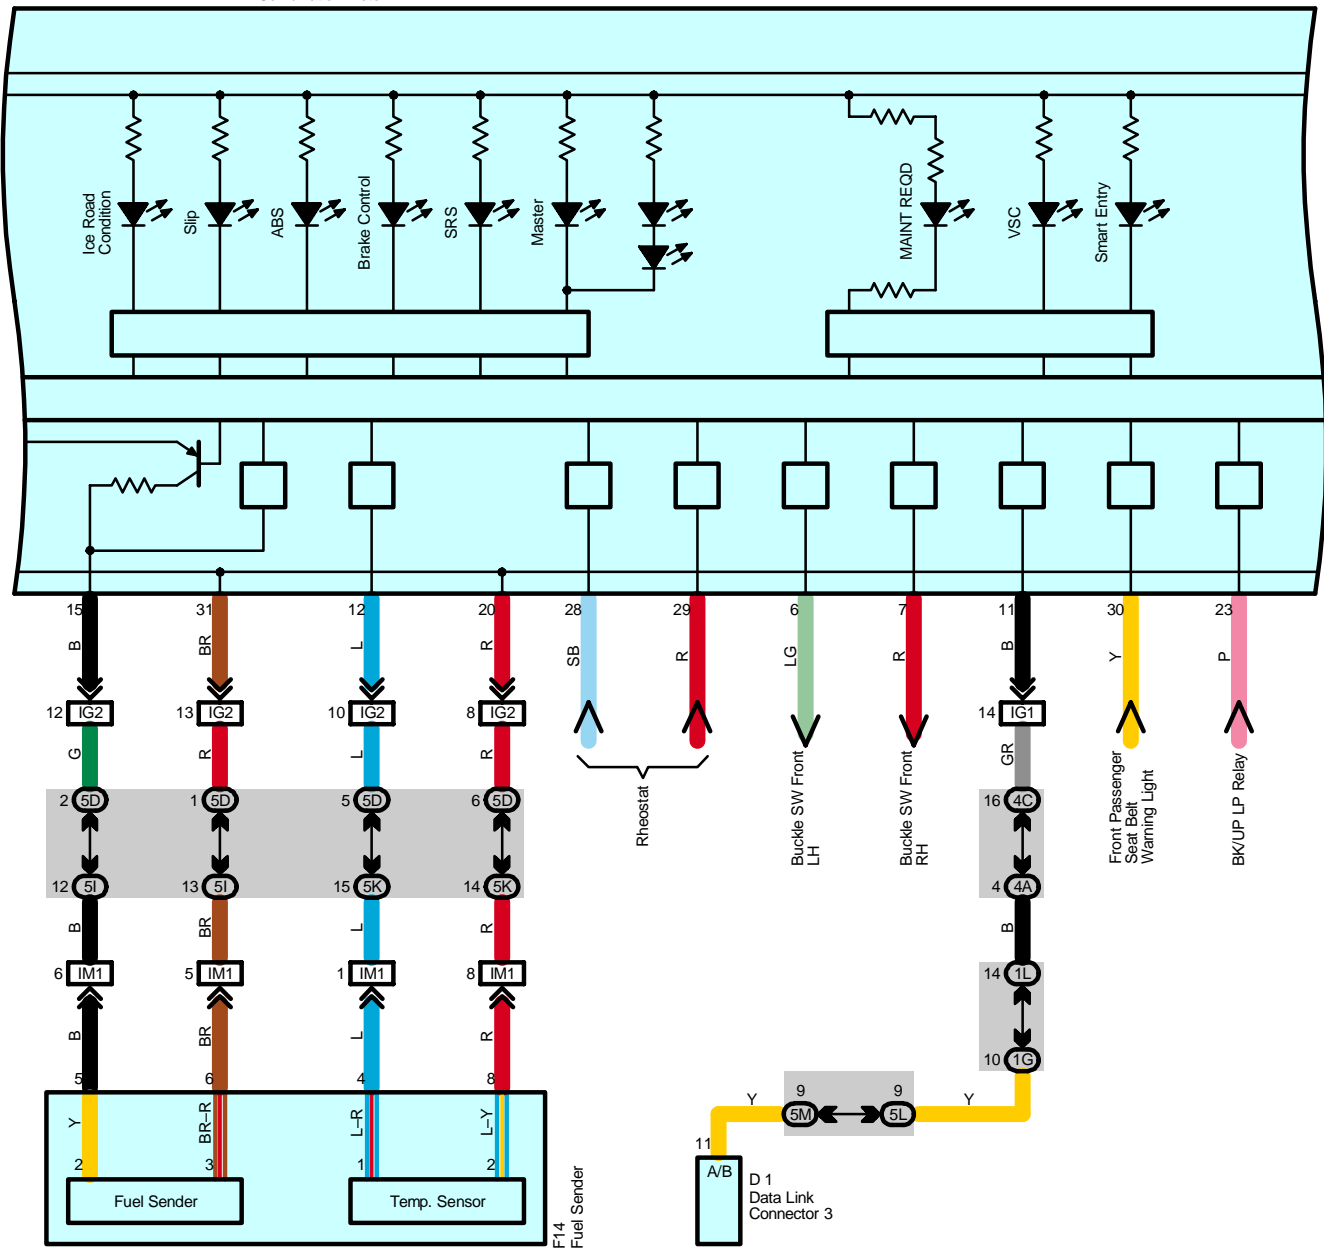

# Combination Meter

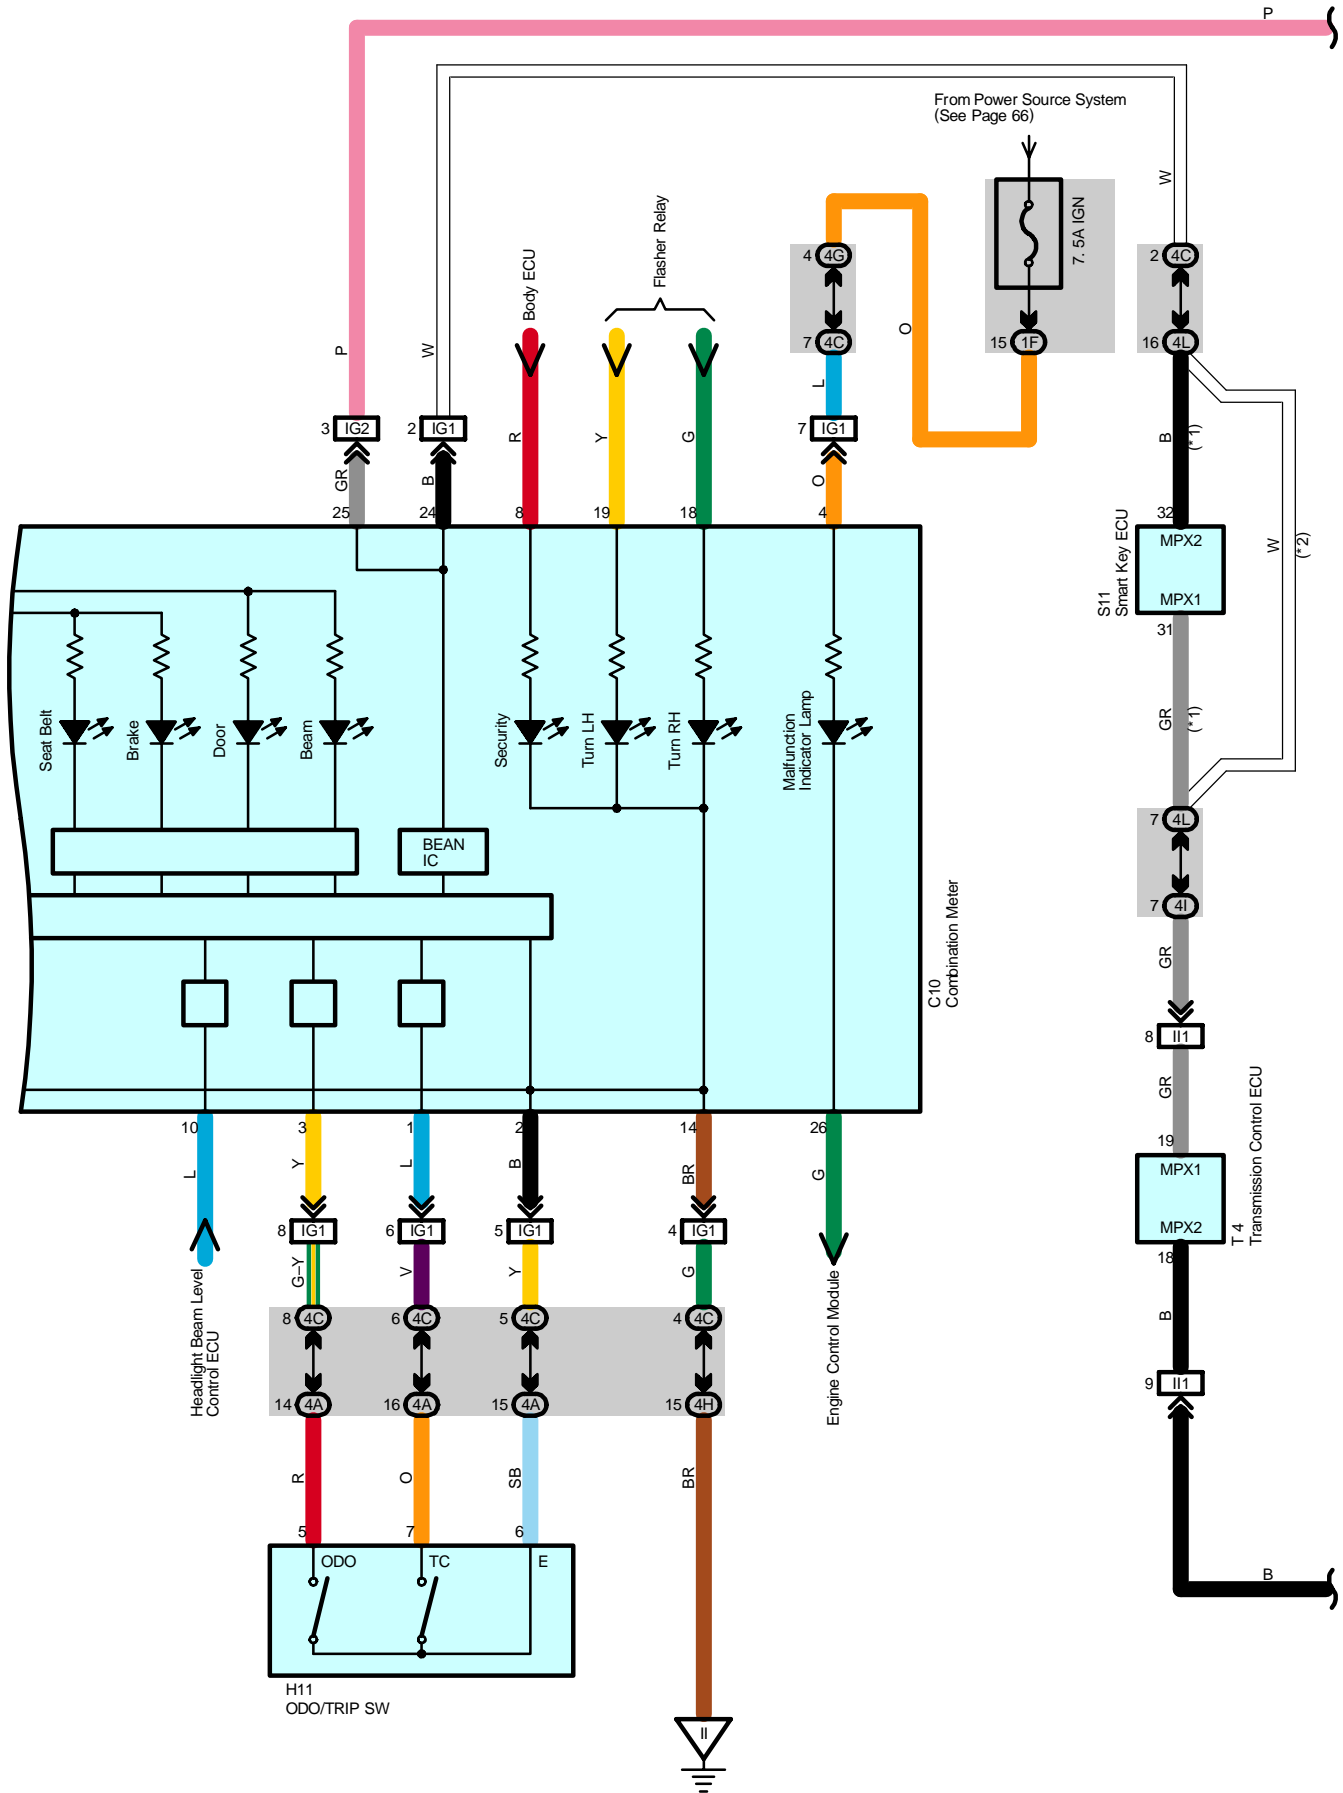

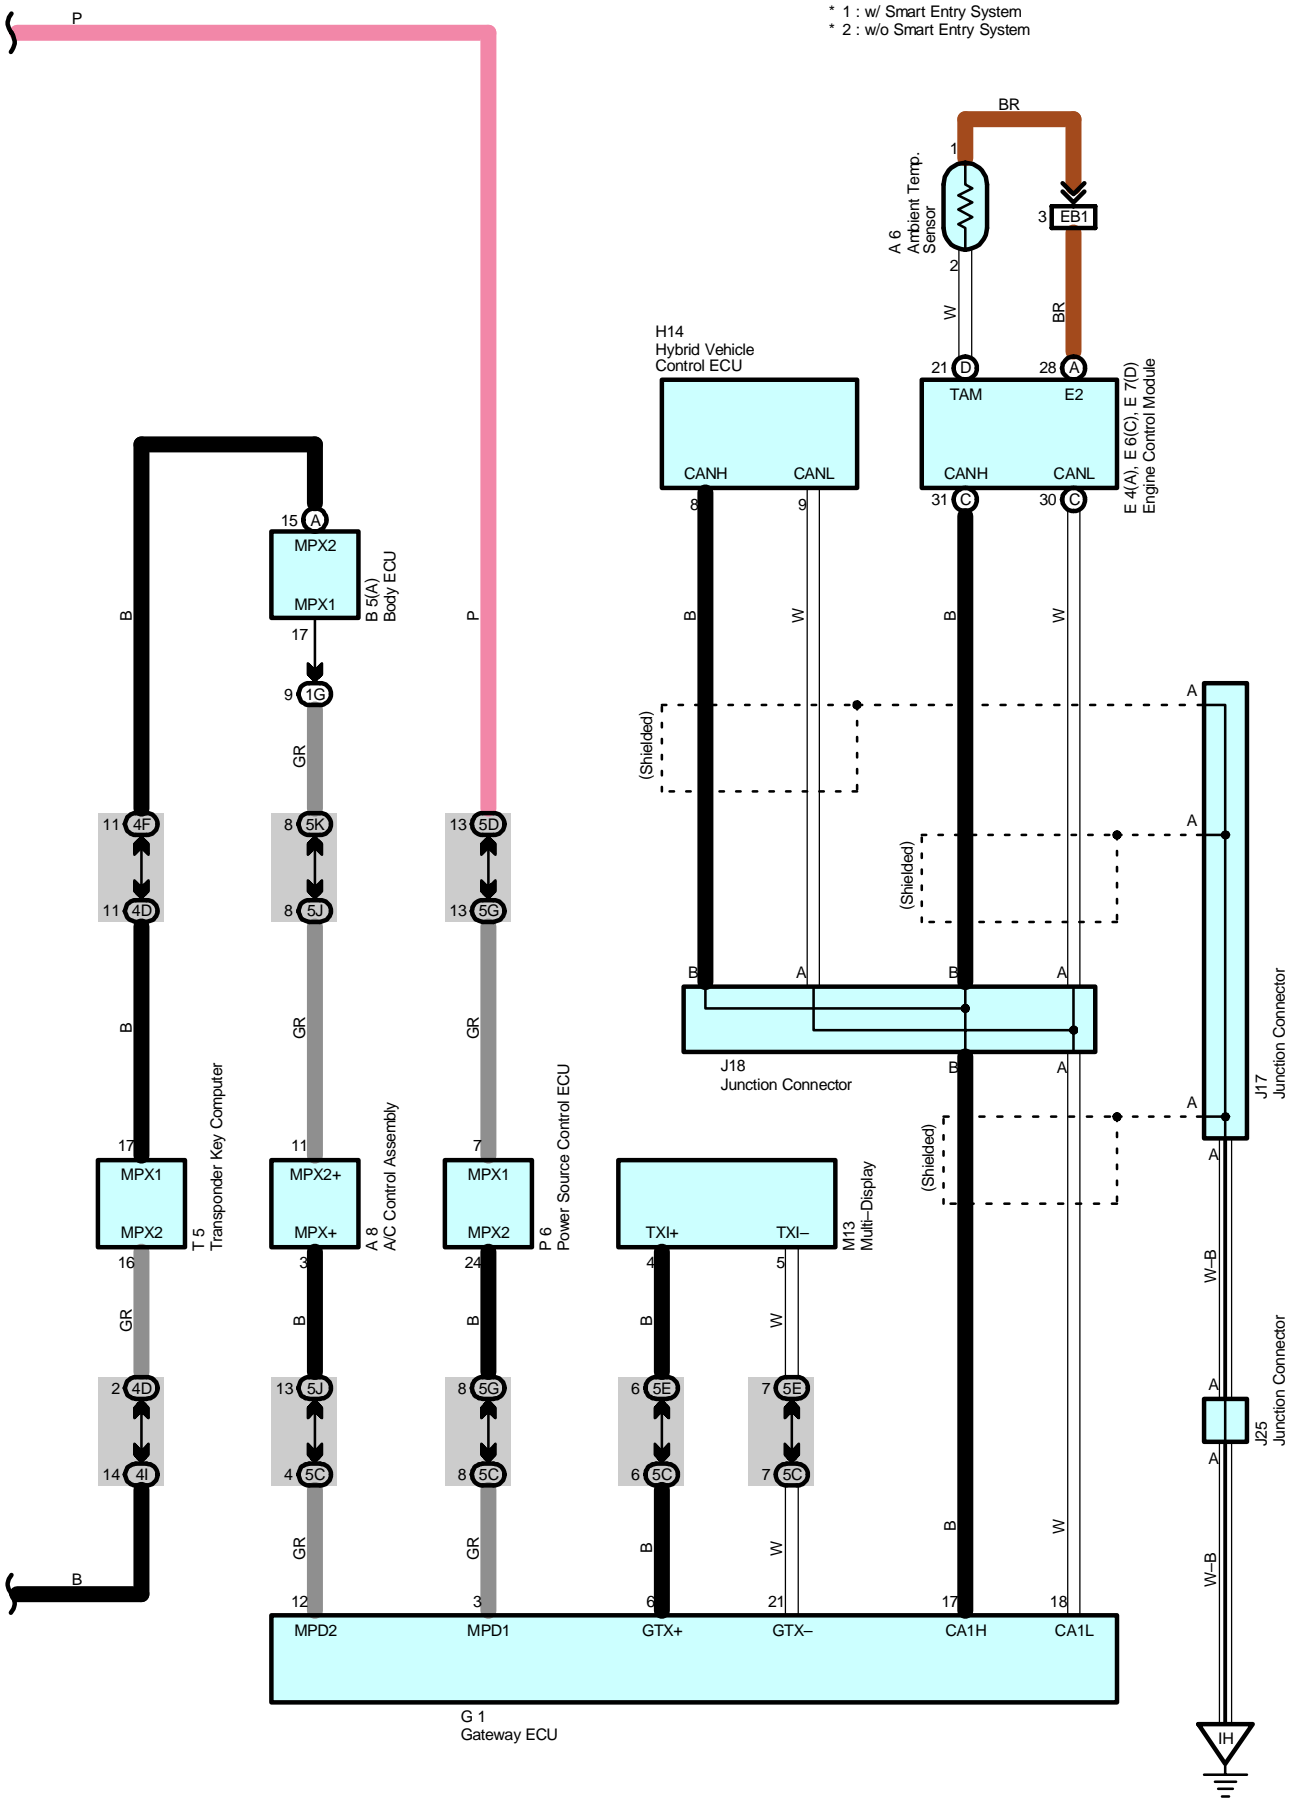

# Combination Meter

## Service Hints

### C10 Combination Meter

- 22–Ground : Approx. 12 volts with the power SW at IG ON position
- 21–Ground : Always approx. 12 volts
- 14–Ground : Always continuity

### ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A6	44	G1	47	S7	A 49
A8	46	H11	47	S8	B 49
B5	A 46	H14	47	S9	C 49
C10	47	J6	48	S10	D 49
D1	47	J17	48	S11	49
E4	A 47	J18	48	T4	49
E6	C 47	J25	48	T5	49
E7	D 47	M13	48		
F14	51	P6	49		

### ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	22	Engine Room R/B (Engine Compartment Left)

### ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1F	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1G		
1L		
1M		
4A		
4C	36	Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4D		
4F		
4G		
4H		
4I		
4L		
5C	40	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5D		
5E		
5F		
5G		
5H		
5I		
5J		
5K		
5L		
5M		
5N		

---

 : **Connector Joining Wire Harness and Wire Harness**


Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB1	54	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B)
IA3	56	Engine Room Main Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)
IG1	58	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the Combination Meter)
IG2		
II1	58	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
IM1	58	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)


 : **Ground Points**

Code	See Page	Ground Points Location
IH	56	Cowl Side Panel LH
II	56	Instrument Panel Brace LH



# Radiator Fan and Condenser Fan

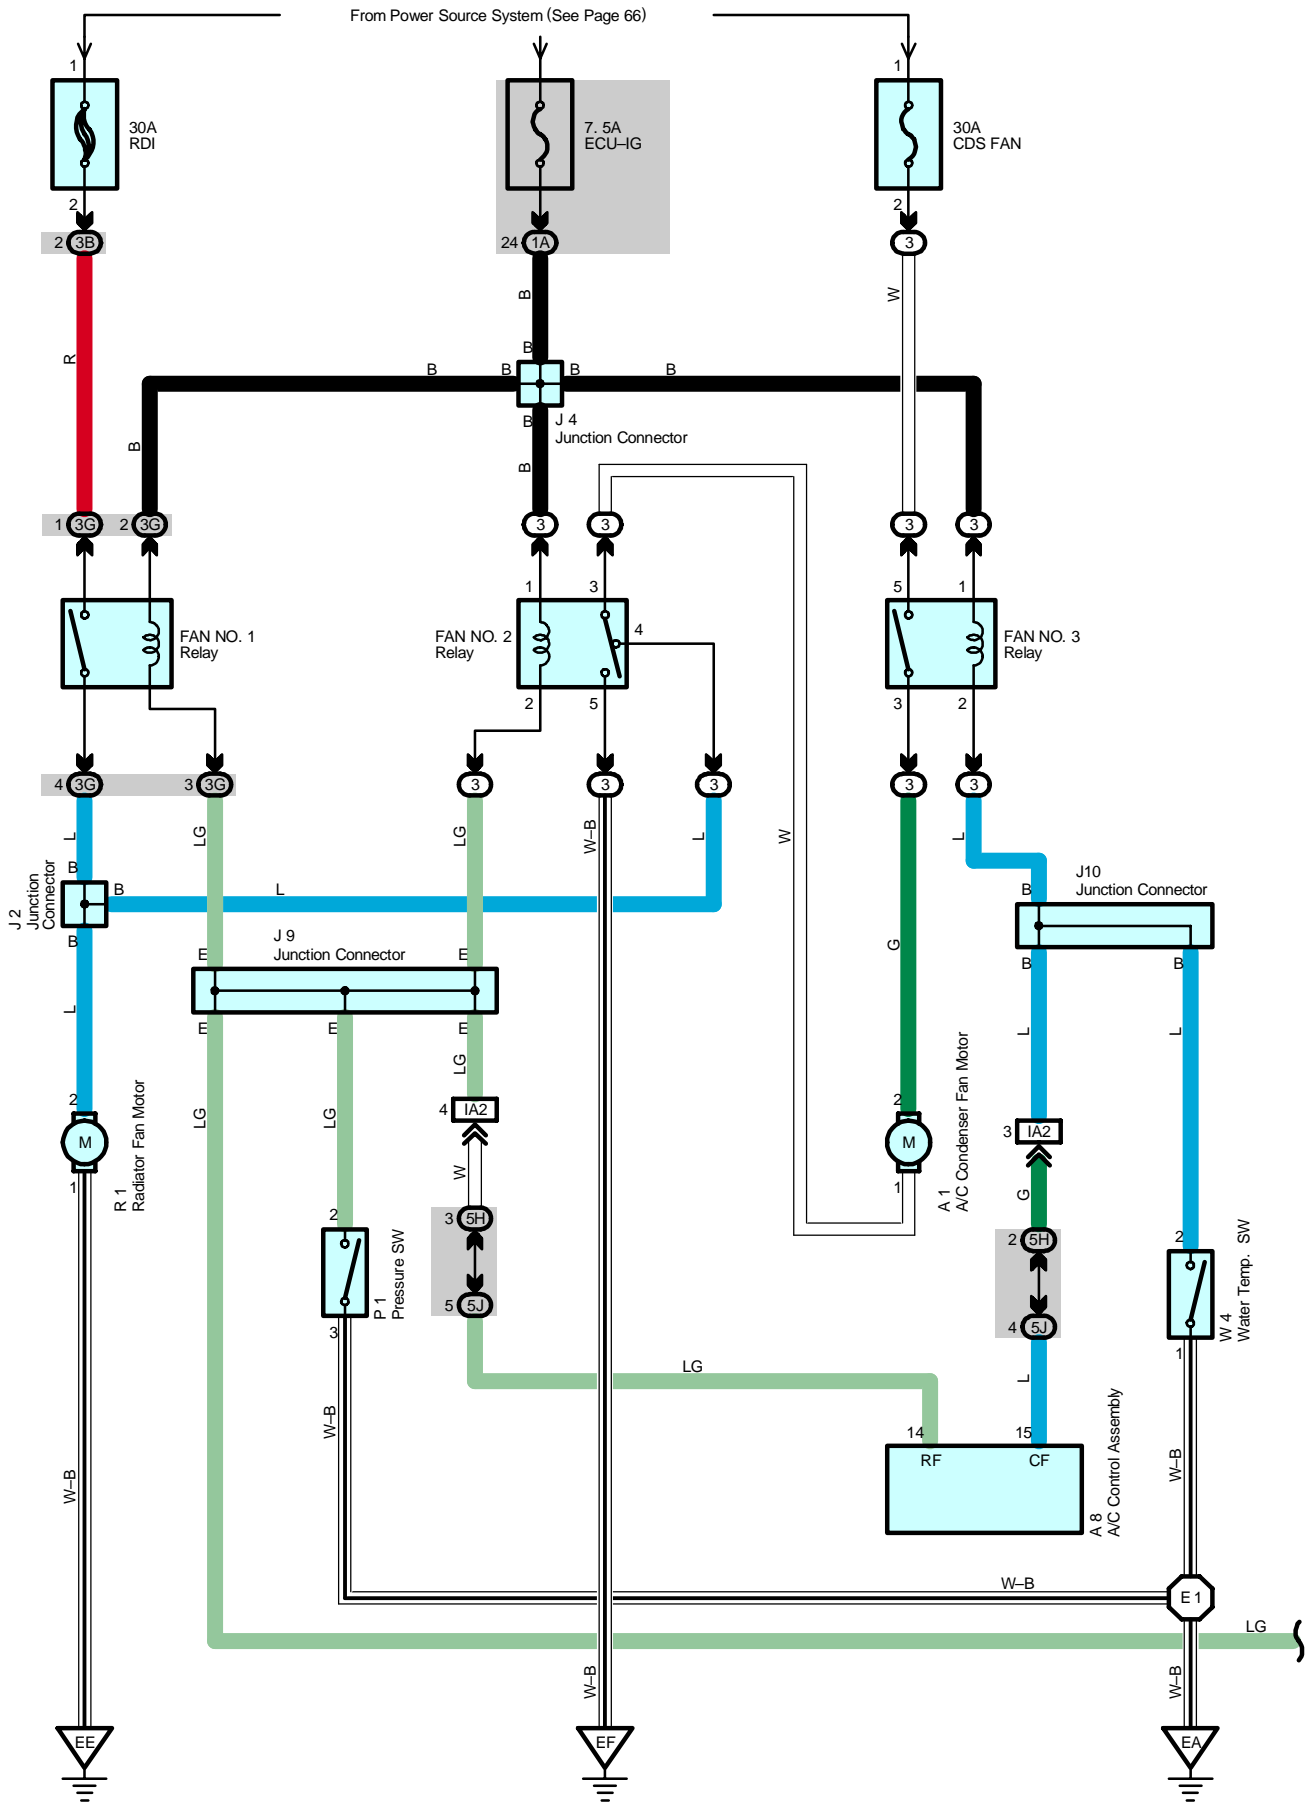

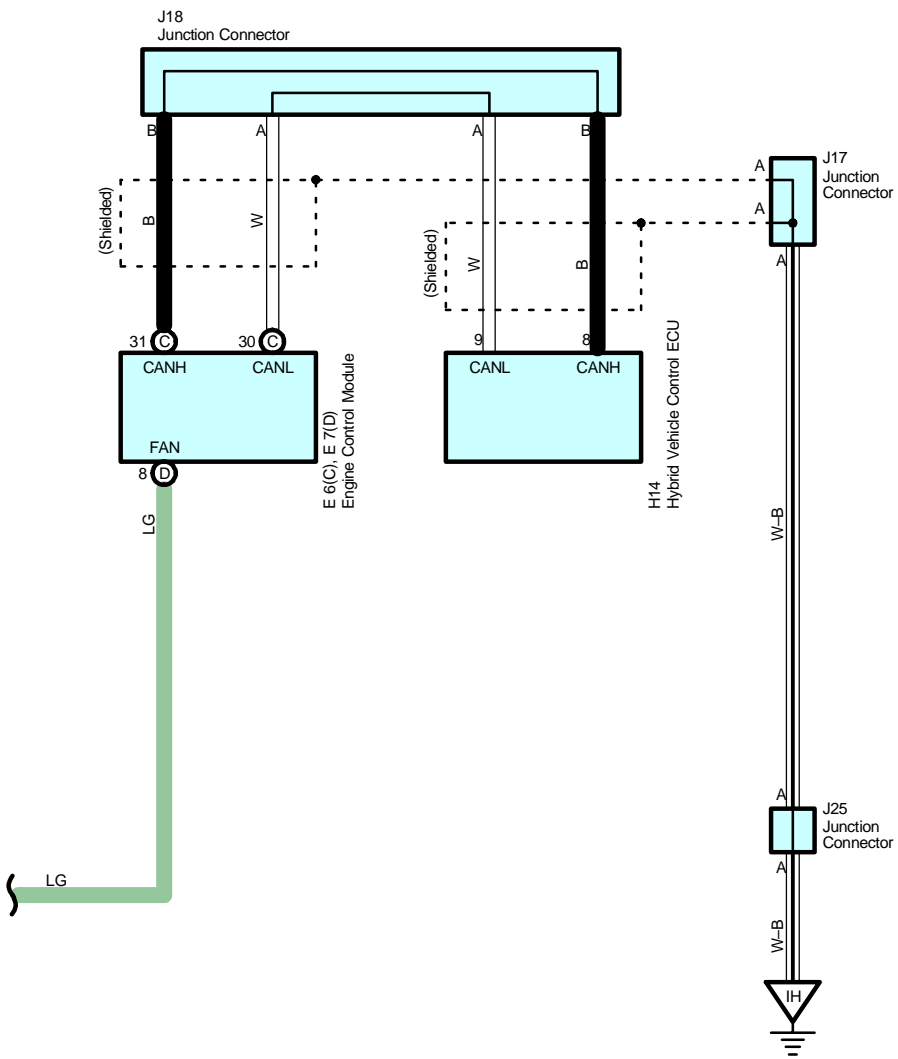

# Radiator Fan and Condenser Fan

## System Outline

The radiator fan motor and A/C condenser fan motor operate according to the water temp. SW (Inverter), A/C single pressure SW, engine coolant temp. and the A/C system condition. The FAN NO.1 relay, FAN NO.2 relay, FAN NO.3 relay are turned on/off, to operate the fan motors at low speed (In series), or high speed (In parallel).

### 1. Low Speed operation

When the water temp. SW (Inverter) is on and/or A/C control assembly is in operation, the radiator fan motor and A/C condenser fan motor operate at low speed.

### 2. High Speed Operation

When the pressure SW (Single) is on, engine control module and/or A/C control assembly, the radiator fan motor operate and A/C condenser fan motor operates at high speed.

## Service Hints

### P1 Pressure SW

3-2 : Close above approx. 1520 kpa (15.5 kgf/cm<sup>2</sup>. 220 psi)

Open below approx. 1230 kpa (12.5 kgf/cm<sup>2</sup>. 178 psi)

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A1	44	J2	45	J18	48
A8	46	J4	45	J25	48
E6	C 47	J9	48	P1	45
E7	D 47	J10	48	R1	45
H14	47	J17	48	W4	45

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	22	Engine Room R/B (Engine Compartment Left)

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
3B	22	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
3G		
5H	40	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5J		

## □ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA2	56	Engine Room Main Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)

## ▽ : Ground Points


Code	See Page	Ground Points Location
EA	54	Right Side of the Fender Apron
EE	54	Left Side of the Suspension Tower
EF		
IH	56	Cowl Side Panel LH

## ○ : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E1	54	Engine Room Main Wire			





# Air Conditioning

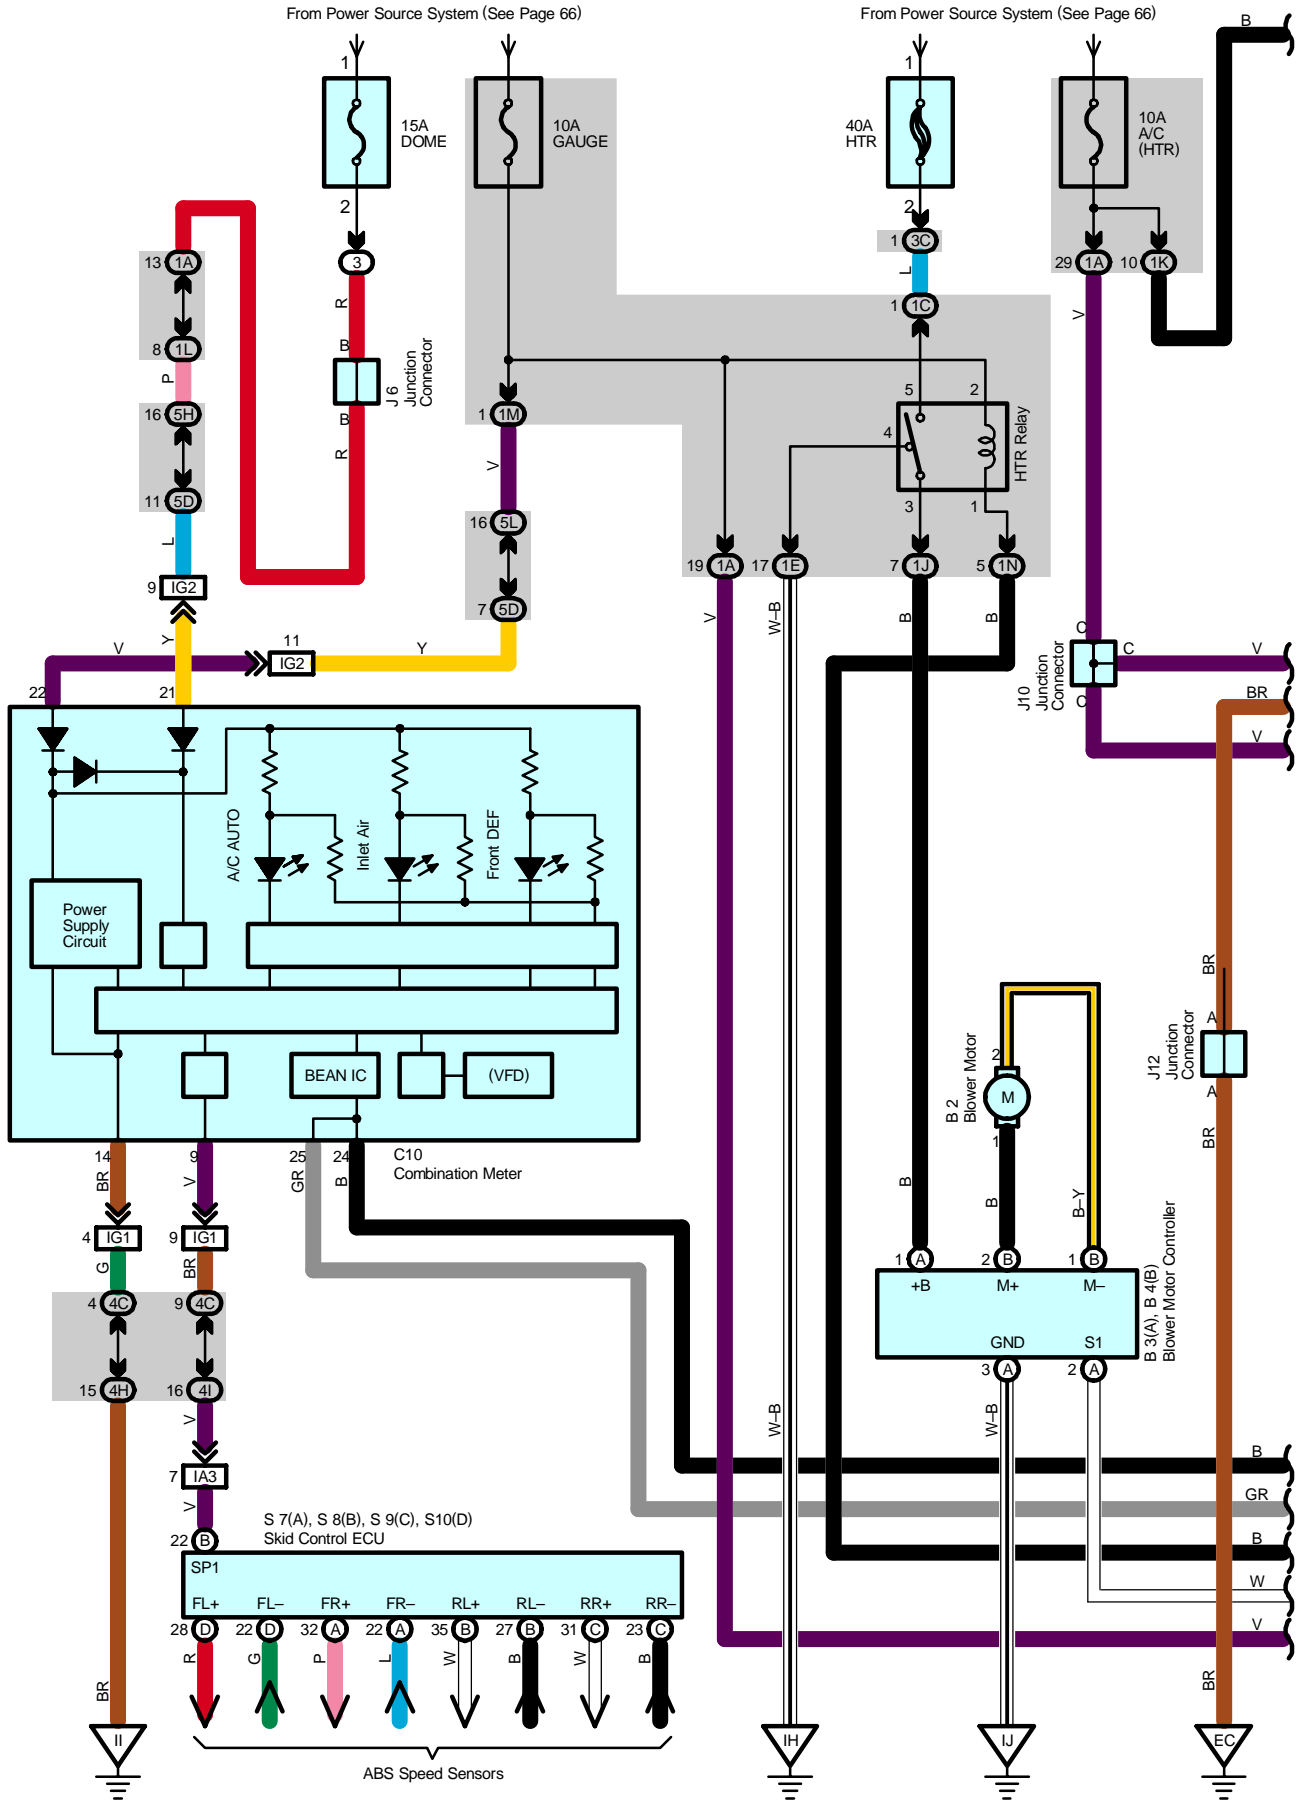




# Air Conditioning

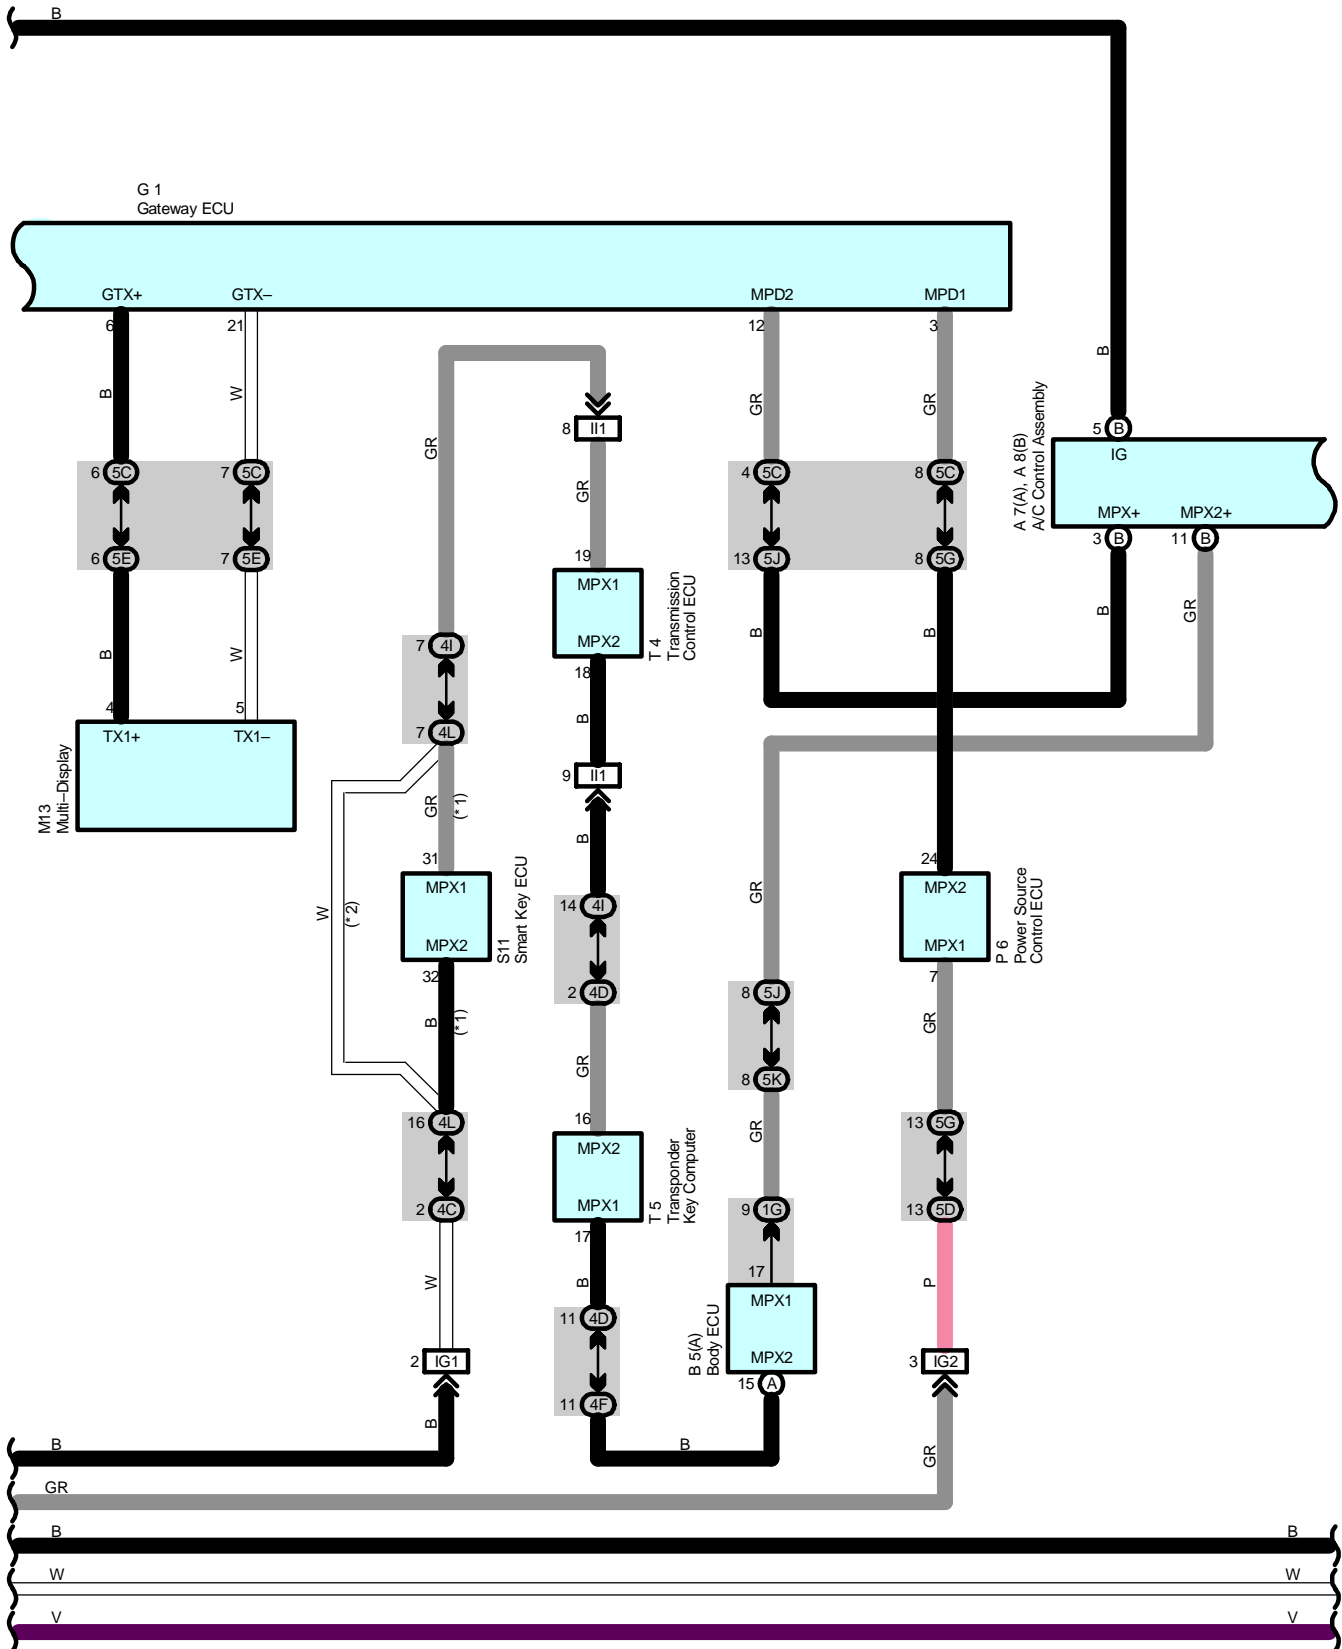


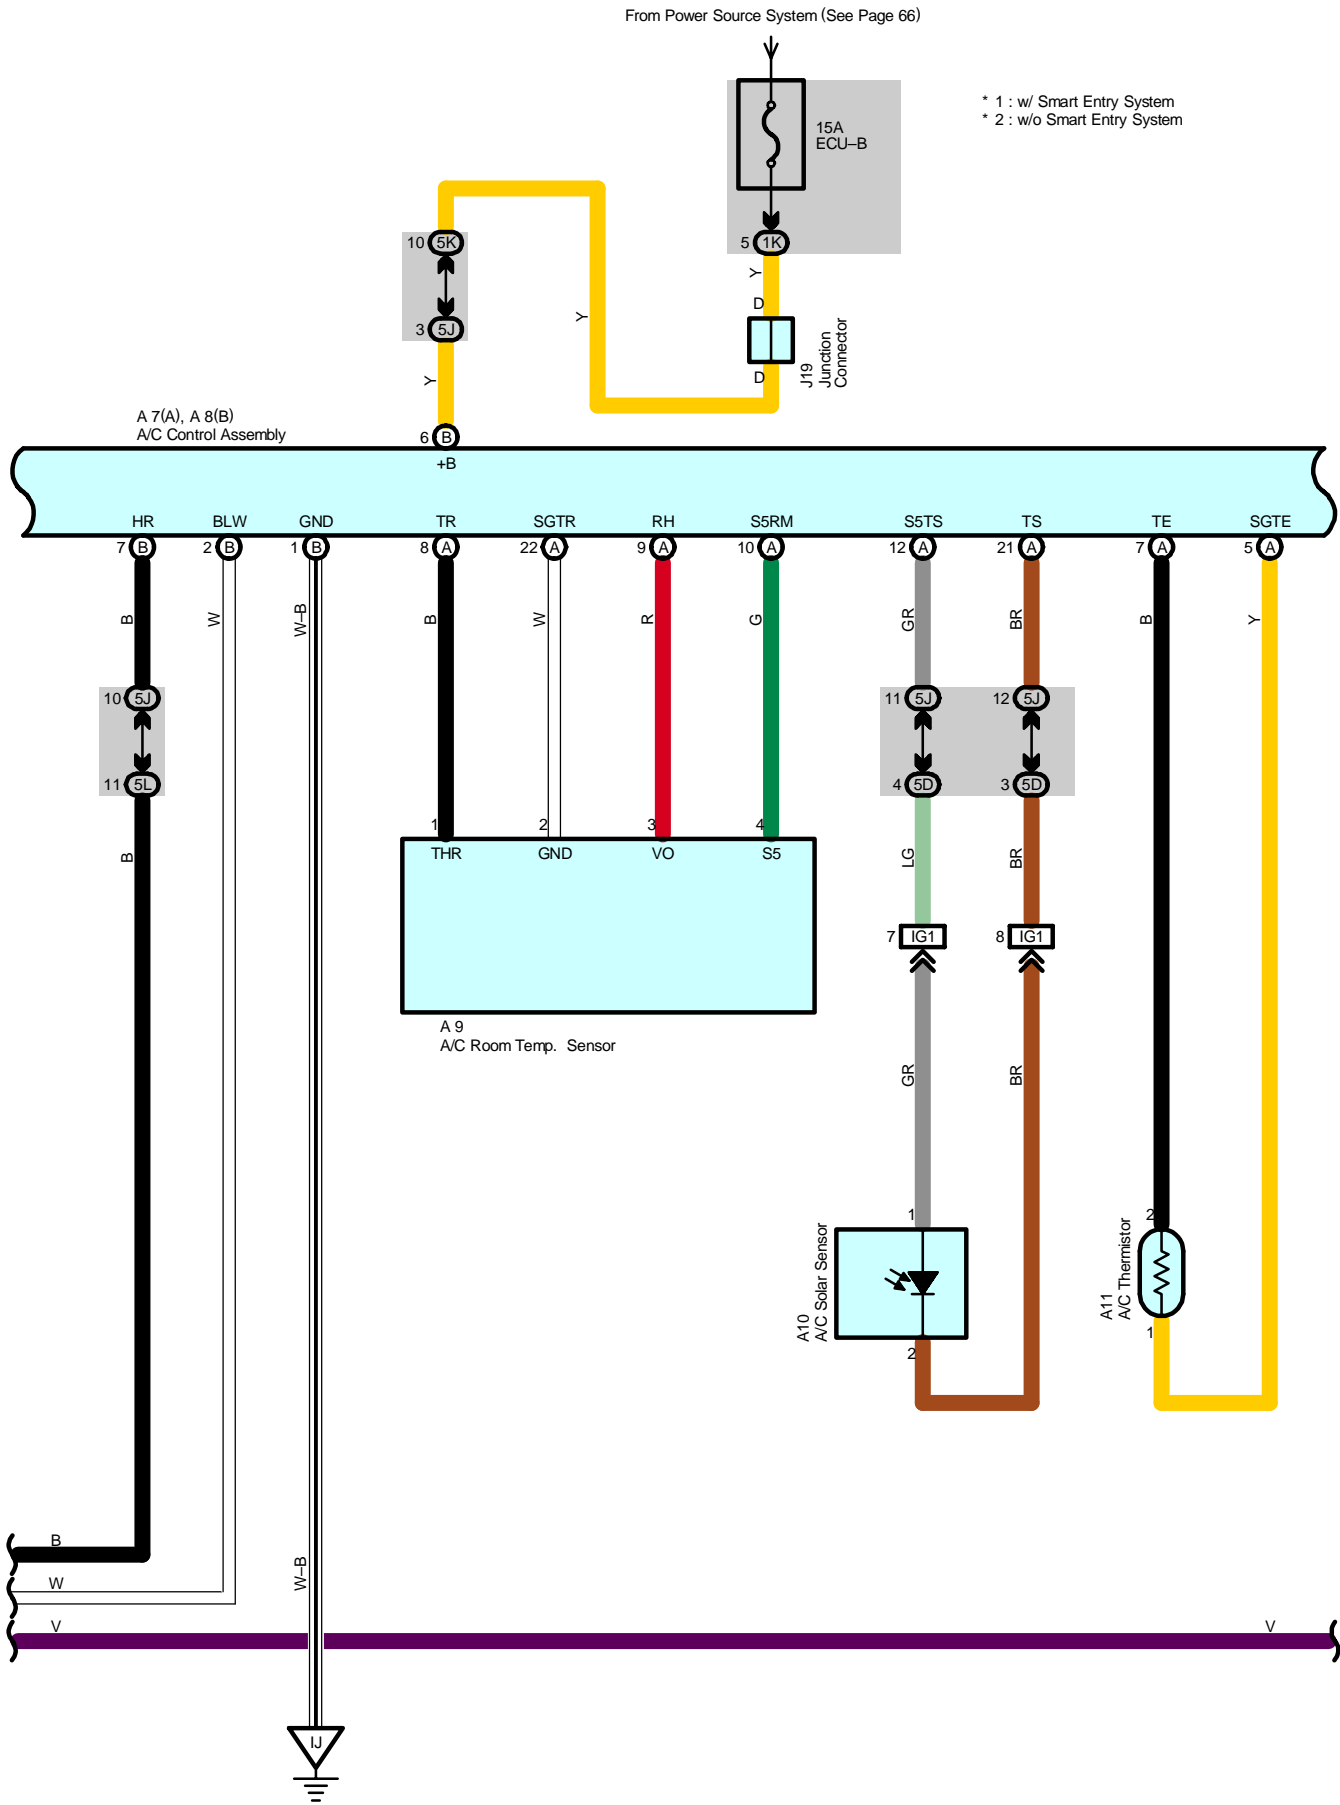




# Air Conditioning

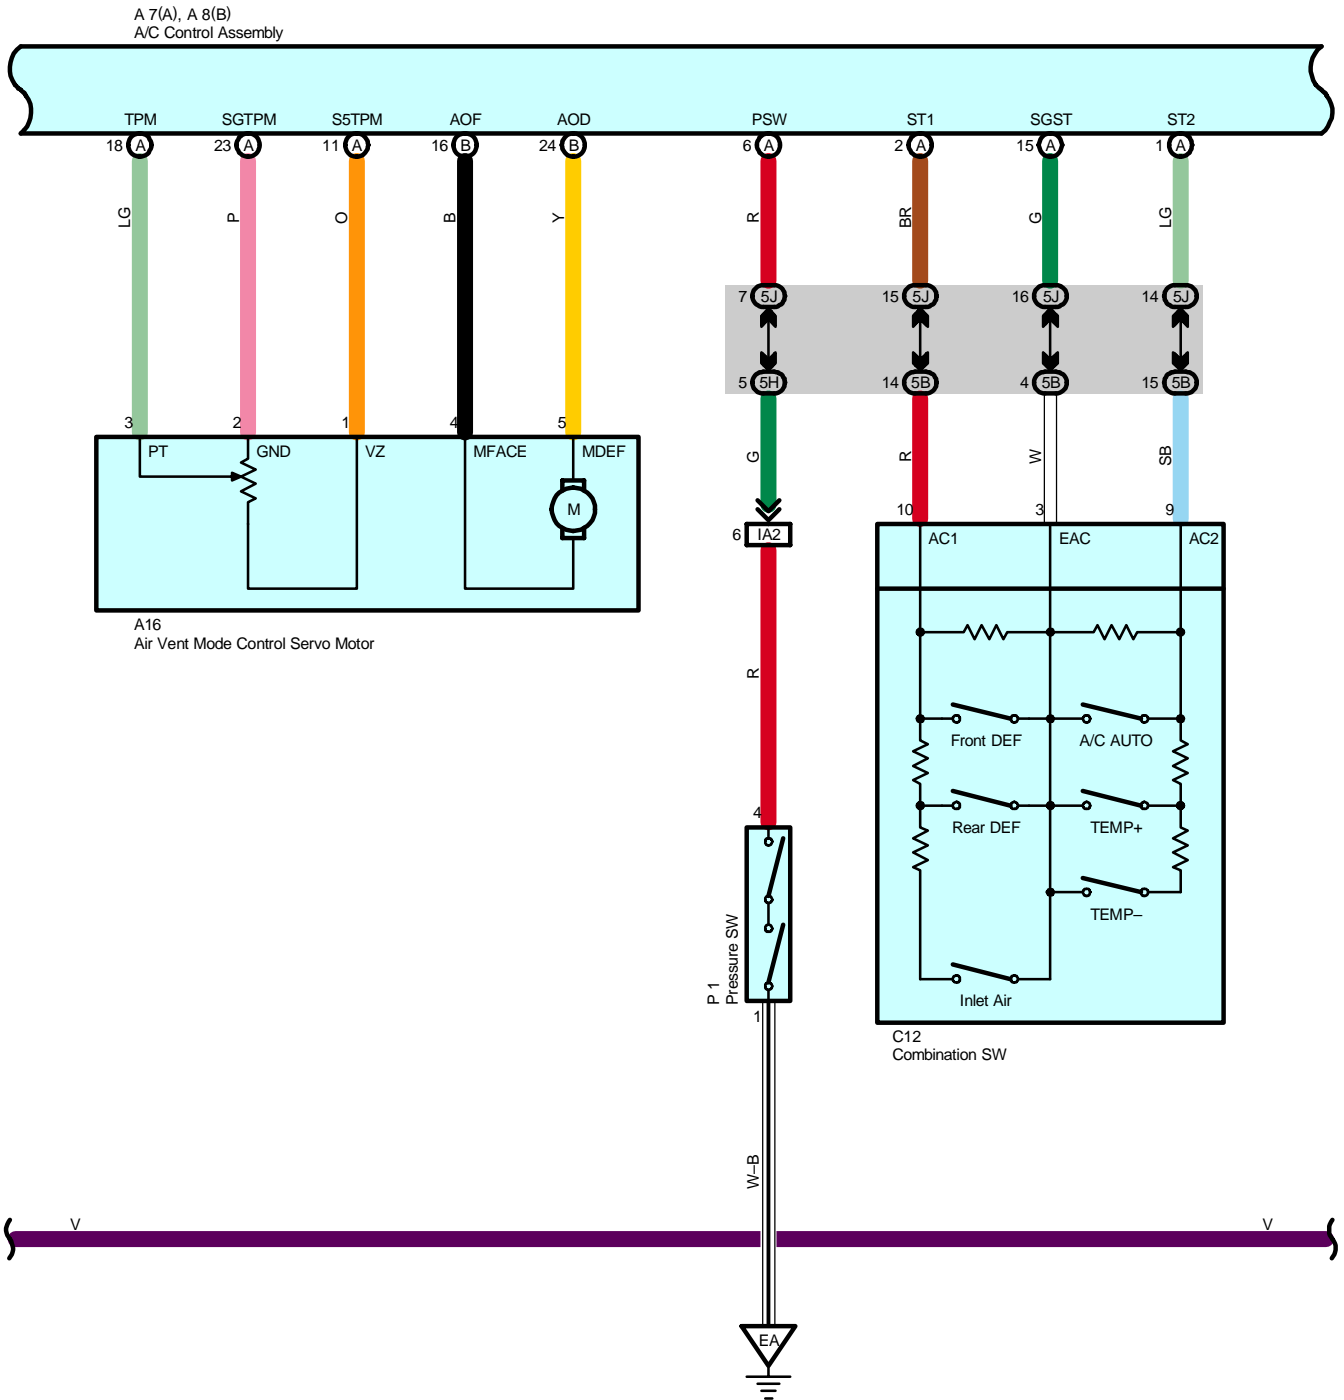

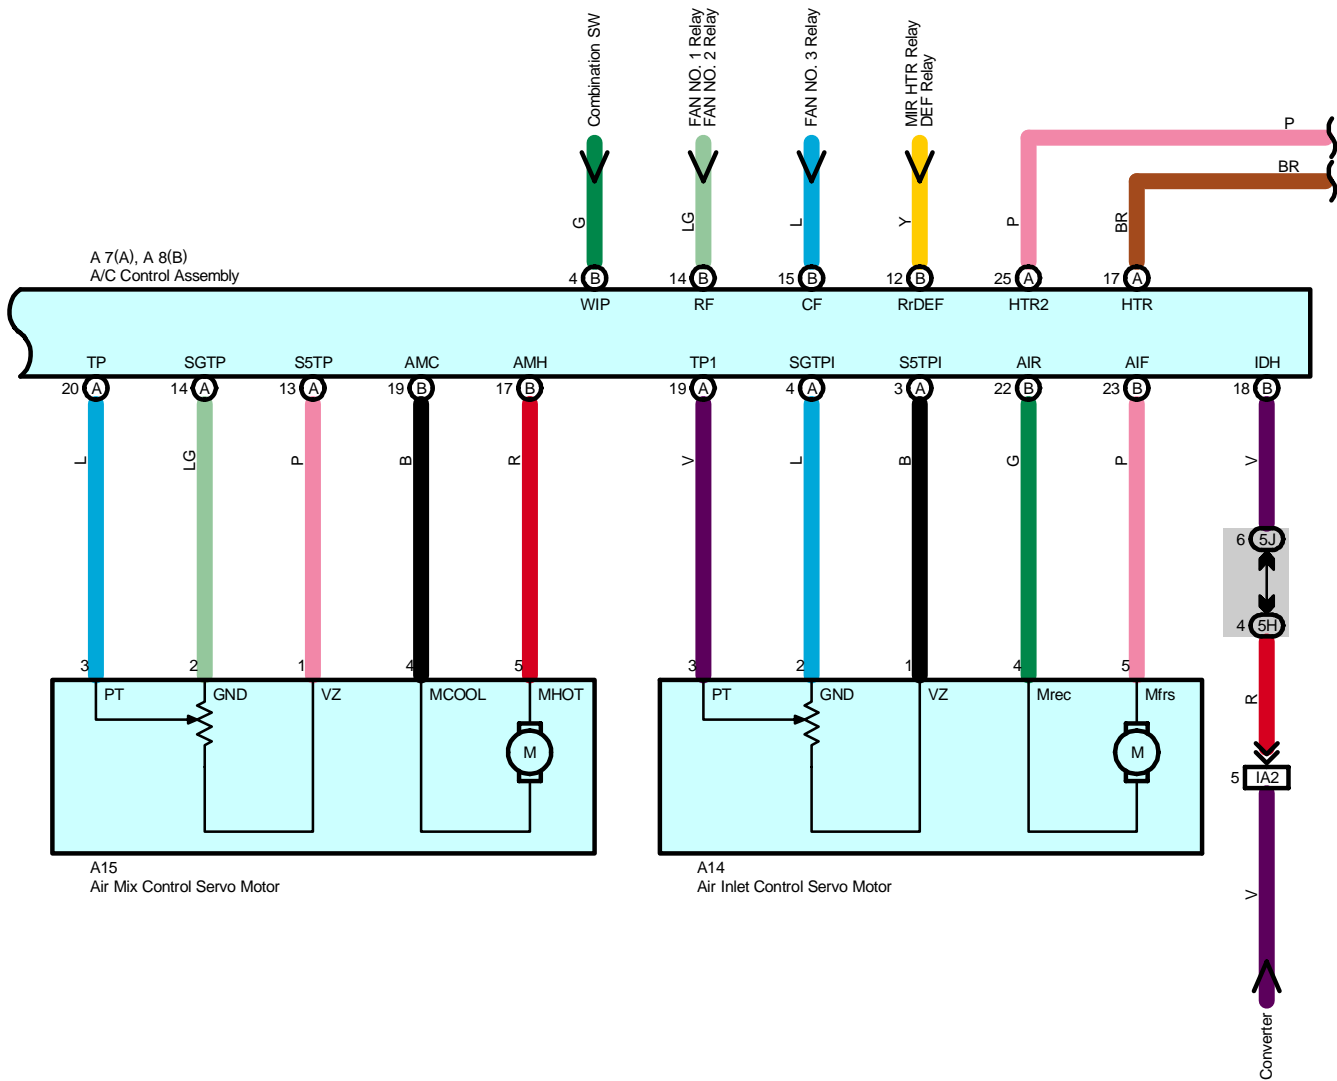

# Air Conditioning

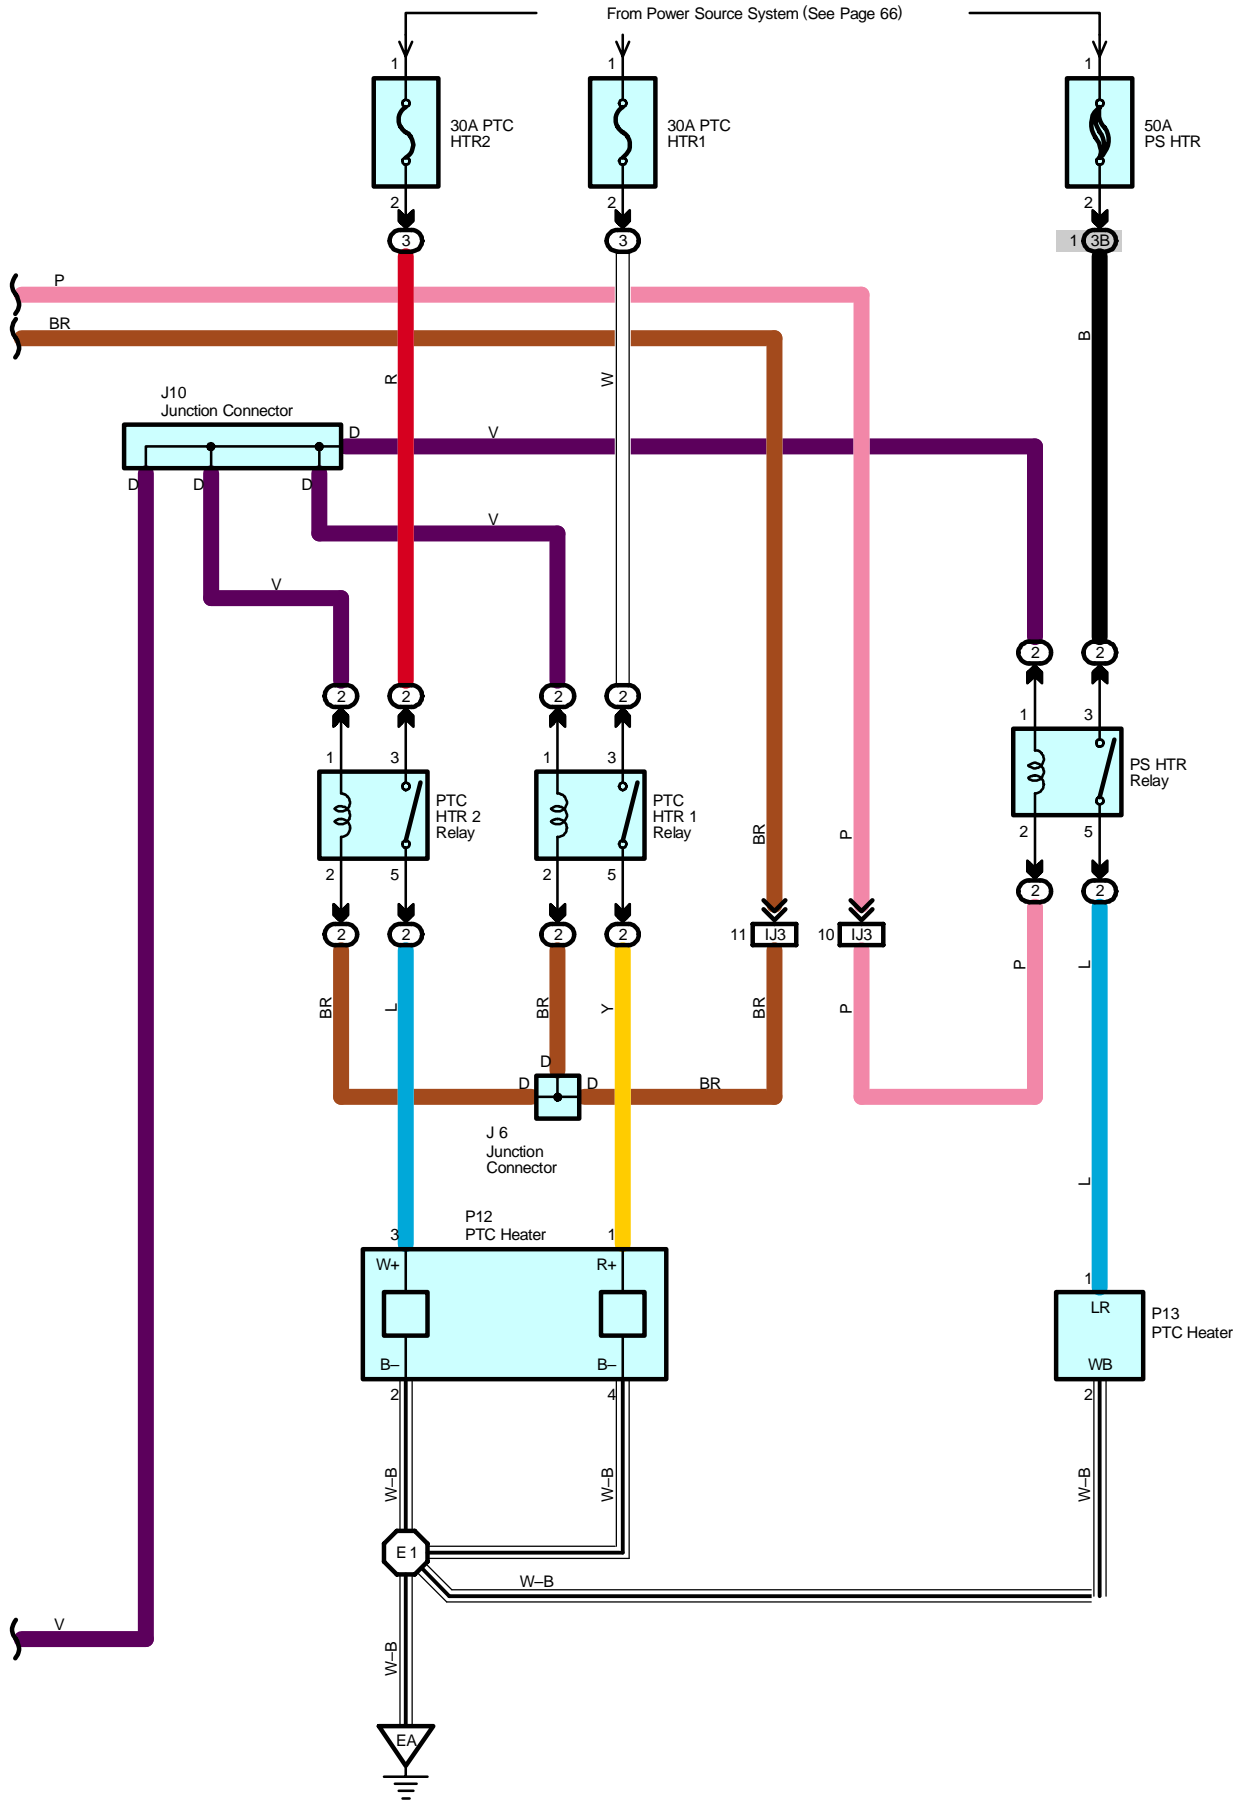

## System Outline

Air conditioning system operates when SW of multi-display or that of steering wheel is turned on. Turning on the SW sends signal to A/C control assembly, running the air conditioning system.

### 1. Heater Blower Operation

Manual operation

When the blower speed is set to a certain level using the blower control SW, the A/C control assembly sends the signals to the blower control to control the blower motor speed.

Auto operation

When the auto SW is pushed, the A/C control assembly calculates necessary blower speed from setting of SWs and input of the sensors and sends the signals to the blower control to automatically control the blower motor speed.

### 2. Air Inlet Control Servo Motor Control

When the FRESH/RECIRC select SW is set to RECIRC, the air inlet control servo motor starts rotating to move the damper toward the RECIRC side. The damper position is detected by the TERMINAL TPI of the A/C control assembly. The motor continuously rotates until the damper reaches its stop position. When the FRESH/RECIRC select SW is set to FRESH, the air inlet control servo motor starts rotating to move the damper toward the FRESH side. The damper position is detected by the TERMINAL TPI of the A/C control assembly. The motor continuously rotates until the damper reaches its stop position.

In auto mode, A/C control assembly controls the damper to move to the best position for the conditions without operating the mode select SW.

### 3. Air Vent Mode Control Servo Motor Control

When the mode select SW is pushed, the ECU in the A/C control assembly activates the air vent mode control servo motor. The servo motor rotates to the position (FACE, BI-LEVEL, FOOT, FOOT/DEF, DEF) selected by using the mode select SW, and moves the damper.

In auto mode, A/C control assembly controls the damper to move to the best position for the conditions without operating the mode select SW.

### 4. Air Mix Control Servo Motor Control

Based on the set temperature by the temperature control SW, the ECU in the A/C control assembly sends a signal to the air mix control servo motor. This signal drives the motor to reach the temperature set by the temperature control SW, and moves the film damper.

### 5. Humidity Sensor Control

A/C control assembly detects humidity in passenger room when A/C is turned on, with humidity detecting function of A/C room temp. sensor and controls to dehumidify for comfortable condition

### 6. Air Conditioning Operation

A/C control assembly calculates target cooled temperature from information such as that of operating SWs, room temperature, humidity, ambient temperature and insolation to have target running speed of compressor assembly (Motor). The calculated control signal is sent to inverter to drive compressor assembly (Motor) (Electric motor) with control of inverter, resulting in operating A/C.

## Service Hints

### P1 Pressure SW

1-4 : Open with the refrigerant pressure at less than approx. 196 kpa (2.0 kgf/cm<sup>2</sup>, 28.4 psi) or more than approx. 3140 kpa (32 kgf/cm<sup>2</sup>, 455 psi)

### A8 (B) A/C Control Assembly

(B) 6-Ground : Always approx. 12 volts

(B) 5-Ground : Approx. 12 volts with the power SW at IG ON position

(B) 1-Ground : Always continuity

# Air Conditioning

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A6	44	E1	44	J19	48
A7	A 46	E4	A 47	J24	48
A8	B 46	E5	B 47	J25	48
A9	46	E6	C 47	M13	48
A10	46	E7	D 47	P1	45
A11	46	G1	47	P6	49
A14	46	H14	A 47	P12	49
A15	46	H15	B 47	P13	49
A16	46	H16	C 47	S7	A 49
B2	46	I11	C 45	S8	B 49
B3	A 46	J6	48	S9	C 49
B4	B 46	J10	48	S10	D 49
B5	A 46	J12	48	S11	49
C4	F 44	J14	48	T4	49
C7	44	J15	48	T5	49
C10	47	J16	48	W1	45
C12	47	J17	48		
D1	47	J18	48		

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	26	Engine Room R/B No.2 (Right Side of Reserve Tank)
3	22	Engine Room R/B (Engine Compartment Left)

 : **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1C		
1E	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1G		
1J		
1K		
1L		
1M		
1N		
3B		
3C		
3H		
4C	36	Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4D		
4F		
4H		
4I		
4L		
5B	40	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5C		
5D		
5E		
5G		
5H		
5J		
5K		
5L		

 : **Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB1	54	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B)
IA2	56	Engine Room Main Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)
IA3		
IG1	58	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the Combination Meter)
IG2		
II1	58	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
IJ3	58	Engine Room Main Wire and Instrument Panel Wire (Behind the Glove Box)

 : **Ground Points**

Code	See Page	Ground Points Location
EA	54	Right Side of the Fender Apron
EC	54	Engine Block
EF	54	Left Side of the Suspension Tower
IH	56	Cowl Side Panel LH
II	56	Instrument Panel Brace LH
IJ	56	Instrument Panel Brace RH

# Air Conditioning

---




: Splice Points




Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E1	54	Engine Room Main Wire	I3	58	Engine
E3					








# I GROUND POINT

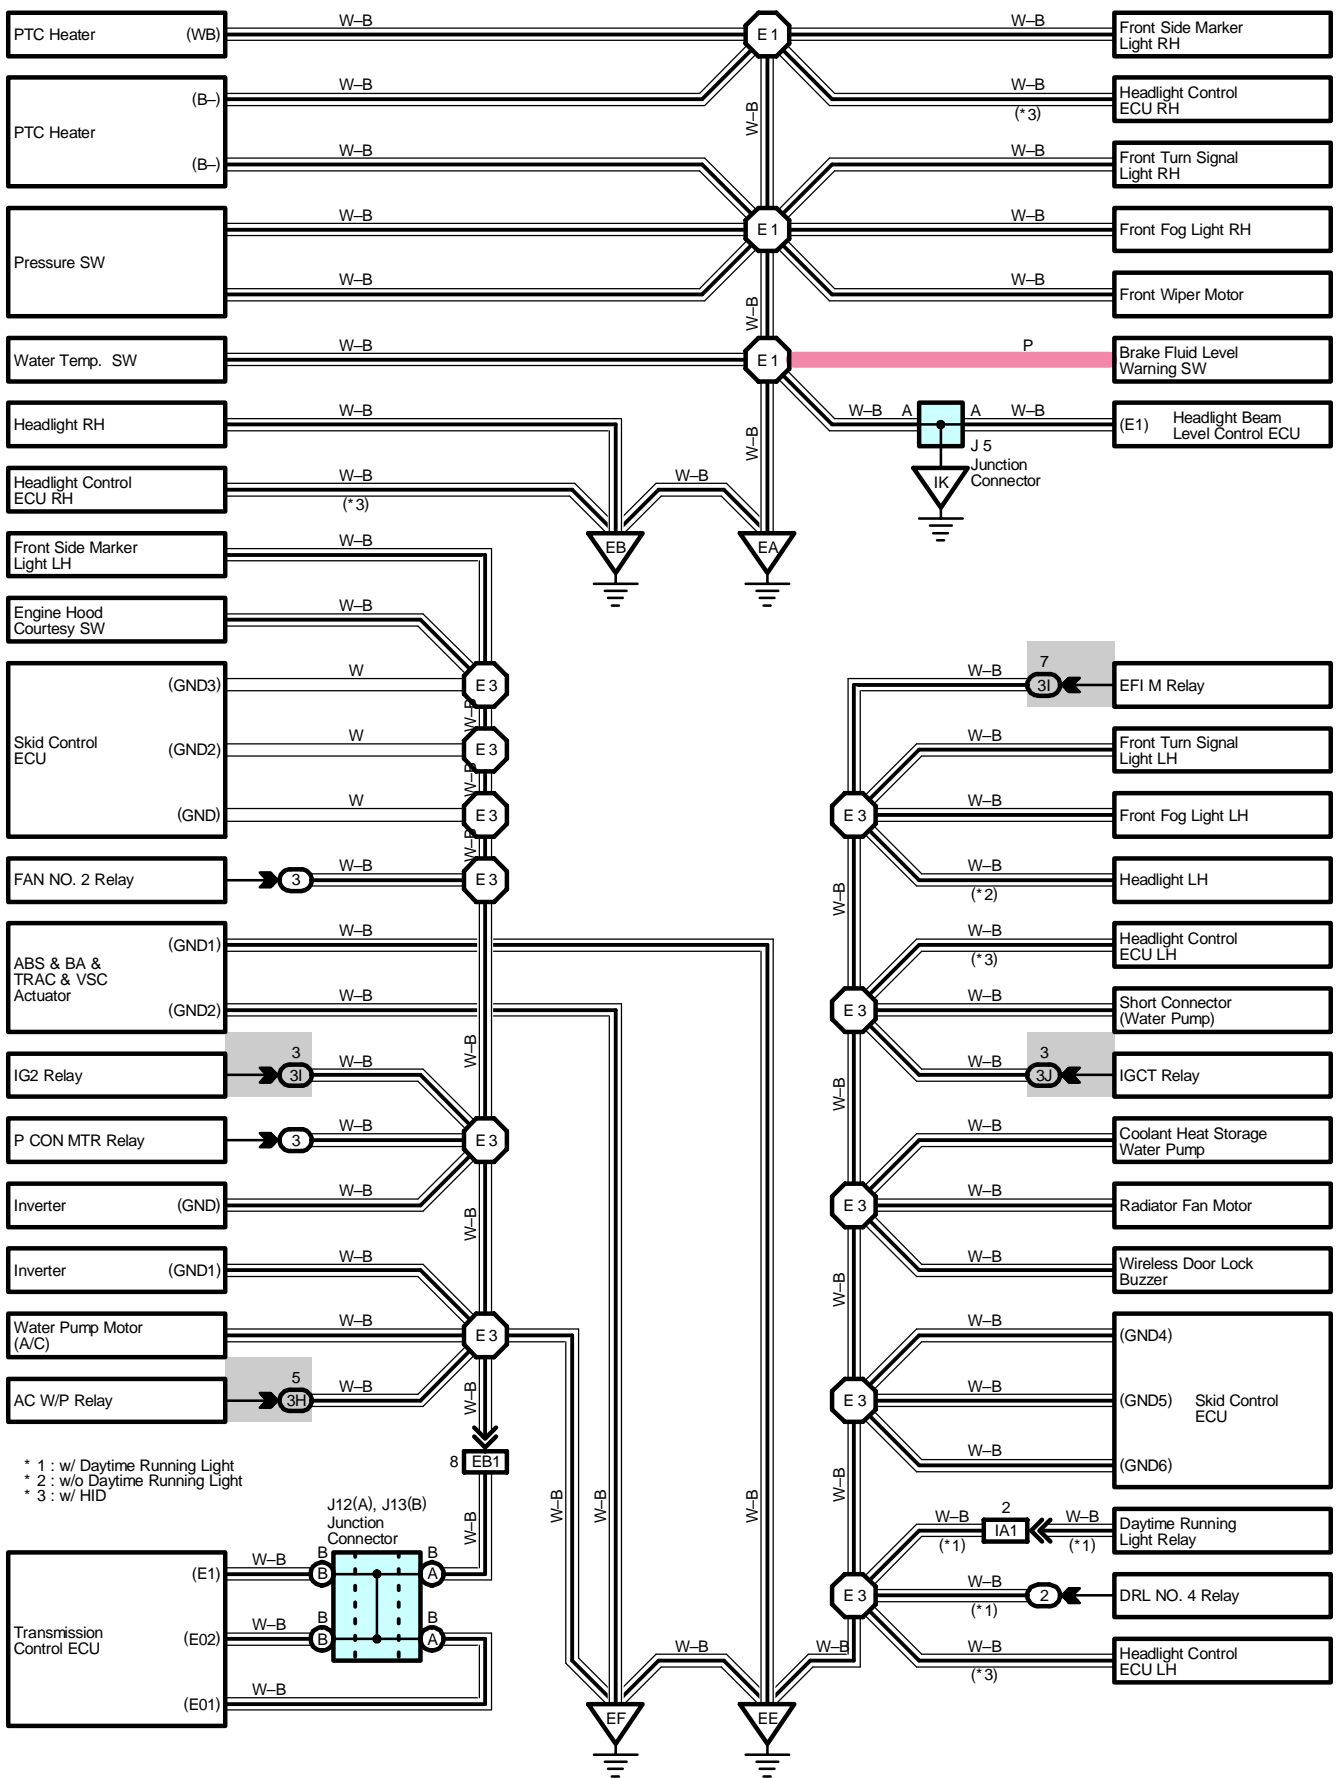

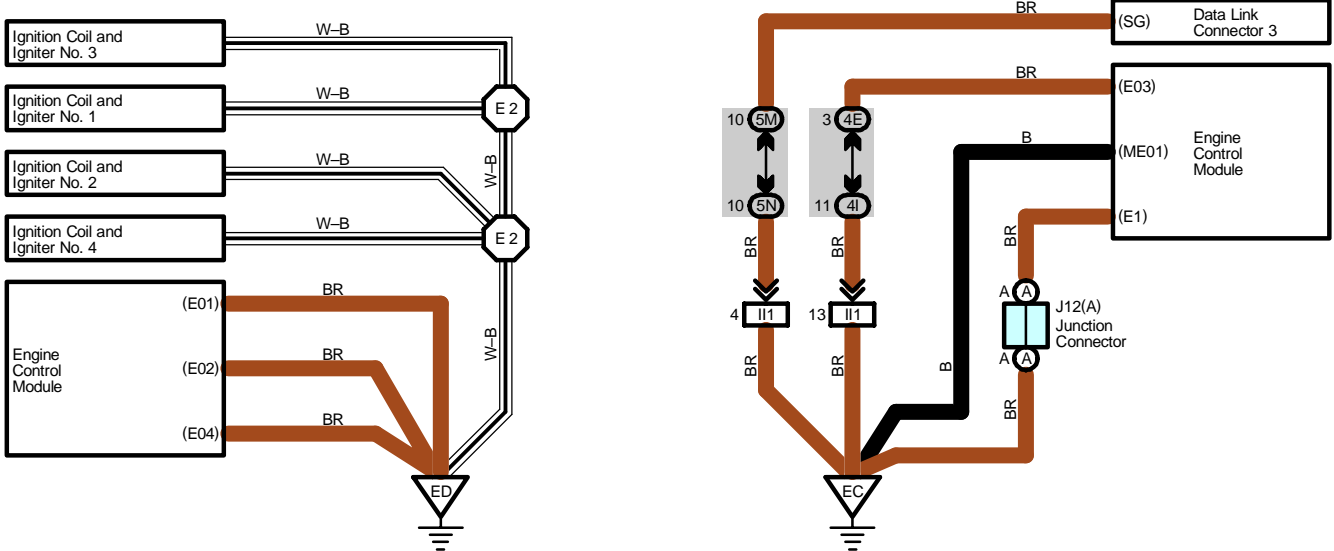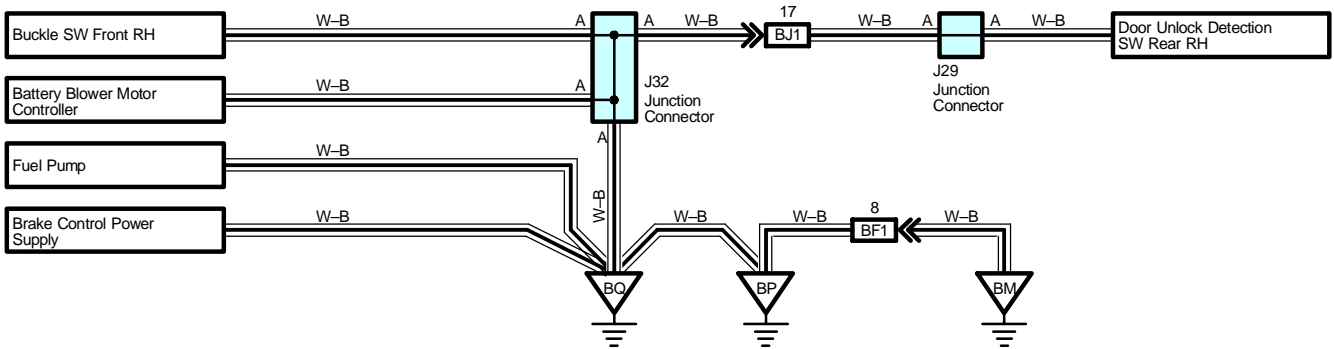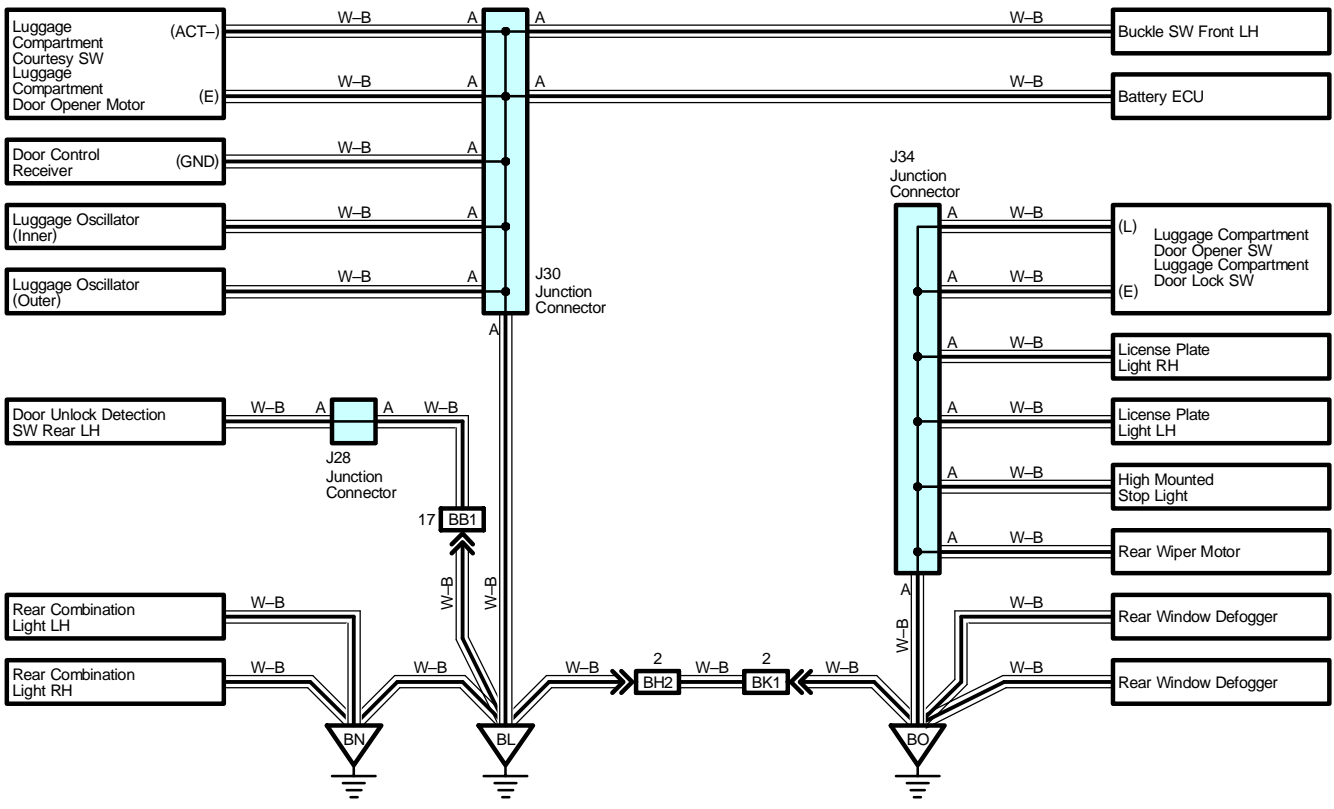

# I GROUND POINT

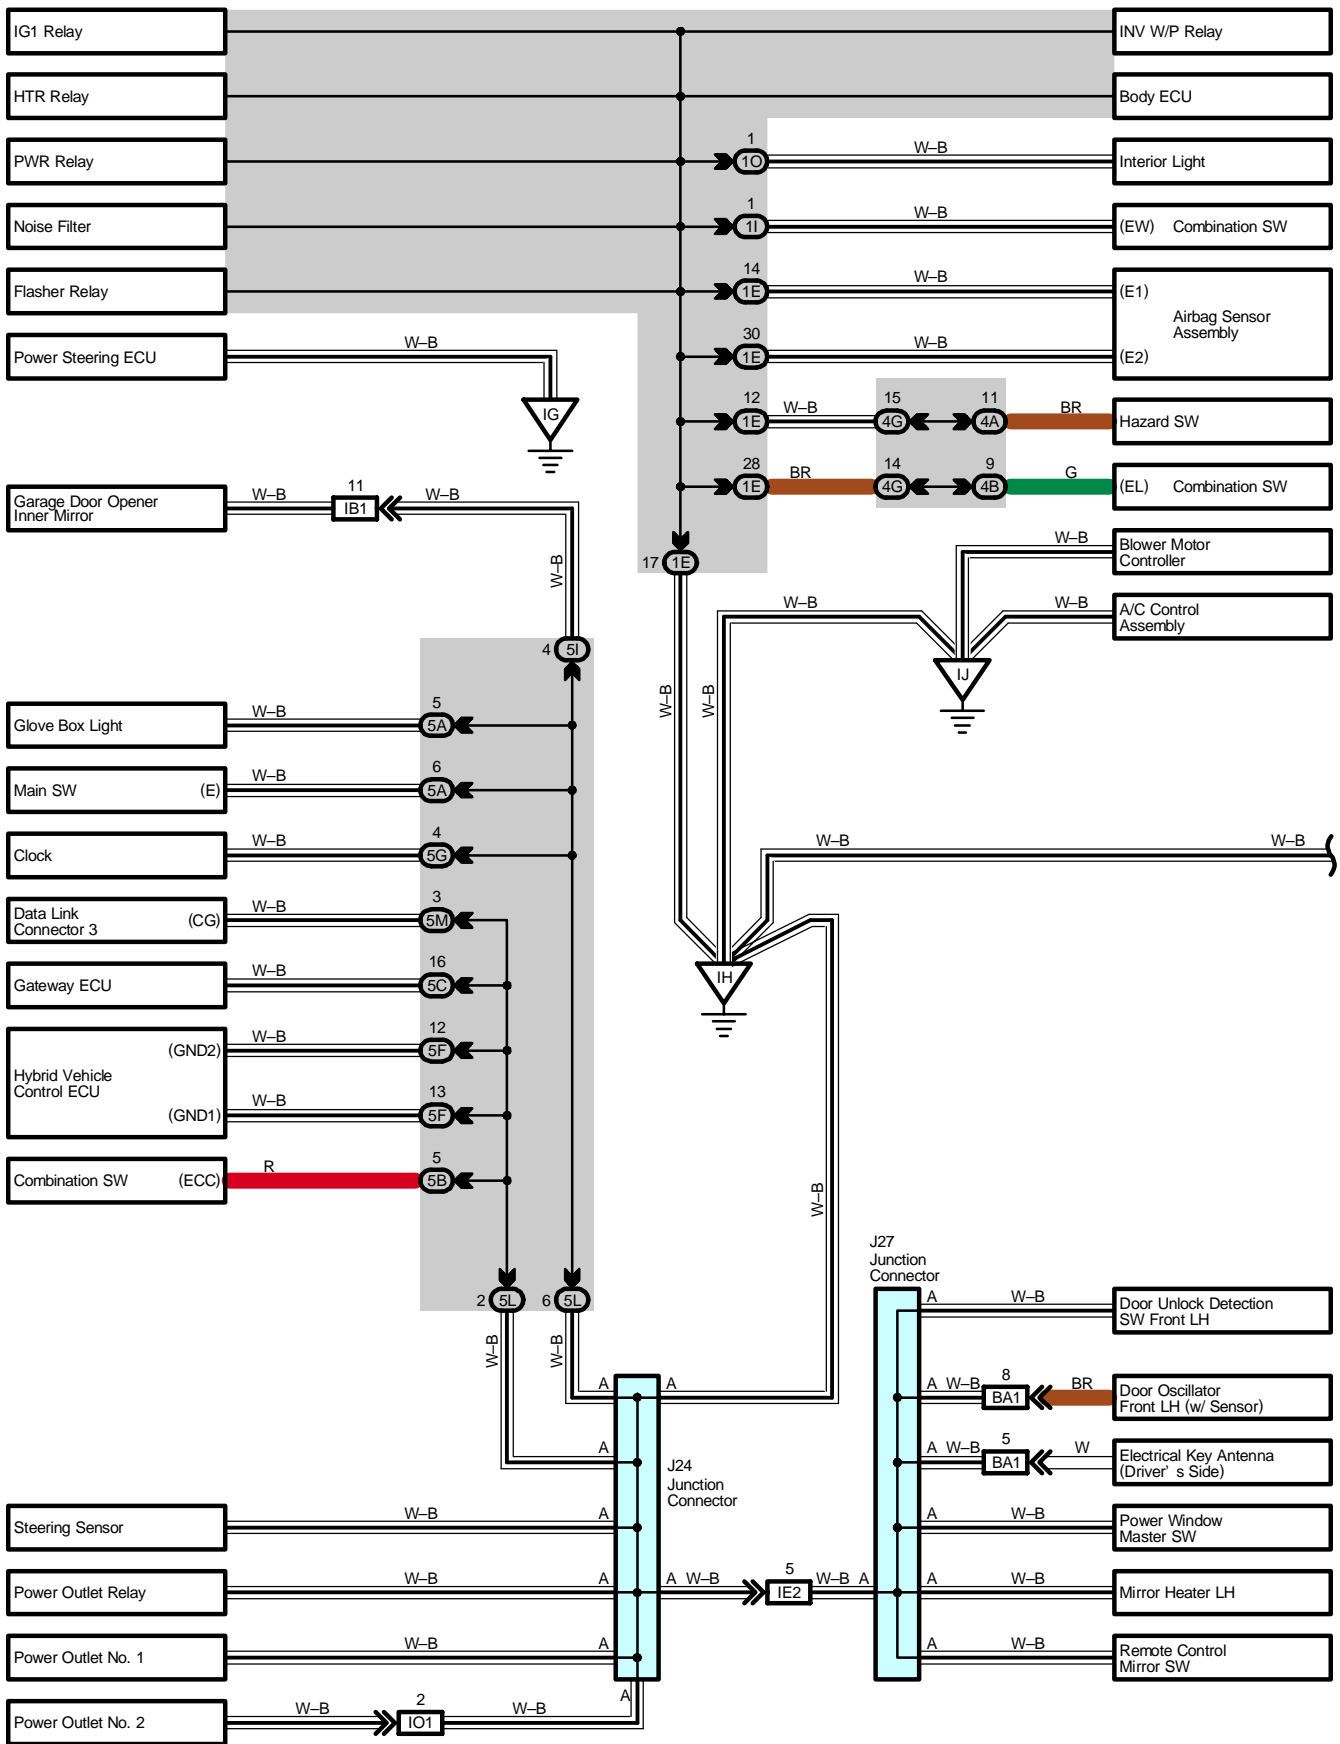

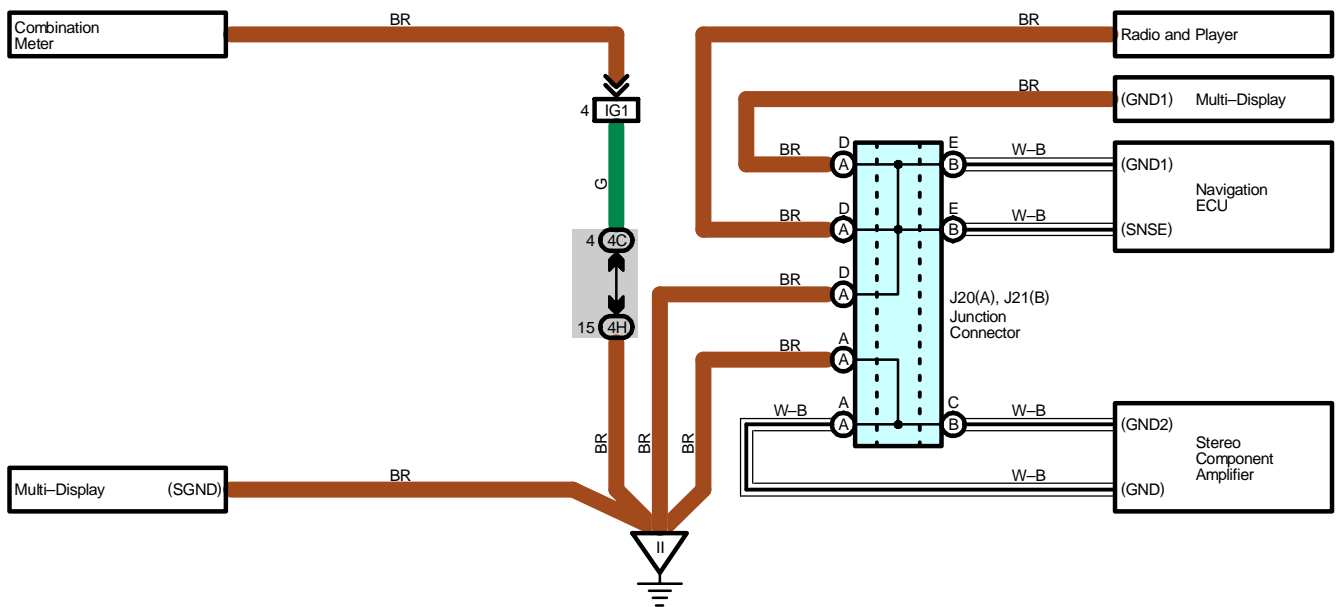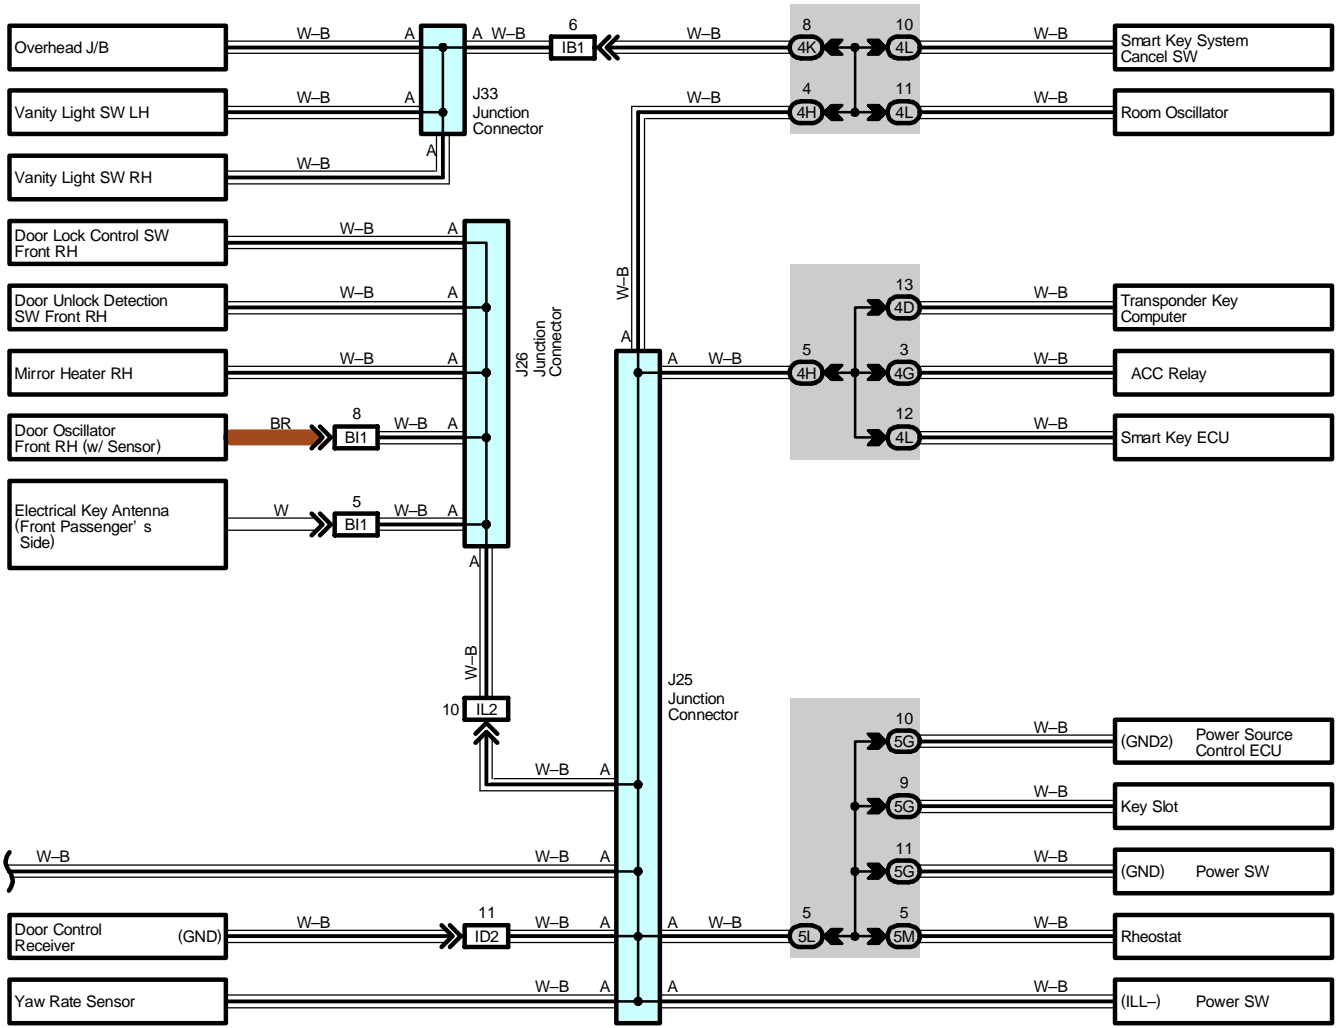

# I GROUND POINT

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
J5	48	J24	48	J29	51
J12	A 48	J25	48	J30	51
J13	B 48	J26	51	J32	51
J20	A 48	J27	51	J33	51
J21	B 48	J28	51	J34	51

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	26	Engine Room R/B No.2 (Right Side of Reserve Tank)
3	22	Engine Room R/B (Engine Compartment Left)

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1E	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1I		
1O	28	Roof Wire and Driver Side J/B (Lower Finish Panel)
3H	22	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
3I		
3J		
4A	36	Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4B		
4C		
4D		
4E		
4G		
4H		
4I		
4K		
4L		
5A	40	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5B		
5C		
5F		
5G		
5I		
5L		
5M		
5N		

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB1	54	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B)
IA1	56	Engine Room Main Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)
IB1	56	Roof Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)
ID2	56	Instrument Panel Wire and Floor Wire (Left Kick Panel)
IE2	56	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IG1	58	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the Combination Meter)
II1	58	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
IL2	58	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IO1	58	Instrument Panel Wire and Instrument Panel No.4 Wire (Front Console Box LH)
BA1	60	Front Door LH Wire and Electrical Key LH Wire (Near the Front Door Outside Handle LH)
BB1	60	Rear Door No.2 Wire and Floor Wire (Left Center Pillar)
BF1	60	Floor No.2 Wire and Fuel Tank Wire (Near the Fuel Tank)
BH2	62	Back Door No.1 Wire and Floor Wire (Rear Side of Roof Panel)
BI1	62	Front Door RH Wire and Electrical Key RH Wire (Near the Front Door Outside Handle RH)
BJ1	62	Rear Door No.1 Wire and Floor No.2 Wire (Right Center Pillar)
BK1	62	Back Door No.1 Wire and Back Door No.2 Wire (Rear Side of Roof Panel)

 : Ground Points


Code	See Page	Ground Points Location
EA	54	Right Side of the Fender Apron
EB		
EC	54	Engine Block
ED		
EE	54	Left Side of the Suspension Tower
EF		
IG	56	Cowl Side Panel LH
IH		
II	56	Instrument Panel Brace LH
IJ	56	Instrument Panel Brace RH
IK	56	Cowl Side Panel RH
BL	60	Rear Side of Left Quarter Panel
BM	60	Near the Fuel Tank
BN	60	Lower Back Panel Center
BO	60	Center of the Back Door Panel
BP	60	Front Side of Right Quarter Panel
BQ	60	Rear Side of Right Quarter Panel









 : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E1	54	Engine Room Main Wire	E3	54	Engine Room Main Wire
E2	54	Engine Wire			

# J POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other Parts.

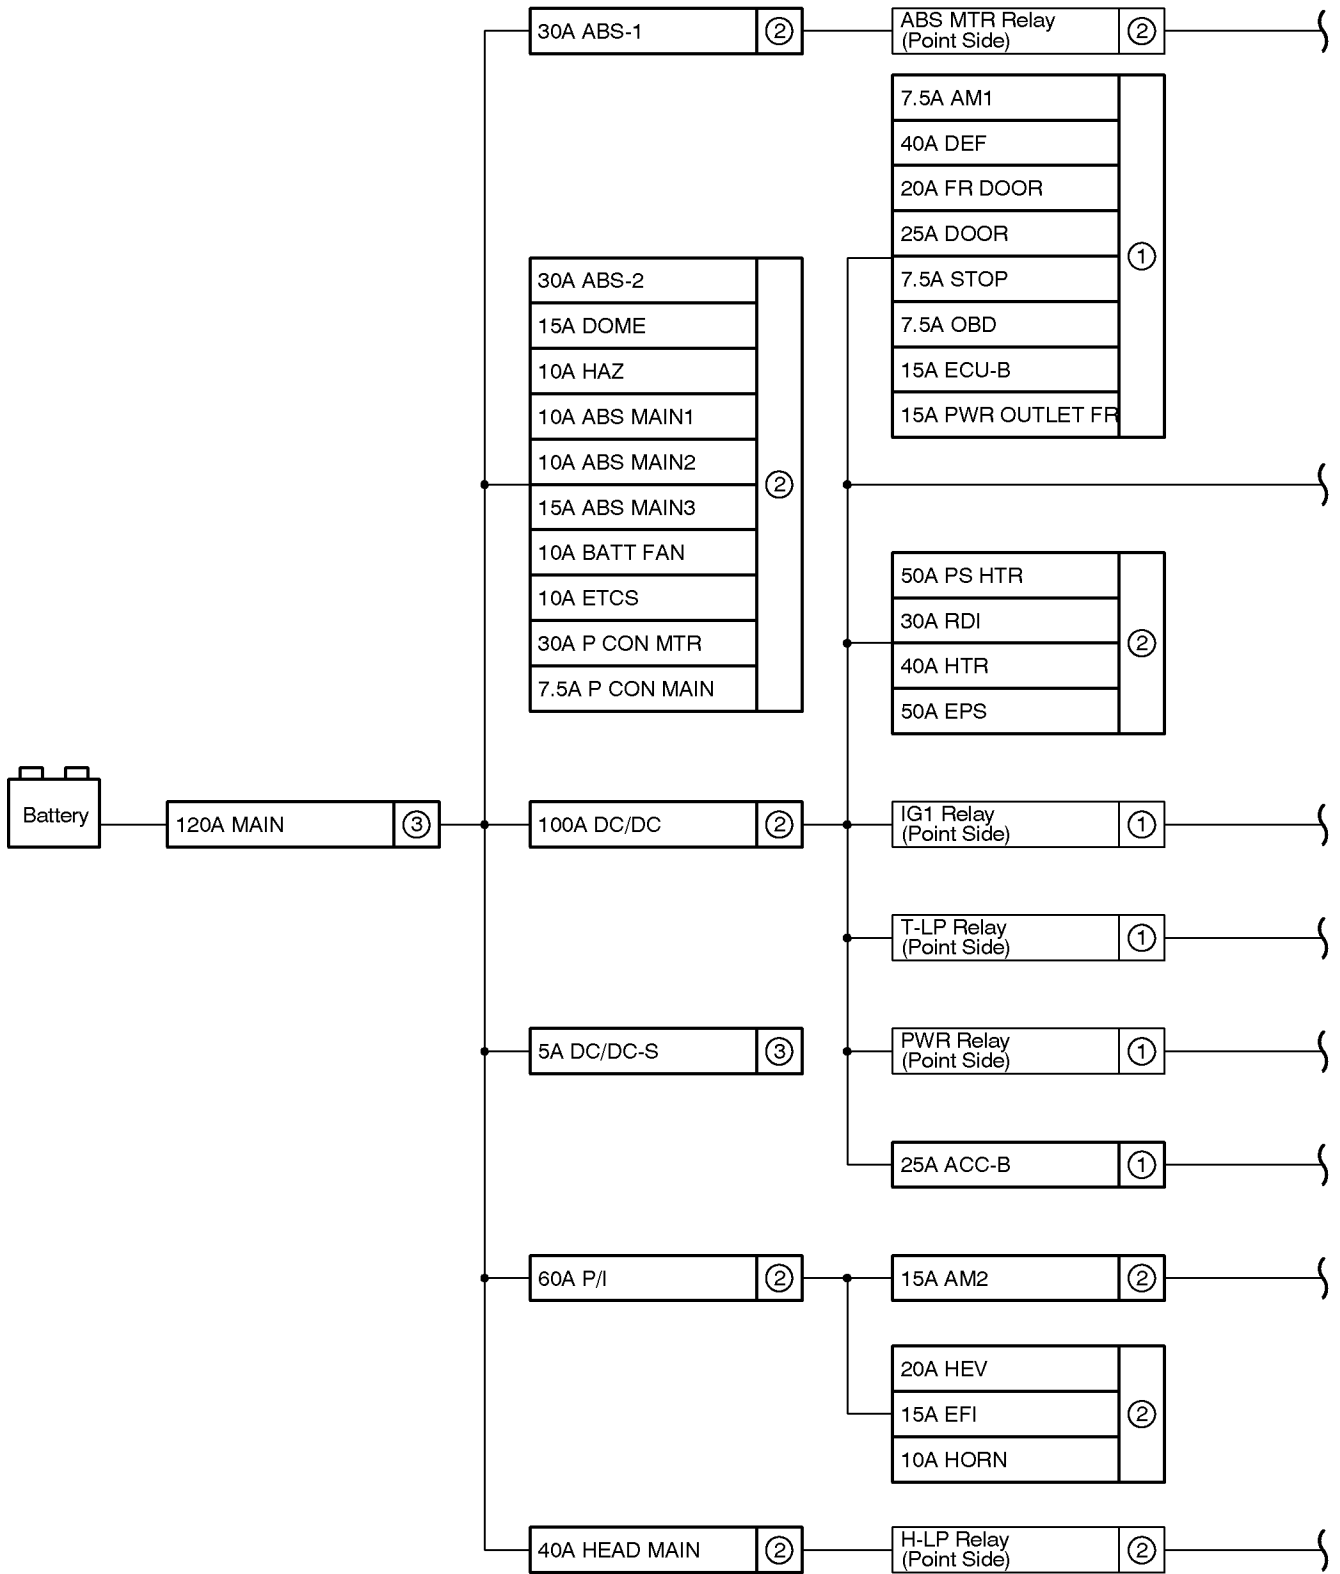

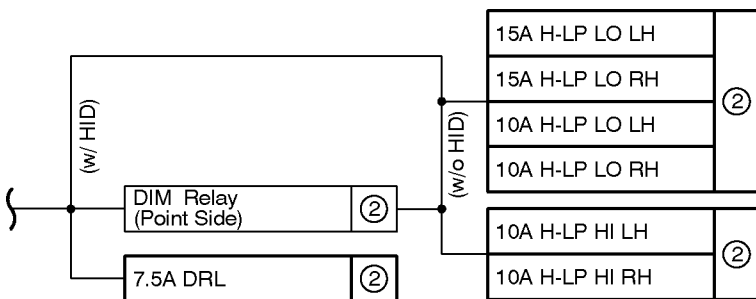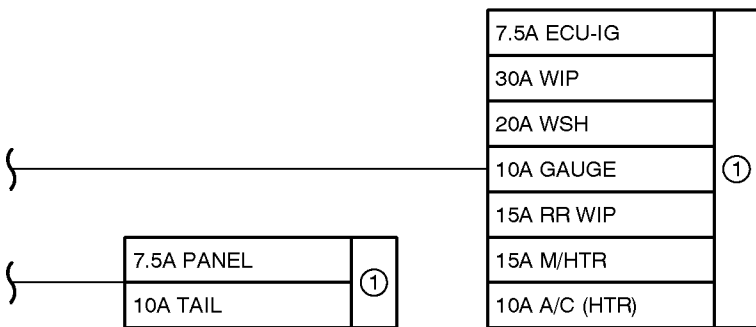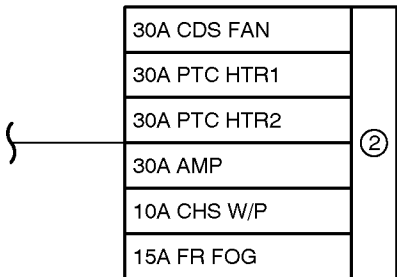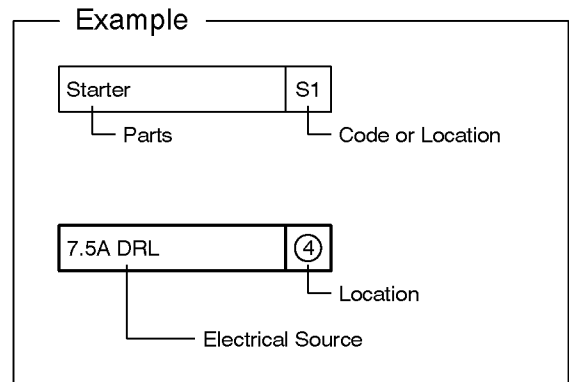

[LOCATION]

- ① : Driver Side J/B (See Page 28)
- ② : Engine Room R/B or J/B (See Page 22)
- ③ : Fusible Link Block (See Page 27)
- ④ : Fuse Holder (F17 on See Page 47)



## J POWER SOURCE (Current Flow Chart)

### Engine Room R/B, Engine Room J/B (See Page 22)

Fuse		System	Page
7.5A	DRL	Headlight	148
7.5A	P CON MAIN	Push Button Start System and Hybrid Vehicle Immobilizer System	82
		Shift Control System	256
		Smart Entry System and Wireless Door Lock Control (w/ Smart Entry System)	216
10A	ABS MAIN1	Brake Control System	290
		TOYOTA Hybrid System	96
10A	ABS MAIN2	Brake Control System	290
		TOYOTA Hybrid System	96
10A	BATT FAN	TOYOTA Hybrid System	96
10A	CHS W/P	Air Conditioner	352
		Engine Control	132
10A	ETCS	Cruise Control	270
		Engine Control	132
		TOYOTA Hybrid System	96
10A	HAZ	Turn Signal and Hazard Warning Light	166
10A	H-LP HI LH	Headlight	148
10A	H-LP HI RH	Headlight	148
10A	H-LP LO LH (w/o HID)	Headlight	148
10A	H-LP LO RH (w/o HID)	Headlight	148
10A	HORN	Horn	310
		Smart Entry System and Wireless Door Lock Control (w/ Smart Entry System)	216
		Theft Deterrent	246
		Wireless Door Lock Control (w/o Smart Entry System)	234
15A	ABS MAIN3	Brake Control System	290
15A	AM2	Engine Control	132
		Ignition	128
		Interior Light	170
		Push Button Start System and Hybrid Vehicle Immobilizer System	82
		Shift Control System	256
		TOYOTA Hybrid System	96
15A	DOME	Air Conditioner	352
		Automatic Glare-Resistant EC Mirror	322
		Automatic Light Control	160
		Back-Up Light	186
		Brake Control System	290
		Clock	312
		Combination Meter	342
		Cruise Control	270
		Door Lock Control	210
		Engine Control	132

\* These are the page numbers of the first page on which the related system is shown.

Fuse		System	Page
15A	DOME	EPS	284
		Garage Door Opener	324
		Headlight	148
		Headlight Beam Level Control	156
		Interior Light	170
		Key Reminder	190
		Light Auto Turn Off System	164
		Luggage Compartment Door Opener	242
		Multi-Display and Audio System (Built-in Amplifier)	336
		Multi-Display and Audio System (Separate Amplifier)	326
		Power Window	206
		Push Button Start System and Hybrid Vehicle Immobilizer System	82
		Rear Window Defogger and Mirror Heater	318
		Seat Belt Warning	194
		Shift Control System	256
		Smart Entry System and Wireless Door Lock Control (w/ Smart Entry System)	216
		SRS	303
		Taillight and Illumination	178
Theft Deterrent	246		
TOYOTA Hybrid System	96		
Wireless Door Lock Control (w/o Smart Entry System)	234		
15A	EFI	Cruise Control	270
		Engine Control	132
		TOYOTA Hybrid System	96
15A	FR FOG	Front Fog Light	162
15A	H-LP LO LH (w/ HID)	Headlight	148
15A	H-LP LO RH (w/ HID)	Headlight	148
20A	HEV	Cruise Control	270
		Push Button Start System and Hybrid Vehicle Immobilizer System	82
		Shift Control System	256
		TOYOTA Hybrid System	96
30A	ABS-1	Brake Control System	290
		TOYOTA Hybrid System	96
30A	ABS-2	Brake Control System	290
		TOYOTA Hybrid System	96
30A	AMP	Multi-Display and Audio System (Separate Amplifier)	326
30A	CDS FAN	Radiator Fan and Condenser Fan	348
30A	P CON MTR	Push Button Start System and Hybrid Vehicle Immobilizer System	82
		Shift Control System	256
30A	PTC HTR1	Air Conditioner	352
30A	PTC HTR2	Air Conditioner	352

\* These are the page numbers of the first page on which the related system is shown.

## J POWER SOURCE (Current Flow Chart)

Fuse		System	Page
30A	RDI	Engine Control	132
		Radiator Fan and Condenser Fan	348
		TOYOTA Hybrid System	96
40A	HEAD MAIN	Automatic Light Control	160
		Headlight	148
		Headlight Beam Level Control	156
		Light Auto Turn Off System	164
		Smart Entry System and Wireless Door Lock Control (w/ Smart Entry System)	216
		Theft Deterrent	246
		Wireless Door Lock Control (w/o Smart Entry System)	234
40A	HTR	Air Conditioner	352
		TOYOTA Hybrid System	96
50A	EPS	EPS	284
50A	PS HTR	Air Conditioner	352
60A	P/I	Engine Control	132
		Ignition	128
		Interior Light	170
100A	DC/DC	Automatic Light Control	160
		Interior Light	170
		Light Auto Turn Off System	164
		Power Window	206
		Push Button Start System and Hybrid Vehicle Immobilizer System	82
		Smart Entry System and Wireless Door Lock Control (w/ Smart Entry System)	216
		Taillight and Illumination	178
		Theft Deterrent	246
		TOYOTA Hybrid System	96
Wireless Door Lock Control (w/o Smart Entry System)	234		

### Fusible Link Block (See Page 27)

Fuse		System	Page
5A	DC/DC-S	TOYOTA Hybrid System	96
120A	MAIN	Engine Control	132
		Ignition	128
		Interior Light	170
		TOYOTA Hybrid System	96

### Driver Side J/B (See Page 28)

Fuse		System	Page
7.5A	ACC	Clock	312
		Interior Light	170
		Key Reminder	190
		Light Auto Turn Off System	164
		Multi-Display and Audio System (Built-in Amplifier)	336

\* These are the page numbers of the first page on which the related system is shown.

Fuse		System	Page
7.5A	ACC	Multi-Display and Audio System (Separate Amplifier)	326
		Multiplex Communication System (AVC-LAN Bus)	78
		Multiplex Communication System (BEAN Bus)	70
		Multiplex Communication System (CAN Bus)	74
		Power Window	206
		Push Button Start System and Hybrid Vehicle Immobilizer System	82
		Remote Control Mirror	316
		Shift Control System	256
		Smart Entry System and Wireless Door Lock Control (w/ Smart Entry System)	216
		Theft Deterrent	246
7.5A	AM1	Interior Light	170
		Push Button Start System and Hybrid Vehicle Immobilizer System	82
		Shift Control System	256
		TOYOTA Hybrid System	96
7.5A	ECU-IG	Automatic Glare-Resistant EC Mirror	322
		Automatic Light Control	160
		Brake Control System	290
		Door Lock Control	210
		Engine Control	132
		EPS	284
		Garage Door Opener	324
		Headlight	148
		Interior Light	170
		Key Reminder	190
		Light Auto Turn Off System	164
		Luggage Compartment Door Opener	242
		Multi-Display and Audio System (Built-in Amplifier)	336
		Multi-Display and Audio System (Separate Amplifier)	326
		Multiplex Communication System (AVC-LAN Bus)	78
		Multiplex Communication System (BEAN Bus)	70
		Multiplex Communication System (CAN Bus)	74
		Power Window	206
		Push Button Start System and Hybrid Vehicle Immobilizer System	82
		Radiator Fan and Condenser Fan	348
		Shift Control System	256
		Smart Entry System and Wireless Door Lock Control (w/ Smart Entry System)	216
		Theft Deterrent	246
TOYOTA Hybrid System	96		
Wireless Door Lock Control (w/o Smart Entry System)	234		
7.5A	IGN	Brake Control System	290
		Combination Meter	342
		Cruise Control	270
		Engine Control	132

\* These are the page numbers of the first page on which the related system is shown.

## J POWER SOURCE (Current Flow Chart)

Fuse		System	Page
7.5A	IGN	EPS	284
		Push Button Start System and Hybrid Vehicle Immobilizer System	82
		Shift Control System	256
		SRS	303
		TOYOTA Hybrid System	96
7.5A	OBD	Engine Control	132
		TOYOTA Hybrid System	96
7.5A	PANEL	Clock	312
		Taillight and Illumination	178
7.5A	STOP	Brake Control System	290
		Cruise Control	270
		EPS	284
		Push Button Start System and Hybrid Vehicle Immobilizer System	82
		Shift Control System	256
		Smart Entry System and Wireless Door Lock Control (w/ Smart Entry System)	216
		Stop Light	184
TOYOTA Hybrid System	96		
10A	A/C(HTR)	Air Conditioning	352
		Rear Window Defogger and Mirror Heater	318
10A	GAUGE	Air Conditioning	352
		Back-Up Light	186
		Brake Control System	290
		Combination Meter	342
		Cruise Control	270
		Engine Control	132
		EPS	284
		Headlight	148
		Headlight Beam Level Control	156
		Key Reminder	190
		Luggage Compartment Door Opener	242
		Multi-Display and Audio System (Built-in Amplifier)	336
		Multi-Display and Audio System (Separate Amplifier)	326
		Power Window	206
		Push Button Start System and Hybrid Vehicle Immobilizer System	82
		Rear Window Defogger and Mirror Heater	318
		Seat Belt Warning	194
Shift Control System	256		
Smart Entry System and Wireless Door Lock Control (w/ Smart Entry System)	216		
SRS	303		
Taillight and Illumination	178		
TOYOTA Hybrid System	96		
Turn Signal and Hazard Warning Light	166		

\* These are the page numbers of the first page on which the related system is shown.


Fuse		System	Page
10A	TAIL	Front Fog Light	162
		Taillight and Illumination	178
15A	ECU-B	Air Conditioning	352
		Headlight	148
		Multi-Display and Audio System (Built-in Amplifier)	336
		Multi-Display and Audio System (Separate Amplifier)	326
		Multiplex Communication System (AVC-LAN Bus)	78
		Multiplex Communication System (BEAN Bus)	70
		Multiplex Communication System (CAN Bus)	74
	Rear Window Defogger and Mirror Heater	318	
	Theft Deterrent	246	
15A	M/HTR	Rear Window Defogger and Mirror Heater	318
15A	PWR OUTLET	Power Outlet	314
15A	PWR OUTLET FR	Power Outlet	314
15A	RR WIP	Rear Wiper and Washer	202
20A	FR DOOR	Power Window	206
20A	WSH	Front Wiper and Washer	198
		Rear Wiper and Washer	202
25A	ACC-B	Push Button Start System and Hybrid Vehicle Immobilizer System	82
25A	DOOR	Door Lock Control	210
		Luggage Compartment Door Opener	242
		Smart Entry System and Wireless Door Lock Control (w/ Smart Entry System)	216
		Theft Deterrent	246
		Wireless Door Lock Control (w/o Smart Entry System)	234
30A	POWER	Power Window	206
30A	WIP	Front Wiper and Washer	198
40A	DEF	Rear Window Defogger and Mirror Heater	318


### Fuse Holder (F17 on See Page 47)

Fuse		System	Page
30A	ABS	Brake Control System	290
		TOYOTA Hybrid System	96

\* These are the page numbers of the first page on which the related system is shown.


















# K CONNECTOR LIST

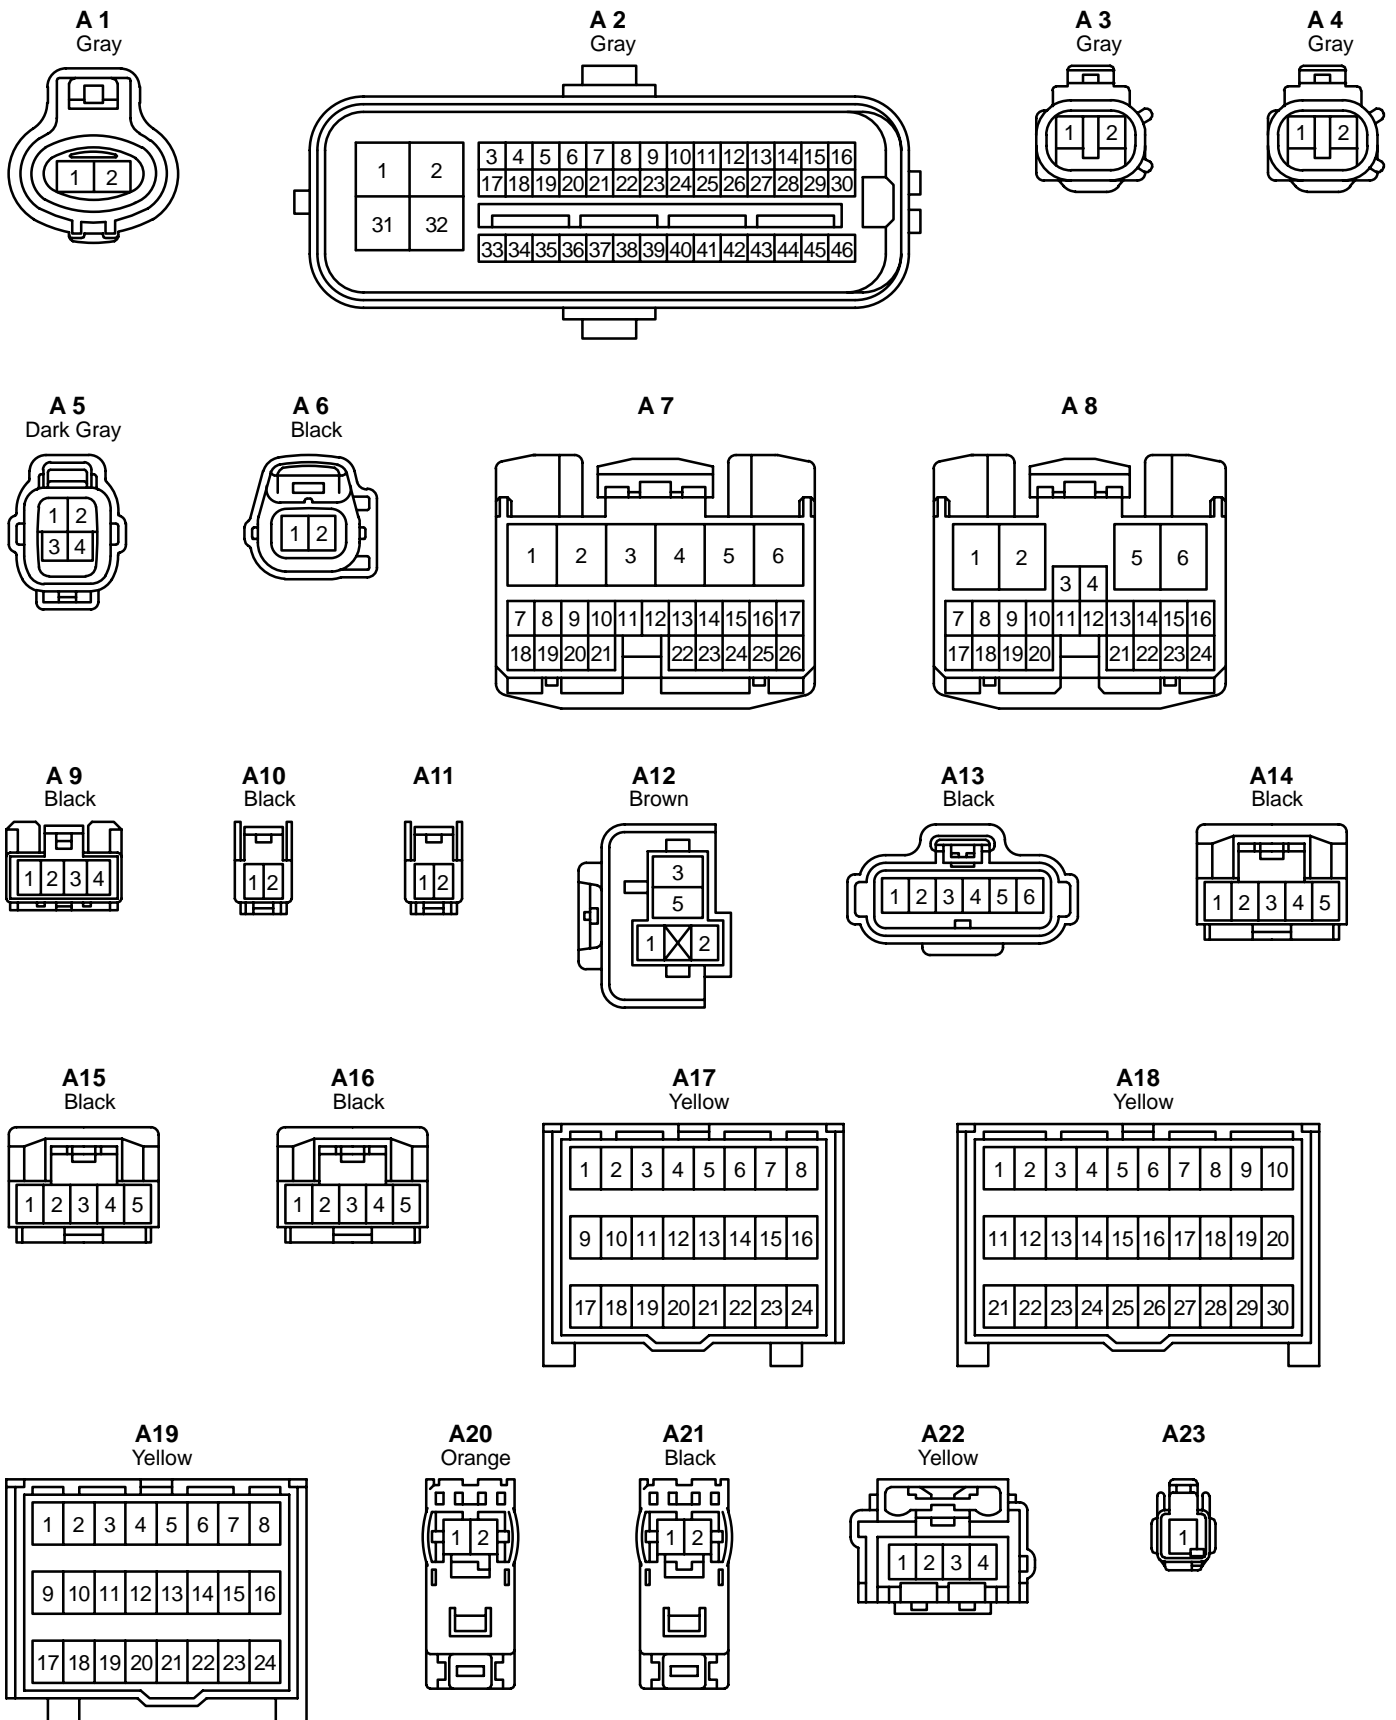

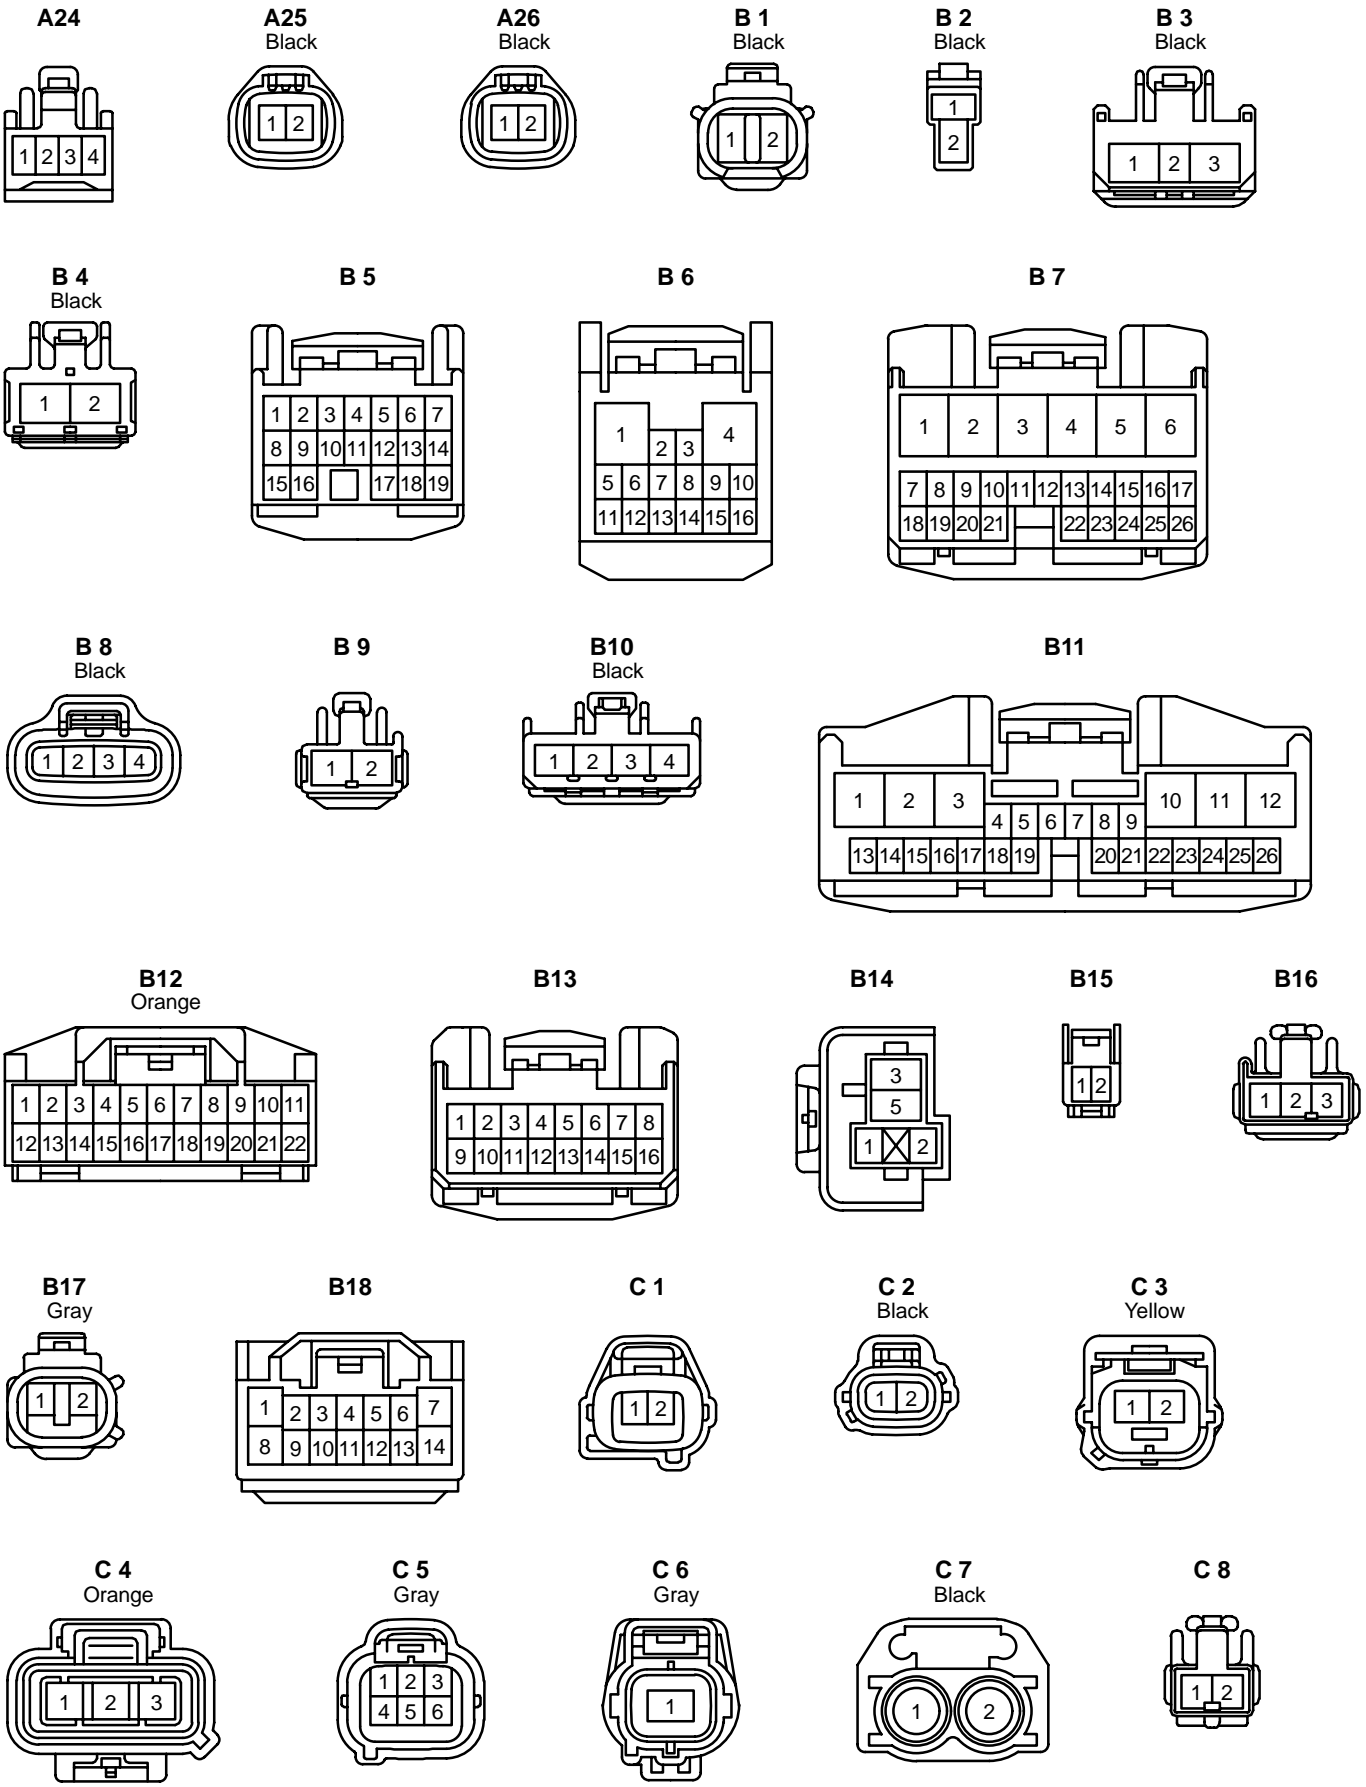





# K CONNECTOR LIST

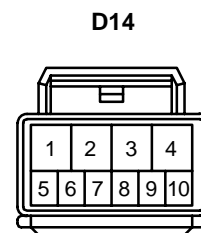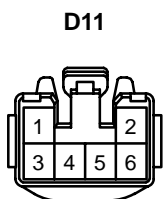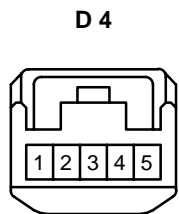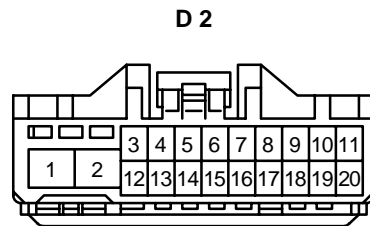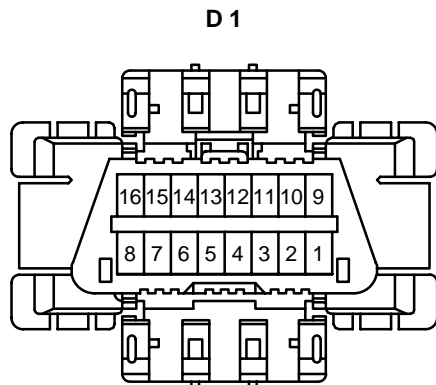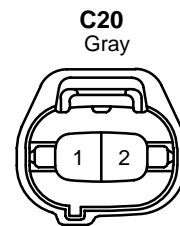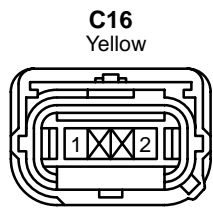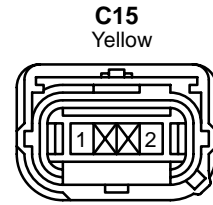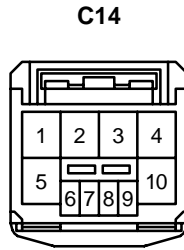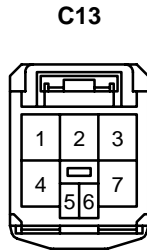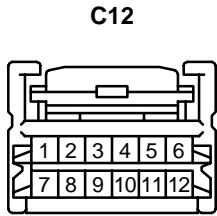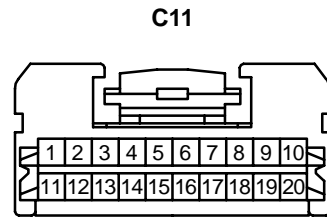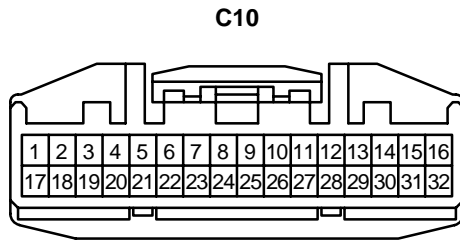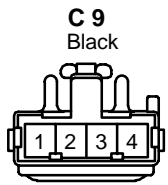


D15

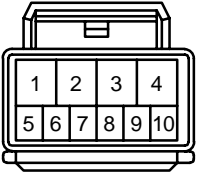

D16

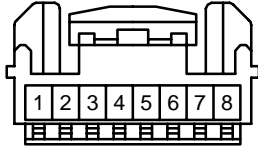

D17

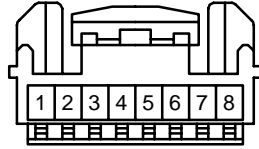


E 1  
Dark Gray




E 3




E 4

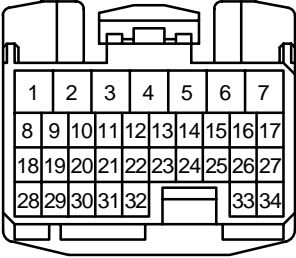


E 5

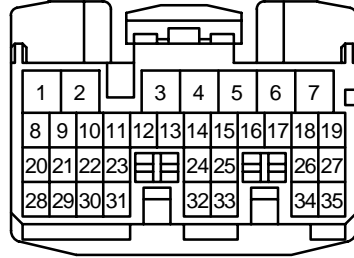


E 6

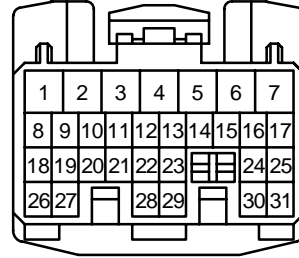


E 7

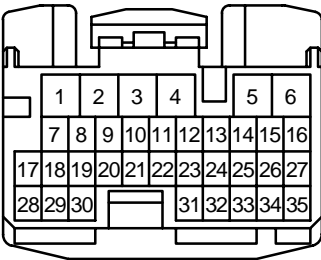

E 8

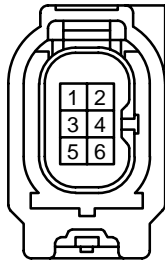

E 9

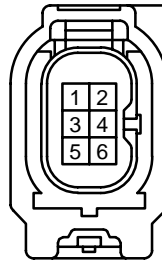

E10



F 1  
Yellow



F 2  
Yellow




F 3  
Brown




F 4  
Brown




F 5  
Black

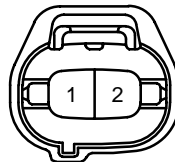


F 6  
Black

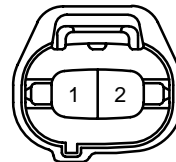


F 7  
Gray

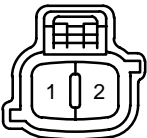

F 8  
Gray

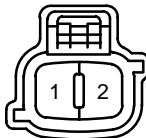


F 9  
Black

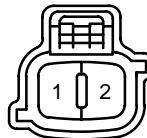


F10




F11




F12




F13




F14  
Gray

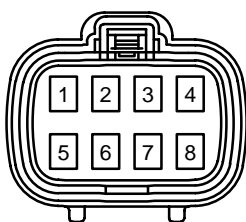


F15



F16




F17



# K CONNECTOR LIST


**G 1**

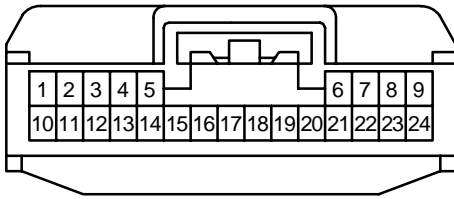

**G 2**




**G 3**  
Black

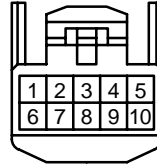

**H 1**  
Black



**H 2**  
Black

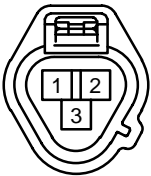

**H 3**



**H 4**




**H 5**




**H 6**



**H 7**



**H 8**




**H 9**  
Black




**H 10**  
Black



**H 11**

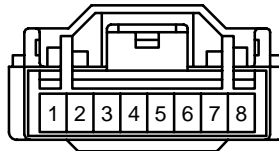


**H 12**

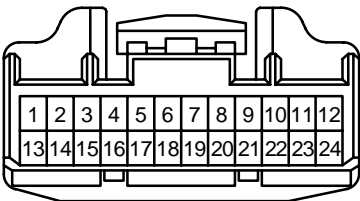


**H 13**  
Dark Gray




**H 14**  
Gray

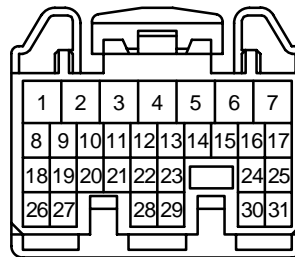


**H 15**  
Gray

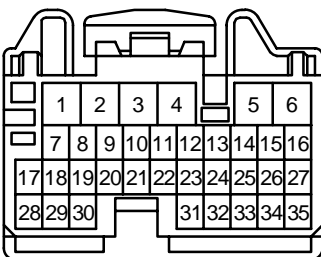

**H 16**  
Gray

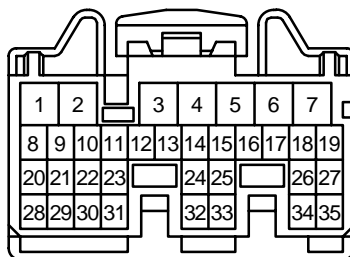


**H 17**  
Gray

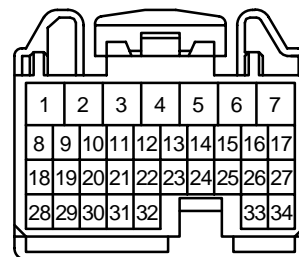


**H 18**  
Black




**H 19**

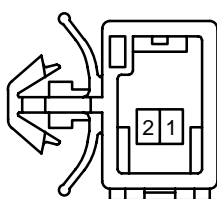


**H 20**




**H 21**




**I 1**  
Black



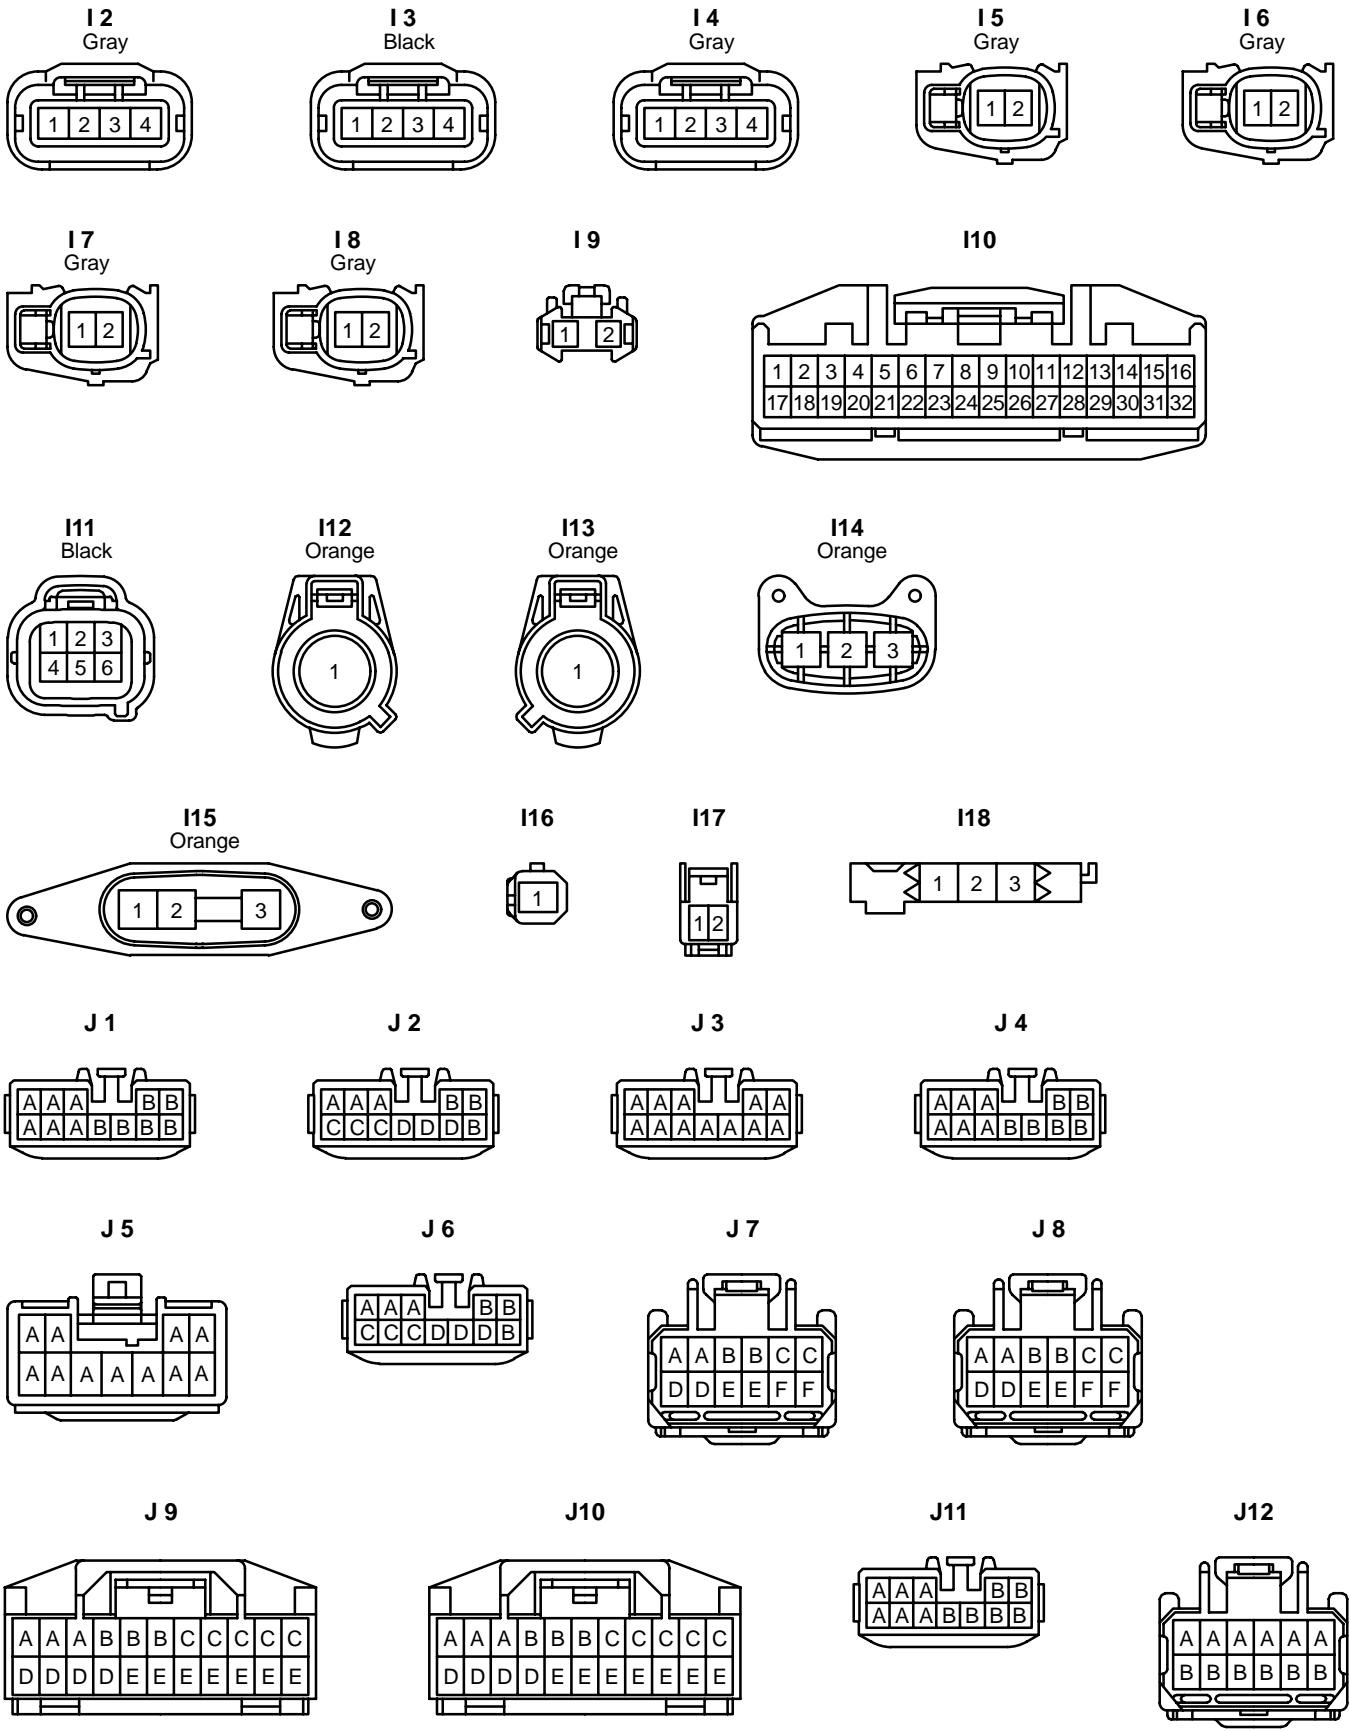


# K CONNECTOR LIST


J13

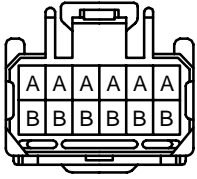

J14

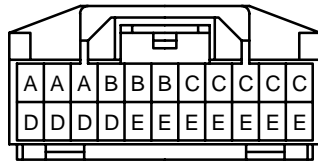

J15

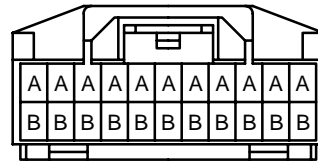


J16




J17




J18

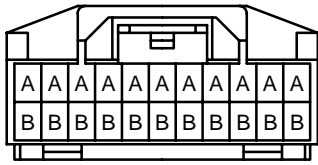


J19

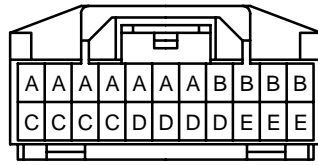


J20

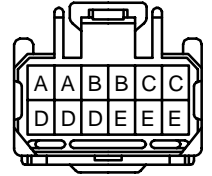


J21

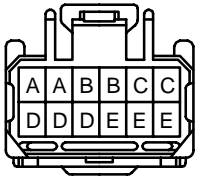

J22



J23




J24




J25




J26

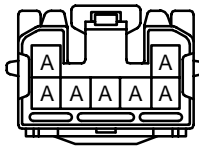


J27

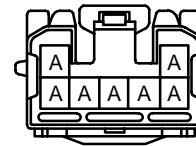

J28

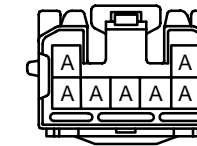


J29

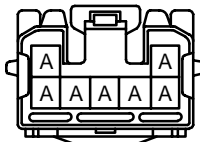

J30




J31

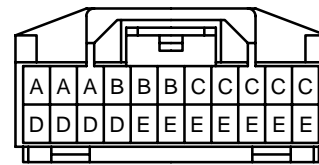

J32




J33

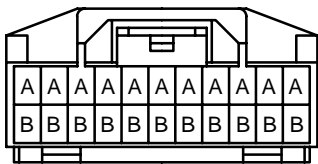


J34




K 1  
Black




K 2

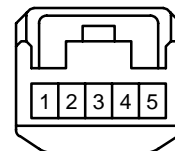


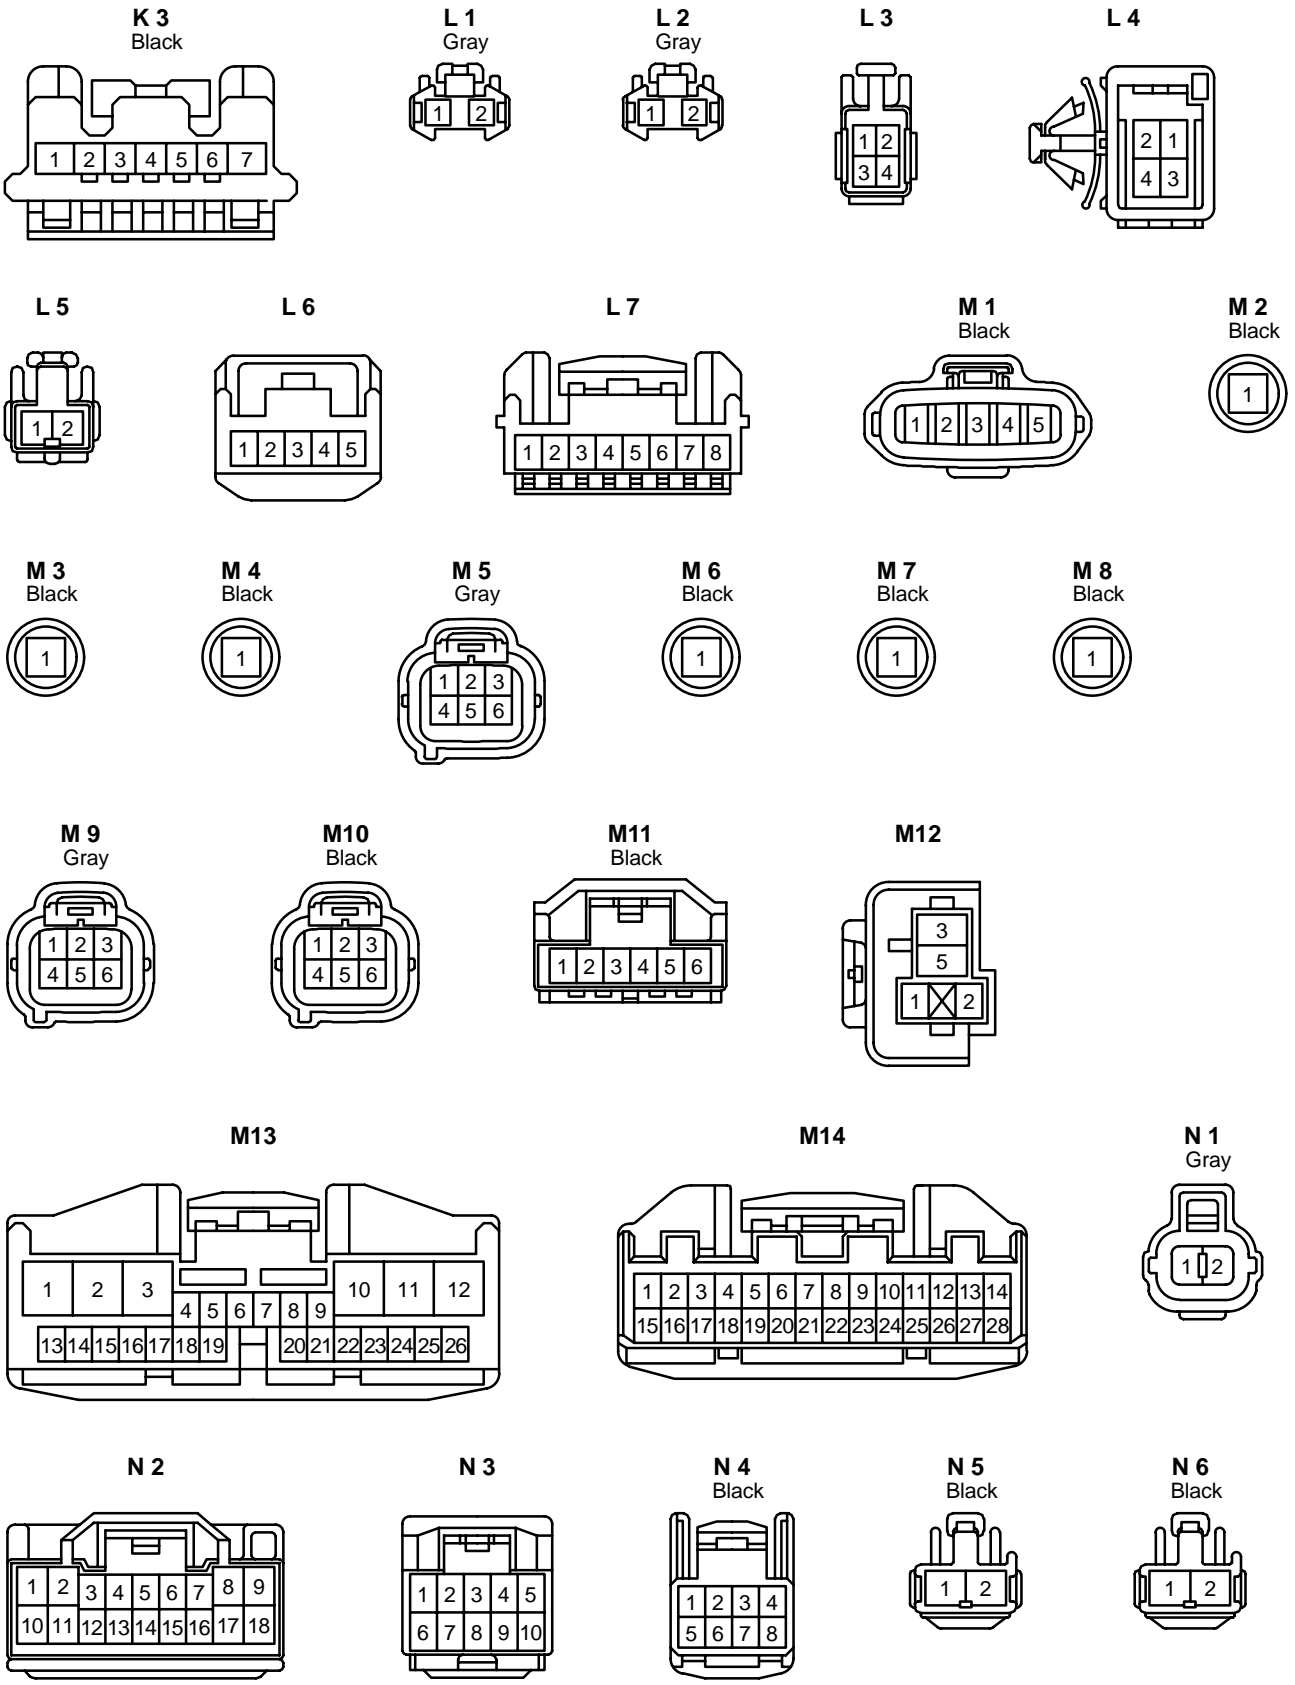


# K CONNECTOR LIST

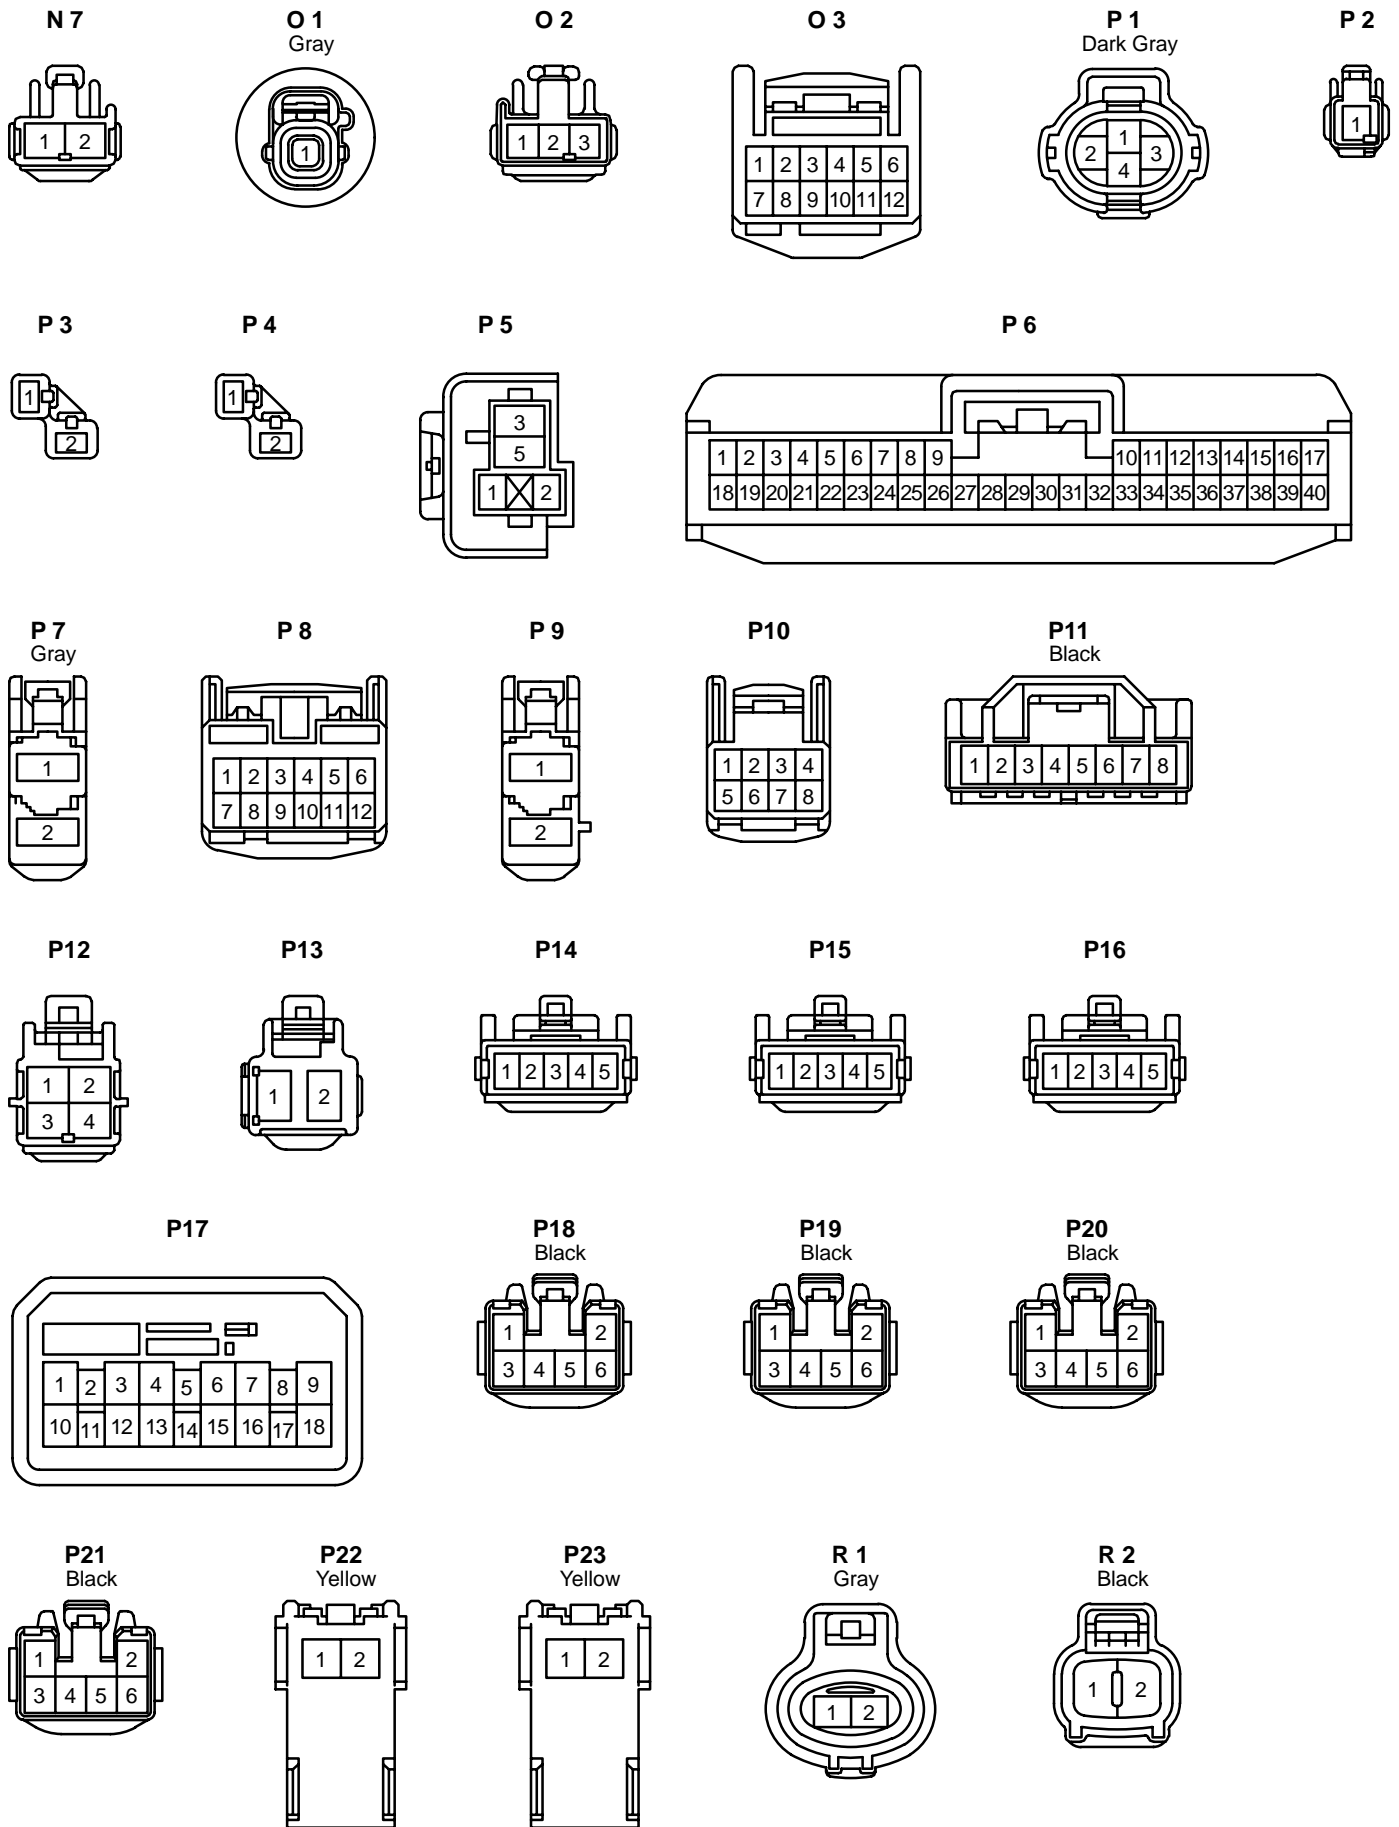


R 3

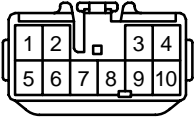


R 4

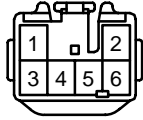


R 5

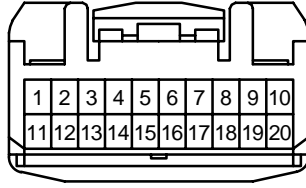


R 6

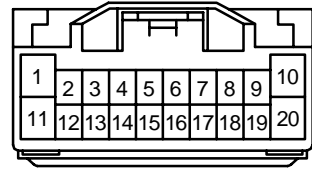


R 7  
Black

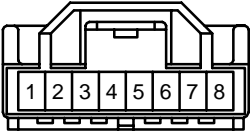


R 8

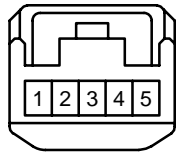

R 9



R 10



R 11



R 12



R 13



R 14




R 15




R 16




R 17




R 18

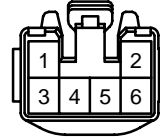


R 19

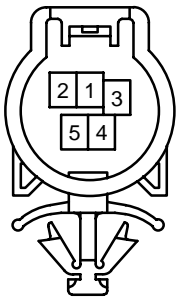


R 20

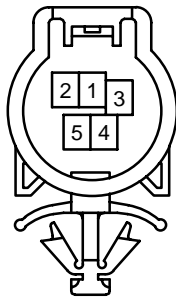

R 21

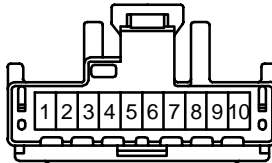

S 1  
Black

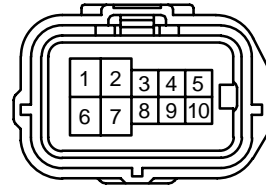


S 2  
Gray




S 3  
Gray




S 4

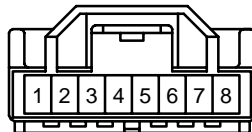


S 5  
Black

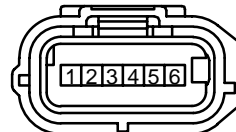


S 6  
Black




S 7

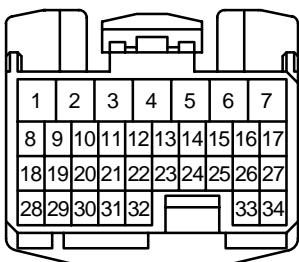

S 8

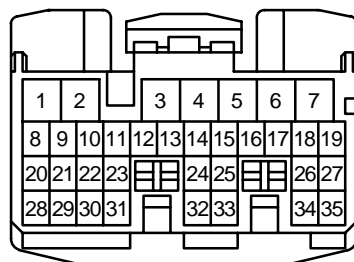


S 9

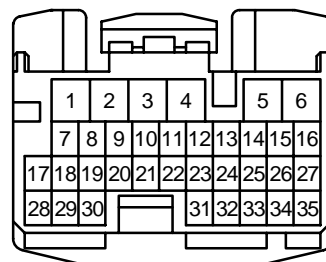




# K CONNECTOR LIST

**S10**

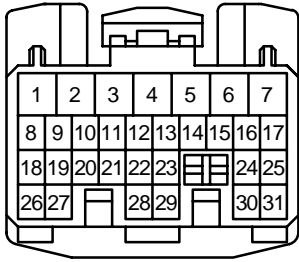


**S11**

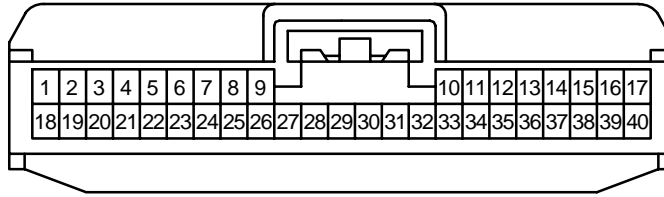


**S12**




**S13**  
Gray

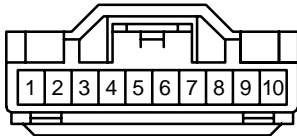


**S14**

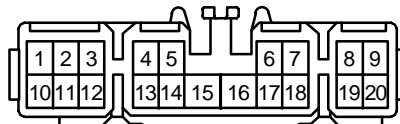

**S15**

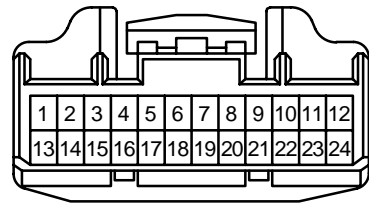


**S16**

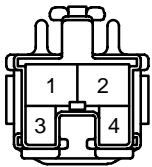


**S17**



**S18**  
Yellow

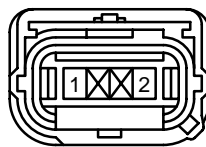

**S19**  
Yellow

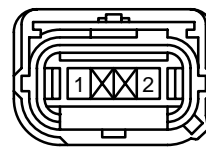


**S20**  
Yellow




**S21**  
Yellow




**S22**




**S23**




**S24**



**S25**



**S26**




**S27**  
Black



**S28**  
Black



**T 1**  
Black




**T 2**  
Gray




**T 3**  
Black




**T 4**

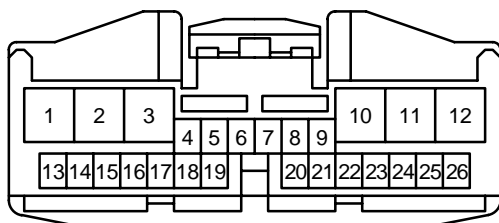


**T 5**

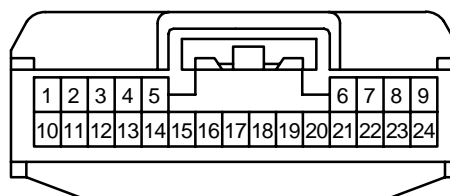


**T 6**




T 7




T 8



T 9



V 1  
Black

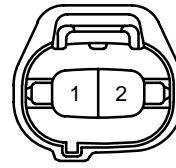


V 2



V 3



V 4




V 5



V 6  
Black



V 7  
Black

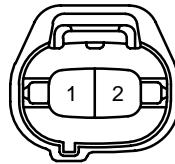

V 8  
Blue



W 1  
Black



W 3  
Black



W 4  
Gray




W 5  
Black



W 6  
Black



Y 1  
Black

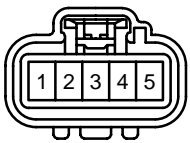

# L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
A 1	A/C Condenser Fan Motor	90980-10928	C 1	Camshaft Position Sensor	90980-10947
A 2	ABS & BA & TRAC & VSC Actuator	90980-12297	C 2	Camshaft Timing Oil Control Valve	90980-11162
A 3	ABS Speed Sensor Front LH	90980-11003	C 3	Circuit Breaker Sensor	90980-11898
A 4	ABS Speed Sensor Front RH		C 4	Compressor Assembly (Motor)	6189-1164
A 5	Air Fuel Ratio Sensor (Bank 1 Sensor 1)	90980-10869	C 5	Converter	90980-11034
A 6	Ambient Temp. Sensor	90980-11070	C 6	Converter	90980-11963
A 7	A/C Control Assembly	90980-12150	C 7	Crankshaft Position Sensor	90980-12028
A 8	A/C Control Assembly	90980-12149	C 8	Center Speaker	90980-10860
A 9	A/C Room Temp. Sensor	90980-11950	C 9	Clock	90980-11013
A10	A/C Solar Sensor	90980-11918	C10	Combination Meter	90980-12153
A11	A/C Thermistor		C11	Combination SW	90980-12266
A12	ACC Relay	82660-20340	C12	Combination SW	90980-12265
A13	Accel Position Sensor	90980-11858	C13	Combination SW	90980-12358
A14	Air Inlet Control Servo Motor	90980-11909	C14	Combination SW	90980-12359
A15	Air Mix Control Servo Motor		C15	Curtain Shield Airbag Sensor LH	90980-12241
A16	Air Vent Mode Control Servo Motor		C16	Curtain Shield Airbag Sensor RH	
A17	Airbag Sensor Assembly	90980-12392	C17	Curtain Shield Airbag Squib LH	90980-12219
A18	Airbag Sensor Assembly	90980-12391	C18	Curtain Shield Airbag Squib RH	
A19	Airbag Sensor Assembly	90980-12390	C19	Coolant Heat Storage Tank Outlet Temp. Sensor	90980-11061
A20	Airbag Squib (Front Passenger Airbag Assembly No.1)	90980-12224	C20	Coolant Heat Storage Water Pump	90980-11156
A21	Airbag Squib (Front Passenger Airbag Assembly No.2)	90980-12219	D 1	Data Link Connector 3	90980-11665
A22	Airbag Squib (Steering Wheel Pad)	90980-12160	D 2	Daytime Running Light Relay	90980-12034
A23	Antenna Amplifier	90980-10871	D 3	Diode (Daytime Running Light)	90980-10962
A24	Automatic Light Control Sensor	90980-11107	D 4	Door Control Receiver	90980-12366
A25	ABS Speed Sensor Rear LH	90980-11900	D 5	Door Courtesy Light Front LH	90980-11148
A26	ABS Speed Sensor Rear RH		D 6	Door Courtesy Light Front RH	
B 1	Brake Fluid Level Warning SW	90980-11207	D 7	Door Courtesy SW Front LH	90980-10871
B 2	Blower Motor	90980-10214	D 8	Door Courtesy SW Front RH	
B 3	Blower Motor Controller	90980-11667	D 9	Door Courtesy SW Rear LH	
B 4	Blower Motor Controller	90980-11579	D10	Door Courtesy SW Rear RH	
B 5	Body ECU	90980-12458	D11	Door Lock Control SW Front RH	90980-10797
B 6	Body ECU	90980-12329	D12	Door Lock Motor Front LH	90980-12226
B 7	Body ECU	90980-12150		Door Unlock Detection SW Front LH	
B 8	Brake Pedal Stroke Sensor	90980-11150	D13	Door Lock Motor Front RH	
B 9	Battery Blower Motor	90980-10916		Door Unlock Detection SW Front RH	
B10	Battery Blower Motor Controller	90980-11676	D14	Door Lock Motor Rear LH	
B11	Battery ECU	90980-12203		Door Unlock Detection SW Rear LH	
B12	Battery ECU	90980-11915	D15	Door Lock Motor Rear RH	
B13	Battery ECU	90980-12155		Door Unlock Detection SW Rear RH	
B14	Battery Fan Relay	82660-20340	D16	Door Oscillator Front LH (w/ Sensor)	90980-12217
B15	Buckle SW Front LH	90980-11918	D17	Door Oscillator Front RH (w/ Sensor)	
B16	Buckle SW Front RH	90980-10908	E 1	Engine Coolant Temp. Sensor	90980-10735
B17	Brake Master Stroke Simulator Cylinder Assembly	90980-11003	E 3	Engine Hood Courtesy SW	90980-11003
B18	Brake Control Power Supply	82824-50190	E 4	Engine Control Module	90980-12144
			E 5	Engine Control Module	90980-12145

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
E 6	Engine Control Module	90980-12142	H18	Height Control Sensor	90980-11860
E 7	Engine Control Module	90980-12146	H19	High Mounted Stop Light	90980-11967
E 8	Electrical Key Antenna (Driver's Side)	90980-12382	H20	Hybrid Vehicle Battery	82675-47060
E 9	Electrical Key Antenna (Front Passenger's Side)		H21	Hybrid Vehicle Battery	82675-47070
E10	Electrical Key Antenna (Luggage Compartment Door)	90980-10824	I 1	Ignition Coil and Igniter No.1	90980-11885
F 1	Front Airbag Sensor LH	90980-11856	I 2	Ignition Coil and Igniter No.2	
F 2	Front Airbag Sensor RH		I 3	Ignition Coil and Igniter No.3	
F 3	Front Fog Light LH	90980-11096	I 4	Ignition Coil and Igniter No.4	
F 4	Front Fog Light RH		I 5	Injector No.1	90980-11875
F 5	Front Side Marker Light LH	90980-11156	I 6	Injector No.2	
F 6	Front Side Marker Light RH		I 7	Injector No.3	
F 7	Front Turn Signal Light LH	90980-11019	I 8	Injector No.4	
F 8	Front Turn Signal Light RH		I 9	Inverter	90980-11148
F 9	Front Washer Motor	90980-11599	I10	Inverter	90980-12153
F10	Front Wiper Motor		I11	Inverter	90980-10988
F11	Front Passenger Seat Belt Warning Light	90980-12012	I12	Inverter	90980-12465
F12	Front Door Speaker LH	90980-10935	I13	Inverter	90980-12464
F13	Front Door Speaker RH		I14	Inverter	90980-12434
F14	Fuel Pump	82824-47160	I15	Inverter	90980-12433
	Fuel Sender		I16	Inverter	90980-11147
F15	Fusible Link Block	90980-11775	I17	Inter Lock SW	90980-11918
F16	Fusible Link Block	90980-10916	I18	Interior Light	81366-68010
F17	Fuse Holder	X-186	J 1	Junction Connector	90980-10803
G 1	Gateway ECU	90980-12404	J 2	Junction Connector	
G 2	Glove Box Light	90980-11918	J 3	Junction Connector	
G 3	Garage Door Opener	82824-47180	J 4	Junction Connector	
	Inner Mirror		J 5	Junction Connector	90980-10830
H 1	Headlight Beam Level Control Actuator LH	90980-11016	J 6	Junction Connector	90980-10803
H 2	Headlight Beam Level Control Actuator RH		J 7	Junction Connector	90980-11661
H 3	Headlight Control ECU LH	90980-11255	J 8	Junction Connector	90980-11915
H 4	Headlight Control ECU LH	90980-10869	J 9	Junction Connector	
H 5	Headlight Control ECU RH	90980-11255	J10	Junction Connector	90980-10803
H 6	Headlight Control ECU RH	90980-10869	J11	Junction Connector	90980-11661
H 7	Headlight LH	90980-11314	J12	Junction Connector	
H 8	Headlight RH		J13	Junction Connector	90980-11915
H 9	Horn (High)	90980-10619	J14	Junction Connector	
H10	Horn (Lo)		J15	Junction Connector	90980-10803
H11	Hazard SW	90980-12091	J16	Junction Connector	90980-10803
	ODO/TRIP SW		J17	Junction Connector	
H12	Headlight Beam Level Control ECU	90980-12200	J18	Junction Connector	90980-11915
H13	Heated Oxygen Sensor (Bank 1 Sensor 2)	90980-11028	J19	Junction Connector	90980-11661
H14	Hybrid Vehicle Control ECU	90980-12431	J20	Junction Connector	
H15	Hybrid Vehicle Control ECU	90980-12429	J21	Junction Connector	90980-10803
H16	Hybrid Vehicle Control ECU	90980-12428	J22	Junction Connector	
H17	Hybrid Vehicle Control ECU	90980-12430	J23	Junction Connector	
			J24	Junction Connector	

## L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
J25	Junction Connector	90980-10803	P 1	Pressure SW	90980-10943
J26	Junction Connector	90980-11529	P 2	Parking Brake SW	90980-10871
J27	Junction Connector		P 3	Power Outlet No.1	90980-10760
J28	Junction Connector		P 4	Power Outlet No.2	
J29	Junction Connector		P 5	Power Outlet Relay	82660-20340
J30	Junction Connector	90980-10803	P 6	Power Source Control ECU	90980-12388
J31	Junction Connector	90980-11915	P 7	Power Steering ECU	90980-12300
J32	Junction Connector	90980-10803	P 8	Power Steering ECU	90980-12290
J33	Junction Connector	90980-11915	P 9	Power Steering Motor	90980-12299
J34	Junction Connector	90980-10799	P10	Power Steering Torque Sensor	90980-12221
K 1	Knock Sensor	90980-11875	P11	Power SW	90980-11989
K 2	Key Slot	90980-12366	P12	PTC Heater	90980-11136
K 3	Key Slot	90980-12092	P13	PTC Heater	90980-10903
L 1	License Plate Light LH	90980-11148	P14	Power Window Control SW Front RH	90980-10789
L 2	License Plate Light RH		P15	Power Window Control SW Rear LH	
L 3	Luggage Compartment Courtesy SW	90980-10795	P16	Power Window Control SW Rear RH	
	Luggage Compartment Door Opener Motor		P17	Power Window Master SW	90980-12122
L 4	Luggage Compartment Door Lock SW	90980-12212	P18	Power Window Motor Front LH	90980-10797
	Luggage Compartment Door Opener SW		P19	Power Window Motor Front RH	
L 5	Luggage Compartment Light	90980-10860	P20	Power Window Motor Rear LH	
L 6	Luggage Oscillator (Inner)	90980-12366	P21	Power Window Motor Rear RH	
L 7	Luggage Oscillator (Outer)	90980-12217	P22	Pretensioner LH	
M 1	Mass Air Flow Meter	90980-11317	P23	Pretensioner RH	
M 2	Motor Generator No.1	90980-12432	R 1	Radiator Fan Motor	90980-10928
M 3	Motor Generator No.1		R 2	Rear Washer Motor	90980-11051
M 4	Motor Generator No.1		R 3	Radio and Player	90980-10997
M 5	Motor Generator No.1	90980-11034	R 4	Radio and Player	90980-10996
M 6	Motor Generator No.2	90980-12432	R 5	Radio and Player	90980-12259
M 7	Motor Generator No.2		R 6	Radio and Player	90980-12038
M 8	Motor Generator No.2		R 7	Rheostat	90980-11989
M 9	Motor Generator No.2	90980-11034	R 8	Room Oscillator	90980-12366
M10	Motor Generator No.2		R 9	Rear Combination Light LH	90980-11011
M11	Main SW	90980-11986	R10	Rear Combination Light RH	
M12	Mirror Heater Relay	82660-20340	R11	Rear Door Speaker LH	90980-10935
M13	Multi-Display	90980-12203	R12	Rear Door Speaker RH	
M14	Multi-Display	90980-12410	R13	Rear Window Defogger	90980-10914
N 1	Noise Filter (Ignition)	90980-10843	R14	Rear Window Defogger	90980-10913
N 2	Navigation ECU	90980-11973	R15	Rear Window Defogger	90980-10914
N 3	Navigation ECU	90980-11923	R16	Rear Window Defogger	90980-10913
N 4	Navigation ECU	90980-12221	R17	Rear Wiper Motor	90980-10795
N 5	Noise Filter (High Mounted Stop Light)	90980-10916	R18	Rear Wiper Relay	90980-10797
N 6	Noise Filter (Rear Window Defogger)		R19	Mirror Heater LH	90980-12189
N 7	Noise Filter (Rear Window Defogger)			Remote Control Mirror LH	
O 1	Oil Pressure SW	90980-11363	R20	Mirror Heater RH	
O 2	Option Connector (Glass Breakage Sensor)	90980-10908		Remote Control Mirror RH	
O 3	Overhead J/B	90980-12183	R21	Remote Control Mirror SW	

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
S 1	Shift Control Actuator	90980-12446	S27	Short Connector (Water Pump)	90980-11162
S 2	Short Connector	90980-11002	S28	Short Connector (Water Pump)	90980-11168
S 3	Short Connector	90980-11003	T 1	Theft Deterrent Horn	90980-10619
S 4	Shift Lever Position Sensor	90980-11989	T 2	Throttle Control Motor	90980-11162
S 5	Shift Lever Position Sensor	90980-12303	T 3	Throttle Position Sensor	90980-10711
S 6	Skid Control Buzzer	90980-10906	T 4	Transmission Control ECU	90980-12203
S 7	Skid Control ECU	90980-12144	T 5	Transponder Key Computer	90980-12404
S 8	Skid Control ECU	90980-12145	T 6	Tweeter Front LH	90980-12304
S 9	Skid Control ECU	90980-12146	T 7	Tweeter Front RH	
S10	Skid Control ECU	90980-12142	T 8	Tweeter Rear LH	
S11	Smart Key ECU	90980-12388	T 9	Tweeter Rear RH	
S12	Smart Key System Cancel SW	90980-10825	V 1	VSV (EVAP)	90980-11156
S13	Steering Sensor	90980-12162	V 2	Vanity Light LH	90980-10935
S14	Stereo Component Amplifier	90980-10821	V 3	Vanity Light RH	
S15	Stereo Component Amplifier	90980-12200	V 4	Vanity Light SW LH	90980-11918
S16	Stop Light SW	90980-11118	V 5	Vanity Light SW RH	
S17	Seat Position Airbag Sensor	90980-10942	V 6	Vapor Pressure Sensor	90980-11143
S18	Side Airbag Sensor LH	90980-12241	V 7	VSV (Canister Closed Valve)	90980-11156
S19	Side Airbag Sensor RH		V 8	VSV (Purge Flow Switching Valve)	90980-11859
S20	Side Airbag Squib LH	90980-11864	W 1	Water Pump Motor (A/C)	90980-10887
S21	Side Airbag Squib RH		W 3	Water Pump Motor (Inverter)	90980-11162
S22	System Main Relay	90980-10795	W 4	Water Temp. SW	90980-11235
S23	System Main Relay	90980-09938	W 5	Water Valve	90980-10988
S24	System Main Relay		W 6	Wireless Door Lock Buzzer	90980-11142
S25	System Main Relay	82675-28380	Y 1	Yaw Rate Sensor	90980-11904
S26	System Main Relay				