


INSTRUMENT CLUSTER FINISH PANEL GARNISH




UPPER INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY

POWER SWITCH

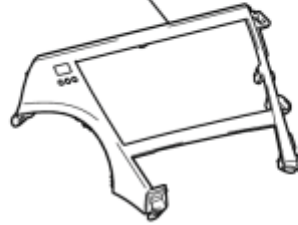

INTEGRATION CONTROL
AND PANEL ASSEMBLY

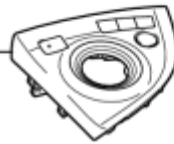

LOWER CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY

REMOVAL

1. REMOVE REAR NO. 2 FLOOR BOARD (for Separate Type) INFO

2. REMOVE REAR DECK FLOOR BOX INFO

3. REMOVE REAR NO. 3 FLOOR BOARD INFO

4. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected INFO.


5. REMOVE INTEGRATION CONTROL AND PANEL ASSEMBLY INFO

6. REMOVE LOWER CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY INFO

7. REMOVE INSTRUMENT CLUSTER FINISH PANEL GARNISH INFO

8. REMOVE UPPER INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY INFO

9. REMOVE POWER SWITCH

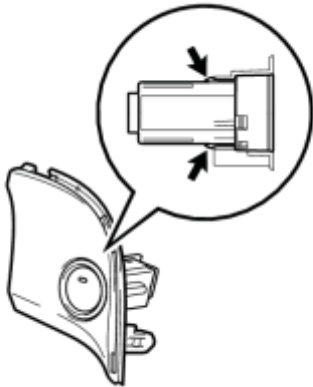


(a) Detach the 2 claws and remove the power switch.

INSPECTION

1. INSPECT POWER SWITCH

(a) Measure the resistance according to the value(s) in the table below.

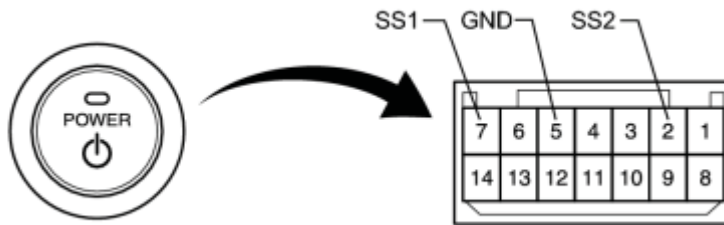


N

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
7 (SS1) - 5 (GND)	Pushed	Below 1 Ω
2 (SS2) - 5 (GND)	Pushed	Below 1 Ω
7 (SS1) - 5 (GND)	Not pushed	10 k Ω or higher
2 (SS2) - 5 (GND)	Not pushed	10 k Ω or higher

If the result is not as specified, replace the power switch.

(b) Apply battery voltage between the terminals of the switch, and check the illumination condition of the power switch.

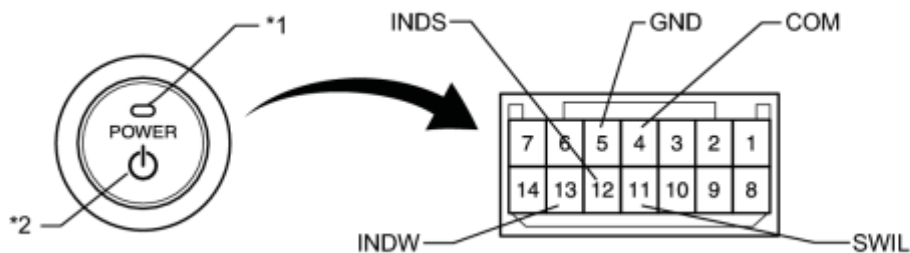

N

Text in Illustration

*1	Indicator Light	*2	Power Switch Illumination
----	-----------------	----	---------------------------


Standard Resistance:

Measurement Condition	Specified Condition
Battery positive (+) →Terminal 11 (SWIL)	Illuminates
Battery negative (-) →Terminal 4 (COM) or 5 (GND)	(Power Switch Illumination)
Battery positive (+) →Terminal 12 (INDS)	Illuminates
Battery negative (-) →Terminal 4 (COM) or 5 (GND)	(Indicator Light)
Battery positive (+) →Terminal 13 (INDW)	Illuminates
Battery negative (-) →Terminal 4 (COM) or 5 (GND)	(Indicator Light)

If the result is not as specified, replace the power switch.

INSTALLATION

1. INSTALL POWER SWITCH

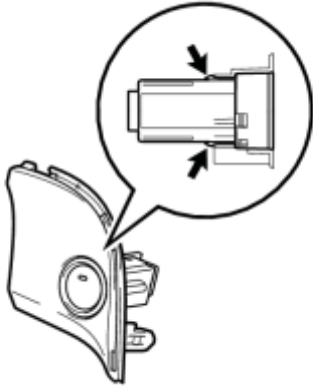

(a) Attach the 2 claws to install the power switch.

2. INSTALL UPPER INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY_ INFO

3. INSTALL INSTRUMENT CLUSTER FINISH PANEL GARNISH_ INFO

4. INSTALL LOWER CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY_ INFO

5. INSTALL INTEGRATION CONTROL AND PANEL ASSEMBLY_ INFO

6. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected INFO.

7. INSTALL REAR NO. 3 FLOOR BOARD_ INFO

8. INSTALL REAR DECK FLOOR BOX_ INFO

9. INSTALL REAR NO. 2 FLOOR BOARD (for Separate Type)_ INFO

REMOVAL

1. PRECAUTION

INFO

2. REMOVE REAR NO. 2 FLOOR BOARD (for Separate Type) INFO

3. REMOVE REAR DECK FLOOR BOX INFO

4. REMOVE REAR NO. 3 FLOOR BOARD INFO

5. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected INFO.

6. REMOVE INTEGRATION CONTROL AND PANEL ASSEMBLY

(a) Using a moulding remover, slightly lift the panel at the position shown in the illustration.

Text in Illustration

*a	Lift slightly
----	---------------



(b) Pull the integration control and panel assembly in the direction indicated by the arrow to disengage the 6 claws.


(c) Disconnect each connector and remove the integration control and panel assembly.

7. REMOVE LOWER CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY

(a) Pull the lower center instrument cluster finish panel sub-assembly in the direction indicated by the arrow to disengage the 2 claws and 2 clips.



P

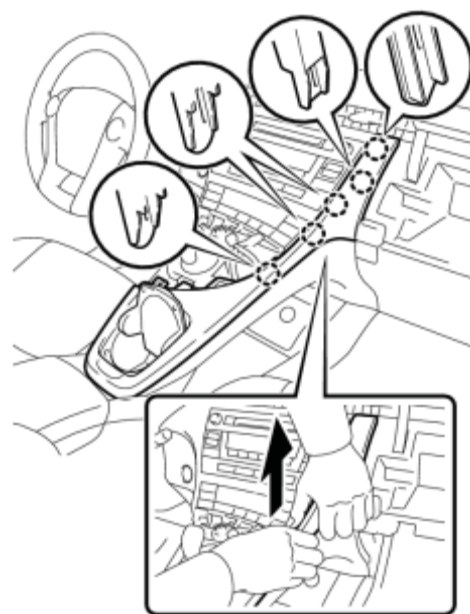


P

(b) Pull the lower center instrument cluster finish panel sub-assembly in the direction indicated by the arrow to disengage the 5 claws and remove the lower center instrument cluster finish panel sub-assembly.

8. REMOVE INSTRUMENT PANEL CUP HOLDER ASSEMBLY

(a) Remove the 4 screws <C> and instrument panel cup holder assembly from the lower center instrument cluster finish panel sub-assembly.

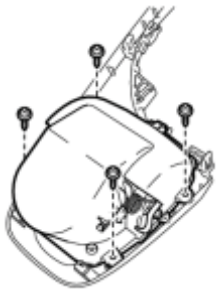


P

9. REMOVE INSTRUMENT CLUSTER FINISH PANEL GARNISH


(a) Disengage the 14 claws.

(b) Disconnect the connector and remove the instrument cluster finish panel garnish.

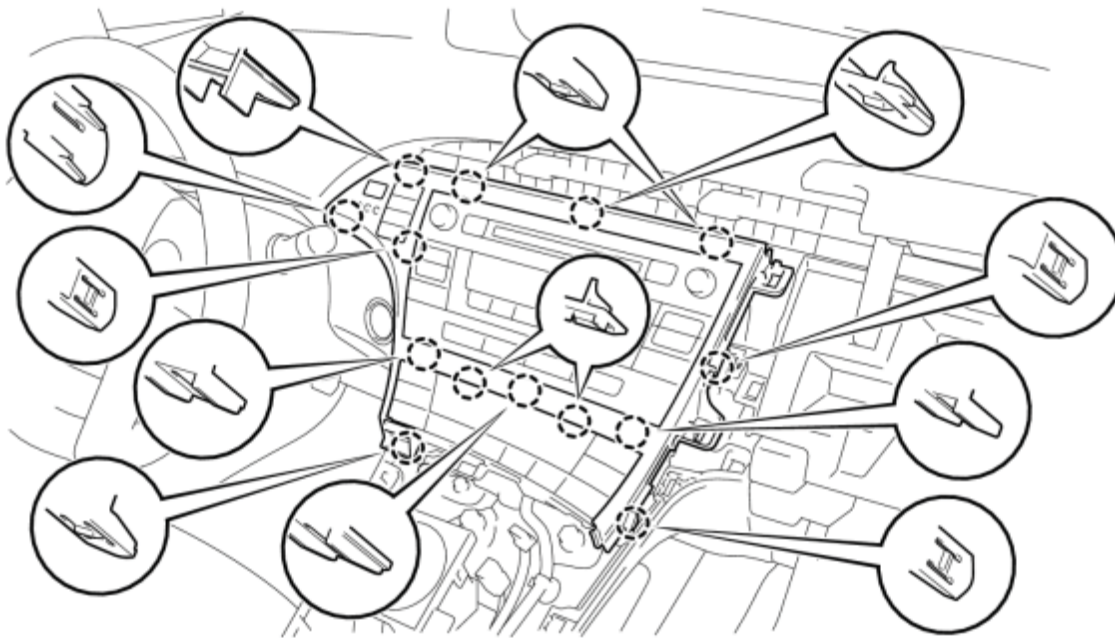

P

10. REMOVE UPPER INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY

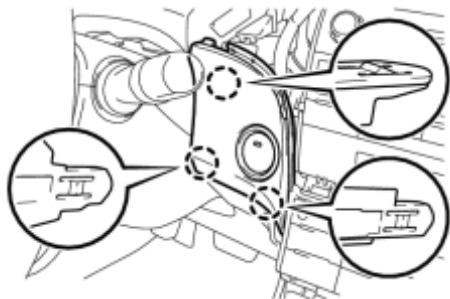

P

(a) Disengage the 3 claws.